


Indoor Unit Customization

Understanding and Configuring
Samsung's Installation Settings and Product Option Codes

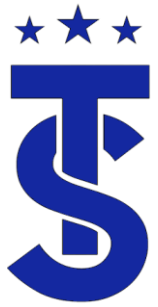

Firmware updates and Coding


❑ This hands-on class will review the process for updating firmware and setting option codes using SNET Pro 2 service tool (MIM-C02N) and different indoor unit (IDU) controllers. Participants will be given the opportunity to set various options codes for a given system.

❑ **Topics included:**

- ❑ Updating Firmware
- ❑ 01 Product codes
- ❑ 02 Installation Option Codes
- ❑ 05 Installation Option Codes
- ❑ 0D – Individual Segment change of an option code
- ❑ SNET Pro 2 Service Tools


❑ Upon completion the student will be able to:

1. Update firmware the Samsung Product
2. Select and set various option codes using the S-Net tool and IDU controllers.

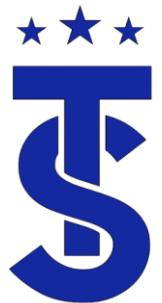

Are All Applications the Same?




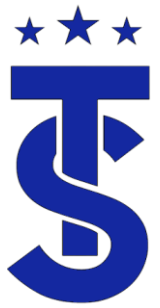

Do People have the Same Preferences


- ☐ It's common in our industry to have different expectations of the system based on the individual.
- ☐ What one person finds objectionable another may be indifferent to.
- ☐ There is a need to customize the operation based on the expectations of the customer and application



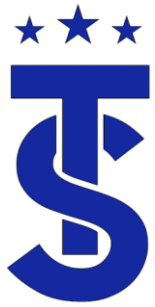

How Do Consumers buy a New Car

- ☐ You select the model that you want
- ☐ Then you select the model options
 - ☐ Premium, Hybrid, Off Road Etc.
- ☐ Color.
- ☐ Other options like cruise control, navigation, wheels and so on.
- ☐ Cars can be customized to the needs of the customer.
- ☐ So can air conditioning systems.

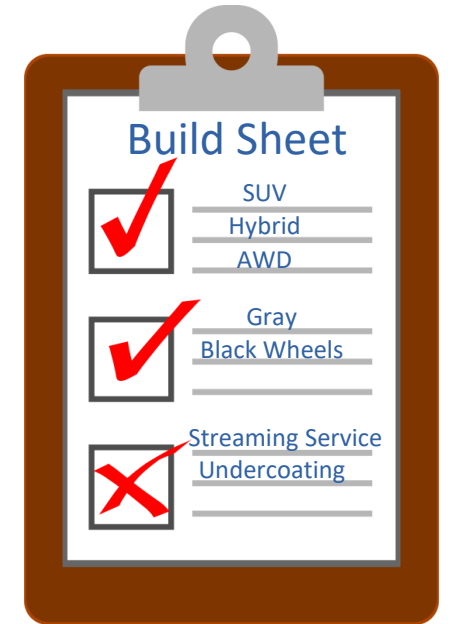



How is HVAC Equipment Sold



- ☐ The unit designed to be installed in a multitude of applications.
- ☐ There are user selectable options available within the unit to customize it for your specific application.
- ☐ In order to adapt a piece of equipment to a specific application, job, environment or homeowners' expectation there needs to be some customization options built into the equipment
- ☐ To achieve optimal performance of the equipment the system must be set up properly during the installation process
- ☐ Option codes are used to customize the operation



User Options A la Carte

- ❑ There are multi options to choose from to customize the operation of the equipment.
- ❑ Knowing what's available on the menu to choose from will help you set up the system.
- ❑ The available choices for each option vary depending on the unit
- ❑ Refer to the specific unit's literature to see what on the menu.


Options Menu *A la Carte*

Basic Install Options 02

SEG1 (Page)	SEG2 (Option type)	SEG3	SEG4 (Common)	SEG5 (Common)	SEG6 (Common)
0	2	-	External room temperature sensor / Minimizing fan operation when thermo off	Central control	FAN RPM compensation
SEG7 (Page)	SEG8 (Common)	SEG9 (Only Duct)	SEG10	SEG11 (Common)	SEG12
1	Drain pump	Hot water heater	-	EEV Step when heating stops	-
SEG13 (Page)	SEG14 (Common)	SEG15 (Common)	SEG16 (Common)	SEG17 (Common)	SEG18 (Common)
2	External control	External control output / External heater On or Off signal	S-Plasma ion	Buzzer	Number of hours using filter
SEG19 (Page)	SEG20 (Common)	SEG21 (Common)	SEG22 (Common)	SEG23 (Only 4Way(600x600))	SEG24 (Only 360CST)
3	Individual control of a remote controller	Heating setting compensation / Removing condensate water in heating mode	EEV Step of stopped unit during oil return / defrost mode	Motion detection sensor	Cycle time of Swing

Advanced Install Options 05


SEG1 (Page)	SEG2 (Option type)	SEG3 (Only Heat recovery)	SEG4 (When setting SEG 3)	SEG5 (When setting SEG 3)	SEG6 (When setting SEG 3)
0	5	Use of Auto change over For HR in Auto mode	Standard heating temp. Offset	Standard cooling temp. Offset	Standard for mode change Heating → Cooling
SEG7 (Page)	SEG8 (When setting SEG 3)	SEG9 (When setting SEG 3)	SEG10	SEG11	SEG12
1	Standard for mode Change Cooling → Heating	Time required for mode change	Compensation option for long pipe or height difference between indoor units	-	-
SEG13 (Page)	SEG14	SEG15	SEG16	SEG17	SEG18 (Common)
2	-	-	-	-	Control variables when using hot water / external heater
SEG19 (Page)	SEG20	SEG21	SEG22	SEG23	SEG24 (Only Hydro)
3	-	-	-	-	Water tank sensor setting

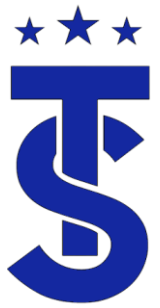

Types of Codes (Menu Selections)


String Code Identification

- ☐ There are several codes that are used to change the operation of the equipment.
- ☐ Segment 2 is used to identify the function of the code.
- ☐ Available codes are as follows
 - ☐ **A - IDU Addressing String:** (Typically used with FJM units)
 - ☐ 0A0000-100000-200000-300000
 - ☐ **1 - Product Code String:**
 - ☐ 010000-100000-200000-300000
 - ☐ **2 - Basic Installer Options String:**
 - ☐ 020000-100000-200000-300000
 - ☐ **5 - Advanced Installer Options String:**
 - ☐ 050000-100000-200000-300000
 - ☐ **D – Individual Segment change of an option code**
 - ☐ 0D0000-100000-200000-300000

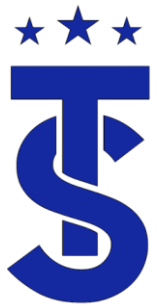

Option Code Menus

- ☐ Options available from the 02 menu include (model dependent)
 - ☐ Room sensing location
 - ☐ Drain Pump Operation
 - ☐ External Controls operation
 - ☐ Heat compensation
- ☐ Options available from the 05 menus include (model dependent)
 - ☐ Auto Change over settings
 - ☐ Control variables when using hot water / external heater

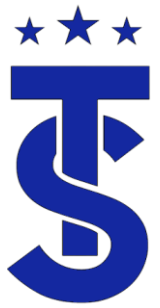


Unit Customization

- ❑ User selected options are made to the system using installation settings.
- ❑ Installation setting are made to the equipment using option codes.
- ❑ Codes consist of a 24-segment (alpha-numeric) string.
- ❑ Codes are broken down into 4 pages or sections.
- ❑ Pages /section 1-4 has 5 user selectable settings. Page 0 has 4 user selections.
- ❑ Sections/pages are designated by the first number of the string.
- ❑ The correct option setting for each segment can be found in the service manual.
- ❑ An example of an 02 installation option code is as follows.
 - ❑ 020302-120000-200006-301000



Unlocking the code

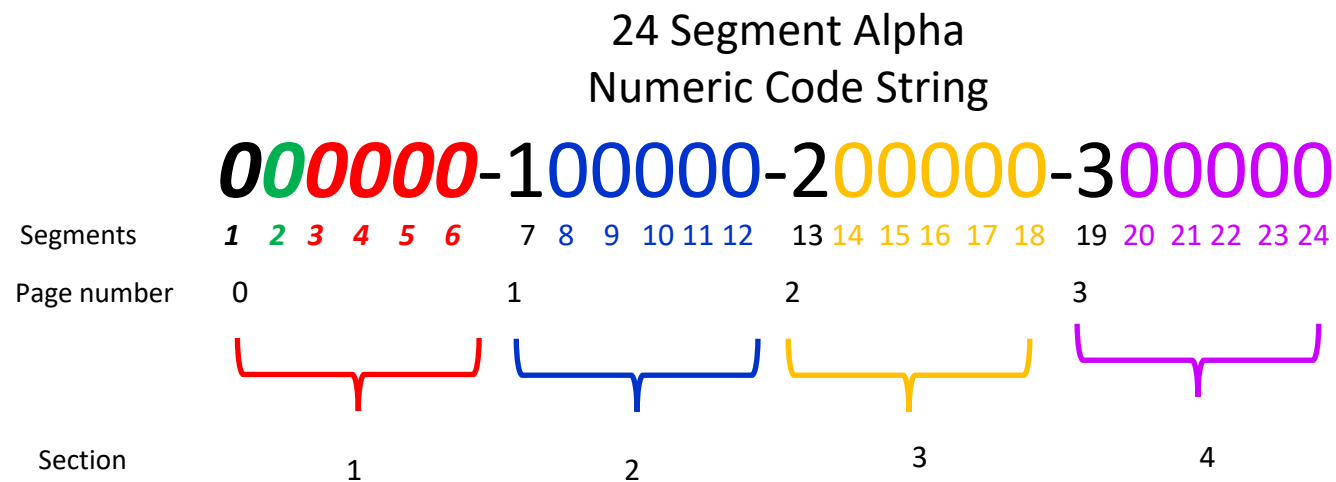

Page numbers are nonadjustable.

Each Page-section has 5 user programmable settings (segments 3-6, 8-12, 14-18 & 20-24).
Segment 2 of page 1 identifies the function of the code.

User settings can be found in the installation and service manuals.



Cracking The Code

0*0000-100000-200000-300000

Page 0 (segment 1 nonadjustable)

Section 1

Segments 2 (defines the code string)

Segments 3-6 (user selectable)

0*0000-100000-200000-300000

Page 1 (segment 7 nonadjustable)

Section 2

Segments 8-12 (user selectable)

0*0000-100000-200000-300000

Page 2 (segment 13 nonadjustable)

Section 3

Segments 14-18 (user selectable)


0*0000-100000-200000-300000

Page 3 (segment 19 nonadjustable)

Section 4

Segments 20-24 (user selectable)

24 Segment Alpha
Numeric Code String

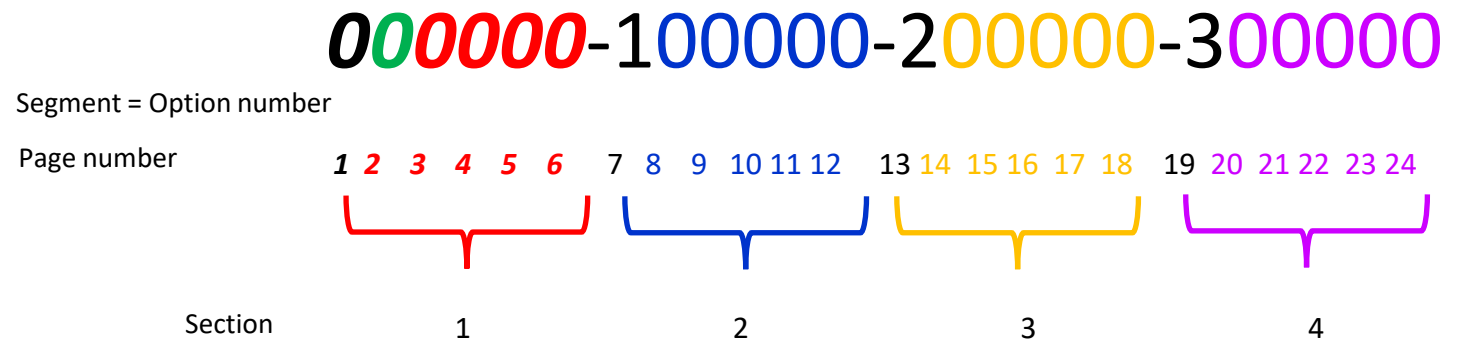


Example:

if you want to use the sensor in the wired controller and shut the fan off when the unit is thermally satisfied in heat then you would set segment 2 to 2, segment 4 to option 3.

The code will be as follows:

020300-100000-200000-300000

*The second segment on the first page identifies the option setting code:
(01 = product option code, 02 = installation options, 05 = advanced installation options)

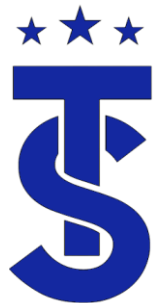

Why Have Product Codes



9K



20K




12K



18K

SAMSUNG

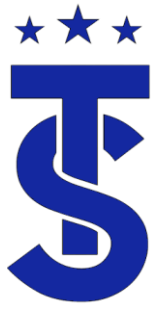

IDU EPOM


- ❑ Contains the product code for each piece of equipment.
- ❑ It stores the units option settings.
- ❑ This is how the PCB knows what it is connected to.
- ❑ New EEPROM MUST be programmed before use.



Product Codes

- ❑ The product code identifies the unit type and available options.
- ❑ If the product code starts with a 014047 the unit knows it's a 4 way cassette.
- ❑ If it starts with a 010054 it is a slim duct unit.

TYPE		SAMSUNG MODEL NUMBER	Static Pressure	Option		Install Code	Cycle code	Install Code 2
Slim 1WAY (Wind free)	JSF-1 017044	AM007NN1DCH/AZ	-	017044-	1180C8-201616-330010	020010-100000- 200000-300000	030000-100000- 200000-300000	050000-100000- 200000-300000
		AM009NN1DCH/AZ	-	017044-	1180F8-201C1C-330010			
		AM012NN1DCH/AZ	-	017044-	11545D-202323-330011			
	JSF-2 018044	AM018NN1DCH/AZ	-	018044-	19543C-203838-330015			
		AM024NN1DCH/AZ	-	018044-	19945F-204747-330018			
Mini 4WAY	Small 01504F	AM009FNDNCH/AA	-	01504F-	19540A-201C1C-330000			
		AM012FNDNCH/AA	-	01504F-	19342C-202323-330000			
		AM018FNDNCH/AA	-	01504F-	19547F-203434-330000			
		AM020FNDNCH/AA	-	01504F-	195591-203C3C-330000			
4WAY 014047	Small	AM009FN4DCH/AA	-	014047-	195064-201A1A-330000			
		AM018FN4DCH/AA	-	014047-	195097-203434-330000			
		AM024FN4DCH/AA	-	014047-	1950C7-204848-330000			
	Large	AM030FN4DCH/AA	-	014047-	195409-205A5A-330020			
		AM036FN4DCH/AA	-	014047-	19541B-206E6E-330020			
		AM048FN4DCH/AA	-	014047-	19544F-209191-330020			
SLIM DUCT 010054	Slim1	AM007FNLDCH/AA	0 mmAq	010054-	1254AE-201616-331110			
			1 mmAq	010054-	1255D1-201616-331110			
			2 mmAq	010054-	1255D1-201616-331110			
			4 mmAq	010054-	125904-201616-331110			
		AM009FNLDCH/AA	0 mmAq	010054-	121913-201C1C-331110			
			1 mmAq	010054-	121946-201C1C-331110			
			2 mmAq	010054-	121946-201C1C-331110			
			4 mmAq	010054-	121979-201C1C-331110			
		AM012FNLDCH/AA	0 mmAq	010054-	121946-202323-331110			
			1 mmAq	010054-	121979-202323-331110			
			2 mmAq	010054-	121979-202323-331110			
			4 mmAq	010054-	1219AC-202323-331110			
	Slim2	AM018FNLDCH/AA	0 mmAq	010054-	1259BA-203434-331110			
			1 mmAq	010054-	1259ED-203434-331110			
			2 mmAq	010054-	1259ED-203434-331110			
			4 mmAq	010054-	125E10-203434-331110			
		AM024FNLDCH/AA	0 mmAq	010054-	125D2D-204848-331110			
			1 mmAq	010054-	125E50-204848-331110			
			2 mmAq	010054-	125E50-204848-331110			
			4 mmAq	010054-	125E83-204848-331110			
	Slim3	AM030FNLDCH/AA	0 mmAq	010054-	1B5915-205A5A-331110			
			1 mmAq	010054-	1B5948-205A5A-331110			
			3 mmAq	010054-	1B599F-205A5A-331110			
			6 mmAq	010054-	1B5AE4-205A5A-331110			
		AM036FNLDCH/AA	0 mmAq	010054-	1B5956-206E6E-331110			
			1 mmAq	010054-	1B5989-206E6E-331110			
			3 mmAq	010054-	1B5AD0-206E6E-331110			
			6 mmAq	010054-	1B5E25-206E6E-331110			
		AM048FNLDCH/AA	0 mmAq	010054-	1B59B9-209191-331110			
			1 mmAq	010054-	1B59EC-209191-331110			
			3 mmAq	010054-	1B5E33-209191-331110			
			6 mmAq	010054-	1B5E88-209191-331110			

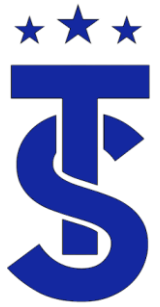

Product Option Codes

0**1**0000-100000-200000-300000

- ❑ These codes are stored on the EEPROM and tell the board all the **specifics** about the unit.



Model number: AM012MNMDCH/AA

Description: DVM S, Duct S - 12000 Btu/h,
0" - 0.04" ESP (DEFAULT)

Option code: 010054-1E5072-202323-331102

Static pressure (inches): 0" - 0.04" (DEFAULT)



Model number: AM012NN4DCH/AA

Description: DVM S, Wind Free 4-Way
Cassette - 12,000 btu/h

Option code: 01404F-195097-202323-330000



Model number: AM012AN1PCH/AA

Description: DVM S, Wind Free 1-Way
Cassette (2021) - 12,000 btu/h

Option code: 017044-19545D-202424-330011



Product Option Code

Adjusting Static Pressure

0" - 0.04" ESP



Model number: AM012MNMDCH/AA

Description: DVM S, Duct S - 12000 Btu/h,
0" - 0.04" ESP (DEFAULT)

Option code: 010054-1E5072-202323-331102

Static pressure (inches): 0" - 0.04" (DEFAULT)

0.12" - 0.20" ESP



Model number: AM012MNMDCH/AA

Description: DVM S, Duct S - 12000 Btu/h, 0.12" - 0.20" ESP

Option code: 010054-1E5449-202323-331102

Static pressure (inches): 0.12" - 0.20"

0.5" - 0.60" ESP



Model number: AM012MNMDCH/AA

Description: DVM S, Duct S - 12000 Btu/h, 0.5" - 0.60" ESP

Option code: 010054-1E59CA-202323-331102


Static pressure (inches): 0.5" - 0.60"



Product Option Code


Degrees F to Degrees C

MODEL	DESCRIPTION	Standard Option Code	° C Display Option Code
AJ007JNADCH/AA	7,000 Btu/h Wall Mount	010025-16623A-271416-372A04	010005-16623A-271416-372A04
AJ009JNADCH/AA	9,000 Btu/h Wall Mount	010025-16624A-271920-372A04	010005-16624A-271920-372A04
AJ012JNADCH/AA	12,000 Btu/h Wall Mount	010025-16626B-272328-372B04	010005-16626B-272328-372B04
AJ018JNADCH/AA	18,000 Btu/h Wall Mount	010025-15622A-27323C-372604	010005-15622A-27323C-372604
AJ024JNADCH/AA	24,000 Btu/h Wall Mount	010025-15625C-274450-372604	010005-15625C-274450-372604
AJ009JNLDCH/AA	9,000 Btu/h Slim Duct - 0.04" ESP	015201-14021C-200001-300000	015201-14021C-200000-300000
	9,000 Btu/h Slim Duct - 0.08" ESP (DEFAULT)	015201-14023E-200001-300000	015201-14023E-200000-300000
	9,000 Btu/h Slim Duct - 0.12" ESP	015201-140390-200001-300000	015201-140390-200000-300000
	9,000 Btu/h Slim Duct - 0.16" ESP	015203-1403F9-200001-300000	015203-1403F9-200000-300000
AJ012JNLDCH/AA	12,000 Btu/h Slim Duct - 0.04" ESP	015201-16025F-200001-300000	015201-16025F-200000-300000
	12,000 Btu/h Slim Duct - 0.08" ESP (DEFAULT)	015201-160370-200001-300000	015201-160370-200000-300000
	12,000 Btu/h Slim Duct - 0.12" ESP	015203-160183-200001-300000	015203-160183-200000-300000
	12,000 Btu/h Slim Duct - 0.16" ESP	015203-1603CE-200001-300000	015203-1603CE-200000-300000
AJ018JNLDCH/AA	18,000 Btu/h Slim Duct - 0.04" ESP	011224-1940D5-200001-300000	011224-1940D5-200000-300000
	18,000 Btu/h Slim Duct - 0.08" ESP (DEFAULT)	011224-1940E6-200001-300000	011224-1940E6-200000-300000
	18,000 Btu/h Slim Duct - 0.12" ESP	011224-1940F7-200001-300000	011224-1940F7-200000-300000
	18,000 Btu/h Slim Duct - 0.16" ESP	011224-194208-200001-300000	011224-194208-200000-300000
AJ009JNNDCH/AA	9,000 Btu/h Mini 4-Way Cassette	01507F-1660F8-231A21-300100	01507F-1660F8-231A21-300000
AJ012JNNDCH/AA	12,000 Btu/h Mini 4-Way Cassette	01507F-166219-232328-300100	01507F-166219-232328-300000
AJ018JNNDCH/AA	18,000 Btu/h Mini 4-Way Cassette	01507F-17625D-23343C-300100	01507F-17625D-23343C-300000
AJ009NBNDCH/AA	9,000 Btu/h Wind-Free™ Mini 4-Way Cassette	0150CF-1940F8-201A21-300000	01504F-1940F8-201A21-300000
AJ012NBNDCH/AA	12,000 Btu/h Wind-Free™ Mini 4-Way Cassette	0150CF-194419-202328-300000	01504F-194419-202328-300000
AJ018NBNDCH/AA	18,000 Btu/h Wind-Free™ Mini 4-Way Cassette	0150CF-19445D-20343C-300040	01504F-19445D-20343C-300040

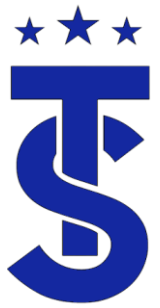

Product Option Codes Review

- ☐ Contain specific information about the unit.
 - ☐ Including model, type and available options.
 - ☐ Fan ESP range on Duct S units.
- ☐ When the EPROM is replaced the product code must be programmed into it so the unit can function as designed.
- ☐ Product Codes for specific equipment can be found in:
 - ☐ The installation manual
 - ☐ The service manual

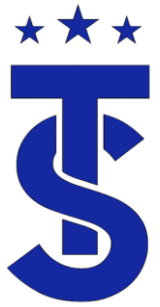


Installation Codes

020000-100000-200000-300000 (Installation Settings)

050000-100000-200000-300000 (Advanced Installation settings)

- ☐ Installer codes are used to adjust the operation of the system based in the installation, application and user preference.
- ☐ The 2nd segment of page 0 defines the code string and available option to select
- ☐ The segments codes are generic in nature.
- ☐ The user setting will vary based on specific indoor unit
- ☐ Refer to the installation manual or service manual for specific settings.

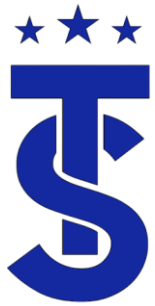

Installation Codes

020000 - 100000 - 200000 - 300000

02 series installation option table (For reference only. Always refer to the specific unit's manual!)

SEG1 (Page)	SEG2 (Option type)	SEG3	SEG4 (Common)	SEG5 (Common)	SEG6 (Common)
0	2	-	External room temperature sensor / Minimizing fan operation when thermo off	Central control	FAN RPM compensation
SEG7 (Page)	SEG8 (Common)	SEG9 (Only Duct)	SEG10	SEG11 (Common)	SEG12
1	Drain pump	Hot water heater	-	EEV Step when heating stops	-
SEG13 (Page)	SEG14 (Common)	SEG15 (Common)	SEG16 (Common)	SEG17 (Common)	SEG18 (Common)
2	External control	External control output / External heater On or Off signal	S-Plasma ion	Buzzer	Number of hours using filter
SEG19 (Page)	SEG20 (Common)	SEG21 (Common)	SEG22 (Common)	SEG23 (Only 4Way(600x600))	SEG24 (Only 360CST)
3	Individual control of a remote controller	Heating setting compensation / Removing condensate water in heating mode	EEV Step of stopped unit during oil return / defrost mode	Motion detection sensor	Cycle time of Swing

* The default setting of an indoor unit's 02 installation option code is "020010-100000-200000-300000"



Indoor Unit Option Setting Codes

Segment 1 Segment 2 Segment 3 Segment 4 Segment 5 Segment 6						Segment 7 Segment 8 Segment 9 Segment 10 Segment 11 Segment 12						Segment 13 Segment 14 Segment 15 Segment 16 Segment 17 Segment 18						Segment 19 Segment 20 Segment 21 Segment 22 Segment 23 Segment 24								
0	2	x	x	x	x	–	1	x	x	x	x	x	–	2	x	x	x	x	x	–	3	x	x	x	x	x
Menu Option Setting Reserved Use of external temp sensor Use of central control Fan RPM Compensation						Use of drain pump Hot Water Electric Heat Wind Free RPM Reserved						Use of external controls External control output Reserved Buzzer control Filter Alarm						Individual control with remote Heat Compensation Reserved MDS Settings Reserved								



Installation Codes

050000 - 100000 - 200000 - 300000

05 series installation option table (For reference only. Always refer to the specific unit data!)

SEG1 (Page)	SEG2 (Option type)	SEG3 (Only Heat recovery)	SEG4 (When setting SEG 3)	SEG5 (When setting SEG 3)	SEG6 (When setting SEG 3)
0	5	Use of Auto change over For HR in Auto mode	Standard heating temp. Offset	Standard cooling temp. Offset	Standard for mode change Heating → Cooling
SEG7 (Page)	SEG8 (When setting SEG 3)	SEG9 (When setting SEG 3)	SEG10	SEG11	SEG12
1	Standard for mode Change Cooling → Heating	Time required for mode change	Compensation option for long pipe or height difference between indoor units	-	-
SEG13 (Page)	SEG14	SEG15	SEG16	SEG17	SEG18 (Common)
2	-	-	-	-	Control variables when using hot water / external heater
SEG19 (Page)	SEG20	SEG21	SEG22	SEG23	SEG24 (Only Hydro)
3	-	-	-	-	Water tank sensor setting

* The default setting of an indoor unit installation option is “050010-100000-200000-300000”



Advanced Indoor Unit Option Settings

Segment 1
Segment 2
Segment 3
Segment 4
Segment 5
Segment 6

05xxxx

Options "Page" number
Option setting type/series
HR systems – use of special/AUTO mode programming
HR systems – auto changeover standard heat temp. offset
HR systems – auto changeover standard cooling temp. offset
HR systems – auto changeover ΔT , heating to cooling

Segment 7
Segment 8
Segment 9
Segment 10
Segment 11
Segment 12

1xxxxxx

Options "Page" number
HR systems – auto changeover ΔT , cooling to heating
HR systems – auto changeover, time delay
Compensation for long pipe distance or vertical separation
MTFC enable (Multi Tenant Function Controller)
Reserved

Segment 13
Segment 14
Segment 15
Segment 16
Segment 17
Segment 18


2xxxxxxx

Options "Page" number
Reserved
Reserved
Reserved
Reserved
External heat control temperature offset and time delay

Segment 19
Segment 20
Segment 21
Segment 22
Segment 23
Segment 24

3xxxxxxx


Options "Page" number
AHU kit capacity setting
AHU kit fan feedback setting
AHU kit defrost signal setting
AHU kit – prevent cold air blowing in heat mode
Reserved

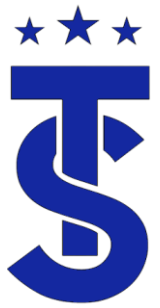

Example



- ☐ Mini 4 Way Cassette
- ☐ Option we want to set:
 - ☐ Installation options (02)
 - ☐ Use of external thermistor and we want the fan off when satisfied in heat.
 - ☐ Increase throw due to high ceiling
 - ☐ Change the filter alarm display from 1000 hrs. to 2000hrs.
 - ☐ Enable the 3 minute off delay for the condensate pump in cooling mode.

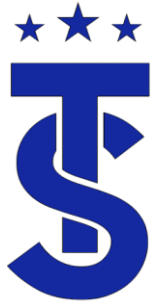

Option Code Worksheet

Segment 1	Segment 2	Segment 3	Segment 4	Segment 5	Segment 6
0					
Segment 7	Segment 8	Segment 9	Segment 10	Segment 11	Segment 12
1					
Segment 13	Segment 14	Segment 15	Segment 16	Segment 17	Segment 18
2					
Segment 19	Segment 20	Segment 21	Segment 22	Segment 23	Segment 24
3					

0 1 2 3 4 5 6 **-1** 7 8 9 10 11 12 **-2** 13 14 15 16 17 18 **-3** 19 20 21 22 23 24




Page 0

Segment location
1 2 3 4 5 6

020301-1XXXXX-2XXXXX-3XXXXX

- ☐ Page 0 / Section 1
- ☐ Segment 1 identifies the page number and is nonadjustable
- ☐ Segments 2-6 are programmable
- ☐ **Required Settings**
 - ☐ Option Menu Setting
 - ☐ Use of external thermistor and fan off when satisfied in heat.
 - ☐ Increase throw due to high ceiling

Option	SEG1		SEG2		SEG3	SEG4		SEG5		SEG6		
Function	Page		Mode		Reserved	Use of external room temperature sensor / Minimizing fan operation when thermostat is off		Central control		Compensation of the fan RPM		
Indication and details	Indication	Details	Indication	Details		Indication	Details		Indication	Details	Indication	Details
							Use of external room temperature sensor	Minimizing fan operation when thermostat is off ¹⁾				
	0		2	0		Disuse	Disuse	0	Disuse	0	Disuse	
				1		Use	Disuse					
				2		Disuse	Use(Heating)					
				3		Use	Use(Heating)					
				4		Disuse	Use(Cooling)					
				5		Use	Use(Cooling)	1	Use	1	High ceiling mode	
				6		Disuse	Use (Cooling/Heating)					
				7		Use	Use (Cooling/Heating)					
				8		Disuse	Use (Cooling Ultra low speed)					
				9		Use	Use (Cooling Ultra low speed)					
				A		Disuse	Use (Heating/Cooling Ultra low speed)					
				B		Use	Use (Heating/Cooling Ultra low speed)					

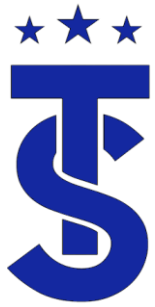

Page 0 settings

Segment 1	Segment 2	Segment 3	Segment 4	Segment 5	Segment 6
0	2	0	3	0	1
Segment 7	Segment 8	Segment 9	Segment 10	Segment 11	Segment 12
1					
Segment 13	Segment 14	Segment 15	Segment 16	Segment 17	Segment 18
2					
Segment 19	Segment 20	Segment 21	Segment 22	Segment 23	Segment 24
3					

020301-1 -2 -3
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24



Segment location
7 8 9 10 11 12
020301-**120000**-2XXXXXX-3XXXXXX

- ☐ Page 1 / Section 2
- ☐ Segment 7 identifies the page number and is nonadjustable
- ☐ Segments 8-12 are programmable
- ☐ **Required Settings:**
 - ☐ Activate the 3-minute delay for the drain pump

Option	SEG7		SEG8		SEG9	SEG10	SEG11			SEG12			
Function	Page		Use of drain pump ²⁾		Reserved	Reserved	WindFree FAN RPM ³⁾			Dew removal operation in WindFree mode/ WindFree mode in Auto cleaning/ Smart Comfort in Auto mode			
Indication and details	Indication	Details	Indication	Details			Indication	Details			Indication	Details	
	1	0	Disuse	AC009BN1DCH AC012BN1DCH AC018BN1DCH				AC***BN4DCH	0	Dew removal operation in WindFree mode		WindFree mode in Auto cleaning	Smart Comfort in Auto mode
		1	Use							WindFree disuse		Smart Comfort use	
		2	Use with 3 minute delay		WindFree use	Smart Comfort disuse							
0	3STEP↑	5STEP↑	Default	0			Maintain blade	WindFree disuse	Smart Comfort use				
1	2STEP↑	4STEP↑	1STEP↓	1	Open blade	WindFree use	Smart Comfort disuse						
2	1STEP↑	3STEP↑	2STEP↓	2	Maintain blade			WindFree disuse	Smart Comfort disuse				
3	Default	2STEP↑	3STEP↓	3	Open blade	WindFree use	Smart Comfort disuse						
4	1STEP↓	1STEP↑	4STEP↓	4	Maintain blade			WindFree disuse	Smart Comfort disuse				
5	2STEP↓	Default	5STEP↓	5	Open blade	WindFree use	Smart Comfort disuse						
6	3STEP↓	1STEP↓	6STEP↓	6	Maintain blade			WindFree use	Smart Comfort disuse				
7	4STEP↓	2STEP↓	7STEP↓	7	Open blade	WindFree use	Smart Comfort disuse						

SEG8 Even if you set the Use of drain pump option to 0, it is automatically set to 2 (the drain pump is used with 3minute delay).



Page 1 settings

Segment 1	Segment 2	Segment 3	Segment 4	Segment 5	Segment 6
0	2	0	4	0	1
Segment 7	Segment 8	Segment 9	Segment 10	Segment 11	Segment 12
1	2	0	0	0	0
Segment 13	Segment 14	Segment 15	Segment 16	Segment 17	Segment 18
2					
Segment 19	Segment 20	Segment 21	Segment 22	Segment 23	Segment 24
3					

020301-1**20000**-2_____ -3_____

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24



Segment location
13 14 15 16 17 18
020301-120000-200006-3XXXXX

- ☐ Page 2 / Section 3
- ☐ Segment 13 identifies the page number and is nonadjustable
- ☐ Segments 14-18 are programmable
- ☐ **Requires Settings:**
 - ☐ Change the filter alarm to 2000 Hrs.

Option	SEG13		SEG14			SEG15		SEG16	SEG17		SEG18							
Function	Page		Use of external control			Setting the output of external control		Reserved	Buzzer control		Maximum filter usage time ⁴⁾							
Indication and details	Indication	Details	Indication	Details		Indication	Details		Indication	Details	Indication	Details						
	2		0	Disuse	Sub, Existing control	0	Thermo on		0	Use of buzzer	2	1000 hours						
			1	On/Off														
			2	Off														
			3	Window														
			4	Disuse	Main, Existing control								1	Operation on	1	Disuse of buzzer	6	2000 hours
			5	On/Off														
			6	Off														
			7	Window														
			8	Disuse	Sub, Existing control													
			9	On/Off														
			A	Off														
			B	Window														
			C	Disuse	Main, Existing control													
			D	On/Off														
			E	Off														
			F	Window														



Page 2 settings

Segment 1	Segment 2	Segment 3	Segment 4	Segment 5	Segment 6
0	2	0	4	0	1
Segment 7	Segment 8	Segment 9	Segment 10	Segment 11	Segment 12
1	2	0	0	0	0
Segment 13	Segment 14	Segment 15	Segment 16	Segment 17	Segment 18
2	0	0	0	0	6
Segment 19	Segment 20	Segment 21	Segment 22	Segment 23	Segment 24
3					

020301-120000-200006-3
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24



020301-120000-200006-300000

Segment location
19 20 21 22 23 24

- ☐ Page 3 / Section 4
- ☐ Segment 19 identifies the page number and is nonadjustable
- ☐ Segments 14-18 are programmable .
- ☐ Required Settings:
 - ☐ Change Heat Compensation

Option	SEG19		SEG20		SEG21		SEG22	SEG23 ⁷⁾			SEG24
Function	Page		Individual control with remote control ⁵⁾		Heating setting compensation ⁶⁾		Reserved	Setting the MDS Kit installation option			Reserved
Indication and details	Indication	Details	Indication	Details	Indication	Details		Indication		Details	
	3		0 or 1	Indoor 1	0	Default		0		Disuse (Soft Off+Hard off)	
			2	Indoor 2	1	3.6°F (2°C)		Standard	1	Off after 20 min. (Soft Off+Hard off)	
			3	Indoor 3	2	9°F (5°C)			2	Off after 40 min. (Soft Off+Hard off)	
									3	Off after 80 min. (Soft Off+Hard off)	
			Premium	4				Off after 20 min. (Soft Off+Hard off)			
				5				Off after 40 min. (Soft Off+Hard off)			
				6				Off after 80 min. (Soft Off+Hard off)			
			Standard	7				Off after 20 min. (Soft Off only)			
				8				Off after 40 min. (Soft Off only)			
				9				Off after 80 min. (Soft Off only)			
			Premium	A				Off after 20 min. (Soft Off only)			
				B				Off after 40 min. (Soft Off only)			
				C				Off after 80 min. (Soft Off only)			

This is for demonstrations purposes only!
The Heat Compensation is automatically removed
when the wired controller thermistor is being used.



Page 3 settings

Segment 1	Segment 2	Segment 3	Segment 4	Segment 5	Segment 6
0	2	0	3	0	1
Segment 7	Segment 8	Segment 9	Segment 10	Segment 11	Segment 12
1	2	0	0	0	0
Segment 13	Segment 14	Segment 15	Segment 16	Segment 17	Segment 18
2	0	0	0	0	6
Segment 19	Segment 20	Segment 21	Segment 22	Segment 23	Segment 24
3	0	0	0	0	0

020301-120000-200006-300000
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24



Programming Option Codes

- ❑ Option codes can be programmed using one of the devices below.
- ❑ The easiest to use is the S-Net Pro Software.
- ❑ S-Net Pro 2 should be a staple in the HVAC mechanics toolbox.




Wired Controllers



S-NET Pro 2



Handheld Controllers

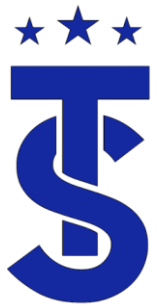

Programming Option codes

- ❑ The handheld controller is most commonly used to set option codes within the system.
- ❑ When in the programming mode the display of the handheld will correspond to a specific segment of the option code.
- ❑ The display uses a combination of the modes of operation(auto, cool, dry, fan & heat) and status (on and off) to correspond to a specific segment number or user programmable setting.
- ❑ Segment numbers that correspond to a Page numbers are not shown on the controller





Controller Segment Display


000000-100000-200000-300000

Page 0


Section 1

Segments 2-6


Segment 2

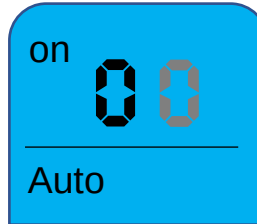


Segment 3

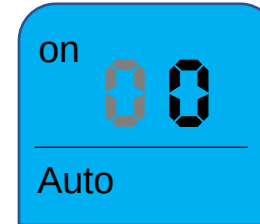


Segment 4

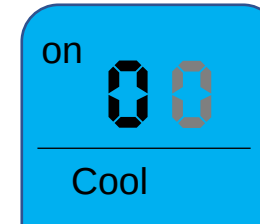

Segment 5

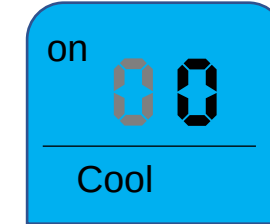

Segment 6

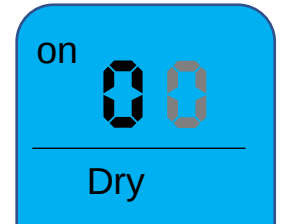


000000-100000-200000-300000

Page 1


Section 2

Segments 8-12


Segment 8

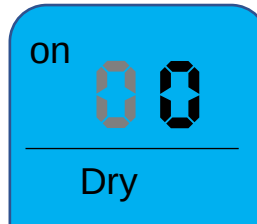


Segment 9

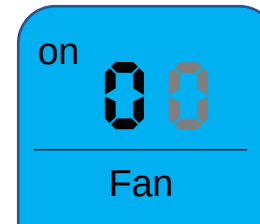


Segment 10

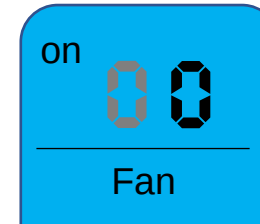

Segment 11

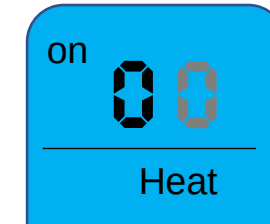

Segment 12

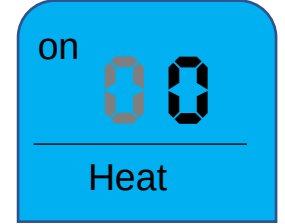


000000-100000-200000-300000

Page 2


Section 3

Segments 14-18


Segment 14

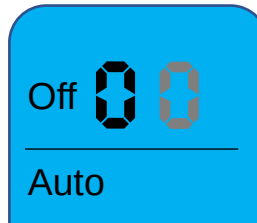


Segment 15

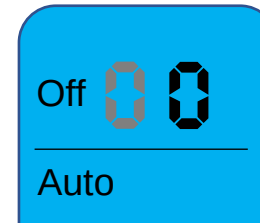


Segment 16

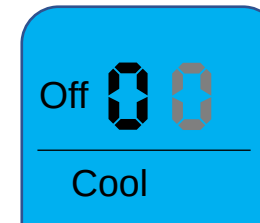

Segment 17

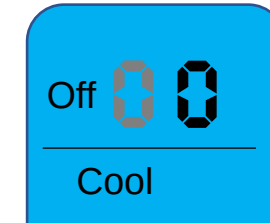

Segment 18

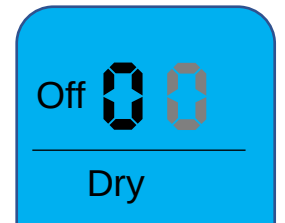


000000-100000-200000-300000

Page 3


Section 4

Segments 20-24


Segment 20

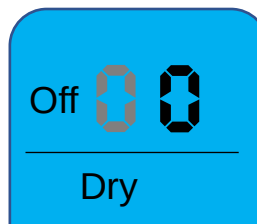


Segment 21

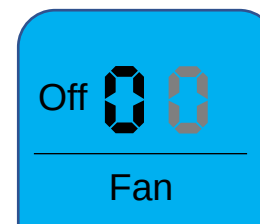


Segment 22

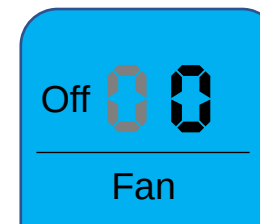

Segment 23

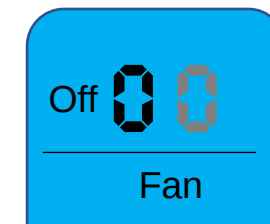


Segment 24

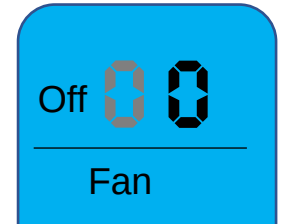



Segment number settings on the handheld

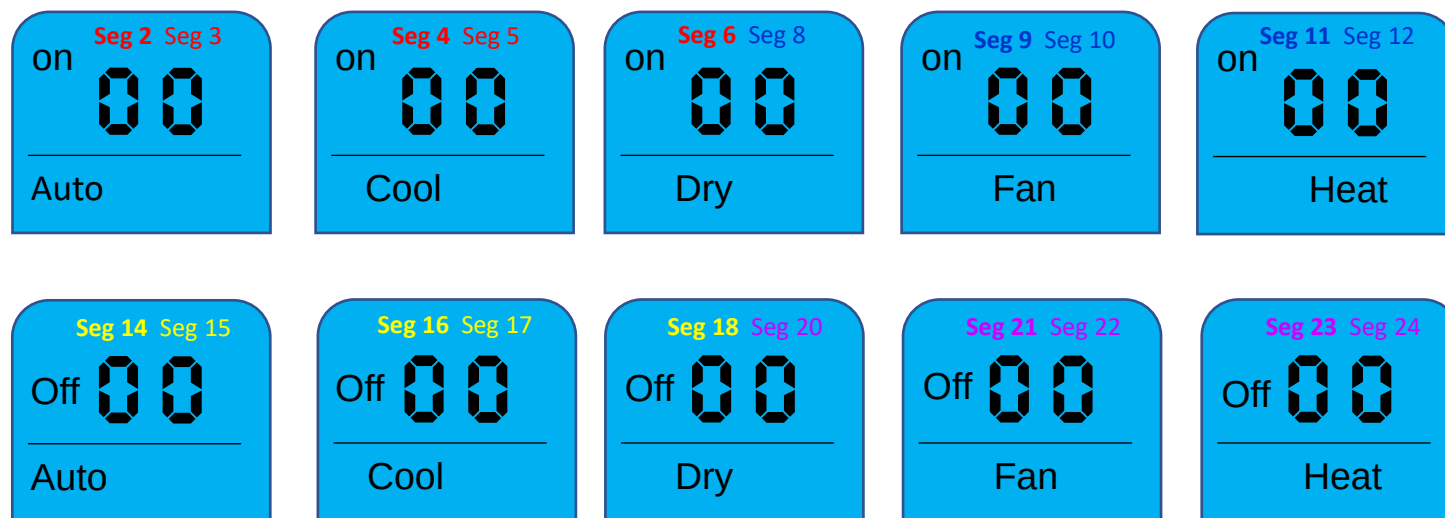

Segment location

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
000000-100000-200000-300000




Controller Setting Worksheet



Press to change
segment pages

Press to change
1st digit

Press to change
2nd digit

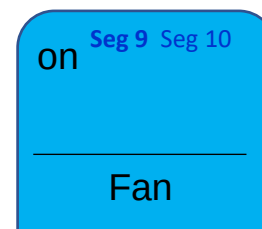

Segment location

Option Code: **0** **-1** **-2** **-3**
Segment Setting: 1 **2 3 4 5 6** 7 8 9 10 11 12 13 **14 15 16 17 18** 19 **20 21 22 23 24**




Segment number settings on the handheld



Press to change
segment pages


Press to change
1st digit

Press to change
2nd digit

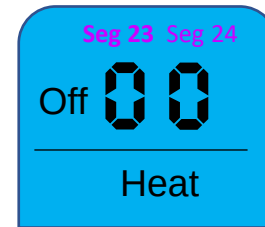


Segment location


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
020301-120000-200006-300000

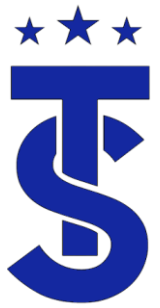

Entering the programming mode

- ☐ Remove 1 battery from the controller.
- ☐ Press the power button to drain power from the controller.
- ☐ While holding the temp + & - buttons install the battery previously removed.
- ☐ The display will show the mode in **Auto**, the operation status **On** and **00** will be displayed in the screen .
- ☐ You are now ready to enter your option code.

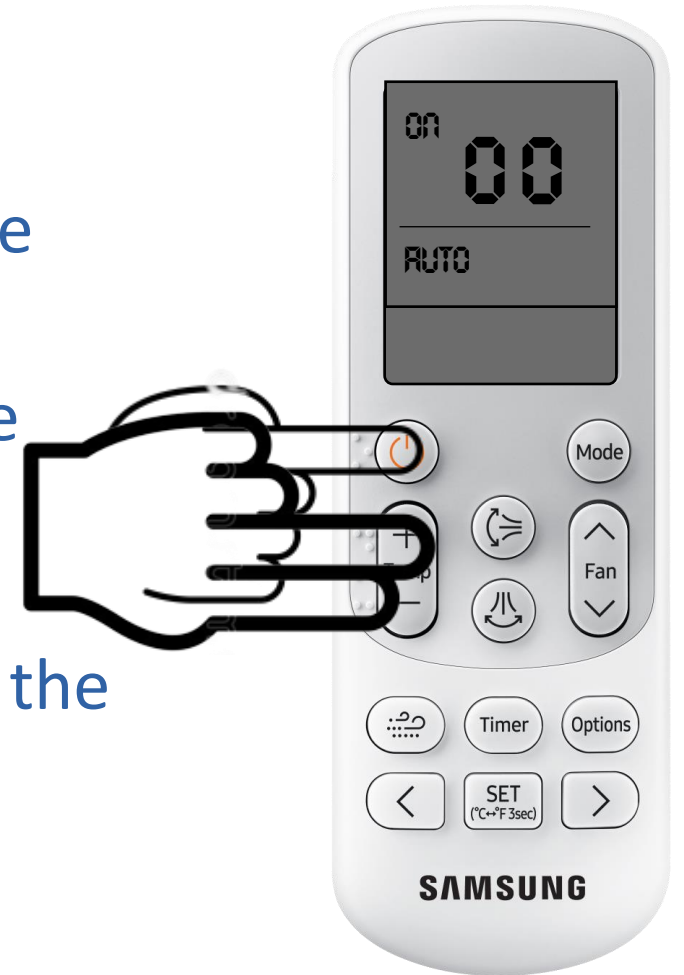

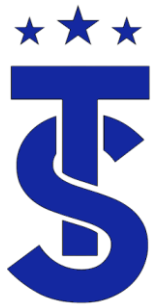

Changing Segment Pages



- ☐ Push the MODE button to change through the segment pages
- ☐ Pay attention to the MODE selection and Status setting.
- ☐ These have specific combinations for a set of segment settings

Segments

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

000000-1**00000**-2**00000**-3**00000**



Changing Segments Values




- ❑ Once you get to the correct segment setting you can change the setting by pressing the up and down buttons.
- ❑ The segment setting on the right is controlled by the fan down button.
- ❑ The segment setting on the left is controlled by the fan up button

Segments

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

000000-1**000000**-2**000000**-3**000000**

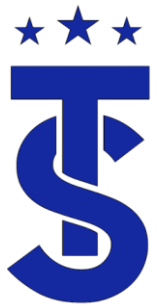

Example



Program the following option code into the remote controller



Press to
Changes
Mode

Press to
Changes
1st digit

Press to
Changes
2nd digit

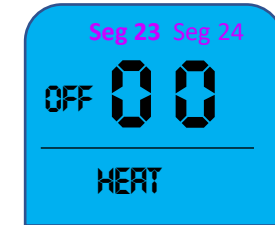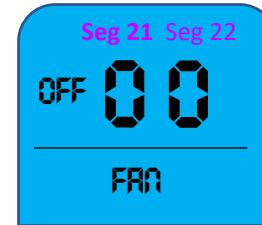

Segment location: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Option Code: 020301-100000-200006-300000



Verify the code setting



- ☐ Push the MODE button to cycle through the segment pages
- ☐ Check setting for each segment setting
- ☐ Remember that the MODE selection and OPERATION setting correspond to a specific set of segments
- ☐ Once the code is verified transmit it to the Indoor unit
- ☐ Point the controller at the indoor unit and press the power button 5 times

Segments

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
020301-100000-200006-300000


S-Net Pro 2 Components



Computer



Software

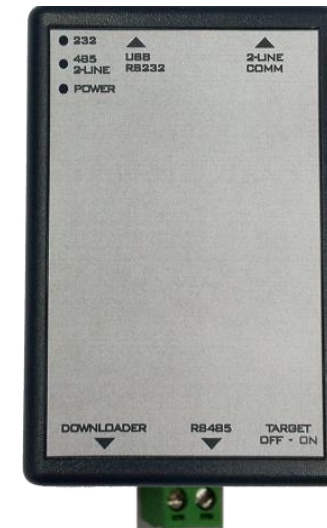



S-Net Converter



Connectors

SNET Pro 2 Connections


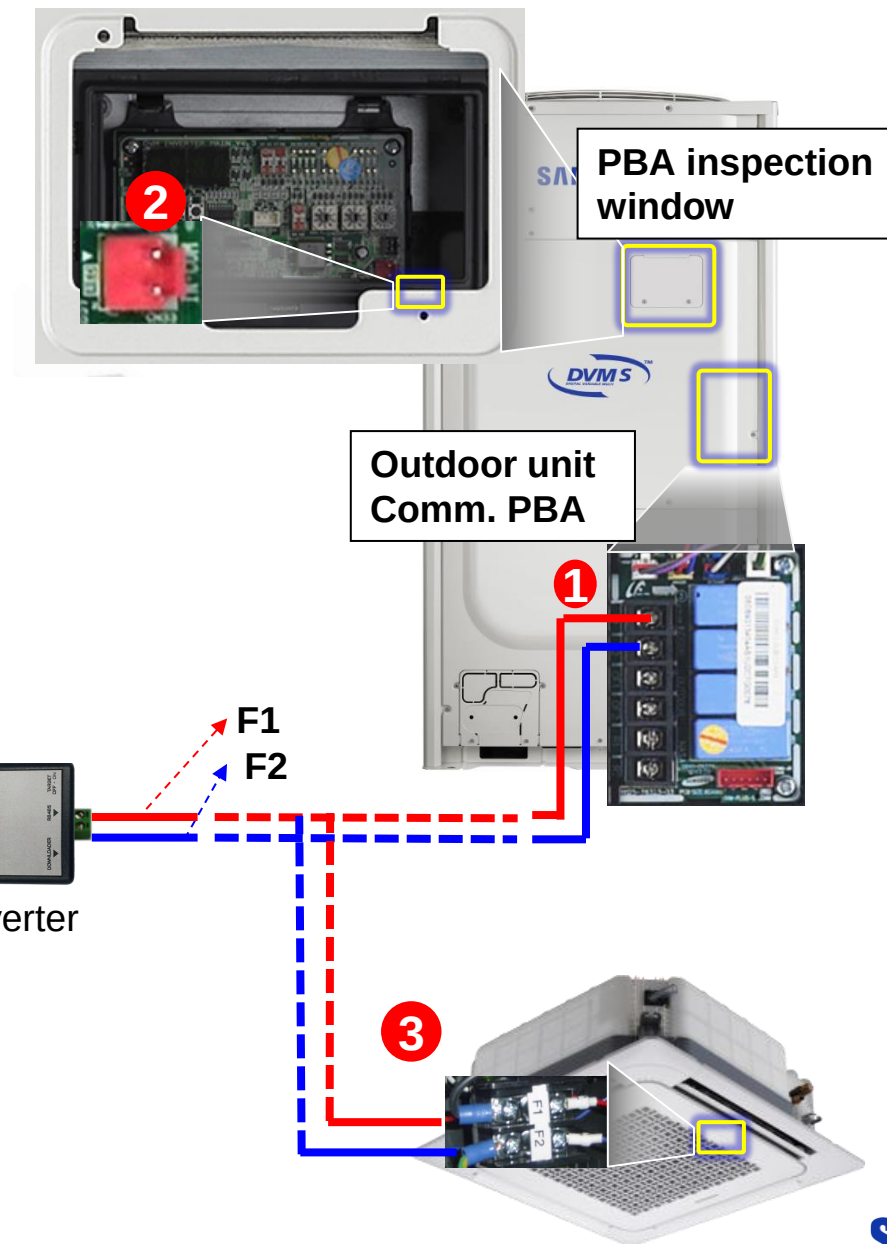


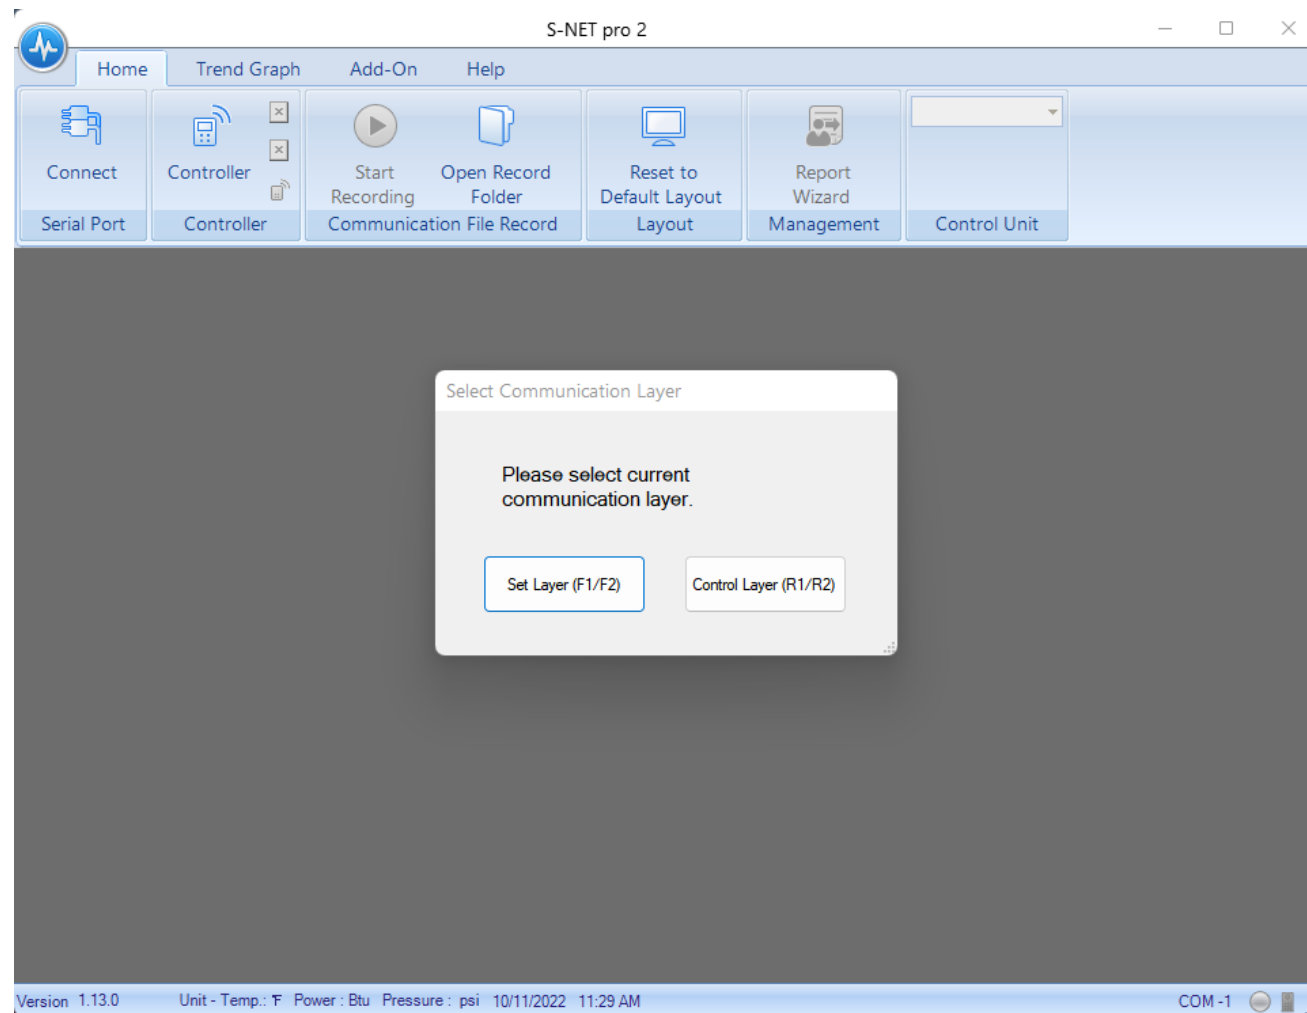



SNET Pro 2

Launching the Program

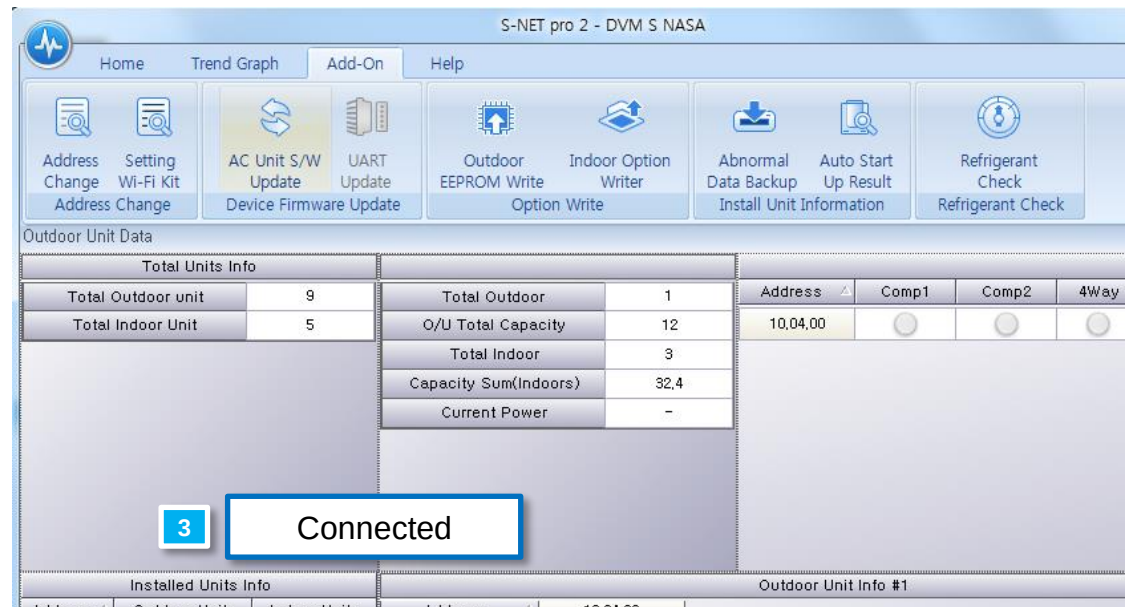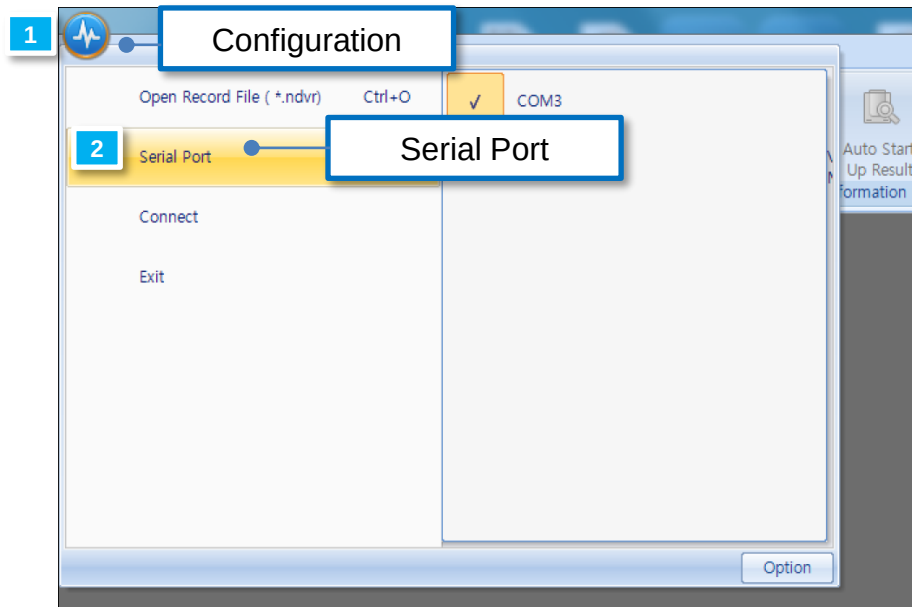



SNET Pro 2

Opening Option Writer

S-NET pro 2 - DVM S NASA

Home Trend Graph **1** **Add-On** Help

2

Address Change Setting Wi-Fi Kit Address Change
AC Unit S/W Update UART Update Device Firmware Update
Outdoor EEPROM Write **Indoor Option Writer** Option Write
Abnormal Data Backup Auto Start Up Result Install Unit Information
Refrigerant Check Refrigerant Check

Outdoor Unit Data

Total Units Info			
Total Outdoor unit	9	Total Outdoor	1
Total Indoor Unit	5	O/U Total Capacity	12
		Total Indoor	3

Address	Comp1	Comp2	4Way
10,04,00	☐	☐	☐



SNET Pro 2

Sending Code to the IDU or IDU's

Indoor Option Writer

☐ Select All

3 Address

- ☐ 20.04.01
- ☐ 20.04.02
- ☐ 20.04.03

Select the indoor unit(s) to set the option code.
- DVM indoor unit product and installation option setting.
- Must be connected to F1/F2 lines where indoor/
outdoor units are communicating successfully .

Installation Code	Installation Code2
[0]20010-[1]00000-[2]10000-[3]10000	[0]50000-[1]00000-[2]00000-[3]00000
[0]20010-[1]00000-[2]00000-[3]00000	[0]50000-[1]00000-[2]00000-[3]00000
[0]20010-[1]00000-[2]00000-[3]00000	[0]50000-[1]00000-[2]00000-[3]00000

[Option Code]

4 Product Code 0 1____ --1 ____ --2 ____ --3 ____

Installation Code 0 2____ --1 ____ --2 ____ --3 ____


Installation Code2 0 5____ --1 ____ --2 ____ --3 ____

Write the indoor unit option code

5 Write Option


Open Option File Close

Warning take care in selecting the correct code to write to a unit (ex.
Do not enter an installation code into the product option code fields)

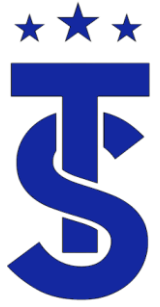

Manually addressing Indoor units.

- ☐ There may be some cases when you may be required to manually address indoor unit on a FJM system.
- ☐ It is recommended that you fix the issue that is preventing the system from completing the Auto Addressing Process.

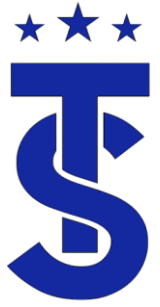

Manually addressing FJM indoor units

0A0000-100000-200000-300000

- ☐ To individually address an indoor unit, you will have to use option code 0A
- ☐ Let's work through the following system.



Port A
Address
0



Port B
Address
1



Port C
Address
2



Port D
Address
3



Port E
Address
4





Address Setting

0A0000-100000-200000-300000


Option	SEG1		SEG2		SEG3		SEG4	SEG5		SEG6	
Function	Page		Mode		Setting main address			Indoor unit number		Indoor unit number	
Indication and details	Indication	Details	Indication	Details	Indication	Details	Reserved	Indication	Details	Indication	Details
	0		A		0	No main address		0 to 1	Tens digit	0 to 9	Units digit
					1	Main address setting mode					
Option	SEG7		SEG8		SEG9		SEG10	SEG11		SEG12	
Function	Page		Reserved		Setting RMC address		Reserved	Group channel (x16)		Group address	
Indication and details	Indication	Details			Indication	Details		Indication	Details		
	1				0	No RMC address		RMC1	0 to 2	RMC2	0 to F
1			RMC address setting mode								



Address Setting


0A0000-100000-200000-300000

Option	SEG1		SEG2		SEG3		SEG4	SEG5		SEG6	
Function	Page		Mode		Setting main address		Reserved	Indoor unit number		Indoor unit number	
Indication and details	Indication	Details	Indication	Details	Indication	Details		Indication	Details	Indication	Details
	0		A		0	No main address		0 to 1	Tens digit	0 to 9	Units digit
					1	Main address setting mode					
Option	SEG7		SEG8		SEG9		SEG10	SEG11		SEG12	
Function	Page		Reserved		Setting RMC address		Reserved	Group channel (x16)		Group address	
Indication and details	Indication	Details			Indication	Details		Indication	Details	Indication	Details
	1				0	No RMC address		RMC1	0 to 2	RMC2	0 to F
					1	RMC address setting mode					

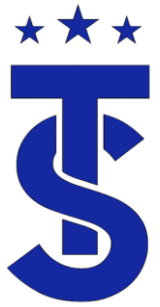

FJM Addressing

☐ Port	• Unit Number	• Address	• Option Code (addressing)
☐ A	• 1	• 00	• <u>0A1000</u> -100000
☐ B	• 2	• 01	• <u>0A1001</u> -100000
☐ C	• 3	• 02	• <u>0A1002</u> -100000
☐ D	• 4	• 03	• <u>0A1003</u> -100000
☐ E	• 5	• 04	• <u>0A1004</u> -100000

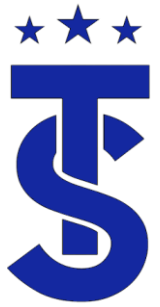

Manually addressing indoor units

0**A0000**-100000-200000-300000

- Set the address option codes according for each units



Port A

Address
0

0**A1000**-100000



Port B

Address
1

0**A1001**-100000



Port C

Address
2

0**A1002**-100000



Port D

Address
3


0**A1003**-100000



Port E

Address
4

0**A1004**-100000

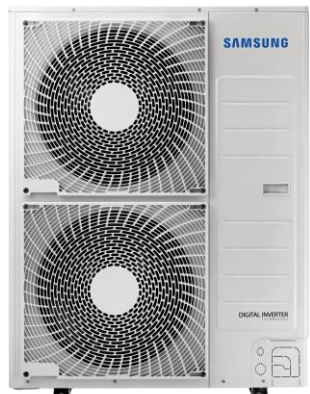



Manually addressing indoor units

0**A0000**-100000-200000-300000

- Set the address option codes according for each units



Port A

Address
0

0**A1000**-100000



Port B

Address
1

0**A1001**-100000

Port C

Address
2

0**A1002**-100000



Port D


Address
3

0**A1003**-100000

Port E

Address
4

0**A1004**-100000

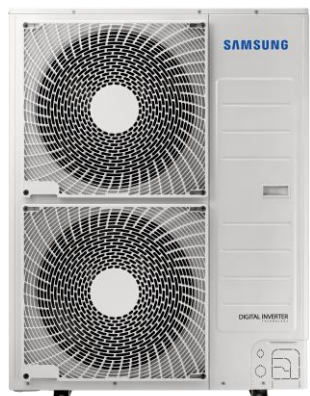



Address Option Code Setting

on ^{Seg 2 Seg 3} A1 Auto	on ^{Seg 4 Seg 5} 00 Cool	on ^{Seg 6 Seg 8} 10 Dry	on ^{Seg 9 Seg 10} 00 Fan	on ^{Seg 11 Seg 12} 00 Heat
Off ^{Seg 14 Seg 15} 00 Auto	Off ^{Seg 16 Seg 17} 00 Cool	Off ^{Seg 18 Seg 20} 00 Dry	Off ^{Seg 21 Seg 22} 00 Fan	Off ^{Seg 23 Seg 24} 00 Heat

0A1001-120000-200006-301000

Segment 2: Option Code



S-NET Pro 2

Address Settings

S-NET pro 2 - DVM Chiller

Home Trend Graph **1** Add-On Help

2 Address Change Setting Wi-Fi Kit Address Change

3

4 Set Address 0~63

5 OK

6 OK Cancel


3

4 Set Address 0~FE

5 OK

6 OK Cancel

IndoorUnit Address	RMC Address
Current Indoor unit A...	Current RMC Address
Changed Indoor Unit Add...	Changed RMC Address
01	1
02	1
03	0

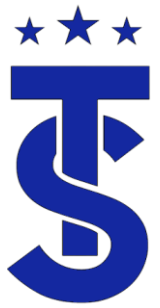

Putting It All Together

- ☐ Let's look at an example of how understanding option coding can help you troubleshoot a system.
- ☐ The following system had ducted unit on it that are not controlling the space.
- ☐ Looking at the option codes we can give us a starting point on to how the unit were set up and how the are controlled.



S-**NET** pro 2 - DVM S Water

Home

Trend Graph

Replay

Add-On

Help

8/4/2022 8:49:59 AM

Duration 00:11:57

8/4/2022 9:39:10 AM

Current Time '4/2022 9:01 AM

16x

Fast

Slow

Player

Indoor Unit Installation Data

Indoor Unit Installation Data														
Address	Model	RMC	MCU ADDRESS	MCU PORT	Location	Product Option	Installation Option	Installation Option2	Main Micom	Error History1	Error History2	Error History3	Error History4	Error History5
0	Slim 1Way	00	7	A	-	[0]17044-[1]180C8-[2]01616-[3]30010	[0]20010-[1]00000-[2]00000-[3]00000	[0]50000-[1]00000-[2]00000-[3]00000	DB91-01888C 180502	000	000	000	000	000
1	Slim 1Way	01	6	D	-	[0]17044-[1]180C8-[2]01616-[3]30010	[0]20010-[1]00000-[2]00000-[3]00000	[0]50000-[1]00000-[2]00000-[3]00000	DB91-01888C 180502	000	000	000	000	000
2	Slim 1Way	03	6	A	-	[0]17044-[1]180C8-[2]01616-[3]30010	[0]20010-[1]00000-[2]00000-[3]00000	[0]50000-[1]00000-[2]00000-[3]00000	DB91-01888C 180502	000	000	000	000	000
3	Duct	03	7	B	-	[0]10054-[1]E54BB-[2]04646-[3]31115	[0]20010-[1]20000-[2]00000-[3]00000	[0]50000-[1]00000-[2]40000-[3]00000	DB91-01889A 170309	-	-	-	-	-
4	Duct	00	6	C	-	[0]10054-[1]E54BB-[2]04646-[3]31115	[0]20010-[1]20000-[2]00000-[3]00000	[0]50000-[1]00000-[2]40000-[3]00000	DB91-01889A 170309	-	-	-	-	-
5	Slim 1Way	05	7	E	-	[0]17044-[1]180C8-[2]01616-[3]30010	[0]20010-[1]00000-[2]00000-[3]00000	[0]50000-[1]00000-[2]00000-[3]00000	DB91-01888C 180502	000	000	000	000	000
6	Duct	06	7	F	-	[0]10054-[1]E5438-[2]03535-[3]31104	[0]20010-[1]20000-[2]00000-[3]00000	[0]50000-[1]00000-[2]40000-[3]00000	DB91-01889A 170309	-	-	-	-	-
7	Slim 1Way	07	6	B	-	[0]17044-[1]180C8-[2]01616-[3]30010	[0]20010-[1]00000-[2]00000-[3]00000	[0]50000-[1]00000-[2]00000-[3]00000	DB91-01888C 180502	000	000	000	000	000
8	Slim 1Way	02	7	C	-	[0]17044-[1]180C8-[2]01616-[3]30010	[0]20010-[1]00000-[2]00000-[3]00000	[0]50000-[1]00000-[2]00000-[3]00000	DB91-01888C 180502	000	000	000	000	000

AM024MNHDCH/AA

Fan options		ESP	Sound Pressure (dBA)		
		inAq	H	M	L
Default	010054-1E54BB-204646-331115	0.2	39	36	30
Option	010054-1E581F-204646-331115	0.3	41	36	31
	010054-1E5973-204646-331115	0.4	43	38	33
	010054-1E59C6-204646-331115	0.5	45	40	34
	010054-1E5D1A-204646-331115	0.6	47	42	36
	010054-1E5D6D-204646-331115	0.7	48	43	37
	010054-1E5EAO-204646-331115	0.8	48	44	39

Outdoor Unit Data

Outdoor Unit Installation Data

Outdoor Unit Cycle Diagram

Indoor Unit Data

Indoor Unit Installation Data

Control for Unoccupied and Entering Room

MCU Unit Data

Version 1.13.0

Unit - Temp.: F

Power : Btu

Pressure : psi

9/15/2022

4:59 PM

COM-1

SAMSUNG



Product Option Code

Example

Model number: AM024MNHDCH

Description: DVM S, Duct S - 24,000 Btu/h,


Option code: 010054-1E54BB-204646-331115

Static pressure (inches): 0.12" - 0.20"




7) AM024MNHDCH

①	External Static Pressure(inAq)	Option Code
	0.12≤ SP ≤0.20	010054-1E54BB-204646-331115

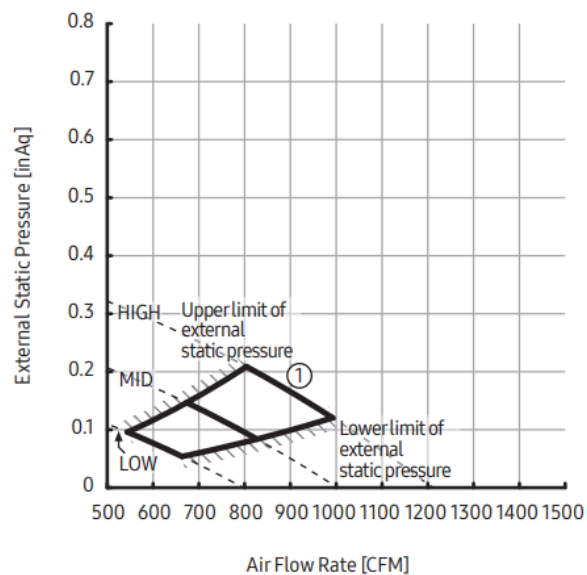


⑤	External Static Pressure(inAq)	Option Code
	0.50< SP ≤0.60	010054-1E5D1A-204646-331115

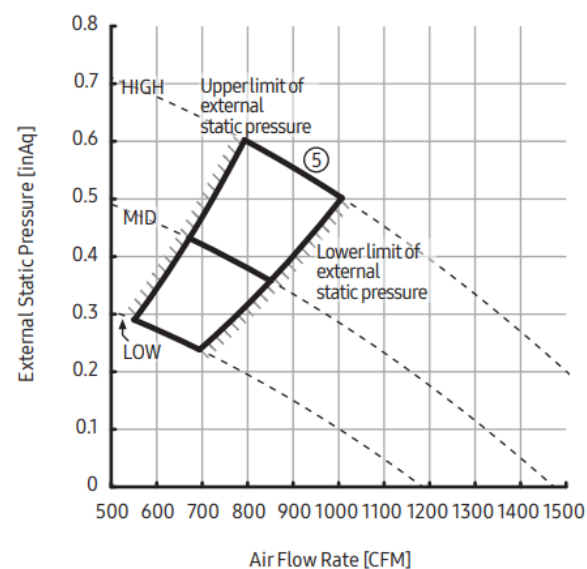

7) AM024MNHDCH

⑦	External Static Pressure(inAq)	Option Code
	0.69< SP ≤0.79	010054-1E5EA0-204646-331115

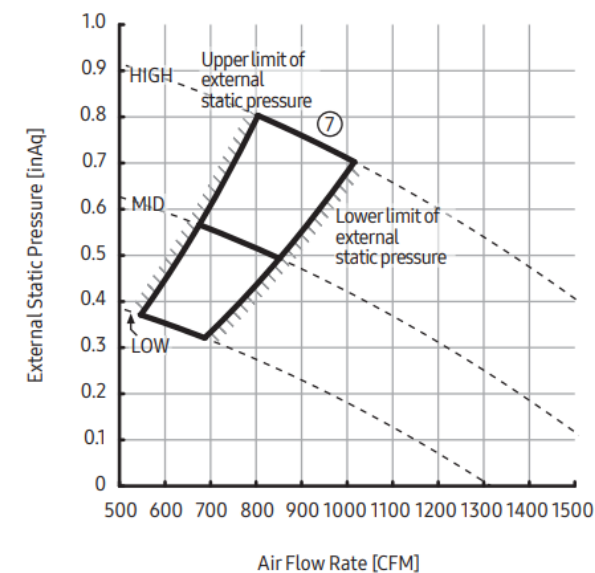



What Does the Install Options Tell Us

020010-100000-200000-300000

The only setting is Segment 5

SEG1 (Page)	SEG2 (Option type)	SEG3	SEG4 (Common)	SEG5 (Common)	SEG6 (Common)
0	2	-	External room temperature sensor / Minimizing fan operation when thermo off	Central control	FAN RPM compensation
SEG7 (Page)	SEG8 (Common)	SEG9 (Only Duct)	SEG10	SEG11 (Common)	SEG12
1	Drain pump	Hot water heater	-	EEV Step when heating stops	-
SEG13 (Page)	SEG14 (Common)	SEG15 (Common)	SEG16 (Common)	SEG17 (Common)	SEG18 (Common)
2	External control	External control output / External heater On or Off signal	S-Plasma ion	Buzzer	Number of hours using filter
SEG19 (Page)	SEG20 (Common)	SEG21 (Common)	SEG22 (Common)	SEG23 (Only 4Way(600x600))	SEG24 (Only 360CST)
3	Individual control of a remote controller	Heating setting compensation / Removing condensate water in heating mode	EEV Step of stopped unit during oil return / defrost mode	Motion detection sensor	Cycle time of Swing

* The default setting of an indoor unit installation option is “020010-100000-200000-300000”




Advanced Option Settings

050000 - 100000 - 200000 - 300000

05 series installation options are set for default even though this is a heat recovery system.


SEG1 (Page)	SEG2 (Option type)	SEG3 (Only Heat recovery)	SEG4 (When setting SEG 3)	SEG5 (When setting SEG 3)	SEG6 (When setting SEG 3)
0	5	Use of Auto change over For HR in Auto mode	Standard heating temp. Offset	Standard cooling temp. Offset	Standard for mode change Heating → Cooling
SEG7 (Page)	SEG8 (When setting SEG 3)	SEG9 (When setting SEG 3)	SEG10	SEG11	SEG12
1	Standard for mode Change Cooling → Heating	Time required for mode change	Compensation option for long pipe or height difference between indoor units	-	-
SEG13 (Page)	SEG14	SEG15	SEG16	SEG17	SEG18 (Common)
2	-	-	-	-	Control variables when using hot water / external heater
SEG19 (Page)	SEG20	SEG21	SEG22	SEG23	SEG24 (Only Hydro)
3	-	-	-	-	Water tank sensor setting

* The default setting of an indoor unit installation option is “050010-100000-200000-300000”

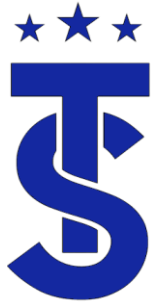


Firm Ware Update Using S-Net Pro 2


❑ <https://www.youtube.com/watch?v=E36HyRNtlpl>

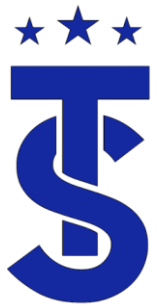

IDU Firm Ware Update


- ☐ Make sure SNET Pro is connected to the system and all data is pulled
- ☐ Click on the Add On Tab
- ☐ Click on the “AC Unit SW Update” icon

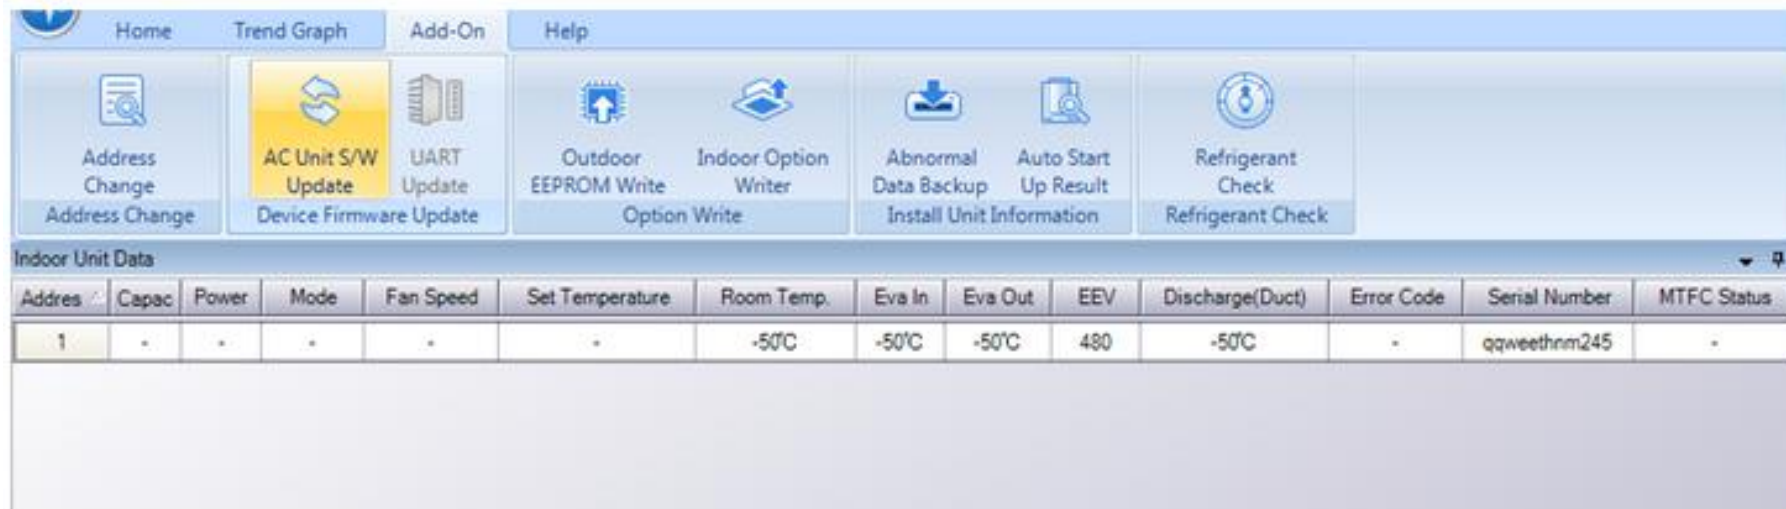


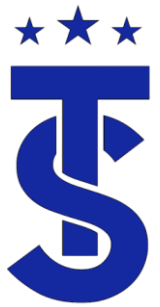

Indoor Unit list


- ☐ The indoor unit list will pop up,
- ☐ This system has only 2 indoor units.
- ☐ Click the  Button at the right of the Update file path window.

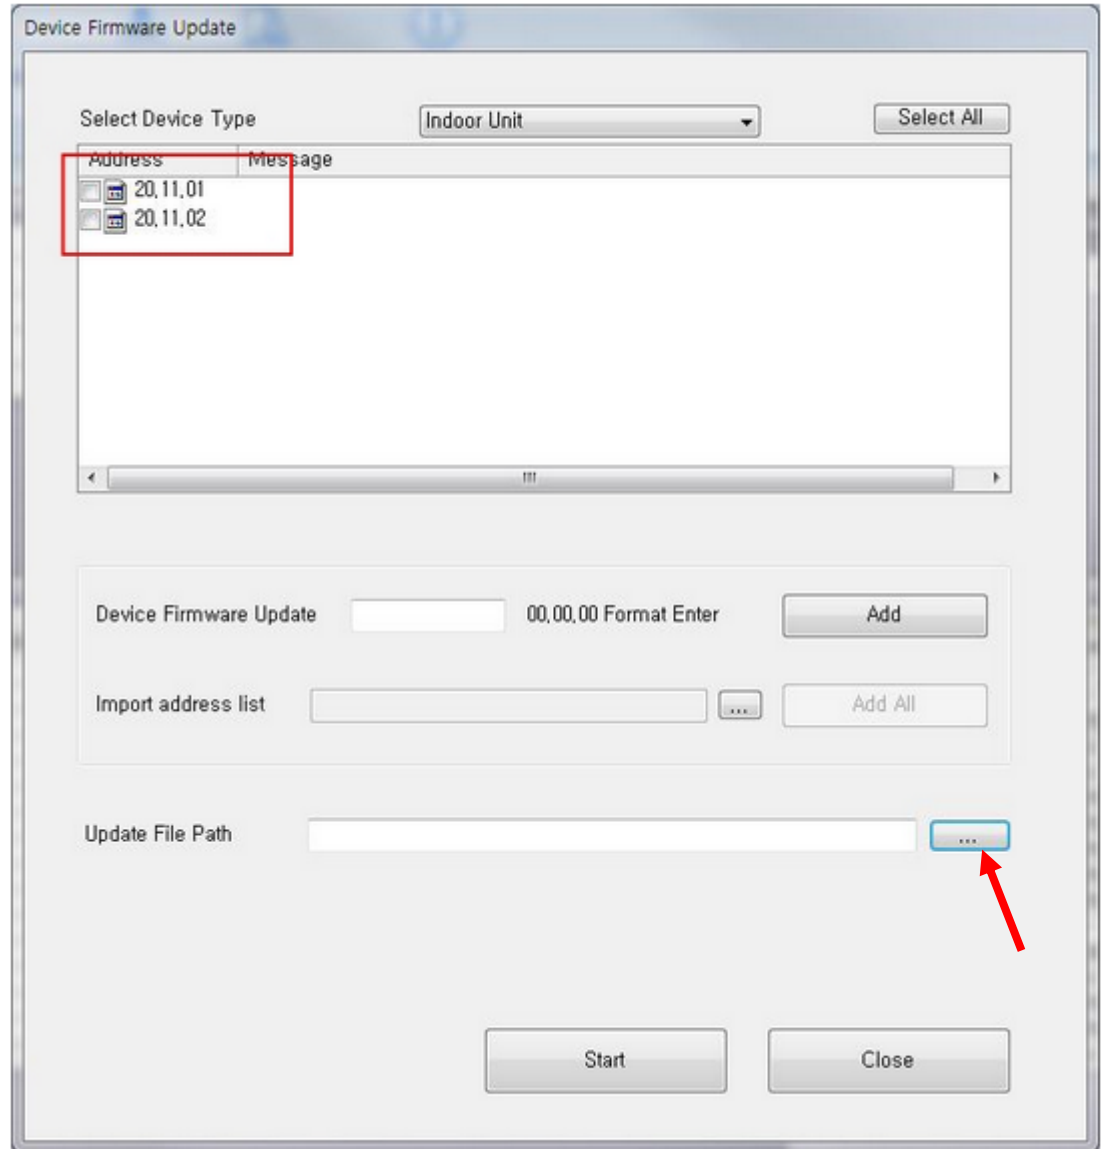

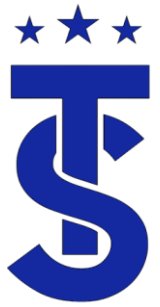

Select the Firmware File


- ☐ Select the firmware file you want to upload to the unit.
- ☐ This will be a HEX file that you had previously saved on your computer.
- ☐ Once the correct software is selected click on the indoor unit you want to update.
- ☐ For our example it will be unit # 1
- ☐ Then Click Start

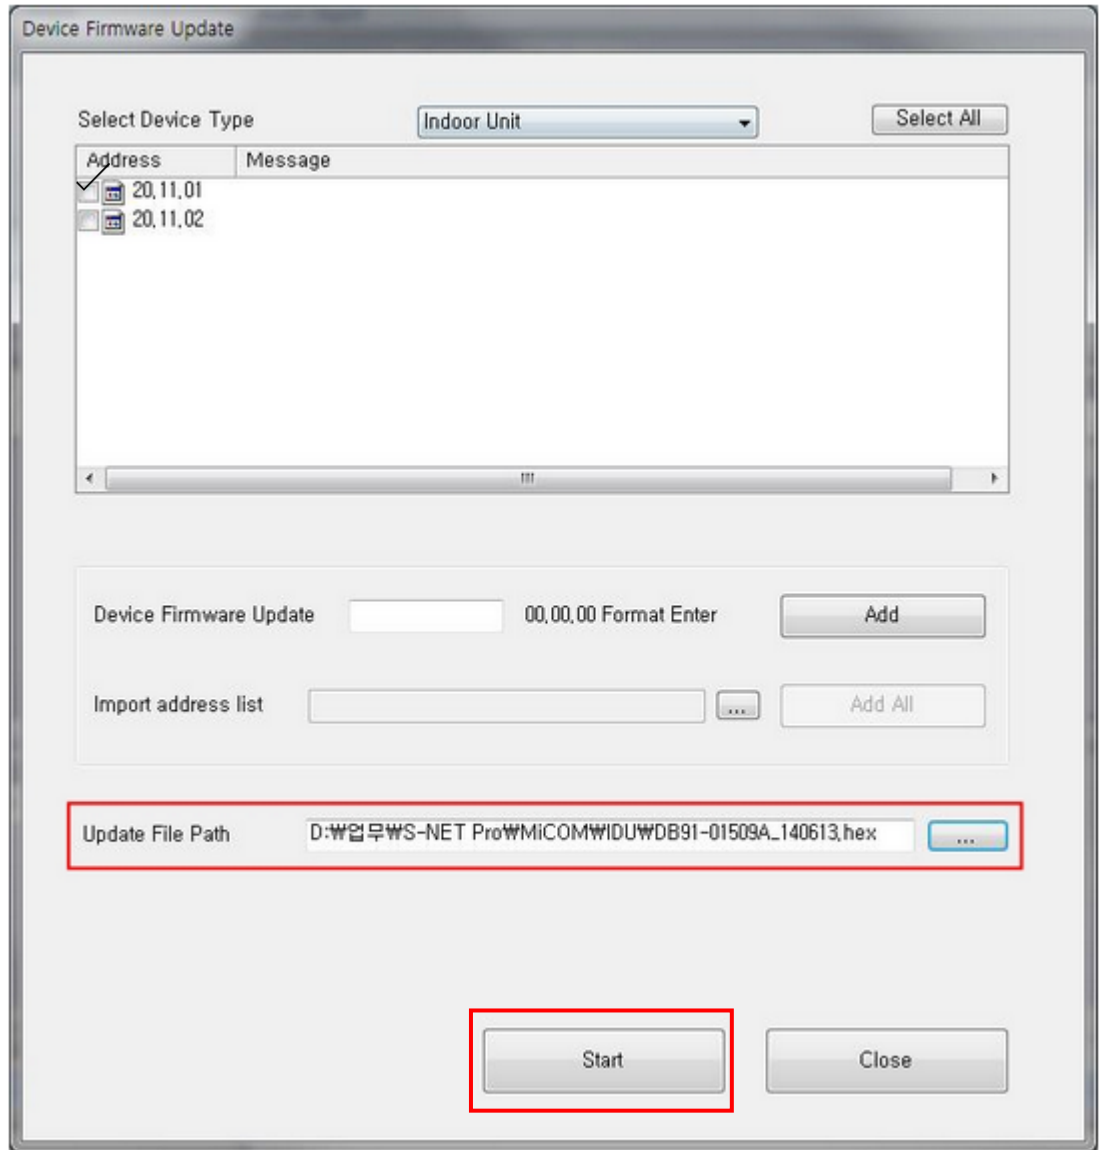




Update in Progress


- ❑ Once you have started the download a progress bar will be displayed.
- ❑ During the download it is important that the connection to the system is not interrupted, and that the computer does not go into sleep mode!
- ❑ When the progress bar reaches the end the process is complete.

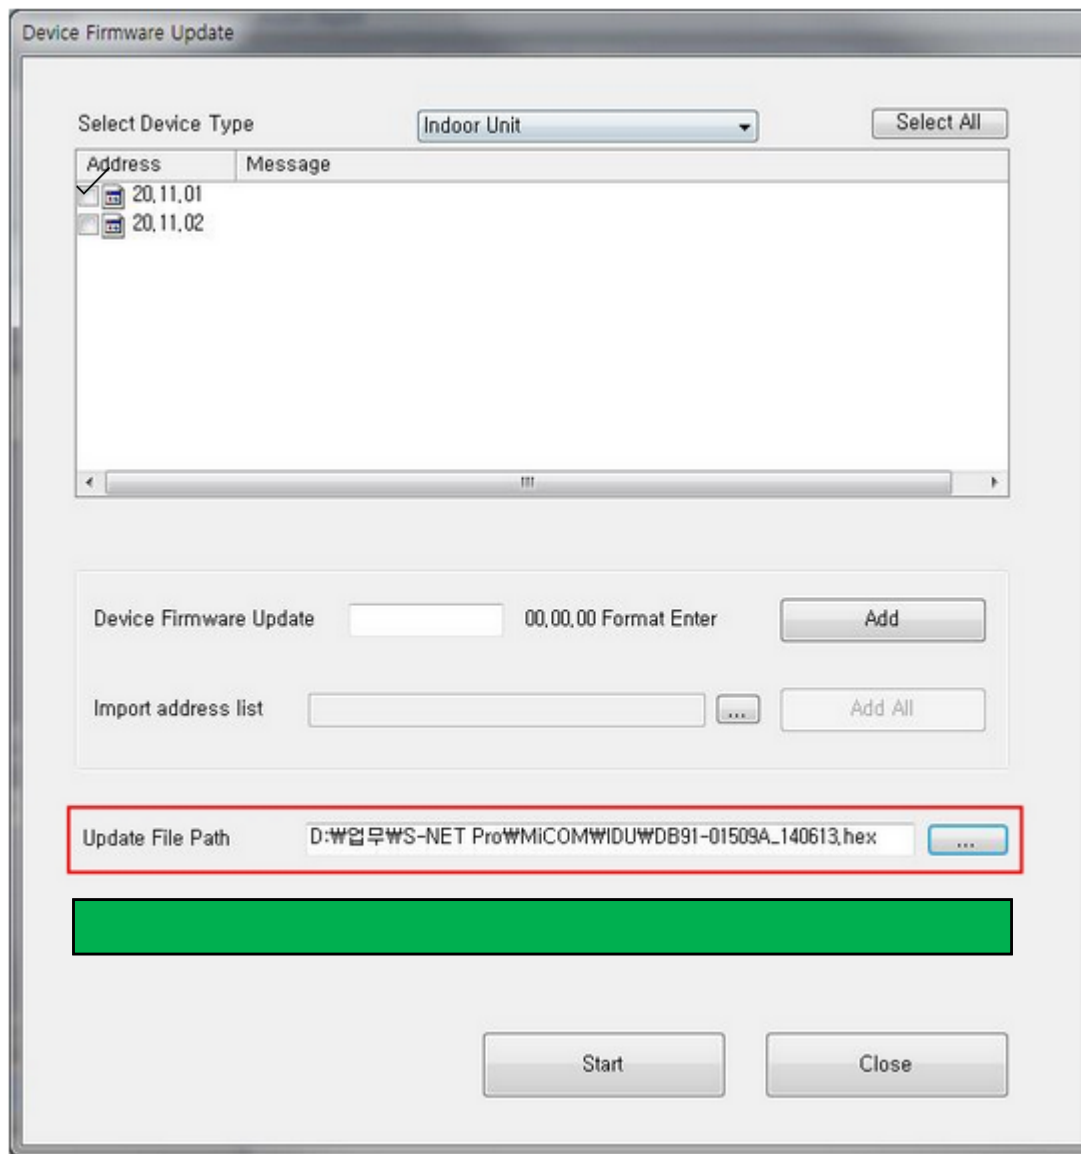


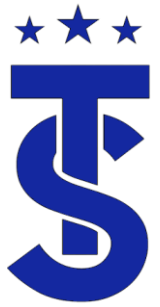

Download Completed

- ❑ Once the download is completed
- ❑ Click “Close” to close the Device Firmware Update window.

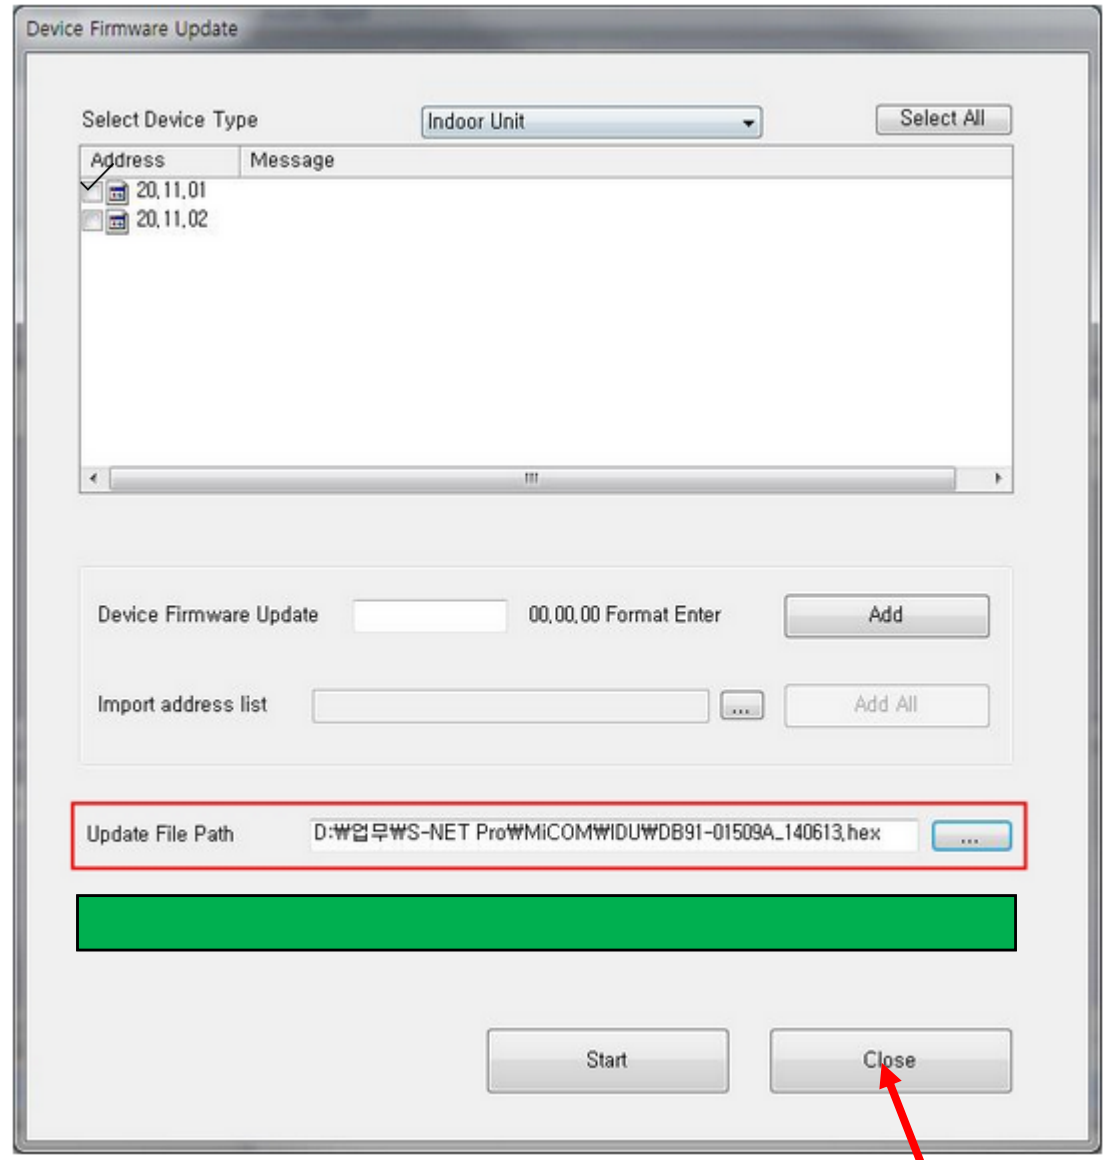

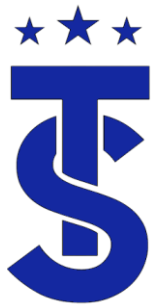


Update the indoor unit data.

- ☐ Scroll up until the update box appears for the indoor units.
- ☐ Click “update” to allow the system to update.
- ☐ Congratulations your update process is completed

Indoor Unit Data

Update

Address	Capac	Power	Mode	Fan Speed	Set Temperature	Room Temp.	Eva In	Eva Out	EEV	Discharge(Duct)	Error Code	Serial Number	MTFC Status
0	0kW		Heat	-	30°C	-20°C	-50°C	-50°C	480	-	0	N/A	-
1	0kW		Dry	Off	24°C	-50°C	-50°C	-50°C	480	-50°C	153	qqweethm245	

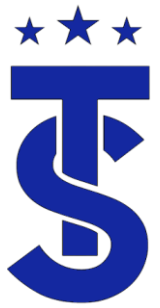

Individual Option Settings

- ❑ There may be times when all you want to do is change a specific segment of an option code, for example lowering the temperature compensation on a wall mount unit.
- ❑ Instead of creating an entire option code and programming that into the controller you have the option to change any 1 segment of an option code.
- ❑ When D is entered into segment 2 this tells the unit to change a specific segment of an option code.

0D0000-120000-200006-301000
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24



Individual Option Settings

Option	SEG1		SEG2		SEG3		SEG4		SEG5		SEG6	
Function	Page		Mode		Option mode to change		Tens position of the option number		Units position of the option number		New value	
Indication and details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details
	0		D		Option type	0 to F	Tens position value	0 to 9	Units position value	0 to 9	New value	0 to F

☐ Setting an individual option Setting

- ☐ Segment 2 = D. This tells the system to make an individual change.
- ☐ Segment 3 = 1, 2 or 5. This designates the option code to change
 - ☐ 1 = Product code, 2 = Installation Options & 5 = Advanced Installation Options
- ☐ Segment 4 & 5 = the option segment you want to change
- ☐ Segment 6 = The desired setting you want to make




Example

Change the setting to shut the buzzer off

- ❑ The Heat Compensation in option settings menu 2
- ❑ The segment that correspond to that option is 21.
- ❑ The value to reduce the heat compensation to 3.6 degrees is 1
- ❑ The option code to lower the heating compensation is:
 - ❑ 0 D 2 21 1


Option	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6
Function	Page	Mode	Option mode to change	Tens position of the option number	Units position of the option number	New value
Indication	0	D	2	2	1	1

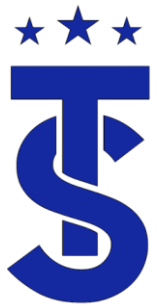

Remote Programming

- ☐ Enter the option code 0 D 2 21 1 into the controller.
- ☐ When the code is correctly entered, the displays on the controller should match the example below.
 - ☐ Remember that page numbers are not displayed on the controller.
- ☐ Point the controller at the indoor unit and press the power button to send the change to the unit.



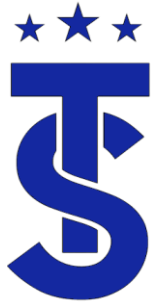


Option Code Worksheet

Segment 1	Segment 2	Segment 3	Segment 4	Segment 5	Segment 6
0	2	0	3	0	1
Segment 7	Segment 8	Segment 9	Segment 10	Segment 11	Segment 12
1	2	0	0	0	0
Segment 13	Segment 14	Segment 15	Segment 16	Segment 17	Segment 18
2	0	0	0	0	6
Segment 19	Segment 20	Segment 21	Segment 22	Segment 23	Segment 24
3	0	1	0	0	0

020301-120000-200006-301000

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

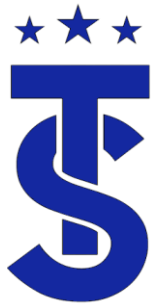

Controller Display Settings

020301-120000-200006-301000
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

on **Seg 2 Seg 3**
20
Auto

on **Seg 4 Seg 5**
30
Cool

on **Seg 6 Seg 8**
10
Dry

on **Seg 9 Seg 10**
00
Fan

on **Seg 11 Seg 12**
00
Heat

Seg 14 Seg 15
Off **00**
Auto

Seg 16 Seg 17
Off **00**
Cool

Seg 18 Seg 20
Off **60**
Dry

Seg 21 Seg 22
Off **10**
Fan

Seg 23 Seg 24
Off **00**
Heat



Controller Setting Worksheet

Individual Setting of segment 6 of the product option code (removes heat compensation)



Press to change
segment pages

Press to change
1st digit

Press to change
2nd digit

on **Seg 2 Seg 3**
D 1
Auto

on **Seg 4 Seg 5**
0 6
Cool

on **Seg 6 Seg 8**
2 0
Dry

on **Seg 9 Seg 10**
0 0
Fan

on **Seg 11 Seg 12**
0 0
Heat

Seg 14 Seg 15
Off **0 0**
Auto

Seg 16 Seg 17
Off **0 0**
Cool

Seg 18 Seg 20
Off **0 0**
Dry


Seg 21 Seg 22
Off **0 0**
Fan

Seg 23 Seg 24
Off **0 0**
Heat

Segment location

Option Code: **0D1062**-1-2-3

Segment Setting: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

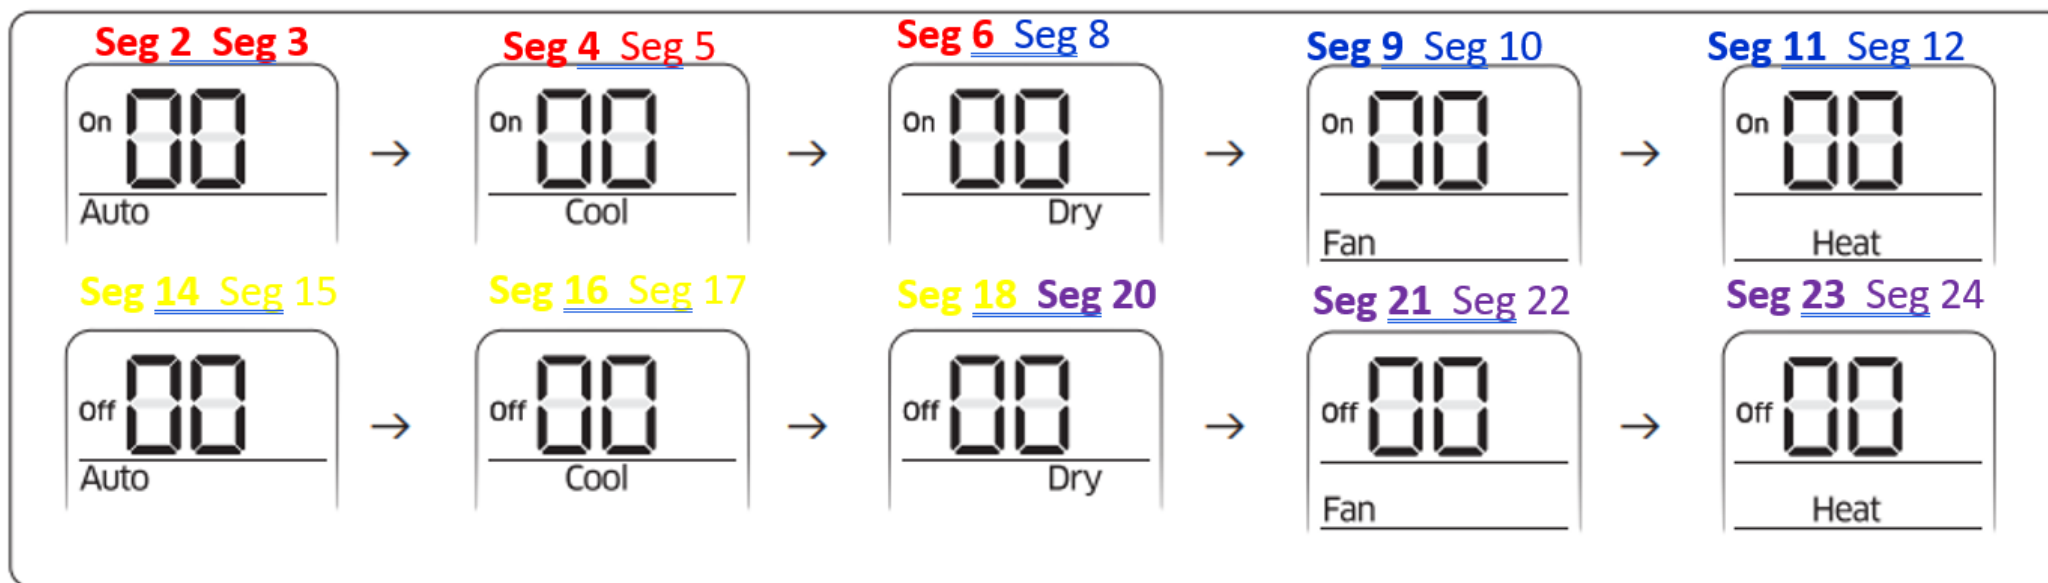



Code Identification

- ☐ There are several codes that are used to change the operation of the equipment.
- ☐ Segment 2 is used to identify the function of the code.
- ☐ Available codes are as follows
 - ☐ **A - IDU Addressing String:** (Typically used with FJM units)
 - ☐ 0A0000-100000-200000-300000
 - ☐ **1 - Product Code String:**
 - ☐ 010000-100000-200000-300000
 - ☐ **2 - Basic Installer Options String:**
 - ☐ 020000-100000-200000-300000
 - ☐ **5 - Advanced Installer Options String:**
 - ☐ 050000-100000-200000-300000
 - ☐ **D – Individual Segment change of an option code**
 - ☐ 0D0000-100000-200000-300000



Option Code Worksheet

Segment 1	Segment 2	Segment 3	Segment 4	Segment 5	Segment 6
0					
Segment 7	Segment 8	Segment 9	Segment 10	Segment 11	Segment 12
1					
Segment 13	Segment 14	Segment 15	Segment 16	Segment 17	Segment 18
2					
Segment 19	Segment 20	Segment 21	Segment 22	Segment 23	Segment 24
3					

0 1 2 3 4 5 6 **-1** 7 8 9 10 11 12 **-2** 13 14 15 16 17 18 **-3** 19 20 21 22 23 24



Controller Setting Worksheet



Press to change
segment pages

Press to change
1st digit

Press to change
2nd digit

on **Seg 2 Seg 3**

Auto

on **Seg 4 Seg 5**

Cool

on **Seg 6 Seg 8**

Dry

on **Seg 9 Seg 10**

Fan

on **Seg 11 Seg 12**

Heat

Seg 14 Seg 15

Off

Auto

Seg 16 Seg 17

Off

Cool

Seg 18 Seg 20

Off

Dry

Seg 21 Seg 22

Off

Fan

Seg 23 Seg 24

Off

Heat

Segment location

Option Code: **0** **-1** **-2** **-3**

Segment Setting: 1 **2 3 4 5 6** 7 8 9 10 11 12 13 **14 15 16 17 18** 19 **20 21 22 23 24**

Directions: Determine the required option code using the Option Code Work Sheet and installation manual.

Transfer the option code to this worksheet in the space provided.

Using the Option Code and the Controller Worksheet enter the desired segment settings into the appropriate controller location above.

Enter these options into the handheld controller. The settings on the controller should match the code you created and entered above

Point the handheld controller at the indoor unit display and press the power button 5 times to send the code to the unit.