DJI Dock 4 User Manual

v1.0 2026.10

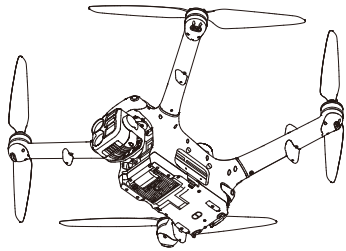

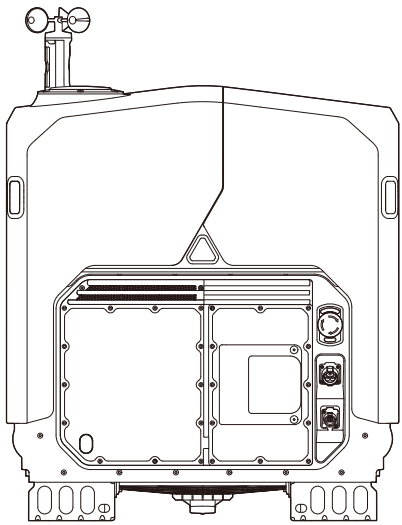

This document is copyrighted by DJI with all rights reserved. Unless otherwise authorized by DJI, you are not eligible to use or allow others to use the document or any part of the document by reproducing, transferring or selling the document. Only refer to this document and the content thereof as instructions to operate DJI products. The document should not be used for other purposes.

In the event of divergence among different versions, the English version shall prevail.

Searching for Keywords

Search for keywords such as “battery” and “install” to find a topic. If you are using Adobe Acrobat Reader to read this document, press Ctrl+F on Windows or Command+F on Mac to begin a search.

Navigating to a Topic

View a complete list of topics in the table of contents. Click on a topic to navigate to that section.

Printing this Document

This document supports high resolution printing.

 © 2026 DJI All Rights Reserved.

Using this Manual

⚠ • This product does not meet the standard operating temperature for military grade application (-55° to 125° C/-67° to 257° F), which is required to endure greater environmental variability. Operate the product appropriately and only for applications that meet the operating temperature range requirements of that grade.

This document was developed following the process, content and structure defined in ASTM Specification F2908.

Legend

⚠ Important Hints and Tips Reference

Read Before Use

DJI™ provides users with tutorial videos and the following documents:

1. *Safety Guidelines*
2. *Quick Installation Guide*
3. *Installation and Setup Manual*
4. *User Manual*

It is recommended to watch all tutorial videos and read the Safety Guidelines before using for the first time. Prepare for dock installation and first flight by reviewing the Quick Installation Guide. Refer to the Installation and Setup Manual and this User Manual for more information.

⚠ The dock must be installed and set up by an authorized service provider. Unauthorized installation and setup may lead to safety risks. Contact DJI Support for information on authorized service providers.

Video Tutorials

Go to the address below or scan the QR code to watch the tutorial videos, which demonstrate how to use the product safely:

© 2026 DJI All Rights Reserved.

https://enterprise.dji.com/dock-4/video

Download DJI Enterprise App

Scan the QR code to download the latest version.

- To check the operating system versions supported by the app, visit https://www.dji.com/downloads/djiapp/dji-enterprise.
- The interface and functions of the app may vary as the software version is updated. Actual user experience is based on the software version used.

Download DJI Assistant 2

Download and install DJI ASSISTANT™ 2 (Enterprise Series) using the link below:

https://www.dji.com/downloads/softwares/assistant-dji-2-for-matrice

 © 2026 DJI All Rights Reserved.

Contents

Using this Manual 3
- Legend 3
- Read Before Use 3
- Video Tutorials 3
- Download DJI Enterprise App 4
- Download DJI Assistant 2 4

1 General Information and System Description 9
- 1.1 System Components 9
- 1.2 Aircraft 10
  - Aircraft Lights 11
  - Camera 12
    - Storing Photos and Videos 13
  - Gimbal Notice 13
  - Flight Control Surfaces 14
  - Propulsion System 14
    - Replacing Propellers 15
    - Notice 16
  - Avionics 17
    - Flight Control and Navigation System 17
    - Communications Equipment 17
    - Aircraft RTK 17
  - Safety System 18
    - Sensing System 18
    - Vision Assist 21
    - DJI AirSense 22
  - IP Rating of the Aircraft 23
- 1.3 Dock 24
  - Dock Status Indicator and Buzzer Alerts 25
  - Electrical Cabinet Panel 26
    - Electrical Cabinet Indicators 27
  - Dock Cover 28
    - Opening and Closing the Dock Cover 28
  - Landing Pad 30
  - Battery Compartments and Battery Swapping Module 30
  - Air Conditioning System 31
  - Dock Environment Sensors 31
  - Dock Network Connection 32
    - Data Consumption 32

© 2026 DJI All Rights Reserved.

IP Rating of the Dock 33
1.4 DJI O4 Ground Station 33
Parts of the Product 33
Mode Indicator 34
Power Indicator 34
WAN/LAN Port Indicators 35
Operating Mode 36
1.5 DJI Enterprise App 37
1.6 DJI FlightHub 2 37
1.7 Command and Control Link (C2 Link) 37

2 Performance and Limitations 38

2.1 Specifications 38
2.2 Prohibited Actions 38
2.3 Center of Gravity Limitations 39

3 Normal Procedures 40

3.1 Airspace and Radio Frequency Environment Requirements 40
3.2 Flight Restrictions 41
GEO (Geospatial Environment Online) System 41
GEO Zones 41
Buffer Zone 42
Custom Flight Area 43
Unlocking GEO Zones 44
Flight Altitude and Distance Limits 44
3.3 Use of Takeoff and Landing Equipment 45
3.4 Distance to Control Station 45
3.5 Entry and Exit Routes 46
3.6 Pre-Flight Checklist 46
3.7 Flight Operations 48
Flight Procedure 48
Takeoff 49
Planned and Manual Flight 49
Flight Route Tasks 49
Live Flight Controls 52
3.8 Return to Home 53
Notice 53
Advanced RTH 54
Trigger Method 56
RTH Procedure 57
RTH Settings 59
Dock Landing Detection 61

 © 2026 DJI All Rights Reserved.

3.9 System Shutdown 62
3.10 Post-Flight Check 62
3.11 Image Transfer and Export 62

4 Emergency Procedures 63
4.1 Fire 63
4.2 Loss of C2 Link 63
4.3 Loss of Navigation Systems 64
4.4 Control Station Failures 64
Loss of Control Signal 64
DJI FlightHub 2 Failure 64
Alternate Landing 64
Emergency Stop Button 65
Other Failures 65
4.5 Flyaway 66

5 Handling, Servicing and Instructions for Maintenance 67
5.1 Storage 67
Dock Storage 67
Aircraft Storage 67
Battery Storage 67
5.2 Intelligent Flight Battery 68
Notice 68
Inserting/Removing the Battery 69
Aircraft Battery Swapping and Charging 69
Checking the Battery Level 70
Checking the Battery Level via DJI FlightHub 2 71
Dock Warming 71
Battery Maintenance 71
5.3 Cleaning and Maintenance 72

6 Accessories 73
6.1 Accessories and Aircraft Endurance 73
6.2 DJI AL2D Spotlight and DJI AS2D Speaker 74
6.3 DJI AP1 Parachute 77
Disclaimer 77
Component Introduction 78
First Use 79
Installation 79
Using the Parachute 80
Post-Deployment Procedures 82
Regular Inspection 83

© 2026 DJI All Rights Reserved.

7 Appendix 84

7.1 Firmware Update 84
Using DJI FlightHub 2 84
Upgrading with DJI Assistant 2 (Enterprise Series) 85
Notices 85
7.2 Expansion Port 86
Installation Requirements 86
Third-Party Payload Requirements 86
7.3 Using Enhanced Transmission 88
SIM Card Installation and Enhanced Transmission Settings 88
Using Enhanced Transmission 90
Security Strategy 90
4G Network Requirements 90
7.4 Troubleshooting Procedures 91
7.5 Risks and Warnings 92
7.6 Disposal 92
7.7 C5 and C6 Certification 92
Direct Remote ID 94
Geo Caging 95
Introduction 95
Using Geocaging (DJI FlightHub 2) 96
Display Warnings and Information 98
Braking Distance in CV 98
Flight Termination System (FTS) 100
EASA Notice 100
Original Instructions 100
7.8 FAR Remote ID Compliance Information 101
7.9 Frequently Asked Questions and Solutions 101
7.10 After-sales Service 101
Warranty Policy 101
Handling Procedures for Flight Accident 102
Flyaway Accident 102
Collision or Crash Accident 102
Shipping the Product for Repair 102

 © 2026 DJI All Rights Reserved.

1 General Information and System Description

1.1 System Components

DJI Matrice 5TD, DJI Dock 4, DJI O4 Ground Station, DJI Enterprise App, and DJI FlightHub 2 together constitute the DJI Dock 4 operating system.

The roles and functions of the system components are shown below.

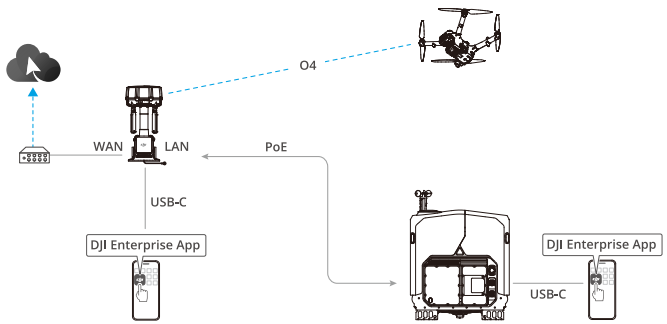

Device/Platform	Role	Function
DJI Enterprise App	Deployment Tool	• Used for device deployment, activation, and linking.
Dock	Takeoff and Landing Facility	• Used for aircraft takeoff, landing, and storage. It also supports aircraft battery swapping and charging. • Automatically collects media files and uploads them to DJI FlightHub 2.
Ground Station	Communication Gateway	• The ground station integrates video transmission and RTK modules, providing the aircraft with a video link and RTK base station data.
Aircraft	Task Executor	• Executes flight tasks and captures image data.
DJI FlightHub 2 or a third-party cloud platform	Cloud Management Platform	• Distributes and manages tasks, provides remote control of devices, and monitors operations. • Manages linked devices and media files.

© 2026 DJI All Rights Reserved.

- Complete the installation and deployment before using this product. For details, refer to the Installation and Configuration Guide.
- For ground station instructions, see the DJI O4 Ground Station User Manual.

1.2 Aircraft

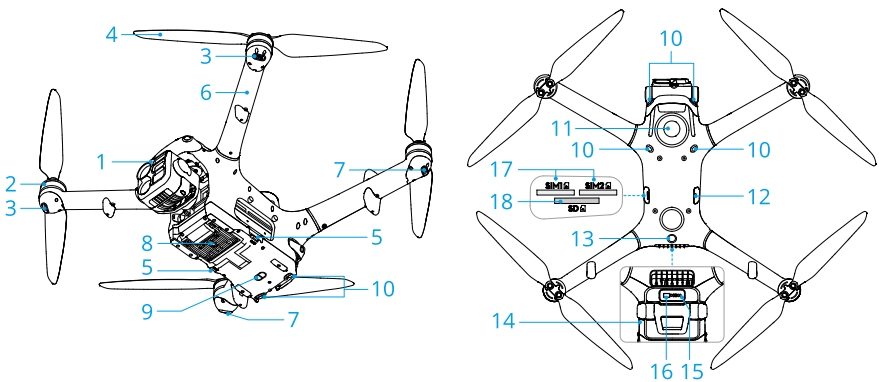

1. Gimbal Camera
2. Motor
3. Front LEDs
4. Propellers
5. E-Port V3 Low-Speed Port
6. Frame Arm (including Internal Antennas)
7. Aircraft Status Indicators
8. Custom Warning Light / Auxiliary Light
9. Three-Dimensional Infrared Ranging Sensor
10. Vision System
11. LiDAR
12. USB-C Assistant Port (E-Port V3 High-Speed Port)
13. Beacon
14. Intelligent Flight Battery
15. Battery Level LEDs
16. Power Button

    Power on/off: Press once, then press and hold for 2 seconds.
17. SIM Card Slot
18. microSD Card Slot

Contact DJI or a DJI authorized dealer to replace the components of the product if damaged. DO NOT disassemble the product without the assistance of a DJI authorized dealer (except for components allowed to be disassembled by users in this manual); otherwise, it will not be covered under warranty.

© 2026 DJI All Rights Reserved.

Aircraft Lights

Aircraft Status Indicators

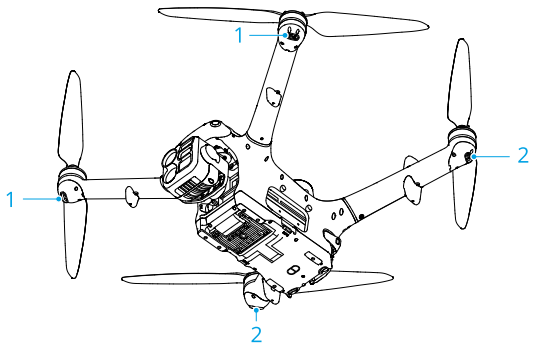

1. **Front LEDs**

   When the aircraft is powered on but the motors are not running, the front LEDs glow solid red to display the orientation of the aircraft.

2. **Aircraft Status Indicators**

   When the aircraft is powered on, but the motors are not running, the aircraft status indicators will display the current status of the aircraft.

Normal States		
·····	Blinks red, yellow, and green alternately	Powering on and performing self-diagnostic tests
× 4 ·····	Blinks yellow four times	Warming up
·····	Blinks green slowly	GNSS enabled
× 2 ·····	Blinks green twice repeatedly	Vision systems enabled
·····	Blinks yellow slowly	GNSS and vision system disabled (ATTI mode enabled)
Warning States		
·····	Blinks yellow quickly	Control Signal Lost
·····	Blinks red slowly	Takeoff is disabled (e.g., low battery) [1]
·····	Blinks red quickly	Critically low battery
—	Solid red	Critical error

© 2026 DJI All Rights Reserved.

	Blinks red and yellow alternately	Compass calibration required

[1] If the aircraft cannot take off while the status indicators are blinking red slowly, view the warning prompt in DJI FlightHub 2.

After the motors start, the front LEDs blink red and green alternately, and the aircraft status indicators blink green.

⚠ Lighting requirements vary depending on the region. Observe local laws and regulations.

Custom Warning Light

The aircraft features a built-in customizable warning light on the bottom of the aircraft. In the DJI FlightHub 2 virtual cockpit, you can enable the warning light and select the color and a blinking pattern as needed.

Beacon

The beacon on the aircraft enables you to find the aircraft when flying at night. The beacon can be turned on or off in DJI FlightHub 2.

⚠ DO NOT look directly at the beacons when they are in use to avoid damaging your eyes.

Camera

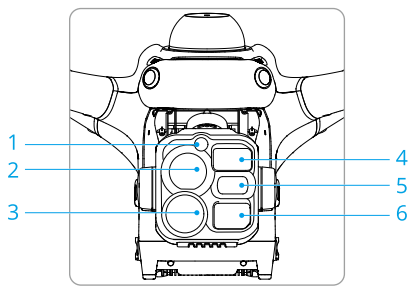

1. NIR Auxiliary Light
2. Tele camera
3. Infrared Thermal Camera
4. Laser Range Finder
5. Medium Tele Camera
6. Wide-Angle Camera

⚠ • Due to the characteristics of the infrared sensor, the infrared sensor may become burnt before sunburn protection is triggered. DO NOT expose the

 © 2026 DJI All Rights Reserved.

infrared camera lenses to strong sources of energy such as the sun, lava, or a laser beam. Otherwise, the camera sensor may become burnt, leading to permanent damage.

- Use a lens cleaner to clean the lens to avoid damage or poor image quality.
- DO NOT block any ventilation holes on the camera as the heat generated may damage the device or cause injury.

Storing Photos and Videos

The aircraft supports the use of a microSD card to store photos and videos. Refer to the Specifications for more information about recommended microSD cards.

⚠
- Ensure that the microSD card slot and the microSD card are clean and free of foreign objects during use.
- DO NOT remove the microSD card from the aircraft when taking photos or videos. Otherwise, the microSD card may be damaged.
- Before shooting important photos or videos, shoot a few images to test whether the camera is operating correctly.

Gimbal Notice

⚠
- Make sure there are no stickers or objects on the gimbal before taking off.
- Avoid getting dust or sand on the gimbal, especially in the gimbal motors.
- DO NOT add any extra payload other than an official accessory to the gimbal, as this may cause the gimbal to function abnormally or even lead to permanent motor damage.
- Precision elements in the gimbal may be damaged by a collision or impact, which may cause the gimbal to function abnormally. Make sure to protect the gimbal from damage.
- A gimbal motor may enter protection mode if the gimbal is obstructed by other objects or if the gimbal experiences an excessive external force, such as during a collision.
- Flying in heavy fog or clouds may make the gimbal wet, leading to temporary failure. The gimbal will recover full functionality once it is dry.
- When the aircraft is stationary on the ground and the camera zoom is less than 11x, the gimbal uses physical stabilization. Due to the precision limitations of the gimbal sensors, slight image shift may occur. When the aircraft compass is calibrated, image shift caused by gimbal drift within ±0.8° is considered normal.

© 2026 DJI All Rights Reserved.

* The MEE image stabilization function is enabled when the visible light camera zoom reaches 11x. The higher the zoom level, the greater the stabilization range and the better the image stabilization effect.

Flight Control Surfaces

Not applicable for multicopters.

Propulsion System

The propulsion system consists of motors, ESCs, and folding propellers, to provide stable and powerful thrust.

 © 2026 DJI All Rights Reserved.

Replacing Propellers

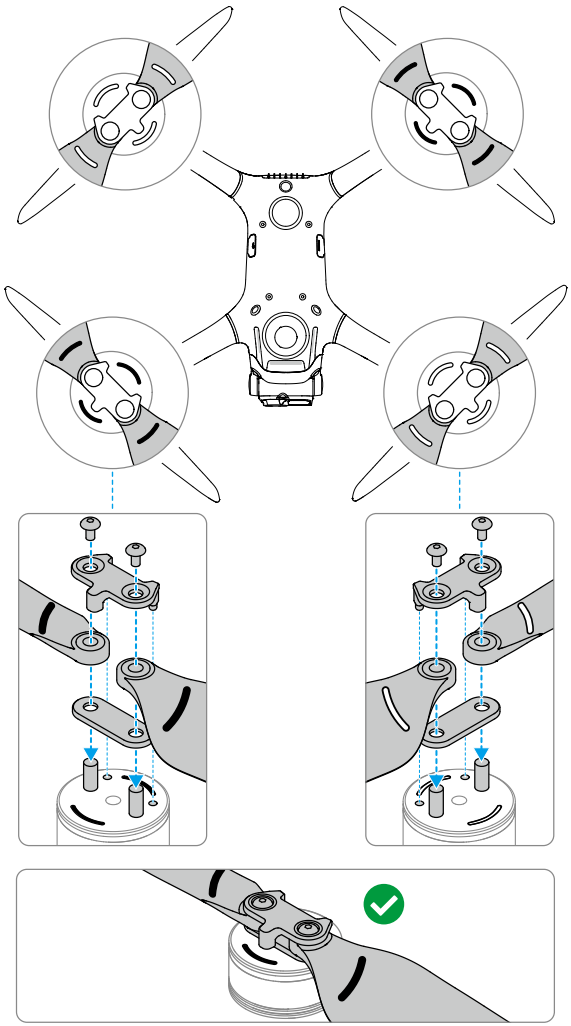

Recommended screw tightening torque: 6.5±0.2 kgf·cm

⚠ When mounting the propellers, make sure the positioning pins of the propeller adapters are inserted into the corresponding mounting holes of the motors.

© 2026 DJI All Rights Reserved.

Notice

Usage and Safety

- Propeller blades are sharp. Handle with care to avoid personal injury or propeller deformation.
- To avoid injury, stay away from rotating propellers or motors.
- To avoid damaging the propellers, place the aircraft correctly during transportation or storage. DO NOT squeeze or bend the propellers. If propellers are damaged, the flight performance may be affected.
- Make sure the motors are mounted securely and rotating smoothly. Land the aircraft immediately if a motor is stuck and unable to rotate freely.
- DO NOT attempt to modify the structure of the motors.
- DO NOT touch or let hands or body parts come in contact with the motors after flight, as they may be hot.
- After placing the aircraft in the dock, adjust the propeller positions before manually closing the dock cover to prevent them from breaking.
- DO NOT block any of the ventilation holes on the motors or the body of the aircraft.
- Make sure the ESCs sound normal when powered on.

Inspection and Cleaning

- Before each flight, make sure that the propellers are correctly installed, secure, and in good condition. If they are aged, damaged, or deformed, replace them before flying. If there is any foreign matter attached to the surface, wipe the propellers with a soft, dry cloth until clean.
- Only use official DJI propellers. DO NOT mix propeller types.
- DO NOT scratch the propeller surface or touch the propellers directly with your fingers. DO NOT wipe the propellers with oily or alcohol-based solvents; otherwise, the anti-icing coating on the propeller surface will be damaged. It is recommended to replace the propellers with new ones after 500 cumulative flight hours or 12 months of use to maintain good anti-icing performance.

Replace Propellers

- Use two propellers from the same package. DO NOT mix them with propellers from other packages.
- When replacing propellers, replace the matching propeller clips, washers, and screws at the same time. DO NOT reuse them.

 © 2026 DJI All Rights Reserved.

- After replacing the screws, tighten them to the standard torque.
- When installing the propeller clips, make sure they are installed in the correct direction.
- Make sure to keep the screws vertical while tightening them. The screws should not be at a tilted angle to the mounting surface. After installation is complete, check whether the screws are flush and rotate the propellers to check for any abnormal resistance.

Avionics

Flight Control and Navigation System

The flight control and navigation system built into the aircraft has modules such as the flight controller, IMU, barometer, GNSS receiver, RTK module, and a compass, providing stable and reliable navigation and control. The dedicated industrial flight controller provides multiple operation modes for various applications.

Communications Equipment

The aircraft boasts DJI O4+ Enterprise system with OcuSync video transmission antennas, offering stable and reliable communication with the control station. The aircraft has built-in dual 4G Enhanced Transmission modules, supports eSIM and nano-SIM cards, and supports dual-SIM dual-active backup transmission.

Aircraft RTK

The aircraft has a built-in RTK module. When used with DJI Dock 4 and the ground station, centimeter-level positioning data can be obtained, allowing for a precise flight route and landing.

Users can choose different positioning accuracy when making task plans in DJI FlightHub 2:

- RTK: The aircraft will take off and wait for the RTK data to converge before performing a task. It is unable to pause the task during convergence. It is recommended to choose this task when high positioning accuracy is required.
- GNSS: The aircraft will perform a task directly without converging RTK data. It is recommended to choose this task when basic positioning accuracy is acceptable. Make sure that there are no obstacles within 20 meters along the flight route before initiating the task plan.

© 2026 DJI All Rights Reserved.

- During RTK convergence, the aircraft should track more than 20 satellites. RTK may fail to converge correctly in environments with strong signal interference, ionospheric scintillation, or ionospheric activity.
- RTK positioning requires a good GNSS signal (outdoors in an open area without obstructions).

Safety System

Sensing System

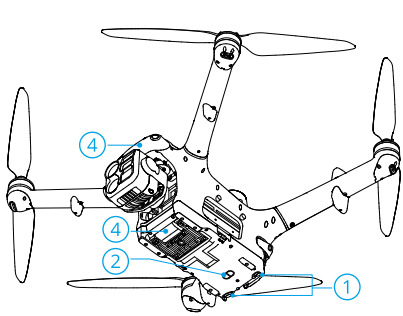

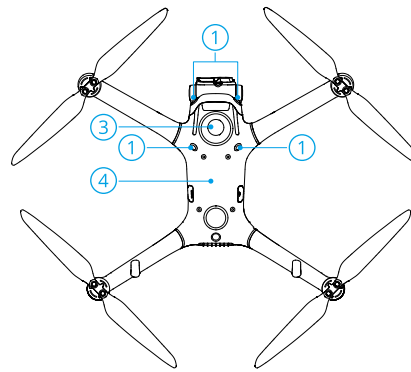

1. Omnidirectional Binocular Color Vision System

   Suitable for well-lit environments where obstacles along the flight route have sufficient texture.
2. Three-Dimensional Infrared Ranging Sensor

   Located on the underside of the aircraft to assist precise height measurement and safe landing.
3. LiDAR

   The top-mounted LiDAR scans 360° horizontally for long-range omnidirectional obstacle avoidance and can detect thin obstacles such as power lines.
4. Millimeter-Wave Radar

   Located at the aircraft nose and above and below the body, it provides obstacle avoidance in poor visibility, such as rain, snow, and heavy fog, and detects metal obstacles such as power lines.

The vision system is always enabled. After obstacle avoidance is enabled, the aircraft performs obstacle avoidance via the vision system, LiDAR, and millimeter-wave radar. When the GNSS signal is unavailable or weak, the aircraft automatically uses the vision system for positioning.

 © 2026 DJI All Rights Reserved.

- Clean the lenses of the sensing system on a regular basis. If the vision sensor lenses are blurry, a warning will appear. Clean the lenses as soon as possible after the warning appears.

Sensing System Usage Notes

Notice

- Pay attention to the flight environment. The sensing system only works in certain scenarios and cannot replace human control and judgment. During a flight, always pay attention to the surrounding environment and the warnings in DJI FlightHub 2, and remain responsible for the aircraft and maintain control of it at all times.
- DO NOT tamper with the sensing system in any way, and make sure the lenses are clean, free of smudges or scratches.
- Avoid flying in rainy or foggy weather, or in other scenarios where the visibility is lower than 100 m. Pay attention to software prompts and fly with caution.
- DO NOT obstruct the sensing system.
- The aircraft can fly at any time of the day or night. However, the vision system becomes unavailable when flying the aircraft in low-light environments. Fly with caution.
- Before use, check the sensing system surface glass:
  - Remove protective films, stickers, and any other obstructions from the surface.
  - If there are water drops, fingerprints, or dirt, wipe them clean first with a lint-free cloth. DO NOT use alcohol or other organic solvents.
  - Return the aircraft for repair if the sensing system surface glass is detached, broken, scratched, or worn.

LiDAR and Millimeter-Wave Radar Limitations

LiDAR and the built-in millimeter-wave radar have detection blind spots. Their detection capability is also limited for obstacles of different sizes and materials. Obstacle avoidance may fail or result in false obstacle avoidance in the following situations. Fly with caution and take manual control when necessary:

- Flying in special weather conditions such as fog, clouds, rain, snow, hail, haze, sand or dust, or clusters of insects or particles (such as poplar fluff or willow catkins).

© 2026 DJI All Rights Reserved.

- Small branches are present around the flight route, such as when flying in dense forests or shrubs.
- Highly reflective road signs or bright metal signs are present above or below the flight route.
- Strong light interference is present in the flight direction, such as when flying toward the sun.
- Water droplets or heavy dirt are present on the radar radome.
- An obstacle is within an observation blind spot of the obstacle avoidance radar.
- Glass curtain walls or mirror-like surfaces are present along the flight route.
- Obstacle detection cannot be guaranteed for wires or walls viewed at an oblique angle.
- Obstacle detection cannot be guaranteed for trees above the aircraft.
- False obstacle detections may occur during multi-aircraft operations or in heavy rain.

Vision System Limitations

⚠
- Without satellite positioning, the vision positioning system works best at heights of 0.5–30 m in open, flat areas; positioning performance may decline outside this range, so fly with caution.
- In low-light environments, the vision systems may not achieve optimal positioning performance even if the auxiliary bottom light is turned on. Fly with caution if the GNSS signal is weak.
- The vision system may not work properly over water. Maintain control of the aircraft at all times and assess the surrounding environment. DO NOT over-rely on the vision system.
- The vision system cannot accurately identify large open-frame structures or linear objects, such as tower cranes, high-voltage transmission towers and lines, or cable-stayed bridges.
- The vision system cannot work properly near surfaces without clear pattern variations or where the light is too bright or too dark. The vision system cannot work properly in the following situations:
  - Flying near monochrome surfaces (e.g., pure black, white, red, or green surfaces).
  - Highly reflective surfaces or surfaces with reflections, such as ice or road signs.
  - Flying near water or transparent surfaces.

 © 2026 DJI All Rights Reserved.

- Moving surfaces, such as above crowds or shrubs and grass swaying in strong winds.
- Flying in an area with frequent and drastic lighting changes.
- Flying near extremely dark (e.g. indoor dark environments) or extremely bright (e.g. outdoor environments with direct sunlight) surfaces.
- Surfaces that strongly absorb or reflect light (e.g., mirrors).
- Flying near surfaces without clear patterns or textures.
- Flying near surfaces with repeating identical patterns or textures (e.g., tiles with the same design).
- Flying near obstacles with small surface areas (e.g., tree branches and power lines).

Three-Dimensional Infrared Ranging Sensor Limitations

⚠ The Three-Dimensional Infrared Ranging Sensor may not provide accurate distances in the following scenarios:

- Surfaces that strongly absorb light, such as asphalt roads.
- Scenarios with large highly reflective surfaces (e.g., multiple traffic signs placed side by side).
- Flying near tiny obstacles (e.g., iron wires, cables, tree branches, or leaves).
- Flying near mirrors or transparent objects (e.g., water or glass).
- Flying in low-visibility environments (e.g., heavy fog or snow).

Vision Assist

The vision assist view changes the image on the view from the corresponding vision sensors according to the flight speed direction to help users navigate and observe obstacles during flight.

- When using vision assist, the quality of the video transmission may be lower due to transmission bandwidth limits.
- It is normal for propellers to appear in the vision assist view.
- When the ambient light level decreases, the color image switches to a black-and-white image.
- Vision assist should be used for reference only. Glass walls and small objects such as tree branches, electric wires, and kite strings cannot be displayed accurately.

© 2026 DJI All Rights Reserved.

- Vision assist is not available when the aircraft has not taken off or when the video transmission signal is weak.

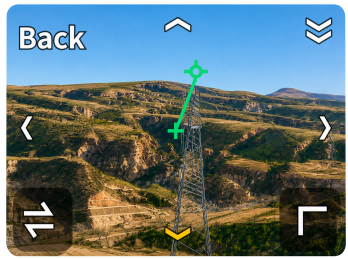

Tap the arrow to switch between different directions of the vision assist view. Tap and hold to lock the direction. Tap the center of the screen to maximize the vision assist view.

- When the direction is not locked, the vision assist view automatically switches to the vision view of the current flight direction. Tap any directional arrow of the vision assist view to temporarily switch to the vision sensor view of that direction, and it will automatically return to the vision sensor view of the current flight direction.
- When the vision assist direction is locked in a specific direction, tap any other arrow to unlock and switch the vision assist view.

DJI AirSense

Crewed airplanes or helicopters with Automatic Dependent Surveillance–Broadcast (ADS-B) transmitters can broadcast flight information. The DJI aircraft equipped with DJI AirSense (ADS-B In) can receive the flight information broadcast from ADS-B transmitters that comply with the 1090ES (RTCA DO-260) or UAT (RTCA DO-282) standard within a range of tens of kilometers. **DJI AirSense only issues warning messages under certain circumstances when specific crewed airplanes or helicopters are approaching, and is not able to actively control or take over the DJI aircraft to avoid approaching crewed airplanes or helicopters.** DJI AirSense has the following limitations:

1. DJI AirSense can only receive messages broadcast by crewed airplanes or helicopters installed with an ADS-B Out device that is in compliance with the 1090ES or UAT standard. DJI AirSense cannot receive messages from crewed airplanes or helicopters that are not equipped with ADS-B Out devices or equipped with devices that are not functioning properly.

 © 2026 DJI All Rights Reserved.

2. DJI AirSense operates over radio frequencies; if an obstruction is present between the DJI aircraft and a crewed airplane or helicopter, it cannot effectively receive that aircraft's broadcasts or issue warnings.
3. Warning messages may be sent with a delay if DJI AirSense experiences any interference from the surrounding environment. Users need to observe the surrounding environment and fly with caution.
4. Warning messages may not be accurate when the DJI aircraft is unable to obtain its location information.
5. DJI AirSense cannot receive broadcasts from crewed airplanes or helicopters or issue any warnings when DJI AirSense is disabled or not functioning properly.

DJI FlightHub 2 displays all DJI AirSense data reported by aircraft in the docks within the current project, shows crewed airplane or helicopter positions on the map, and issues warnings. DJI AirSense obtains and analyzes crewed aircraft position, altitude, heading, and speed, compares them with the DJI aircraft's current position, altitude, heading, and speed, and calculates the risk level of approaching crewed aircraft in real time.

- Warning (high collision risk): A red airplane icon appears on the map, and a global message at the top of the DJI FlightHub 2 page states that a crewed aircraft has been detected nearby and you should take control promptly to avoid it. When a high collision risk occurs, click the dock name to open the device window and obtain remote control of the aircraft to avoid the crewed aircraft.
- Caution (medium collision risk): A yellow airplane icon will appear on the map when a crewed airplane or helicopter is relatively near the dock aircraft.
- Normal (low collision risk): A blue airplane icon will appear on the map when the crewed airplane or helicopter is relatively far away from the dock aircraft.

Users can tap in the lower right corner of the map to decide whether to enable the medium and low collision risk warnings, and follow the prompts after receiving a warning.

IP Rating of the Aircraft

1. Under stable laboratory conditions, the DJI Matrice 5TD aircraft achieves an IP55 protection rating in accordance with IEC 60529 when equipped with the Intelligent Flight Battery. The protection rating is not permanent and may lower over an extended period.
    - DO NOT fly when the amount of rainfall exceeds 100 mm/24 h.
    - Make sure the battery surfaces, battery ports, and the battery compartment ports and surfaces are dry before inserting the battery.

© 2026 DJI All Rights Reserved.

- The product warranty does not cover water damage.

2. The aircraft does not achieve an IP55 protection rating in the following circumstances:
   - Batteries other than the official battery are used.
   - The battery is not firmly installed.
   - The waterproof plugs for the expansion ports are not firmly closed if not used.
   - External devices such as the speaker or the spotlight are not firmly installed or the screws are not tightened.
   - The aircraft shell is cracked or the water-resistant adhesive is aged or damaged.
3. The body surface may become discolored after long-term use. However, such color change does not affect the performance and IP rating of the device.

1.3 Dock

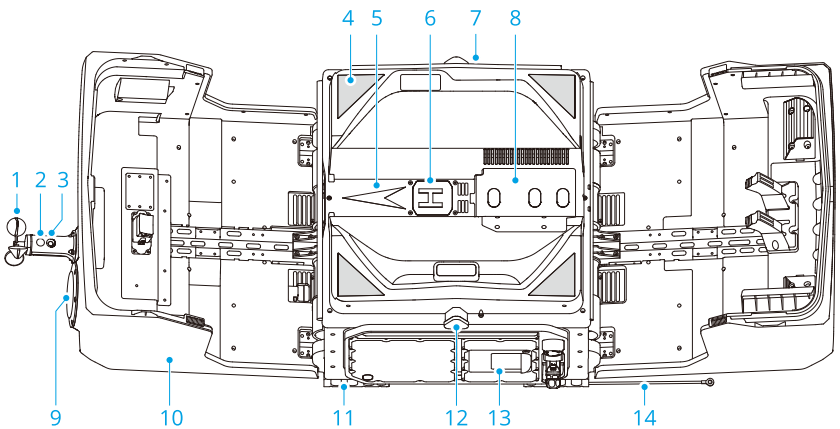

1. Wind Speed Gauge
2. Dock Camera
3. Camera Auxiliary Light
4. Illuminated Positioning Markers
5. Aircraft Front Orientation Marker
6. Landing Pad[1]
7. Drain Pipe Hole (located underneath the dock)
8. Battery Swapping Module
9. Rainfall Gauge
10. Dock Cover
11. Mounting Base Brackets
12. Dock Status Indicator
13. Electrical Cabinet
14. Earth Wire

 © 2026 DJI All Rights Reserved.

[1] The dock comes with a built-in wireless charging module. Make sure that the landing pad surface is clear of any metal objects in order to avoid high temperatures that may damage the landing pad.

Dock Status Indicator and Buzzer Alerts

Normal States		
	Blinks white	The dock is in standby mode.
	Blinks blue Buzzer emits rapid beeps	The DJI O4 Ground Station is pairing with the aircraft.
	Blinks green	The aircraft is performing a flight task.
	Solid blue	The dock/DJI O4 Ground Station is being updated or undergoing remote or local debugging.
Warning States		
	Blinks red Buzzer emits intermittent beeps	The dock cover is opening or closing, or the aircraft is taking off or landing. ⚠ **Keep a safe distance from the dock to avoid injury.**
	Blinks red and yellow alternately	The emergency stop button is pressed.

© 2026 DJI All Rights Reserved.

Electrical Cabinet Panel

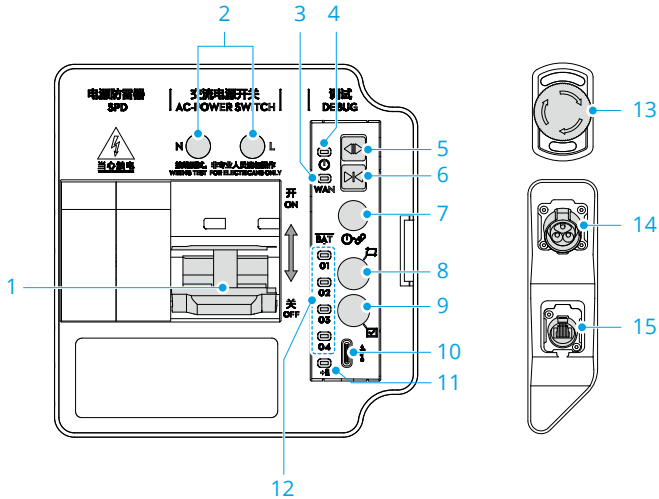

1. **AC Power Switch**

   Connects or disconnects the AC power supply.

2. **Wire Testing Terminals**

   Used with a multimeter to perform wiring tests.

3. **Ground Station Connection Indicator**

   Indicates the connection status between the dock and the DJI O4 Ground Station.

4. **Power Indicator**

   Indicates the AC power status.

5. **Open Button**[1]

   Press and hold to open the dock cover manually.

6. **Close Button**[1]

   Press and hold to close the dock cover manually.

7. **Multifunctional Button**

   - Press and hold to initiate linking on the DJI O4 Ground Station.
   - When AC power is disconnected, the battery in the battery compartment automatically powers the dock if the battery level is above 10%. Press once, then press and hold the button to disable or enable battery power supply.

8. **Battery Install/Remove Selection Button**

© 2026 DJI All Rights Reserved.

Press to select the battery compartment for installing or removing a battery. Refer to Aircraft Battery Swapping and Charging for more information.

9. **Battery Install/Remove Confirmation Button**

   Press to confirm the battery installation or removal operation. Refer to Aircraft Battery Swapping and Charging for more information.

10. **USB-C Port**

    - Connect the dock to a smartphone using a data cable to configure the dock via the DJI Enterprise App.
    - Connect the dock to a computer using a USB-C to USB-A data cable to debug the dock via DJI Assistant 2 (Enterprise Series).

11. **Battery Installation Indicator**

    Indicates the battery installation status of the dock.

12. **Battery Status Indicator**

    Indicates the status of the battery in the corresponding battery compartment.

13. **Emergency Stop Button**

    When the emergency stop button is pressed, the moving mechanism of the dock will stop operating. If the aircraft is in flight, it will fly directly to the alternate landing site.

14. **AC-IN Port**

    Connect the power cable to supply AC power to the dock.

15. **PoE OUT Port**

    Connect to the LAN port of the DJI O4 Ground Station using an Ethernet cable to supply power to the DJI O4 Ground Station and enable data communication.

[1] The dock cover cannot be opened or closed while batteries are being installed or removed manually.

Electrical Cabinet Indicators

Power Indicator		
—	Solid red	The AC power supply is normal.
—	Solid blue	The battery in the compartment is providing backup power to the dock.
◎	Off	The dock is not powered on.
Ground Station Connection Indicator		
	Blinks green	The dock and the DJI O4 Ground Station are connected and can communicate normally.

© 2026 DJI All Rights Reserved.

◎	Off	The dock is not connected to the DJI O4 Ground Station.
Battery Status Indicator		
—	Solid green	Battery status is normal.[1]
·····	Blinks green quickly	The current battery compartment is selected.
—	Solid blue	The battery in the corresponding compartment is providing backup power to the dock.
—	Solid red	Battery error.
◎	Off	No battery in the corresponding compartment.
Battery Installation Indicator		
·····	Blinks blue quickly	Ready for battery installation.

[1] Includes both charging and fully charged states. The dock supports charging up to two batteries simultaneously.

Dock Cover

⚠
- Before opening the dock cover, check that the emergency stop button is released. If the emergency stop button is pressed, rotate it clockwise to release it.
- Before opening or closing the dock cover, make sure that there are no heavy objects on the dock cover surface and no obstructions within the movement range of the dock cover, and keep a safe distance from the dock cover mechanism to avoid personal injury. Press the emergency stop button if necessary to stop the mechanism.
- After the dock cover is open, DO NOT press hard on the dock cover or place heavy objects on its surface.
- The dock cover closes automatically when the aircraft battery level is too low. Stay clear of the dock cover while it is closing to avoid injury.

Opening and Closing the Dock Cover

Using DJI Enterprise App

Open DJI Enterprise App and enter the dock settings page. Tap ✂ to enter the dock control page, and then tap the dock cover icon to open or close the cover.

 © 2026 DJI All Rights Reserved.

Using DJI FlightHub 2

Open the DJI FlightHub 2 Project page, click > to open the device status window, and then click **Action > Remote Debugging**. Alternatively, open the Devices page, click **Dock/Ground Station** > > **Remote Debugging** to open or close the dock cover.

If the dock does not detect the aircraft, use the dock camera to check whether the aircraft is inside the dock, and follow the pop-up instructions in DJI FlightHub 2.

If the aircraft is not inside the dock, click **Force Close Dock Cover**. If the aircraft is inside the dock, click **Close Dock Cover**.

- When closing the dock cover, the aircraft will automatically power on, and the propellers will slowly rotate to avoid damage to the propellers.

- DO NOT click **Force Close Dock Cover** when the aircraft is inside the dock. Otherwise, the aircraft propellers may be broken and the dock cover may be damaged.

Using the Electrical Cabinet Buttons

Press and hold the corresponding electrical cabinet button to open or close the dock cover.

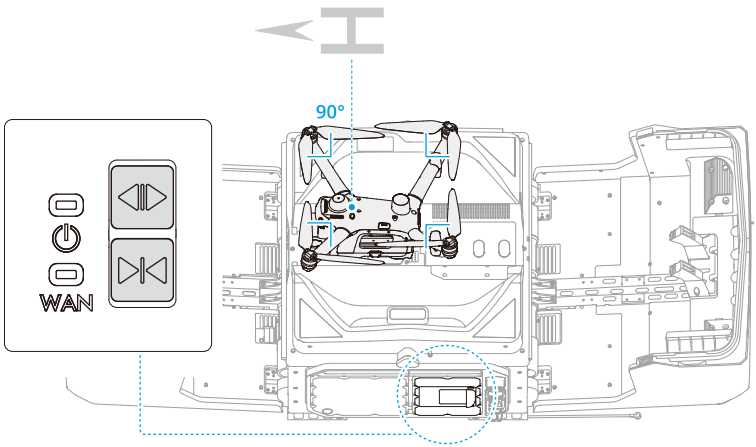

- Keep your hands away from the dock cover to avoid injury.
- Before closing the dock cover, align the aircraft propellers inside the landing pad so the two blades form a 90° angle, preventing equipment damage or broken blades when the cover closes.

© 2026 DJI All Rights Reserved.

Landing Pad

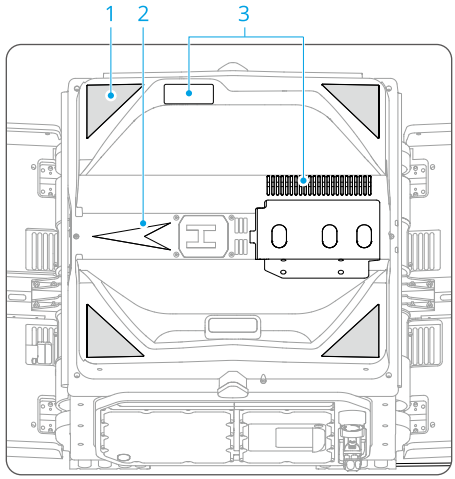

1. Illuminated Positioning Markers: There are four illuminated positioning markers on the landing pad. The aircraft can identify the dock position using the markers to assist with landing.
2. Aircraft Front Orientation Marker: When placing the aircraft on the landing pad, make sure the aircraft heading is aligned with the arrow on the landing pad. Otherwise, the aircraft may be damaged.
3. Air Conditioner Inlet and Outlet: Clean them regularly to prevent dust blockage.

⚠ After the dock is powered on, DO NOT place any objects other than the aircraft, such as metal objects or electronic devices, on the landing pad.

Battery Compartments and Battery Swapping Module

The battery compartments store aircraft batteries, and the battery swapping module automatically replaces the battery for the aircraft. If the AC power supply to the dock is unexpectedly disconnected, the batteries in the battery compartments can continue to supply power to the dock to keep the device online and ensure that the aircraft can return safely.

⚠
- After the AC power supply to the dock is disconnected, functions such as aircraft charging, air conditioning, and wind speed gauge heating are not supported. Troubleshoot and restore the power supply as soon as possible, or turn off the backup battery power. If the power supply is not restored for an extended

 © 2026 DJI All Rights Reserved.

period (more than 60 days), the backup battery may be over-discharged and damaged.

- If the dock is left idle outdoors for an extended period after installation, remove the aircraft from the dock for separate storage, and remove all the batteries from the battery compartments.

Air Conditioning System

The dock has a built-in air conditioning system that automatically adjusts the temperature and humidity inside the dock compartments to provide a suitable storage environment for the aircraft and batteries.

Users can open the DJI FlightHub 2 Devices page, click **Dock/Ground Station** > , open **Device Maintenance**, and enable **Remote Debugging** to test the heating or cooling function of the air conditioning system.

To ensure the service life of the air conditioning system, the interval between cooling and heating operations must be more than 5 minutes. When switching between the two operations, wait until the countdown on the operation panel ends.

Dock Environment Sensors

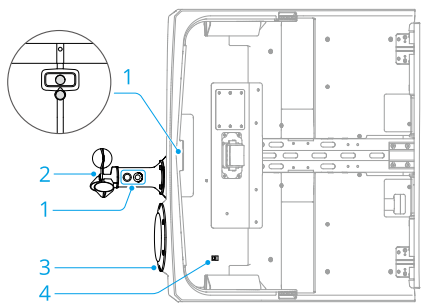

1. Dock Camera and Auxiliary Light: Used to view the real-time conditions at the dock site.
2. Wind Speed Gauge: Used to monitor wind conditions around the dock. The wind speed gauge features heating and can work in low-temperature environments. For flight safety, flight tasks cannot be performed when the wind speed is too high.
3. Rainfall Gauge: Used to monitor rainfall around the dock. The rainfall gauge features heating and can work in low-temperature environments. For flight safety, flight tasks cannot be performed when the rainfall is too heavy.

© 2026 DJI All Rights Reserved.

4. Internal Temperature and Humidity Sensor: Located on the inner side of the dock cover, used to detect the air temperature and humidity inside the dock compartment.

- The wind speed gauge can only measure the wind speed near the dock, which may be different from the wind speed provided by local meteorological departments. If the aircraft ascends to high altitude, the wind speed and direction may change significantly. Fly with caution when the measured wind speed is close to the maximum wind speed resistance of the aircraft.
- DO NOT press hard on the surface of the rainfall gauge. Otherwise, the sensing module inside may be damaged.
- Regularly clean the rainfall gauge surface. Replace the rainfall gauge immediately if it is deformed or damaged.
- If the dock is installed near a vibration source such as a railway, false detection of rainfall may be triggered. Try to keep the dock away from areas with strong vibration sources or strong noise.

Dock Network Connection

The dock must connect to the network through the DJI O4 Ground Station. The ground station can use a wired network (connected to an external network through the WAN port) or a 4G cellular network (requires the installation of the DJI Cellular Dongle). For details on network connection, visit https://enterprise.dji.com/dock-4/downloads to view the *Installation and Setup Manual*.

Data Consumption

After a cellular dongle is installed on the DJI O4 Ground Station, data consumption is closely related to the number of media files transferred, the file type, the resolution, and the livestream duration. The following data is for reference only. Refer to the actual data consumption.

Infrared Photos	Approximately 1 MB per photo
Visible Light Photos (4K)	Approximately 4.5 MB per photo
Visible Light Photos (8K)	Approximately 11 MB per photo
Video (4K)	Approximately 160-450 MB per minute
Video (1080p)	Approximately 63-105 MB per minute
Livestream	Approximately 35 MB per minute

 © 2026 DJI All Rights Reserved.

IP Rating of the Dock

1. Under controlled laboratory conditions, DJI Dock 4 achieves an IP56 protection rating under IEC 60529 standards. The protection rating is not permanent and may decrease due to wear from long-term use. Perform regular maintenance.
2. The device does not achieve an IP56 protection rating in the following circumstances:
   - The electrical cabinet door is not firmly closed or the screws are not tightened.
   - The dock cover is not firmly closed.
   - The waterproof plugs for the expansion ports are not firmly closed if not used.
   - External modules (such as the wind speed gauge module) are not securely installed or properly secured.
   - There is other possible damage to the dock body, such as a cracked shell or failed waterproof adhesive.
3. The appearance may become discolored after long-term use. However, this does not affect the performance or protection capability of the product.

1.4 DJI O4 Ground Station

Parts of the Product

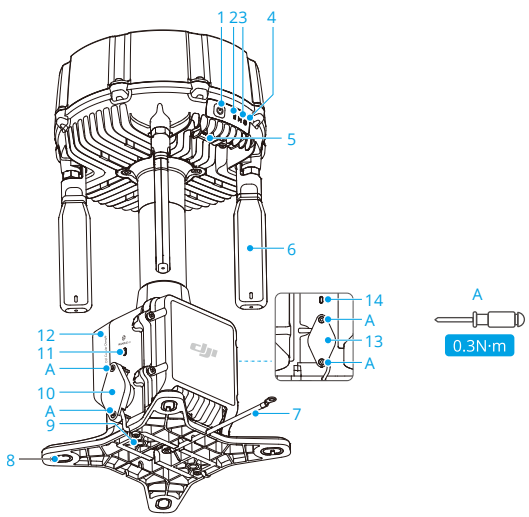

1. Power Button
2. Power Indicator

© 2026 DJI All Rights Reserved.

3. Mode Indicator
4. GNSS Signal Indicator
5. USB-C Port
6. OcuSync™ Pro Directional Antennas
7. Earth Wire
8. Slotted Holes
9. M6 Threaded Holes
10. WAN Port[1]
11. WAN Port Indicator
12. Cellular Dongle Compartment
13. LAN Port[1]
14. LAN Port Indicator

[1] When not in use, make sure to tighten the protective port cover screws to protect the product from moisture and dust. The IP67 rating is achieved when the screws are tightened or an Ethernet cable connector is inserted.

For information about the ground station power supply, installation, network configuration, RTK calibration, and other working modes, refer to the DJI O4 Ground Station User Manual.

Mode Indicator

	Operating Mode
M	**Gateway Mode (Purple)** • Solid: Connected to the aircraft • Blinking: Disconnected from the aircraft

Power Indicator

When powered by an external power supply (PoE), the power indicator stays solid blue. When powered only by the built-in battery, the power indicator behaves as follows.

	> 60% (Green)
	20%–60% (Yellow)
	< 20% (Red)

- When powered through the PoE input port, the battery voltage of the device remains at 7.4 V.
- When the battery level is low, the buzzer emits continuous beeps.
- When charging via the USB-C port, the power indicator blinks quickly when the charging power is sufficient, and blinks slowly when it is insufficient.

 © 2026 DJI All Rights Reserved.

WAN/LAN Port Indicators

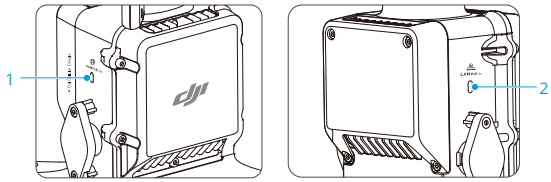

1. WAN Port Indicator

	Solid green	External network connection is normal.
	Solid blue	External network connection error. Ensure the Ethernet cable is securely connected to the WAN port, and the external network is functioning properly.
·····	Blinks red quickly (turns solid after 10 seconds)	Insufficient PoE power input. Check if the PoE power supply meets the requirements.
—	Solid red	Neither the PoE power supply nor the external network is detected. Check the PoE power supply and the external network connection.

2. LAN Port Indicator

	Solid green	Connection to the dock is normal.
	Solid blue	Dock connection error. Ensure the Ethernet cable is securely connected to the LAN port, and the connection to the dock is functioning properly.
·····	Blinks red quickly (turns solid after 10 seconds)	Insufficient PoE power input. Check that the dock is working properly.
—	Solid red	Neither the PoE power supply nor the dock is detected. Check the PoE power supply and the dock connection.

© 2026 DJI All Rights Reserved.

Operating Mode

When used with DJI Dock 4, the ground station operates in Dock Control mode under Gateway Mode. The ground station connects to the internet via Ethernet or the DJI Cellular Dongle installed on the ground station, and then connects to the DJI FlightHub 2 cloud platform.

In Gateway Mode, only one aircraft can be connected at a time. DJI Dock 4 and aircraft in the same organization can connect to the ground station at different times, enabling rotational use of multiple devices.

Roaming

When the aircraft performs long-distance flight tasks, ground stations deployed at different locations can be used to extend the communication coverage of the aircraft.

Ground stations participating in Roaming must be in Roaming mode under Gateway mode, maintain a normal network connection, and be connected to DJI FlightHub 2.

The system automatically switches the ground station according to link quality and continues transmitting the video transmission and control signals of the aircraft.

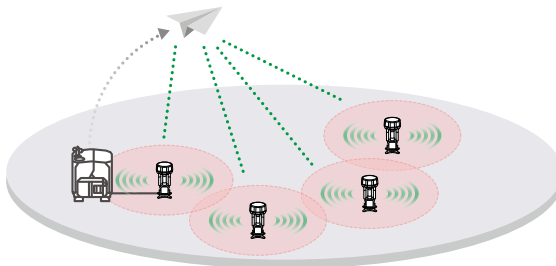

Click the link or scan the QR code to learn about Roaming.

https://enterprise.dji.com/dock-4/video

© 2026 DJI All Rights Reserved.

1.5 DJI Enterprise App

DJI Enterprise App supports device activation and deployment. For details, refer to the Installation and Setup Manual.

1.6 DJI FlightHub 2

DJI FlightHub 2 is the cloud management platform for DJI Dock 4. Use it to manage devices, plan routes, distribute tasks, control flights, and view flight footage. Visit https://fh.dji.com to register and log in.

For more information, see the DJI FlightHub 2 User Guide at https://fh.dji.com/user-manual/en/overview.html.

1.7 Command and Control Link (C2 Link)

During a flight task, the video transmission signal strength will be displayed in DJI FlightHub 2:

-

: The transmission signal is strong.
-

: The transmission signal is medium.
-

: The transmission signal is weak. A voice prompt will announce: "Image transmission signal weak."
-

: The transmission signal is disconnected. Approximately 14 seconds after the link is disconnected, a voice prompt will announce: "Image transmission signal lost."

For detailed specifications, visit https://enterprise.dji.com/dock-4/specs.

© 2026 DJI All Rights Reserved.

2 Performance and Limitations

2.1 Specifications

Visit the following website for specifications.

https://enterprise.dji.com/dock-4/specs

2.2 Prohibited Actions

The following actions are prohibited:

- Make sure you are NOT under the influence of anesthesia, alcohol, or drugs, or suffering from dizziness, fatigue, nausea, or other conditions that could impair the ability to operate the aircraft safely.
- DO NOT operate in the vicinity of crewed aircraft. DO NOT interfere with the operations of crewed aircraft. Be alert and make sure there is no other aircraft in the operation area.
- DO NOT fly the aircraft in venues of major events, including but not limited to sporting events and concerts.
- DO NOT fly the aircraft without authorization in areas prohibited by local laws. Prohibited areas include airports, national borders, major cities and densely populated areas, venues of major events, areas where emergencies have occurred (such as forest fires), and locations with sensitive structures (such as nuclear power plants, power stations, hydropower plants, correctional facilities, heavily traveled roads, government facilities, and military zones).
- DO NOT fly the aircraft above the authorized altitude. DO NOT use the aircraft to carry illegal or dangerous goods or payloads.
- Make sure you understand the nature of your flight operation (such as for recreation, public, or commercial use) and have obtained corresponding approval and clearance from the related government agencies before flight. Consult with your local regulators for comprehensive definitions and specific requirements. Note that remotely-controlled aircraft may be banned from conducting commercial activities in certain countries and regions. Check and follow all local laws and ordinances before flying, as those rules may differ from those stated here.
- Respect the privacy of others when using the camera. DO NOT conduct surveillance operations, such as image capture or video recording on any person, entity, event, performance, exhibition, or property without authorization or where there is an expectation of privacy, even if the image or video is captured for personal use.

 © 2026 DJI All Rights Reserved.

- Be advised that in certain areas, the recording of images and videos from events, performances, exhibitions, or commercial properties by means of a camera may contravene copyright or other legal rights, even if the image or video was shot for personal use.
- DO NOT use this product for any illegal or inappropriate purpose, such as spying, military operations, or unauthorized investigations. DO NOT trespass onto the private property of others. DO NOT use this product to defame, abuse, harass, stalk, threaten, or otherwise violate the legal rights of others, such as privacy and publicity rights.

Read the Safety Guidelines for more prohibited actions before first time use.

2.3 Center of Gravity Limitations

The original aircraft center of gravity has been adjusted before delivery.

The aircraft is equipped with an E-Port V3 Low-Speed Port and an E-Port V3 High-Speed Port for connecting official or third-party payloads. If any official or third-party payloads are installed on the aircraft, make sure to adjust the aircraft center of gravity as per the guidelines and requirements. Visit https://developer.dji.com for more information.

© 2026 DJI All Rights Reserved.

3 Normal Procedures

3.1 Airspace and Radio Frequency Environment Requirements

The operating procedures described in this section were developed, tested, and approved by DJI. Operators may adjust them according to the actual operating environment, provided that the adjustments do not affect the safe use of the product. DJI assumes no liability for any consequences arising from operators adjusting the procedures on their own.

1. DO NOT fly in severe weather, such as strong winds of 12 m/s or higher, snow, moderate rain, or fog.
2. Choose an open flight area without tall buildings nearby. Buildings containing large amounts of reinforcing steel can interfere with the compass and block satellite positioning signals, degrading or preventing aircraft positioning.
3. Fly the aircraft within visual line of sight (VLOS). Avoid mountains and trees blocking GNSS signals. Any flight beyond visual line of sight (BVLOS) can be conducted only when the aircraft performance, the knowledge and skills of the pilot, and the operational safety management are compliant with local regulations for BVLOS. When flying, stay away from obstacles, crowds, and bodies of water, and avoid airports, highways, railway lines, railway stations, and city centers unless any permit or approval is obtained under local regulations.
4. Make sure the beacon and the auxiliary bottom light are enabled at night for flight safety.
5. The performance of the aircraft and its battery is limited when flying at high altitudes. Fly with caution. DO NOT fly above the specified altitude.
6. The braking distance of the aircraft is affected by the flight altitude. The higher the altitude, the greater the braking distance. When flying at high altitudes, you should reserve adequate braking distance to ensure flight safety.
7. DO NOT take off from moving surfaces, such as a moving car or boat.
8. Be careful when taking off in the desert or from a beach to avoid sand entering the aircraft.
9. DO NOT operate the aircraft near bird flocks.
10. Other wireless devices may cause signal interference. It is recommended to power off unnecessary nearby radio transmitting devices such as Wi-Fi and Bluetooth devices.
11. Exercise caution when flying near electromagnetic interference sources, and continuously watch for video freezing or weak transmission signal strength. Follow

 © 2026 DJI All Rights Reserved.

prompts to return and land promptly if needed for flight safety. Interference sources include high-voltage power lines, power transmission substations, radar stations, mobile phone base stations, and television broadcast towers. Strong magnetic or electric field interference may damage the aircraft or cause a crash.

12. Set an alternate landing site before flight; the aircraft will land there if it cannot land at the dock. Use a V-shaped marker with a single-color background at the alternate site. Otherwise, visual recognition may be affected and landing accuracy reduced.
13. DO NOT use the aircraft or the dock in an environment at risk of fire or explosion.
14. Use the dock and aircraft within the specified operating temperature range. Before operating in low temperatures, use the dock camera view in DJI FlightHub 2 to check the dock cover for snow or ice, the aircraft body for snow, and the propellers for ice. During flight, monitor motor overload or overtemperature warnings; if one appears, return and land promptly, then check the propellers for icing.

3.2 Flight Restrictions

GEO (Geospatial Environment Online) System

The DJI Geospatial Environment Online (GEO) System is a global information system that provides real-time information on flight safety and restriction updates and prevents UAVs from flying in restricted airspace. Under exceptional circumstances, restricted areas can be unlocked to allow flights. Prior to that, you must submit an unlocking request based on the current restriction level in the intended flight area. The GEO system may not fully align with local laws and regulations. You are responsible for your own flight safety and must consult with the local authorities on the relevant legal and regulatory requirements before requesting to unlock a restricted area. For more information about the GEO system, visit https://fly-safe.dji.com.

GEO Zones

The DJI GEO system designates safe flight locations, provides risk levels and safety notices for individual flights, and offers information on restricted airspace. All restricted flight areas are referred to as GEO Zones, which are further divided into Restricted Zones, Authorization Zones, Warning Zones, Enhanced Warning Zones, and Altitude Zones. You can view such information in real-time in DJI FlightHub 2. GEO Zones are specific flight areas, including but not limited to airports, large event venues, locations where public emergencies have occurred (such as forest fires), nuclear power plants, prisons, government properties, and military facilities. By default, the GEO system limits takeoffs and flights in zones that may cause safety or security concerns. A GEO Zone map that

© 2026 DJI All Rights Reserved.

contains comprehensive information on GEO Zones around the globe is available on the official DJI website: https://fly-safe.dji.com/nfz/nfz-query.

The information in DJI FlightHub 2 and the website is for reference only. For the latest information, refer to local laws and regulations.

Buffer Zone

Buffer Zones for Restricted Zones/Authorization Zones

To prevent the aircraft from accidentally flying into a Restricted or Authorization Zone, the GEO system creates a buffer zone of about 20 meters wide outside each Restricted and Authorization Zone. As shown in the illustration below, the aircraft can only take off and land in place or fly toward an opposite direction of the Restricted or Authorization Zone when inside the buffer zone, and cannot fly toward the Restricted or Authorization Zone unless an unlocking request has been approved. The aircraft cannot fly back into the buffer zone after leaving the buffer zone.

Buffer Zones for Altitude Zones

A buffer zone of about 20 meters wide is established outside each Altitude Zone. As shown in the illustration below, when approaching the buffer zone of an Altitude Zone in a horizontal direction, the aircraft will gradually reduce its flight speed and hover outside the buffer zone. When approaching the buffer zone from underneath in a vertical direction, the aircraft can ascend and descend in altitude or fly in an opposite direction of the Altitude Zone, but cannot fly toward the Altitude Zone. The aircraft cannot fly back into the buffer zone in a horizontal direction after leaving the buffer zone.

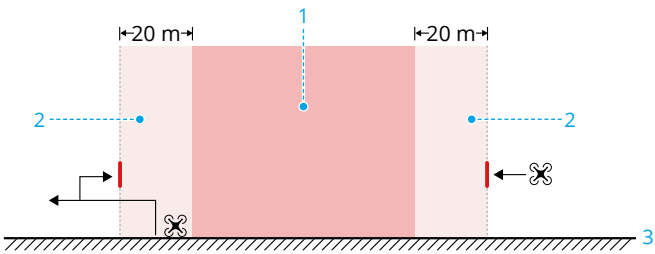

© 2026 DJI All Rights Reserved.

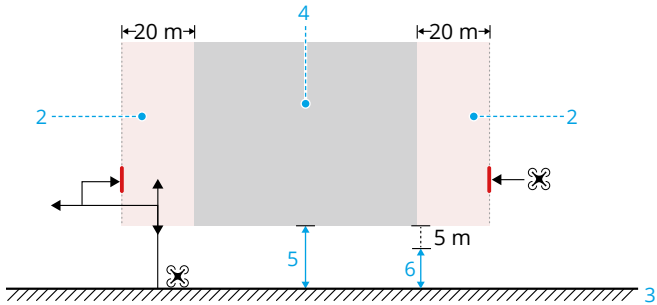

1. Restricted Zone/Authorized Zone
2. Buffer Zone
3. Ground
4. Altitude Zone
5. Altitude Limit
6. Flight Altitude

Custom Flight Area

Users can click to enter Map Task Area and set the Custom Flight Area in DJI FlightHub 2.

The types of the custom flight areas include:

- **Custom Task Area**: The aircraft can perform tasks within this area.
- **Custom GEO Zone**: The aircraft cannot fly into this area. The behavior at the boundary of the Custom GEO Zone depends on the flight mode:
  - **Live Control**: The aircraft will brake and hover at the boundary and will not automatically return to home.
  - **Flight Route**: The aircraft will brake and hover at the boundary and then automatically return to home.
  - **RTH**: The aircraft will bypass the Custom GEO Zone when returning to home.
- **Custom No-Landing Zone**: The aircraft cannot automatically land within this area.

Visit https://fh.dji.com/user-manual/en/overview.html for more information.

⚠
- During a flight task, if landing is triggered within the Custom No-Landing Zone, the aircraft will automatically plan the shortest path to leave the zone before landing. If the aircraft encounters a GEO Zone or an obstacle, or if landing is cancelled, it will stop the leaving process. In this case, manually take control and fly the aircraft out of the No-Landing Zone and then land the aircraft. Otherwise, the aircraft will land directly.
- If forced landing within the No-Landing Zone is needed, make sure to check the landing environment and ensure safety before landing.

© 2026 DJI All Rights Reserved.

Unlocking GEO Zones

Self-Unlocking is intended for unlocking Authorization Zones. You can apply for an unlocking license at https://fly-safe.dji.com and use DJI FlightHub 2 to unlock: in DJI FlightHub 2, go to **Devices** > **Dock/Ground Station** > > **Remote Debugging** > **Dock Control** to set an unlocking license and request unlocking.

Custom Unlocking is tailored to users with special requirements and designates a special flight area for them. Different flight permission documents must be supplied depending on the requested area and requirements. Users in all countries and regions can apply through the website at https://fly-safe.dji.com.

- To ensure flight safety, the aircraft will not be able to fly out of the unlocked zone after entering it. If the Home Point is outside the unlocked zone, the aircraft will not be able to return home.
- Make sure to re-import the unlocking license when using a new aircraft.

Flight Altitude and Distance Limits

Maximum Height limits the aircraft's flight height, while Maximum Distance limits the aircraft's flight radius around the Home Point. These limits can be set in DJI FlightHub 2 for improved flight safety.

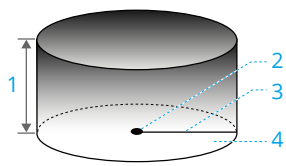

1. Max Altitude
2. Home Point (Horizontal Position)
3. Max Distance
4. Height of aircraft when taking off

Strong GNSS Signal

	Flight Restrictions	Tip:
Max Altitude	The aircraft's height above the takeoff point cannot exceed the Maximum Height set in DJI FlightHub 2	Max flight altitude reached
Max Distance	The straight-line distance from the aircraft to the Home Point cannot exceed the maximum flight distance set in DJI FlightHub 2	Max flight distance reached

 © 2026 DJI All Rights Reserved.

To ensure flight safety, during aircraft operations, a clearance of more than 1.5 m should be reserved above and around the aircraft, and a safe distance should be maintained from the ground or obstacles below. Increase the clearance appropriately when operating in complex environments.

3.3 Use of Takeoff and Landing Equipment

The dock can accommodate one aircraft, from which the aircraft can take off and land. The dock can also charge the aircraft battery and provide a suitable environment for aircraft storage.

3.4 Distance to Control Station

When the user performs automated operations remotely using DJI FlightHub 2, the aircraft will take off from and land at the dock. Make sure to install a protective fence to ensure the safety of pedestrians and prevent theft of the product so that unauthorized personnel or animals cannot enter the area where the dock is installed. Make sure that no flight plan is performed on DJI FlightHub 2 and that the aircraft has landed inside the dock before entering the protective fence when operating the dock on site. After entering the area, make sure to press the emergency stop button of the dock.

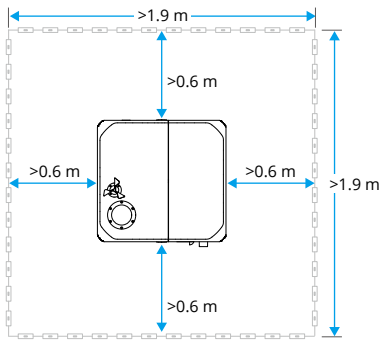

© 2026 DJI All Rights Reserved.

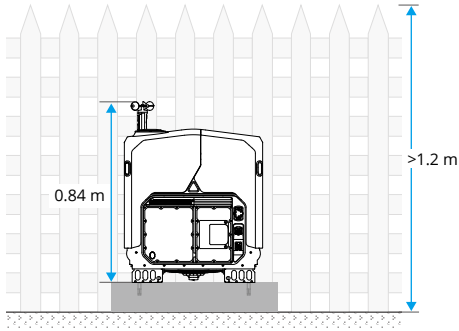

During a flight task, the aircraft should be **more than 10 m away from users** to ensure safety.

3.5 Entry and Exit Routes

Takeoff Point: The point where the aircraft starts the exit route after taking off from the dock.

Departure Point: The point where the exit route ends and the flight route begins. After completing the task, the aircraft first returns to the Departure Point and then follows the exit route back to the dock.

Entry and exit routes connect the Takeoff Point, Departure Point, and dock. The aircraft follows the entry route from the Takeoff Point to the Departure Point, waits for RTK convergence, and then continues with the flight route. After completing the task, the aircraft returns from the flight route to the Departure Point and follows the exit route back to the dock for landing.

Properly configured entry and exit routes help the aircraft avoid surrounding obstacles during takeoff and landing.

The entry and exit routes are configured during dock deployment. For details, refer to the Installation and Setup Manual.

3.6 Pre-Flight Checklist

After creating or modifying a route, conduct an on-site flight test first. Monitor the video feed throughout the test, and begin routine operations only after confirming that the equipment and test flight are normal.

 © 2026 DJI All Rights Reserved.

1. Make sure to follow the checklist in the Quick Installation Guide before leaving, to complete the on-site check.
2. Check the following in DJI FlightHub 2 before a flight task:
   A. Make sure the firmware of all devices (dock, aircraft, ground station, accessories, etc.) has been updated to the latest version.
   B. The dock, aircraft, and ground station are in normal status, and no abnormal prompts are displayed in DJI FlightHub 2.
   C. The dock wind speed, ambient temperature, and rainfall are suitable for operations, and the network connection is normal.
   D. The aircraft has enough battery power, and the GNSS signal is strong.
   E. The RTK is calibrated, and the alternate landing site and alternate route altitude are set.
   F. The minimum RTH altitude (relative to the dock) has been set. It is recommended to set it properly based on the height of the tallest obstacle in the operation area.
   G. Set the signal lost action: Flight route tasks can be set to continue the task or execute RTH. When the control signal is lost, the aircraft performs the selected action.
   H. The flight route setup is complete.
   I. The obstacle sensing of the aircraft is enabled.
   J. Set operation parameters, such as altitude and distance limits, as needed. Make sure flight altitude and RTH altitude are at least 5 m below the altitude limit, and that the flight and RTH paths are free of obstacles.
   K. Pay attention to the aircraft battery level during flight. DO NOT cancel RTH when low battery RTH is triggered.
   L. The Flight Termination System (FTS) is built into the aircraft and is available when the aircraft is powered on. Before takeoff, make sure the aircraft's 4G connection is stable. FTS can be triggered via DJI FlightHub 2 or the FTS web page and cannot be triggered if the network connection is interrupted.
3. Divide the airspace for flight when multiple aircraft are operating simultaneously in order to avoid collisions during flight.

When multiple aircraft operate around the same dock (e.g., shift handover or grid collaboration), the aircraft broadcast their position information via Remote ID, and the system automatically plans the flight sequence of each aircraft to maintain a safe distance during handover.

To ensure flight precision, when importing flight routes via DJI FlightHub 2, make sure the RTK signal source used by the route is the same as that used for dock

© 2026 DJI All Rights Reserved.

position calibration. Otherwise, the aircraft's actual flight trajectory will deviate from the route, preventing the expected task results and potentially causing a collision and crash.

3.7 Flight Operations

Flight Procedure

The operating procedure in DJI FlightHub 2 and the automated flight procedure of the dock and the aircraft is shown in the figure:

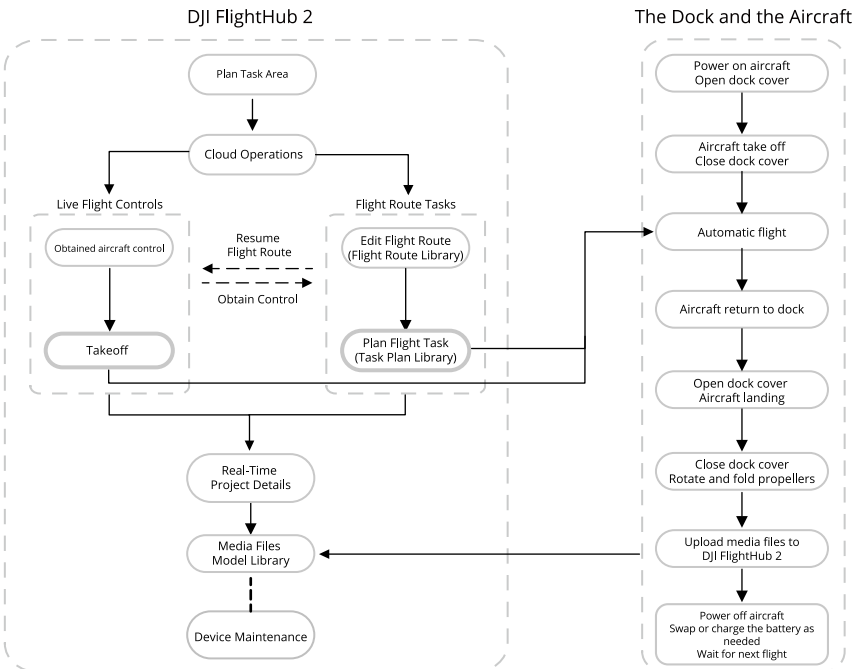

For more details, refer to the DJI FlightHub 2 User Guide which is available on https://fh.dji.com/user-manual/en/overview.html.

© 2026 DJI All Rights Reserved.

Takeoff

The aircraft is operated via DJI FlightHub 2. Manual operation of the aircraft is not supported.

You can use Quick Takeoff in DJI FlightHub 2 in either of the following ways:

- Click **Virtual Cockpit** in the device status window and the aircraft will power on automatically, and click **Takeoff**.
- Select the positioning accuracy as **GNSS** in the Task Plan Library.

Planned and Manual Flight

Flight Route Tasks

Users can create flight routes and distribute flight tasks in DJI FlightHub 2. The workflow is as follows:

1. **Set a flight route:** Before creating a flight task plan, create a flight route in the Flight Route Library. Go to the Flight Route Library, click Create flight routes, select a flight route type (Waypoint, Patrol Route, Area Route, Linear Route, Slope Route, Geometric Route, or Smart 3D Capture), select the aircraft, model, and accessories, enter a flight route name, and click Confirm.

   Set the reference takeoff point, select a flight route icon, add waypoints, set parameters such as the flight route altitude mode and speed, and save the flight route.
2. **Create a flight task plan:** Select the configured route and device, select the dock task precision mode and flight route planning strategy, and set the failsafe action.

   When creating a flight task plan, you can select one of the following types:

   - **Single-Dock Task:** The aircraft takes off from and lands at the same dock after completing the flight operation.
3. **Distribute the task.**

Click the link or scan the QR code to watch the tutorial video.

https://enterprise.dji.com/dock-4/video

© 2026 DJI All Rights Reserved.

- Select the operation dock based on the flight routes and actual needs, and perform flight tests on the flight routes.
- When the operation distance is long or the environment is complex, it is recommended to enable Enhanced Transmission, or additionally configure a DJI O4 Ground Station and set it to Roaming mode to achieve multi-station roaming.
- Try lowering the flight altitude and the RTH altitude to reduce the effect of strong winds. Meanwhile, check the flight altitude and the RTH altitude to ensure there are no obstacles during flight or RTH.
- After distributing a task in DJI FlightHub 2, the dock will automatically check whether the environment (such as wind speed, rainfall, and temperature) and device status are suitable for flight tasks. If a warning message appears in DJI FlightHub 2, click the message to view warning details, and follow the instructions to conduct remote debugging.
- If the dock network is disconnected during a flight task, the task will be interrupted and RTH will be triggered.

Terrain Follow

When collecting data in areas with large elevation differences, such as mountainous areas, Terrain Follow allows the aircraft to adjust the flight altitude following the changes in the terrain. Terrain Follow ensures that the relative height of the aircraft and the ground below remains unchanged so that the Ground Sampling Distance (GSD) of the photos collected in each area is consistent, improving the accuracy of mapping data while ensuring flight safety.

- Real-Time Follow can be enabled in the Flight Route Library .
- Select AGL for the Altitude Mode to enable Terrain Follow.

Real-Time Follow

During flight, the aircraft detects terrain fluctuations below in real time via the visual perception system to achieve terrain follow flight. When the environment and lighting meet the working conditions of the visual perception system and the terrain slope is less than 75°, the flight interface displays the terrain trend below the aircraft and the altitude above ground.

 © 2026 DJI All Rights Reserved.

1. **Height above Ground Level (AGL)**
2. **Aircraft Velocity Direction**
3. **Flight Path**
4. **Terrain Trend Line**
5. **Max Altitude**

⚠
- For flight safety, it is recommended to enable obstacle avoidance when using Terrain Follow.
- When flying beyond the long-distance detection range of the vision system, Real-Time Follow cannot be performed. Fly with caution. Real-Time Follow cannot work in locations that feature cliffs, steep slopes, power lines, and towers.
- The vision system cannot work normally in low visibility. Real-Time Follow cannot be used normally in rain, snow, or fog.
- The vision system may not work properly over water. Therefore, the aircraft may not be able to actively detect the distance to the water for Real-Time Follow. It is not recommended to use Real-Time Follow in large areas of water and ocean waves.
- The vision system cannot detect surfaces without texture or work normally in insufficient or excessively strong light. It cannot work normally in the following situations:
  - Flying near monochrome surfaces (e.g., pure black, white, red, or green surfaces).
  - Flying near highly reflective surfaces, such as ice or road signs.
  - Flying near water or transparent surfaces.
  - Flying near moving surfaces or objects, such as crowds, shrubs, or grass swaying in strong winds.
  - Flying in an area with frequent and drastic lighting changes.

© 2026 DJI All Rights Reserved.

- Flying near extremely dark (<10 lux) or bright (>40,000 lux) surfaces.
- Flying near surfaces that strongly reflect or absorb infrared waves (e.g., mirrors).
- Flying near surfaces with sparse textures.
- Flying near surfaces with highly repetitive patterns or textures (e.g., small tiles with the same design).
- Flying near obstacles with small surface areas (e.g., tree branches and power lines).

- DO NOT interfere with the vision system in any way, and make sure its lenses are clear and free of stains.

Live Flight Controls

DJI FlightHub 2 supports sending commands directly to the aircraft that is bound to the dock and remotely operating the aircraft. **RTH** and **Emergency stop** are supported in DJI FlightHub 2 in case of any emergency. Refer to the DJI FlightHub 2 User Guide at https://fh.dji.com/user-manual/en/real-time-project-information/virtual-cockpit.html for more information.

In the DJI FlightHub 2 virtual cockpit, users can press X to switch between High Speed mode and Low Speed mode. The maximum flight speed is 15 m/s in High Speed mode and 5 m/s in Low Speed mode. Users can switch modes freely without any other restrictions.

⚠
- During flight, keep the DJI FlightHub 2 virtual cockpit displayed to monitor the aircraft altitude and other flight information. Relative altitude (ALT) is measured from the takeoff point. Altitude (ASL) is relative to the EGM96 geoid.
- The aircraft is operated via DJI FlightHub 2. Ensure that emergency procedures are planned accordingly.

The aircraft altitude and speed information displayed in the virtual cockpit is shown below.

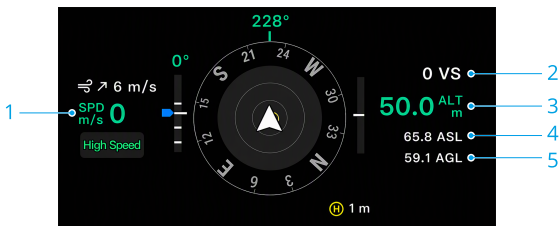

© 2026 DJI All Rights Reserved.

1. **Aircraft Horizontal Speed (SPD)**: Displays the current horizontal speed of the aircraft.
2. **Aircraft Vertical Speed (VS)**: Displays the current vertical speed of the aircraft.
3. **Relative Altitude (ALT)**: Displays the altitude of the aircraft relative to the takeoff point.
4. **Altitude (ASL)**: Displays the altitude of the aircraft relative to the EGM96 geoid.
5. **Height Above Ground Level (AGL)**: Displays the height of the aircraft relative to the ground below.

3.8 Return to Home

Read this section carefully to familiarize yourself with the aircraft behavior during RTH.

The aircraft supports Return to Home (RTH). After completing a flight task, it automatically returns and lands. RTH can also be triggered by the user, low battery, or failsafe (loss of the video transmission signal). If the aircraft has successfully recorded the Home Point and the positioning system is functioning normally, it automatically returns to and lands at the Home Point when RTH is triggered.

⚠
- To avoid RTH route deviation, if the dock or the positioning reference device has been moved, clear the original calibration data and re-establish the Home Point before flight.

Notice

⚠
- Normal RTH may not be possible when positioning is poor. If positioning is poor during Failsafe RTH, the aircraft enters ATTI mode and lands automatically.
- DO NOT fly over water, glass buildings, or at altitudes above 30 m when GNSS is unavailable. The aircraft will enter Attitude Mode if vision positioning is poor.
- The aircraft cannot avoid obstacles during RTH if environmental conditions do not meet the sensing system requirements.
- Restricted Zones can affect automatic RTH and may prevent it from completing; avoid flying near them.
- The aircraft may not be able to return to a Home Point if the wind speed is too high. Fly with caution.
- Use the **Preset** RTH route if there are power lines, transmission towers, or other obstacles that the sensing system cannot avoid on the RTH path, and make sure the set RTH altitude is higher than those obstacles.

© 2026 DJI All Rights Reserved.

- If the max altitude is adjusted below the current altitude during RTH, the aircraft will descend to the max altitude first and then continue returning to home.
- The RTH Altitude cannot be changed during RTH.
- If there is a large difference between the current altitude and the RTH altitude, the amount of battery power used cannot be calculated accurately due to wind speed differences at different altitudes. Pay extra attention to the battery power prompts and warning prompts in DJI FlightHub 2.
- If the aircraft reaches the altitude limit at its current location or at the Home Point while ascending during Preset RTH, it stops ascending and returns to the Home Point at its current altitude. Pay attention to flight safety during RTH.
- If the Home Point is within the Altitude Zone but the aircraft is not in the Altitude Zone, when the aircraft reaches the Altitude Zone it will descend below the altitude limit, which may be lower than the set RTH altitude. Fly with caution.
- The battery estimate for low battery RTH does not account for strong winds reducing RTH speed. At wind speeds of 10 m/s or higher, the aircraft may be unable to return because RTH speed is limited. During low battery RTH, the aircraft still climbs to the set RTH altitude, increasing risk in strong winds, so fly cautiously.
- During nighttime RTH, the aircraft retraces its route to an open area before climbing and brakes when it encounters obstacles. If it is in a recessed structure, it may be unable to continue RTH. During daytime RTH, it uses the visual map to retrace its path to an open area above before climbing and uses millimeter-wave radar to bypass small obstacles.
- The minimum RTH altitude is 2 m, but 2 m is suitable only for high-precision RTK routes. When the RTH altitude is below 5 m, aircraft RTK must be in FIX status; otherwise, takeoff is not possible. For low-altitude operations in complex environments, set hazardous route segments and place the route start and end points directly above the dock. DO NOT use breakpoint resume in this mode, as it may cause abnormal climbing or detours during RTH.
- The aircraft will exit Advanced RTH if the surrounding environment is too complex for the system to complete, even if the sensing system is working properly.
- RTH cannot be triggered during auto landing.

Advanced RTH

When Advanced RTH is triggered, the aircraft will automatically plan the best RTH path to perform Advanced RTH. The planned path will be displayed on the map and adjusted in

 © 2026 DJI All Rights Reserved.

real time according to the environment. During RTH, the aircraft will intelligently adjust the flight speed according to environmental factors (such as wind speed, wind direction, and obstacles), and actively adjust the aircraft heading and RTH altitude according to the wind speed and direction for active wind resistance.

The user can cancel RTH after gaining aircraft control in DJI FlightHub 2.

⚠
- When the aircraft is used with the dock to perform a flight route task, it cannot take off if there is no GNSS signal. If the GNSS signal becomes weak during flight, the flight route task will be interrupted and RTH will be triggered.
- Set waypoints with obstacles above them as No-Return Points to ensure flight safety during RTH.
- Even when environmental and lighting conditions meet the vision system requirements, the aircraft exits automatic RTH if the surroundings are too complex to complete it.
- When the lighting is insufficient and the environment does not meet the vision system working conditions, the aircraft cannot avoid obstacles during RTH.
- In rainy or foggy weather, the vision system is unavailable and the RTH route may be inaccurate, which can cause flight safety risks. Avoid flying when it is rainy, smoggy, or the visibility is lower than 100 m.
- The minimum RTH altitude can be set to 2 m. Pay attention to the following when flying at low altitudes:
  - When the RTH altitude or safe takeoff altitude is less than 15 m, the flight risk is high and the task accuracy can only choose RTK.
  - Make sure to set the waypoint altitude, safe takeoff altitude, and RTH altitude to the same value in DJI FlightHub 2.
  - When the set RTH altitude is less than 15 m, ensure the aircraft RTK is FIX before operations. Otherwise, the aircraft cannot take off.
  - When flying where flight height is restricted and the set RTH altitude is below 15 m, mark all route waypoints as no-return points and place the first and last waypoints directly above the dock. Otherwise, triggering RTH midway may cause the aircraft to climb automatically for obstacle avoidance or terrain obstacles, creating a high flight risk.
  - When flying at low altitudes, DO NOT enable Resume Flight from Breakpoint. Otherwise, the aircraft may climb unexpectedly or deviate from the flight route.

© 2026 DJI All Rights Reserved.

Trigger Method

The user actively triggers RTH

During flight, RTH can be triggered in the DJI FlightHub 2 Device Status Window or the virtual cockpit. After RTH is triggered, the aircraft performs RTH according to the current environment, positioning status, and the configured RTH route. Users can take over aircraft control and cancel RTH in DJI FlightHub 2.

Aircraft low battery

During flight, if the aircraft determines that the current battery level is only sufficient to complete RTH, DJI FlightHub 2 prompts RTH and starts a 10-second countdown. When the countdown ends, the aircraft automatically initiates low battery RTH. Users can cancel RTH during the countdown.

If you cancel the low battery RTH prompt and continue flying the aircraft, the aircraft will land automatically when the current battery level can only support the aircraft long enough to descend from its current altitude.

⚠
- When the Intelligent Flight Battery level is too low and there is not enough power to return home, land the aircraft as soon as possible. Otherwise, the aircraft will crash after the battery power is completely depleted.
- DO NOT keep accelerating during auto landing. Otherwise, the aircraft will crash after the battery power is completely depleted.

Loss of Control Signal

If the aircraft's signal lost action is set to RTH, the aircraft will enter Failsafe RTH when the control signal is lost during flight.

When the environment and lighting are good and meet the working conditions of the vision system, the aircraft will return using the Advanced RTH process according to the configured RTH route. During RTH, if the control signal is restored, the aircraft will continue RTH, and DJI FlightHub 2 will update the planned RTH path.

When environmental and lighting conditions are unsuitable for the vision system, the aircraft brakes, then follows this Original Route RTH procedure:

- If the RTH distance (the horizontal distance between the aircraft and the Home Point) is farther than 50 m, the aircraft adjusts its orientation and flies backward for 50 m on its original flight route before entering Preset RTH.
- If the RTH distance is farther than 5 m but less than 50 m, the aircraft adjusts its orientation and flies straight horizontally back to the Home Point at the current altitude.
- If the RTH distance is less than 5 m, the aircraft will fly above the dock and land.

 © 2026 DJI All Rights Reserved.

⚠ If the OcuSync video transmission is obstructed and disconnects, considering there may be large obstacles on the RTH route, the RTH route will use the historical flight path as a reference to ensure RTH safety. If the aircraft relies only on 4G enhanced transmission, pay more attention to the battery status and the RTH route on the map.

RTH triggered by video transmission signal loss

During flight, when the video transmission signal is lost, the aircraft will trigger RTH after user confirmation.

RTH Procedure

After Advanced RTH is triggered, the aircraft brakes, then performs RTH according to the user-configured route (Optimal or Preset). Refer to RTH Settings for more information.

Terrain Data

Users can tap on the DJI FlightHub 2 project page to enter the Map Task Area and enable **Terrain Obstacles**, and distribute the terrain obstacle data to the aircraft in the dock via the cloud. Based on the terrain data, the aircraft automatically plans the optimal flight path for RTH, bypassing obstacle models along the way to ensure flight safety.

When terrain data is enabled:

- If the environment or lighting conditions are suitable for the vision system, the aircraft will automatically plan an optimal flight path based on the terrain data and the data collected by the vision system. The optimal flight path will maintain a safe distance from the terrain obstacles.
- If the environment or lighting conditions are not suitable for the vision system, only the terrain data is effective. Safety risks may arise if the model data is inaccurate.

Based on the terrain data, the aircraft will bypass the area that has weak GNSS signal to ensure aircraft positioning accuracy. If there are suspended models in the terrain data, such as cranes, power lines, and bridges, the aircraft will try to bypass the obstacles by flying above the objects.

⚠ When the aircraft is using GNSS for positioning, the positioning accuracy is relatively low, and the obstacle bypassing performance may be affected. Users should fly with caution, and pay close attention to the flight route and the camera view.

© 2026 DJI All Rights Reserved.

No-Return Points

Waypoints with obstacles above them can be marked as no-return points on waypoint routes to ensure safe RTH in complex environments.

The no-return waypoint and its adjacent route segments are hazardous segments (red in the illustration); if automatic RTH is triggered within them, the aircraft follows the route out of the no-return area before beginning upward RTH (yellow in the illustration).

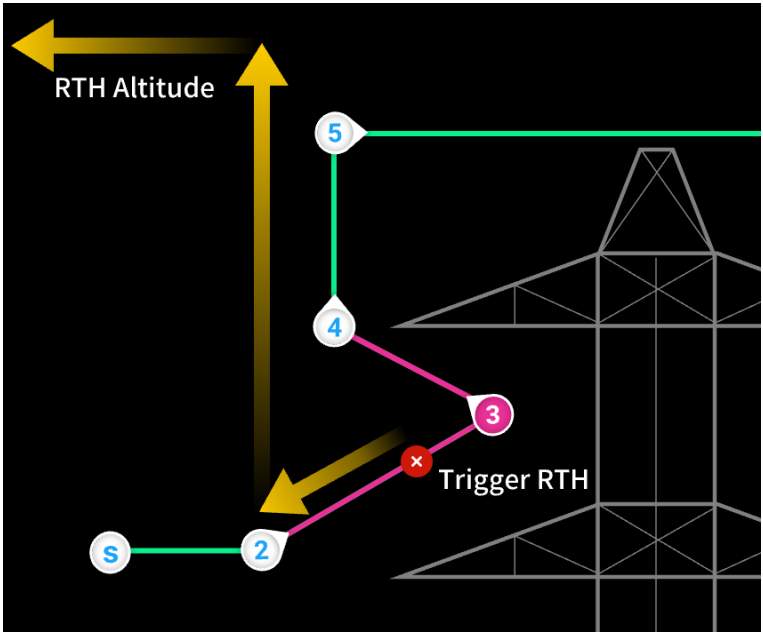

⚠
- Make sure there are no obstacles above regular waypoints adjacent to a no-return point, and maintain a clear passage more than 3 m in diameter along the route. Obstacles may cause task failure or abnormal RTH, and a forced low battery landing is triggered when the battery is too low.
- During the safe RTH process, the aircraft will exit the RTH process and land automatically when the aircraft battery is only sufficient to descend from its current altitude.
- During safe RTH, when the aircraft arrives above the Home Point and its horizontal distance from the Home Point is less than 0.5 m, it enters the landing phase.

© 2026 DJI All Rights Reserved.

RTH Settings

RTH settings are available for Advanced RTH. **Optimal Route Planning** can be enabled under Live Flight Controls in DJI FlightHub 2 before takeoff. Alternatively, enable **Optimal Route Planning** in the Task Plan Library in DJI FlightHub 2.

- **Optimal:**

  - If the lighting is sufficient and the environment is suitable for the vision system, the aircraft adjusts its flight height intelligently according to environmental factors such as obstacles, wind speed, and video transmission signals. The configured RTH altitude does not take effect at this time. This optimal RTH path is shorter, saving battery power and extending flight task time.
  - If the lighting is insufficient or the environment is not suitable for the vision system, the aircraft will perform Preset RTH based on the RTH Altitude setting.
- **Preset:**

© 2026 DJI All Rights Reserved.

RTH Distance/Altitude		Suitable Lighting and Environment Conditions	Unsuitable Lighting and Environment Conditions
RTH distance > 50 m	Current altitude < RTH altitude	The aircraft will plan the RTH path, fly to an open area while bypassing obstacles, ascend to the RTH Altitude, and return to home using the best path.	The aircraft will ascend to the RTH altitude, and fly to the Home Point in a straight line at the RTH altitude. [1]
	Current altitude ≥ RTH altitude	The aircraft will return to home using the best path at the current altitude.	The aircraft will fly to the Home Point in a straight line at the current altitude.
RTH distance is within 5-50 m		The aircraft will fly to the Home Point in a horizontal straight line at the current altitude.	If the current altitude is higher than the set RTH altitude, the aircraft flies horizontally in a straight line toward the Home Point at the current altitude. If the current altitude is lower than or equal to the set RTH altitude, the aircraft first ascends to the set RTH altitude and then flies horizontally in a straight line toward the Home Point.
RTH distance < 5 m		Regardless of whether the environment and lighting meet the vision system working conditions, the aircraft moves above the dock and then lands on the dock.	

[1] If the LiDAR detects an obstacle ahead, the aircraft will ascend to avoid it and stop climbing once the path ahead is clear before continuing RTH. If the obstacle height exceeds the altitude limit, a prompt indicating obstacle sensing failure will appear in DJI FlightHub 2. Take over the aircraft in DJI FlightHub 2 and fly with caution.

The RTH plans for different environments, RTH trigger methods, and RTH settings are as follows:

 © 2026 DJI All Rights Reserved.

<table>
<tr><th>RTH Trigger Method</th><th>Suitable Lighting and Environment Conditions
(The aircraft can bypass obstacles and GEO zones)</th><th>Unsuitable Lighting and Environment Conditions</th></tr>
<tr><td>The user actively triggers RTH</td><td rowspan="3">The aircraft performs RTH according to the selected route:
• Optimal:
• Preset:</td><td>Preset (The aircraft can ascend to bypass obstacles and GEO zones)</td></tr>
<tr><td>Aircraft low battery</td><td rowspan="2"></td></tr>
<tr><td>Loss of Control Signal</td><td>Original route RTH, Preset RTH will be executed when the signal is restored (The aircraft can ascend to bypass obstacles and GEO zones)</td></tr>
</table>

If the entry/exit route is set, the aircraft targets the exit point during RTH. The aircraft first returns to the exit point according to the configured RTH mode, and then returns along the entry/exit route. In Optimal mode, the aircraft automatically plans the optimal RTH route. In Preset mode, the aircraft first reaches the set altitude and plans the RTH route while maintaining that altitude as much as possible.

Dock Landing Detection

During RTH to the dock after arriving above the Home Point with a horizontal distance to the Home Point of less than 0.5 m the aircraft enters the landing phase. When the aircraft is above the dock, dock landing detection activates.

The aircraft behaves as follows:

1. If dock landing detection determines the dock is suitable for landing, the aircraft will land on the dock directly.
2. If the dock is not suitable for landing (the dock cover fails to open, emergency stop button is pressed), the aircraft will fly to the alternate landing site.
3. If the aircraft cannot determine whether it can land at the dock, such as when the dock and aircraft are disconnected, it descends to 5 m above the ground and hovers, then enters alternate landing when the battery is low.

⚠ If no alternate landing site is set, the aircraft hovers and performs a forced landing when the battery level is too low. Make sure to set an alternate landing site when installing and configuring the dock. Otherwise, a forced landing may damage the equipment.

© 2026 DJI All Rights Reserved.

After the aircraft lands, the dock cover closes, and the aircraft is charged or the battery is swapped. Before the aircraft powers off, media files are automatically uploaded to the cloud.

3.9 System Shutdown

After completing a flight task, the aircraft will land on the landing pad, the dock cover will close and the dock will charge the aircraft. The media files will be automatically uploaded to the cloud before the aircraft powers off.

3.10 Post-Flight Check

1. Make sure that the aircraft has landed in the dock, and the dock covers are closed properly.
2. Make sure the media files captured during flight are automatically uploaded to the cloud.
3. Make sure to view the warning details of the dock and aircraft in DJI FlightHub 2.
4. Check if there is any error message in DJI FlightHub 2.
5. Check if the aircraft can be powered off and charged by the dock properly.
6. Check if the dock is working normally.

3.11 Image Transfer and Export

After the aircraft completes a task, the dock automatically uploads media files to the DJI FlightHub 2 media library, even when the aircraft is connected via 4G.

If the OcuSync link between the aircraft and the ground station is disconnected after Enhanced Transmission is enabled, media files are uploaded directly to the DJI FlightHub 2 media library over 4G Enhanced Transmission.

After the upload is complete, the device automatically deletes the local files.

 © 2026 DJI All Rights Reserved.

4 Emergency Procedures

4.1 Fire

The emergency procedures described in this section were developed, tested, and considered adequate by DJI. They provide guidance for responding to aircraft emergencies. Operators should incorporate them into their overall operations manual and emergency response plan as required by applicable regulations.

A prompt will appear in DJI FlightHub 2 and the flight controller will reduce the power of the aircraft when the Intelligent Flight Battery temperature is too high. The battery will be locked for future use if the temperature is too high during flight and cannot be used again after landing.

Follow the instructions below if the Intelligent Flight Battery catches fire:

1. If the battery catches fire when it is being charged using a charging device, make sure that personal safety is guaranteed, power off the charging device immediately, and disconnect the battery from the charging device. If the battery catches fire when the battery is in the aircraft, make sure that personal safety is guaranteed and remove the battery from the aircraft immediately.
2. Move the flammable materials surrounding the battery to a safe distance of more than 5 m .
3. If the fire is controllable, use a large amount of sand to cover the location of the fire and pour cold water to cool the battery until there is no smoke coming out. Use fire-resistant gloves or other protective tools to avoid direct contact with the battery. Move the battery to a container with an appropriate amount of salt solution, and then fully immerse the battery in the solution. Leave the container in a cool place for more than 72 hours to fully discharge the battery and take out the battery and dispose of it.
4. If the fire is uncontrollable, double check that there are no flammable materials surrounding the battery, extend the safety distance to more than 10 m, and evacuate people from the surrounding area. Wait until the battery burns out and the fire is extinguished to prevent further accidents.

4.2 Loss of C2 Link

In Live Control, the aircraft executes RTH approximately 17 seconds after the control signal is lost. In Flight Route mode, the aircraft performs the configured signal lost action: Continue or RTH. Refer to the Loss of Control Signal section for more information.

© 2026 DJI All Rights Reserved.

4.3 Loss of Navigation Systems

When using fixed RTK positioning, the aircraft switches to GNSS if RTK becomes unavailable during flight.

4.4 Control Station Failures

Loss of Control Signal

If the control signal is lost during flight, the aircraft will perform the configured signal lost action. Refer to the Loss of Control Signal section for more information.

DJI FlightHub 2 Failure

If DJI FlightHub 2 crashes during automatic operations while the control signal is normal, the C2 link between the aircraft and the control station is still in good condition, so the aircraft will continue performing the current operation until RTH is triggered by low battery level.

Alternate Landing

If the dock is determined unsuitable for landing, alternate landing will be triggered. The aircraft will ascend to the alternate route altitude, then fly to the alternate landing site for landing. Go to DJI FlightHub 2 **Devices** > **Dock/Ground Station** > **Device Maintenance** to view the set alternate transfer altitude.

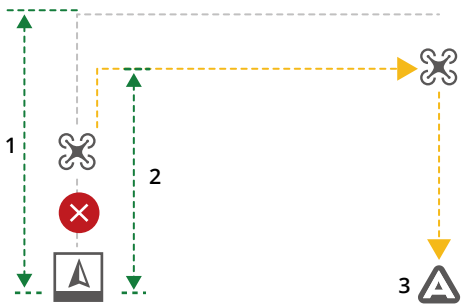

1. RTH Altitude
2. Alternate Route Altitude
3. Alternate Landing Site

⚠
- To ensure flight safety, make sure to set an alternate landing site and suitable alternate route altitude when configuring the dock, and make sure there are no obstacles blocking the aircraft's flight path to the alternate landing site. The alternate landing site must be set within a range of 1 to 50 m from the dock.

© 2026 DJI All Rights Reserved.

- For the alternate landing site, it is recommended to use a V symbol as the marker and a single-colored background. Using other types of symbols or background colors may affect the aircraft's visual identification, thereby reducing landing accuracy.

Emergency Stop Button

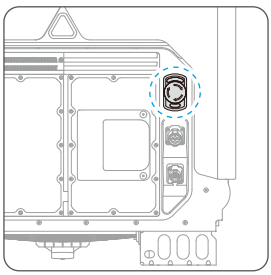

During device maintenance or debugging, press the emergency stop button in an emergency to stop the moving mechanisms of the dock and ensure personal safety. After the emergency stop button is pressed, the dock cover status indicator blinks red and yellow alternately.

If the aircraft motors have not started, the aircraft in the dock cannot perform flight tasks after the emergency stop button is pressed. If the emergency stop button is pressed after the aircraft takes off, the aircraft interrupts the flight task and hovers. You can click the RTH button in the DJI FlightHub 2 virtual cockpit, and the aircraft will fly to the alternate landing site. If the emergency stop button is pressed during landing, the aircraft flies to the alternate landing site to land.

Rotate the button clockwise to release the emergency stop button before performing any dock operations (e.g., dock cover control).

Other Failures

When other dock failures occur, such as when the dock has no power supply, no network connection, or when the dock cover cannot be opened, perform troubleshooting. When the dock AC power supply is disconnected, aircraft batteries with more than 10% charge in the battery compartment will automatically supply power to the dock (single battery backup time is approximately 4.5 hours) to keep the device online and ensure the aircraft can safely return to home. Charging, air conditioning, and wind speed gauge heating are not supported during a power outage. Restore the power supply as soon as possible.

© 2026 DJI All Rights Reserved.

4.5 Flyaway

When the aircraft is connected to the dock, the coordinates of the aircraft will be uploaded to the cloud and can be viewed in DJI FlightHub 2.

When the aircraft is disconnected from the dock, the last recorded time and coordinates of the aircraft will be displayed in the device status window in DJI FlightHub 2. Users can click the information to center the aircraft location in the middle of the map and then right-click to create a PinPoint to help locate the aircraft during a search. The information will not be displayed after the aircraft re-connects to the dock.

 © 2026 DJI All Rights Reserved.

5 Handling, Servicing and Instructions for Maintenance

5.1 Storage

Dock Storage

If the dock is not used immediately, follow the requirements as shown below for temporary storage:

- Store it in a dry, rainproof, and fireproof place with no corrosive materials.
- Protect it from water damage and damage caused by wildlife.
- Make sure the outer packaging is in good condition and checked regularly.
- If the outer packaging has been removed but the dock will not be used immediately, place it in a water-resistant bag sealed with adhesive tape and then store it in the original packaging with a desiccant.
- DO NOT tilt or invert the dock or place items on top of the box when the dock is stored in the box.
- Make sure the protective covers of the dock AC power input port and PoE output port are in place to prevent dust and moisture from entering the ports. If the installed dock is left idle for an extended period, remove the aircraft from the dock for separate storage, and remove all batteries from the battery compartments. Package the aircraft properly and transport it separately.

Aircraft Storage

When the dock is operating, its air conditioning system adjusts temperature and humidity to provide suitable storage conditions. To store the aircraft separately, remove it from the dock and follow these requirements:

- Clean the aircraft and its parts regularly, and store them in an environment with a suitable temperature that is dry and cool.
- Store all small parts properly. Keep small parts, such as cables and straps, away from children and pets to prevent swallowing.

Battery Storage

When the dock is operating, its air conditioning system adjusts temperature and humidity to provide suitable battery storage conditions.

© 2026 DJI All Rights Reserved.

Remove the battery from the aircraft if stored separately, refer to the Safety Guidelines and follow the instructions on battery storage.

Storing power at proper levels can extend battery life. Refer to the figure below for the **Maximum Storage Days (Y)** when storing at different **Battery Level (X)**.

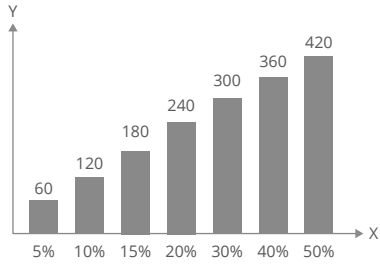

- The battery will be damaged once it exceeds the maximum storage period. The battery should no longer be used.
- The actual maximum storage period will vary slightly due to the batteries being part of different production batches and stored in different environments.
- The maximum storage days are theoretically calculated at room temperature. Storing the battery in high-temperature environments will significantly shorten the battery life and the storage days will be significantly reduced.

5.2 Intelligent Flight Battery

Notice

Before using the battery, carefully read and strictly follow DJI's requirements in this manual, the Safety Guidelines, the Maintenance Manual, and the stickers on the battery. Users are responsible for consequences caused by failing to follow these requirements.

1. The battery charging temperature range is 5° to 45° C. To prevent damage, DO NOT charge the battery outside the allowable battery charging temperature range.
2. A fully charged battery will automatically discharge when it is idle for a period of time. Note that it is normal for the battery to emit heat during the discharging process.
3. Regularly check the battery level and cycle count. When the battery has been used for more than 12 months, the cycle count exceeds 400, or the battery has been stored at a temperature above 35° C for more than 100 days (whichever occurs first), make sure

 © 2026 DJI All Rights Reserved.

to replace the battery with a new one; otherwise, the user shall be responsible for any equipment damage or third-party losses caused thereby.

4. For safety purposes, keep the batteries at a low power level in transit. Before transportation, it is recommended to discharge the batteries to 30% or lower.
5. Over-discharge protection is enabled and discharging stops automatically to prevent over-discharge when the aircraft is idle. Charge the battery to wake it from over-discharge protection before using again. Over-discharge protection is not enabled during flight.
6. When transporting the battery, make sure it is properly packaged and protected against impact. DO NOT continue using a battery if its surface is dented, cracked, or otherwise damaged. Contact DJI Support.

Inserting/Removing the Battery

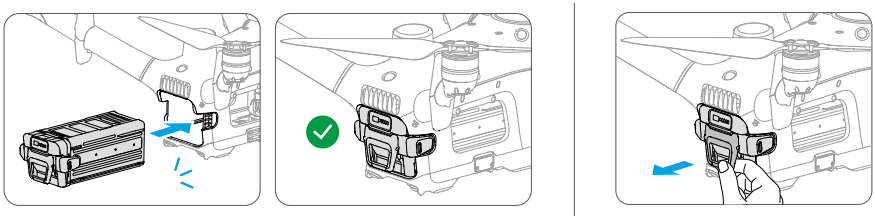

- DO NOT insert or remove the battery while the aircraft is powered on.
- Ensure the battery clicks into place. DO NOT launch the aircraft when the battery is not securely mounted, as this may cause poor contact between the battery and the aircraft and present hazards.

Aircraft Battery Swapping and Charging

After the aircraft lands and before takeoff, the dock automatically replaces or charges the battery according to the aircraft battery level and the task schedule.

Aircraft Battery Swapping

When the aircraft battery level is below 90%, a flight task is scheduled within 1 hour, and the battery level in the battery compartment is above 90%, the dock automatically replaces the aircraft battery.

To manually swap the aircraft battery, use either of the following methods.

- On the Local Debugging page in the DJI Enterprise App, tap > **Battery Swap** > **Manual Swap** and follow the app instructions.

© 2026 DJI All Rights Reserved.

- On the Devices page in DJI FlightHub 2, click > **Dock Control** > **Manual Swap** and follow the on-screen instructions.

Aircraft Charging

If a flight task is scheduled within the next 2 hours, the dock charges the aircraft battery to 100% before the task starts. When there is no flight task, the dock maintains the aircraft battery level at approximately 95% via the wireless charging module.

To charge the aircraft battery to 100%, manually start charging in DJI FlightHub 2 using either of the following methods.

- Open the Project page, click > > **Action**, enable **Remote Debugging**, then click **Charge** to start charging the battery.
- Open the Devices page, click **Dock/Ground Station** > , enable **Remote Debugging**, then click **Charge** to start charging the battery.

- The dock intelligently selects the battery to swap based on the battery lifespan, battery level, and the usage count of the battery compartments.
- If the battery temperature is outside the charging temperature range, the dock will wait until the battery reaches a suitable temperature before charging, which extends the charging time.

- After the dock is powered on, DO NOT place anything other than the aircraft on the landing pad, including metal objects or electronic devices. When removing or placing the aircraft, DO NOT bring metal items, such as rings, near the pad or touch the pad directly, to avoid burns.
- To ensure safety, the dock cannot charge the aircraft battery when the dock cover is opened.

Checking the Battery Level

Press the power button once to check the current battery level.

The battery level LEDs display the power level of the battery during charging and discharging. The statuses of the LEDs are defined below:

LED is on

LED is flashing

LED is off

Blinking Pattern	Battery Level
	92-100%

 © 2026 DJI All Rights Reserved.

Blinking Pattern	Battery Level
	76-91%
	63-75%
	51-62%
	38-50%
	26-37%
	13-25%
	1-12%

Checking the Battery Level via DJI FlightHub 2

There are two ways to check the battery information in DJI FlightHub 2:

- Open the Project page and click > to open the device window or virtual cockpit and view battery level and status.
- Open the Devices page and click **Dock/Ground Station** > to open Device Maintenance and view battery level, temperature, cycle count, and other information.

Dock Warming

If the aircraft is powered off in low-temperature environments, the dock will constantly provide a power supply for the battery to keep warm, so that the aircraft can take off at any time in cold environments. After the battery charging is completed, if the aircraft is in the idle status, the battery will keep warm at a temperature above 15° C (59° F).

The battery will stop keeping itself warm when the user initiates an Immediate flight task, powers on the aircraft, or starts battery charging.

Battery Maintenance

The Intelligent Flight Battery can automatically detect its current health status. If a warning appears in DJI FlightHub 2, click it to view the warning details and follow the on-screen instructions.

When the battery life is approaching, a prompt will appear in DJI FlightHub 2. If users continue to use the battery, the dock cannot perform flight tasks when the battery life is reached. The battery can last up to 400 charge cycles. High-temperature storage affects battery lifespan. If the cumulative storage time above 35°C does not exceed 100 days within a 12-month period, the battery can last up to 400 charge cycles.

© 2026 DJI All Rights Reserved.

⚠
- The battery contains hazardous chemicals, DO NOT dispose of the battery in a regular waste disposal container. Strictly follow local laws and regulations regarding the disposal and recycling of batteries.
- Batteries that are over-discharged, swollen, involved in a crash, come into contact with liquid, damaged, or leaky must be disposed of. DO NOT use any battery in such a condition to avoid damage or injury. Contact a professional battery disposal or recycling agent for further assistance.

5.3 Cleaning and Maintenance

Refer to the *Maintenance Manual* for more information.

© 2026 DJI All Rights Reserved.

6 Accessories

6.1 Accessories and Aircraft Endurance

The overall mass, power consumption, and endurance of the aircraft vary depending on the accessories installed and their operational status. Detailed data is shown in the table below:

Payload	Status	Mass (g)	Payload Power (W)	Max Hovering Time (min)	Max Flight Time (min)
No payload	/	2600	0	55.37	59
Parachute	/	2747	0	51.65	55.3
Speaker	Off	2828	0	49.76	53.31
	On		12	47.91	51.37
Speaker + Parachute	Off	2935	0	47.44	50.7
	On		12	45.75	48.93
Spotlight	Off	2755	0	51.46	55.1
	On		45	44.74	47.61
Spotlight + Parachute	Off	2862	0	49.01	52.34
	On		45	42.87	45.55
Speaker + Spotlight	Off	2943	0	47.27	50.53
	On		57	40.24	42.81
Speaker + Spotlight + Parachute	Off	3050	0	45.13	48.12
	On		57	38.68	41.06

* Note: Max flight time is calculated at a flight speed of 15 m/s.

© 2026 DJI All Rights Reserved.

6.2 DJI AL2D Spotlight and DJI AS2D Speaker

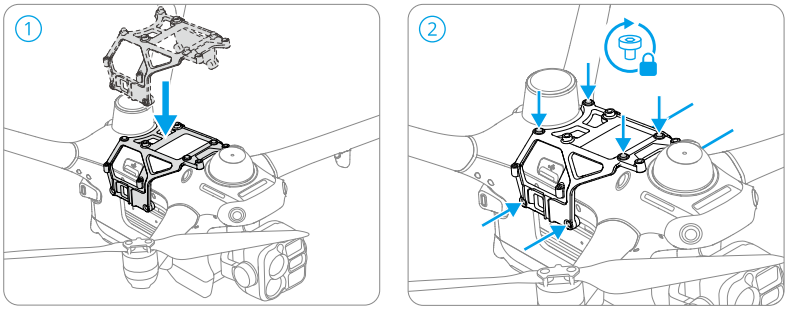

Accessory Mount Installation

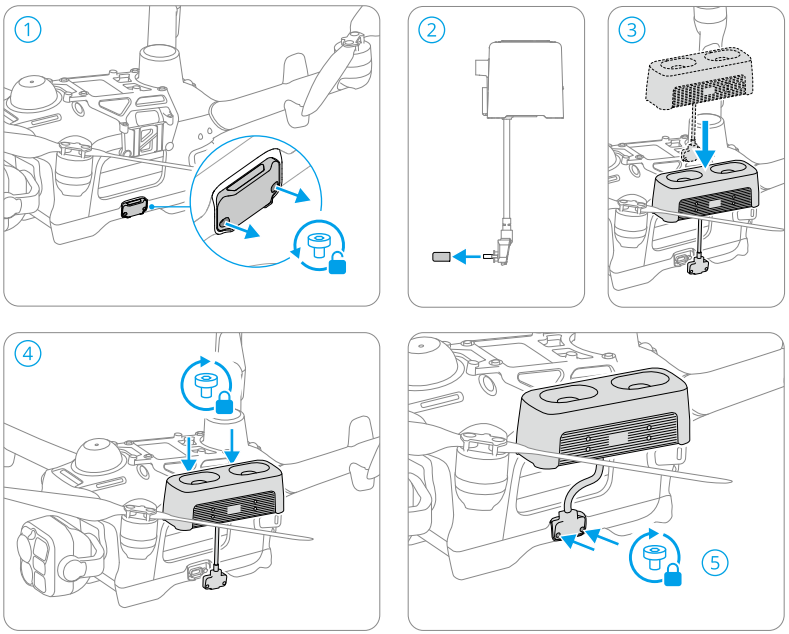

Speaker Installation

© 2026 DJI All Rights Reserved.

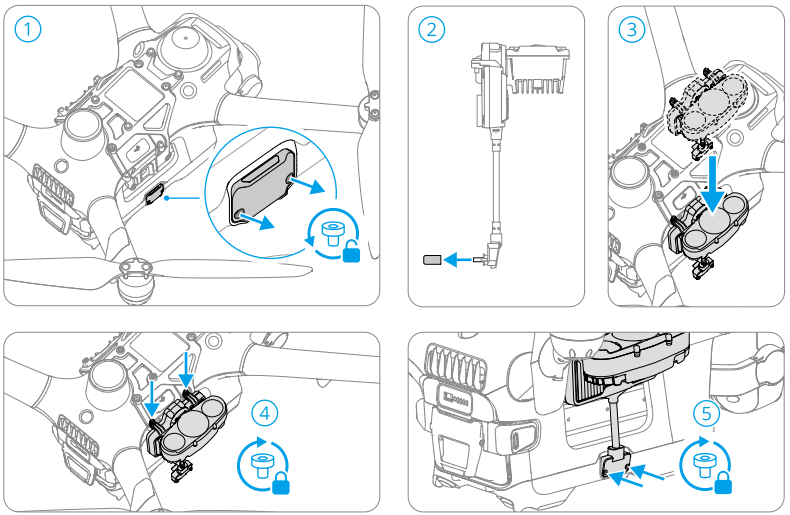

Spotlight Installation

Installation and Activation

1. Open the cover of the E-Port V3 Low-Speed Port.
2. Install the accessory mount on top of the aircraft and tighten the screws on the top and both sides.
3. Install the spotlight on the right side of the aircraft and the speaker on the left side of the accessory mount, then tighten the top screws.
4. Remove the protective cover from the accessory USB-C port and connect the cable.
5. Power on the aircraft and make sure it is linked to the ground station.
6. Use a data cable to connect a phone with the DJI Enterprise App installed to the dock USB-C port.
7. When used for the first time, the DJI Enterprise App automatically displays an activation prompt. Follow the on-screen instructions to complete accessory activation.

⚠
- After removing the accessory, make sure to cover the accessory port with the original waterproof rubber plug of the aircraft and tighten the screws to ensure proper sealing and prevent water ingress into the port.
- During assembly, make sure the plugs are fully inserted. Avoid pulling the connection cables forcefully to avoid affecting the waterproof sealing of the ports or damaging the cables.

© 2026 DJI All Rights Reserved.

- Calibrate the aircraft compass after installing or replacing the speaker. When connected to the dock, tap **Debug > Compass Calibration** on the Local Debugging page in the DJI Enterprise App and follow the prompts. DO NOT touch or move the speaker during calibration.
- DO NOT overtighten the screws to avoid stripping the threads or damaging the accessory mounting holes.
- Installing the spotlight or speaker may affect propulsion, the vision system, and obstacle avoidance. Fly with caution.

- Keep the removed waterproof rubber plug of the USB-C connector properly for later reinstallation.
- Spare screws are included in the package. If screws are lost or worn during installation, replace them with the spare screws.
- The aircraft can be stored directly in the dock with accessories installed. When accessories are not in use, remove them before storage.

Spotlight Features

- **Select Mode:** Select the spotlight mode in the DJI FlightHub 2 virtual cockpit. The spotlight supports Lighting and Strobe modes; Lighting modes are Floodlight, Spotlight, Both On, and Auto, and Strobe modes are Slow and Fast. In Auto mode, Floodlight is used with the wide-angle camera, and Spotlight is used with the telephoto camera.
- **Adjusting Brightness: Drag the brightness slider to adjust the spotlight brightness**.
- **Gimbal Settings:** Enable gimbal linkage, fine-tune the gimbal angle, or calibrate the gimbal in the DJI FlightHub 2 virtual cockpit.

- DO NOT point the spotlight directly at people's eyes.
- It is recommended to enable the Electronic Dehazing function when using the spotlight in high-altitude environments to achieve better image quality.
- It is recommended to appropriately reduce the spotlight brightness and turn it on as needed to reduce the impact on the aircraft flight time.
- The spotlight may become hot after prolonged operation. Please be careful to avoid burns.
- DO NOT forcibly rotate the spotlight gimbal. Impacts may damage the product or cause it to malfunction. Handle it carefully and avoid dropping it.

 © 2026 DJI All Rights Reserved.

Speaker Features

Open the DJI FlightHub 2 Device Status Window or Virtual Cockpit to use real-time broadcasting, recording and broadcasting, text-to-speech, imported audio playback, and route broadcasting.

Click the link or scan the QR code to watch the spotlight and speaker tutorial videos.

https://enterprise.dji.com/dock-4/video

- The speaker supports AAC, MP3, and WAV audio files, up to 10 MB per file.
- DO NOT use the speaker at close range or in urban areas with many noise-sensitive buildings, as loud sounds may cause accidents or injuries.
- Avoid playing single-frequency or sweep sounds, as they may permanently damage the speaker.
- During real-time broadcasting, stay close to the computer microphone, speak more slowly, and raise your voice for clearer audio.

6.3 DJI AP1 Parachute

Disclaimer

The parachute is designed as a supplementary safety device, intended solely for deployment in emergency situations where the aircraft experiences power failure, flight control malfunction, or exceeds a safe operating area. The purpose is to attempt to reduce the aircraft's descent speed, thereby seeking to reduce potential damage to the aircraft, payload, and ground personnel and property.

The actual effectiveness of this product may vary depending on factors such as flight altitude, descent speed, descent attitude, aircraft payload, environmental conditions (e.g., wind), deployment timing, and method of use. This product does not replace proper flight safety management, nor does it constitute a guarantee of any specific outcome, including but not limited to zero injury or zero loss.

Before using this product, carefully read this user manual and watch the tutorial videos to receive sufficient training on the correct use of this product. Refer to Read Before Use and Video Tutorials for more information. Users must strictly follow the requirements set out in this user manual or other official guidelines to correctly install, configure, use, and

© 2026 DJI All Rights Reserved.

maintain this product. DJI assumes no liability for any loss resulting from improper use, unauthorized disassembly, modification, repair, or non-compliant operation.

⚠ As a critical safety component, this product must be inspected before each flight and its condition must be evaluated periodically. Refer to Regular Inspection for details. If this product has experienced severe impact, water exposure, or any other event that may affect its performance, have it repaired or replaced promptly to ensure continued reliability.

Component Introduction

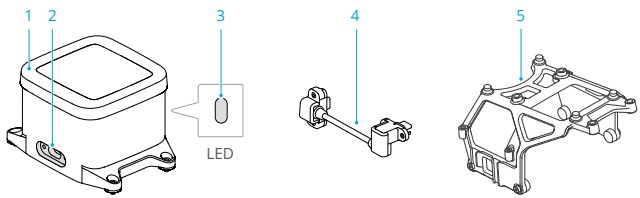

1. Parachute
2. USB-C Port
3. Status Indicator
4. Connection Cable
5. Bracket

Parachute Status Indicator Description

Normal Status		
·····	Blinks green intermittently	The parachute is functioning normally
·····	Blinks green slowly	The parachute has been deployed
—	Solid yellow	System initializing or firmware update in progress
Warnings and Anomalies		
·····	Blinks red intermittently	The communication link between the parachute and the aircraft is abnormal. You can power off the aircraft, reconnect the connection cable, and power it on again. If the issue persists, contact DJI Support.
·····	Blinks red slowly	The parachute is not activated
·····	Blinks red quickly	Parachute sensor error. You can restart the aircraft. If the issue persists, contact DJI Support.

 © 2026 DJI All Rights Reserved.

First Use

Installation

⚠
- Before first use, make sure that the parachute exterior is intact with no signs of moisture or water ingress.
- Make sure that DJI Matrice 5TD is powered off before installing or removing the parachute. DO NOT overtighten the screws during installation. Stop when you feel significant resistance to avoid causing damage.
- The parachute bracket is a mechanical connecting part. Slight surface wear on the bracket during installation, removal, or rotation is normal.
- The parachute connection cable must only be connected to the USB-C Assistant Port (E-Port V3 High-Speed Port) on the aircraft. Route the cable properly before securing the cable clamp to avoid obstructing the aircraft's vision and sensing systems.

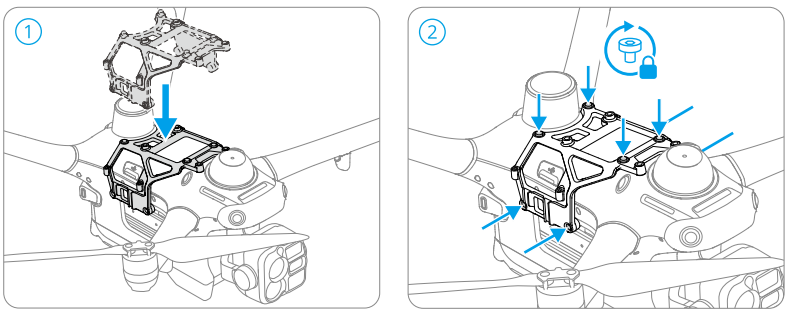

Accessory Mount Installation

© 2026 DJI All Rights Reserved.

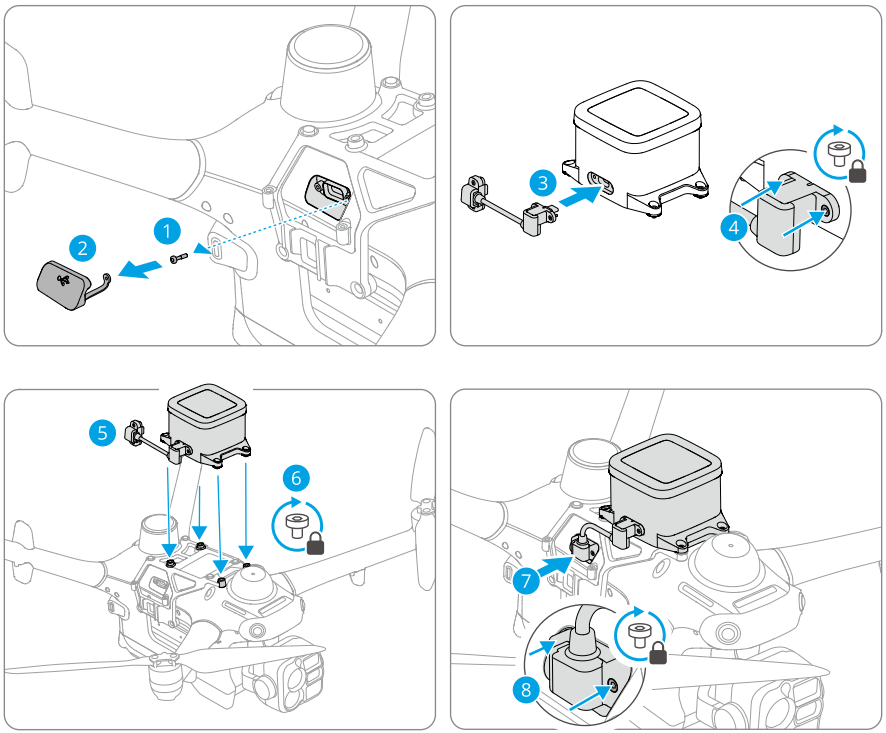

Parachute Installation Diagram

Activation

A new parachute must be activated using the DJI Enterprise App. Make sure the parachute is installed on the aircraft, then power on the aircraft, use a USB-C to USB-C cable to connect the dock to your phone, and follow the on-screen instructions in the DJI Enterprise App. Make sure the network connection is stable during activation.

Using the Parachute

⚠
- DO NOT disassemble the parachute body, connection cable, or other components without authorization.
- Keep the product away from fire or high-temperature environments and store it in a cool, shaded place.

© 2026 DJI All Rights Reserved.

- Before takeoff, check whether the propellers are damaged, deformed, or loose. Abnormal propellers may cause abnormal aircraft attitude or speed, which may trigger automatic parachute deployment. If any propeller abnormality is found, replace the propellers before takeoff.

- The parachute, connection cable, and bracket together weigh 147 g. Before takeoff, make sure that the aircraft's maximum take-off mass (MTOM) does not exceed 3050 g.
- To ensure successful parachute deployment and to avoid false obstacle sensing triggers during flight, the DJI Matrice 5TD will automatically adjust its sensing and obstacle avoidance capabilities after the parachute is installed. The top millimeter-wave radar will be disabled and the FOV angle of the rear and upper vision sensors will be adjusted. As a result, the ability of the DJI Matrice 5TD to avoid small obstacles from the rear and upper directions will be affected. Pay attention to the environment in these two directions during flight, and proactively avoid obstacles to ensure flight safety.

The minimum effective parachute deployment altitude is 35 m above ground level (AGL)*. The effective deployment altitude refers to the minimum AGL required for the parachute to slow the aircraft's descent rate to 6 m/s or below before it reaches the ground. If the deployment altitude is less than 35 m, the parachute may not fully deploy and slow the aircraft's descent. The parachute will not be triggered when the aircraft has not taken off.

* Measured in a wind-free environment at 25°C ambient temperature, at an altitude of 30 to 500 m above sea level, with the DJI Matrice 5TD taking off at the maximum mass of 3050 g. Data is for reference only. Results may vary under different environmental conditions, usage methods, and firmware versions. Refer to actual experience.

Automatic Deployment

- The parachute will deploy automatically when the aircraft attitude or speed is abnormal.
- The parachute supports the Flight Termination System (FTS) in certain regions. FTS can be used with the Geocaging function. Users can define a geocage boundary in DJI FlightHub 2. If the aircraft flies beyond the contingency volume boundary, FTS will be triggered, the motors will stop, and the parachute will be deployed.

- In regions that support the Flight Termination System (FTS), go to Devices in DJI FlightHub 2, click , and make sure that DJI Flight Termination System is displayed as online on the aircraft card. DO NOT start the operation until the FTS status is confirmed.
- To reduce the risk of damage to nearby equipment or property caused by close-range parachute deployment, the parachute will not be automatically deployed under the following conditions when the aircraft attitude or speed is abnormal:

© 2026 DJI All Rights Reserved.

- The horizontal distance between the aircraft and the dock is within 10 m, and the relative altitude above the dock does not exceed 15 m.
- The horizontal distance between the aircraft and the dock exceeds 10 m, and the downward vision system is functioning properly, with the measured altitude above ground not exceeding 10 m.

Refer to the FAQ for information on countries and regions that support FTS.

Manual Deployment

In an emergency, choose one of the following methods to manually deploy the parachute:

1. **Stop the motors and deploy the parachute (applicable to operations in all regions):** After entering a project in DJI FlightHub 2, project members can view device information in the left panel and open the device status window, then click **Deploy Parachute** to deploy the parachute. Alternatively, enter the virtual cockpit, click , and swipe right to deploy the parachute.
2. **Trigger FTS to stop motors and deploy the parachute (applicable to operations in countries and regions that support FTS):** In the virtual cockpit, click FTS . The page will redirect to the FTS web page with the SN and verification code automatically filled in. Confirm to trigger FTS and deploy the parachute.

   - As a backup method, if the virtual cockpit is inaccessible, visit https://fh.dji.com/fts/index.html on a device with internet access, and manually enter the SN and verification code to trigger FTS and deploy the parachute. To minimize response time in emergencies, prepare in advance: record the SN and verification code (available in DJI FlightHub 2 by going to Devices, clicking the device maintenance icon, and viewing the aircraft details), and keep the FTS web page open with the information pre-filled during operations for immediate FTS triggering when needed.

Before the parachute is deployed, the motors will stop. After deployment, the aircraft will continuously emit sound and light alarms. Refer to Post-Deployment Procedures to recover the aircraft and parachute.

Post-Deployment Procedures

After the parachute deploys normally, follow the steps below to retrieve the aircraft and parachute.

1. Check the location of the aircraft icon on the map in DJI FlightHub 2 and estimate the drift range based on the flight altitude and wind speed, then proceed to the approximate landing area.

 © 2026 DJI All Rights Reserved.

2. Locate the exact position of the aircraft with the help of the audible and visual alarm emitted by the aircraft.
3. Power off the aircraft.
4. Gather the parachute and fold the canopy.
5. Make sure that no components are left behind at the site.

⚠
- The parachute is a single-use device. Once deployed, it cannot be repaired or reused and must be replaced with a new one. If you have any questions about the parachute deployment, export the logs using DJI FlightHub 2 or the DJI Assistant 2 configuration software and contact DJI Support, then send the parachute back for log analysis as instructed.
- After deployment, the aircraft may have sustained damage during the deployment, descent, or landing. Contact DJI Support to have the aircraft inspected. DO NOT continue using the aircraft until it passes the inspection.
- If the aircraft cannot be located, or if a collision or crash has occurred, refer to Handling Procedures for Flight Accident.

Regular Inspection

If the parachute has never been deployed and passes the daily self-checks, it does not require factory inspection within 3 years after activation. It is recommended to stop using the parachute 3 years after activation.

Additionally, perform the following inspections at least once every 6 months:

1. Make sure that the parachute shows no signs of damage, dirt, moisture, or water ingress, and that the protective cover is not loose.
2. Make sure that the parachute connection cable is undamaged, the connector is securely plugged in with no looseness, the aircraft port shows no corrosion, the port screws are securely fastened, and the connection cable does not obstruct the aircraft's vision and sensing systems.
3. Make sure that the bracket screws show no corrosion or damage, and that the parachute is securely mounted with no looseness.
4. After powering on, make sure that the parachute status indicator displays normally.

If any abnormality is found during the inspection, repair or replace the parachute promptly to ensure continued reliability.

© 2026 DJI All Rights Reserved.

7 Appendix

7.1 Firmware Update

Using DJI FlightHub 2

1. Power on the dock, and make sure the aircraft is linked to the O4 ground station and the aircraft battery level is higher than 50%.
2. Open DJI FlightHub 2 and click **Devices** > **Dock/Ground Station**.
3. **In the firmware upgrade list, click To Update to view the firmware versions and update details required for the dock, aircraft, and O4 ground station**.
4. Select the checkboxes on the left to upgrade multiple docks, aircraft, and O4 ground stations in batches.
5. Click **Update**, and DJI FlightHub 2 will download the firmware automatically.
6. After the download is complete, DJI FlightHub 2 will update the firmware of the dock, aircraft, and O4 ground station simultaneously. If no aircraft is in the dock, only the firmware of the dock and O4 ground station will be updated.

⚠
- Make sure the dock is connected to the internet during the whole update process.
- The battery installed on the aircraft will also be updated to the latest firmware version during the update.
- The devices are unavailable during the update. They become available again after the update completes.
- The aircraft firmware includes the accessory firmware. After the accessory is installed on the aircraft, it can be upgraded together with the aircraft firmware via DJI FlightHub 2. Before upgrading, make sure the accessory is connected to the aircraft and the device battery level is sufficient.
- During the firmware update process, it is normal for the gimbal to go limp, the aircraft status indicators to blink, and the aircraft to reboot. Wait patiently for the firmware update to complete.
- For safety, make sure you are using the latest firmware version.
- Make sure the dock, aircraft, O4 Ground Station, O4 roaming station, and accessories are all updated to compatible firmware versions.

 © 2026 DJI All Rights Reserved.

Upgrading with DJI Assistant 2 (Enterprise Series)

1. Connect the DJI device to a computer separately, as the DJI Assistant 2 does not support updating multiple DJI devices at the same time.
2. Make sure the computer is connected to the internet and the DJI device is powered on.
3. Launch DJI Assistant 2 and log in with a DJI account.
4. Click **Firmware Update** on the left side of the main interface.
5. Select the firmware version and click to update. The firmware will be downloaded and updated automatically.
6. When the "Update successful" prompt appears, the update is completed, and the DJI device will restart automatically.

Notices

⚠
- DO NOT remove accessories or turn off the devices during the update process.
- The battery firmware is included in the aircraft firmware. Be sure to update all batteries.
- During the update process, it is normal for the gimbal to go limp, the aircraft status indicators to blink, and the aircraft to reboot. Wait patiently for the update to complete.
- Make sure to keep the aircraft away from people and animals during a firmware update, system calibration, or parameter configuration.
- For safety, make sure you are using the latest firmware version.
- Read the *Release Notes* carefully before updating to learn about the update content and precautions.
- The aircraft firmware includes the parachute firmware. After the parachute is installed, its firmware can be updated with the aircraft firmware via DJI FlightHub 2. Before updating, make sure the parachute is connected to the aircraft and the device has sufficient battery power.
- Make sure the device has sufficient power before updating the firmware.

Visit the following link and refer to the *Release Notes* for firmware update information:

https://enterprise.dji.com/dock-4/downloads

© 2026 DJI All Rights Reserved.

7.2 Expansion Port

The following ports support SDK development:

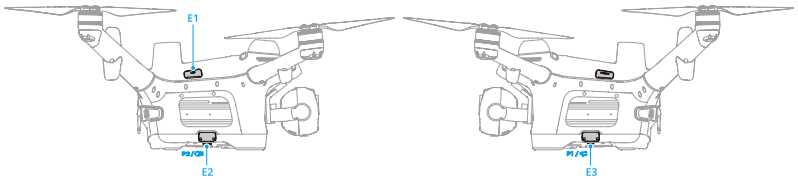

- E1: USB-C Assistant Port (E-Port V3 High-Speed Port)
- E2 and E3: E-Port V3 Low-Speed Ports

Visit https://developer.dji.com for more information about SDK development and instructions.

Installation Requirements

- The device supports installing official accessories such as the speaker, the spotlight, and the parachute. The detection range of the aircraft vision system and obstacle sensing performance of the aircraft will be limited. Fly with caution. Make sure to re-calibrate the aircraft compass after installing the speaker. Visit https://enterprise.dji.com/dock-4/downloads to view the accessory user guide and learn about how to use the product.
- Installing payloads will shorten the flight time and reduce the aircraft wind resistance. Make sure to install the payload as needed. Refer to the accessory user guide for more information.
- Make sure that the payload is securely installed. This prevents a loose payload from affecting the protection performance of the device or falling off during flight.
- If installing both a parachute and a spotlight, make sure to install the parachute first, then the spotlight.

Third-Party Payload Requirements

- Installing a third-party payload may affect the aircraft performance (such as video transmission, GNSS and obstacle sensing) and flight safety. It is recommended to use official payloads or the payloads in the Enterprise Ecosystem Solution Catalogue. The payload size must meet Payload Development Criteria. Visit https://developer.dji.com for more information.

 © 2026 DJI All Rights Reserved.

- Make sure that the maximum payload mass is 450 g, and the total mass of the aircraft does not exceed the maximum take-off mass.
- The third-party payload should have a protection rating equal to or higher than that of the aircraft in order not to reduce the working stability or the service life of the aircraft. It is recommended to test the water-resistant performance with the payload installed. If water leaks into the aircraft, it will seriously affect flight safety.
- After installing the third-party payload, perform a stability test to ensure that there will be no interface disconnection, aircraft GNSS satellite search affected, video transmission performance degraded, or incorrect obstacle sensing.

© 2026 DJI All Rights Reserved.

7.3 Using Enhanced Transmission

Enhanced Transmission combines OcuSync and 4G network transmission. When the OcuSync video transmission encounters interference or obstruction, or over long transmission distances, the aircraft can transmit the video transmission signal via the 4G network.

The aircraft has built-in dual 4G Enhanced Transmission modules. Each module supports eSIM or a nano-SIM card (either one) and supports dual-SIM dual-connection backup transmission.

eSIM is not supported overseas. Use a nano-SIM card.

- The nano-SIM card must be purchased separately.
- Enhanced Transmission consumes cellular data. If the aircraft transmits over 4G throughout the flight, the two cards used by the two Enhanced Transmission modules consume approximately 2.25 GB in total during 30 minutes of flight. This figure is for reference only; actual data consumption depends on usage.
- The 4G Enhanced Transmission service is only supported in certain countries and regions. Comply with local laws and regulations and the 4G Enhanced Transmission terms of service when using it.

SIM Card Installation and Enhanced Transmission Settings

Inserting the nano-SIM Card

If using a nano-SIM card, first insert a qualifying card into one of the two SIM card slots inside the aircraft E-Port. Open the waterproof rubber plug of the E-Port, insert the nano-SIM card with the chip facing down into the slot, and then close the waterproof rubber plug.

After installation, manually switch the card type to SIM on the DJI FlightHub 2 Remote Debugging page or in DJI Enterprise App.

 © 2026 DJI All Rights Reserved.

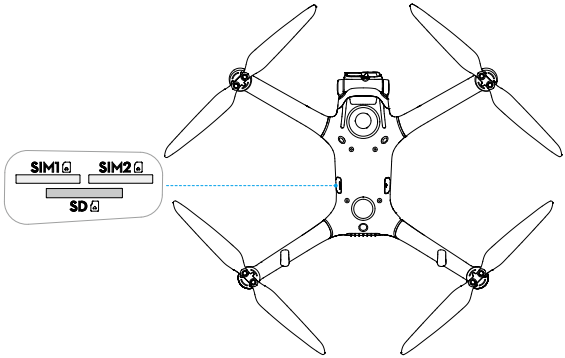

- It is recommended to purchase a nano-SIM card that supports a 4G network from official channels of the local mobile network operator.
- DO NOT use an IoT SIM card, otherwise the video transmission quality will be seriously compromised.
- DO NOT use a nano-SIM card provided by a virtual mobile network operator, otherwise the aircraft may be unable to connect to the internet.
- DO NOT cut the nano-SIM card by yourself, otherwise the nano-SIM card may be damaged. Rough edges of a cut card may prevent it from being inserted or removed properly.
- If a PIN code is set for the nano-SIM card, make sure to insert the nano-SIM card into a smartphone and disable the PIN code setting, otherwise the aircraft may be unable to connect to the internet.

To remove the nano-SIM card, open the waterproof rubber plug, gently press the nano-SIM card to partially eject it, and then take it out.

Enhanced Transmission Settings

1. Go to the FlightHub 2 Devices page, click Dock/Ground Station, click the Device Maintenance icon of the ground station in the device list to open the Device Maintenance page, and enable Remote Debugging first.
2. After Remote Debugging is enabled, go to Aircraft Control on the Device Maintenance page and enable the 4G switch.
3. Open the ground station Enhanced Transmission settings in the ground station device panel. If using eSIM, scan the QR code to purchase data. If using a nano-SIM card, switch the card type to SIM.

© 2026 DJI All Rights Reserved.

4. Return to the Device Maintenance page, open the aircraft Enhanced Transmission settings, select 4G-1 or 4G-2, and manually switch the corresponding card type to SIM or eSIM.

- Manually select SIM or eSIM in the 4G-1 or 4G-2 settings. Each 4G setting can only select one type of card and will not switch automatically according to signal quality.
- In the Chinese mainland, eSIM is selected automatically when no nano-SIM card is inserted.
- eSIM is not supported overseas. Use a nano-SIM card.
- Switching between eSIM and nano-SIM takes approximately 20 seconds, during which data transmission will be interrupted. DO NOT switch during flight.

Using Enhanced Transmission

When the ground station is connected to a network (wired network or 4G network) and the Enhanced Transmission module is configured, the aircraft's 4G Enhanced Transmission can be enabled in either of the following ways:

- Go to the Devices page in DJI FlightHub 2, click **Dock/Ground Station** > to open Device Maintenance, enable Remote Debugging, and turn on the 4G switch under Aircraft Control.
- Go to the Project page in DJI FlightHub 2, click > to open the device window, click **Action** > **Remote Debugging**, and enable **4G Switch** under Aircraft Control.

Pay close attention to the video transmission signal strength after enabling Enhanced Transmission. Fly with caution.

Security Strategy

Based on safe flight considerations, Enhanced Transmission can only be enabled when the OcuSync video transmission is in effect. If the OcuSync link is disconnected during flight, it is not possible to disable Enhanced Transmission.

4G Network Requirements

4G transmission speed depends on the 4G signal strength at the aircraft's current location and the network congestion of the corresponding base station. The actual transmission experience depends on local 4G network conditions.

Therefore, when using Enhanced Transmission:

 © 2026 DJI All Rights Reserved.

1. Operate the aircraft in locations where the 4G signal is close to full for a better transmission experience.
2. If the OcuSync signal is disconnected, the aircraft will rely entirely on 4G, and video transmission may lag or stutter. Fly with caution.
3. When the OcuSync signal is poor or disconnected, make sure to maintain an appropriate height during the flight. In open areas, try to keep the flight height below 120 meters for a better 4G signal.
4. When flying in cities with tall buildings, make sure to set a suitable RTH altitude (higher than the tallest building).
5. When DJI FlightHub 2 prompts that the 4G signal is weak, fly with caution.

7.4 Troubleshooting Procedures

1. **How to solve the gimbal drift issue during flight?**

   Calibrate IMU and compass in DJI Enterprise App. If the problem persists, contact DJI Support.

2. **No function**

   Check if the Intelligent Flight battery has been activated by charging. If the problems persist, contact DJI Support.

3. **Power-on and start-up problems**

   Check if the battery has power. If yes, contact DJI Support if it cannot be started normally.

4. **Firmware update issues**

   Follow the instructions in the user manual to update the firmware. If the firmware update fails, restart all the devices and try again. If the problem persists, contact DJI Support.

5. **Procedures to reset to factory default**

   Use DJI Enterprise App to reset to factory default settings.

6. **Shutdown and power-off problems**

   Contact DJI Support.

7. **How to detect careless handling or storage in unsafe conditions**

   Contact DJI Support.

© 2026 DJI All Rights Reserved.

7.5 Risks and Warnings

When the aircraft detects a risk after powering on, there will be a warning prompt on DJI FlightHub 2. Pay attention to the list of situations below.

- If the location is not suitable for takeoff.
- If an obstacle is detected during flight.
- If the location is not suitable for landing.
- If the compass and IMU experience interference and need to be calibrated.
- Follow the on-screen instructions when prompted.

7.6 Disposal

Observe the local regulations related to electronic devices when disposing of the aircraft and associated devices.

Battery Disposal

Dispose of the batteries in specific recycling containers only after a complete discharge. DO NOT dispose of the batteries in regular trash containers. Strictly follow the local regulations regarding the disposal and recycling of batteries.

Dispose of a battery immediately if it cannot be powered on after over-discharging.

If the power button is disabled and the battery cannot be fully discharged, contact a professional battery disposal/recycling agency for further assistance.

7.7 C5 and C6 Certification

The aircraft model and corresponding UAS classes are listed below. Requirements and restrictions apply when using the aircraft in the European Economic Area (EEA). Make sure the remote crew is adequately trained and has the necessary competency for the intended operation.

Please use the aircraft in compliance with local regulations. Any risks arising from non-compliant usage are the sole responsibility of the user.

Model	Model M5TD
UAS Class	C5 C6

 © 2026 DJI All Rights Reserved.

Maximum Take-Off Mass (MTOM)	3050 g
Sound Power Level	93 dB
Maximum Propeller Speed	5800 RPM
Maximum Characteristic Dimension	929 mm

The C5 and C6 certification applications use the same equipment configuration. The applicable UAS class is subject to the certification documents and local regulations.

Maximum Dimensions (L×W×H):

392.5×416.2×230.8 mm (without propellers)

676.5×476.5×230.8 mm (with propellers)

Diagonal Wheelbase: 549 mm

MTOM Statement

The MTOM of DJI Matrice 5TD (Model M5TD) is 3050 g to comply with C5 & C6 requirements. The MTOM includes the mass of the parachute when installed.

⚠ DO NOT exceed the Maximum Take-Off Mass (MTOM) of 3050 g.

The C5 and C6 certifications use the same equipment configuration: DJI Matrice 5TD aircraft (Model: M5TD), DJI Dock 4 (Model: DOCK-04), and DJI AP1 Parachute (Model: AP-1). The aircraft may be operated under Standard Scenarios STS-01 and STS-02 as defined in (EU) 2019/947, subject to the applicable requirements.

Users must follow the instructions below to comply with the MTOM requirements for each model:

1. Make sure that when installing any external devices that the total mass of the aircraft does not exceed the Maximum Take-Off Mass. In addition, the external device must be installed in a location so that the center of gravity is maintained within the range of the aircraft top shell to keep the aircraft stable and that the vision systems, the infrared sensing systems, and the auxiliary lights are not blocked. Ensure that the Maximum Take-Off Mass (MTOM) does not exceed the specified limit for any flight.
2. DO NOT use any non-qualified replacement parts, such as intelligent flight batteries or propellers, etc.
3. DO NOT retrofit the aircraft.

Standard Scenarios (STS)

The aircraft may be operated under Standard Scenarios STS-01 and STS-02 as defined in (EU) 2019/947, subject to the population density restrictions and remote crew

© 2026 DJI All Rights Reserved.

training requirements specified therein. Operators must ensure compliance with all applicable requirements of (EU) 2019/947, including Appendix 5 (Operations Manual), when conducting STS operations.

⚠
- When used in the EU, the auxiliary LED is set to auto and cannot be changed. The aircraft Front Arm LEDs are always on when used in the EU and cannot be changed.
- Make sure to use official software for operations that require connecting to external devices, such as firmware updates and exporting media files.

List of Items, including qualified accessories

Item	Model Number	Dimensions	Mass
Battery	BPX340-12138-21.42	96.02×67.7×172.9 mm	925 g
AL2D Spotlight[1]	AL-2D	91×54×60 mm	115 g
AS2D Speaker[1]	AS-2D	132×47×54 mm	190 g
microSD Card	N/A	8.8×12.3×0.7 mm	0.26 g
DJI AP1 Parachute[1]	AP-1	92×70×56 mm	107 g
DJI Matrice 5TD Accessory Mount[1]	AM340-1	117×126×70 mm	40 g
Propellers	1564F		

[1] Not included in the original package. Please be careful not to exceed the MTOM.

List of Spare and Replacement Parts

DJI Matrice 5TD Foldable Low-Noise Anti-Ice Propellers (Model: 1564F)

DJI Matrice 5TD Battery (Model: BPX340-12138-21.42)

Refer to the Maintenance Manual for information on list of wearing parts.

Direct Remote ID

1. Transport Method: Wi-Fi Beacon.
2. Method of uploading the UAS Operator Registration Number to the aircraft: In DJI Enterprise App, go to **Devices**, locate the Device Maintenance card for the corresponding aircraft, click **UAS Remote Identification**, and upload the UAS Operator Registration Number.
3. According to applicable rules, operators shall provide the correct registration number to broadcast in flight. Please make sure you understand and comply with the rules.

 © 2026 DJI All Rights Reserved.

Geo Caging

Introduction

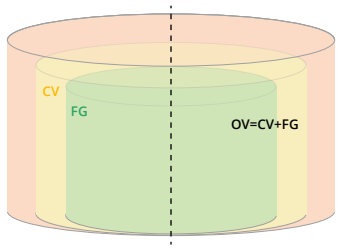

Flight Geography (FG)

In this area, the aircraft can take off, perform flight tasks, and land. If the aircraft approaches the FG edge horizontally or vertically, it will brake and hover, and a voice alert and a warning message will be triggered in DJI FlightHub 2.

The behavior after approaching the FG edge depends on the current flight mode:

- **Flight Route Task**: The aircraft brakes, hovers, and automatically returns to home.
- **Manual Control** (via the DJI FlightHub 2 virtual cockpit): The aircraft brakes and hovers but does not automatically return to home. The user can continue to control it manually to fly back to the FG.

Contingency Volume (CV)

In this area, the aircraft cannot take off or land, and you cannot initiate automatic features such as RTH and FlyTo tasks. If the aircraft is approaching CV edge or flies into the CV, it will brake and hover. You will receive a voice alert and a warning message in DJI FlightHub 2. You can still control the aircraft to fly back to the FG.

Operation Volume (OV)

OV includes the FG and the CV. If the aircraft flies out of the OV, the Flight Termination System (FTS) will be automatically activated. You will receive a voice alert and a warning message in DJI FlightHub 2.

To ensure safe landing, the aircraft can still detect its current status and low-battery RTH, auto-landing, and landing protection are still available in the OV.

Flight Termination System (FTS)

FTS forces the aircraft to stop flying in emergencies. When FTS is activated, the aircraft propellers stop and, if installed, the parachute deploys.

If FTS is triggered, parts inspection, cleaning, and replacement are required after the FTS procedure. Refer to the Maintenance Manual for more information.

© 2026 DJI All Rights Reserved.

Using Geocaging (DJI FlightHub 2)

1. The organization admin can open DJI FlightHub 2, click **My Organization** in the upper-right corner, click ⚙ > **Edit**, and enable **Geocaging**.

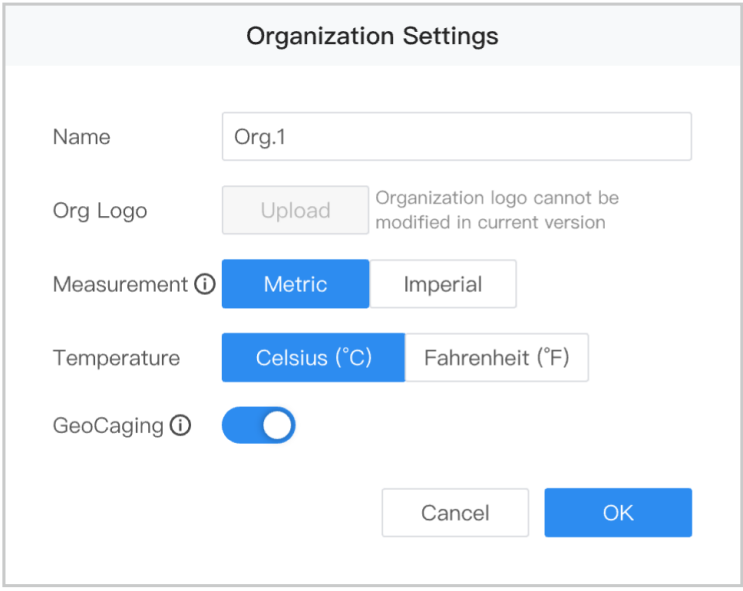

2. Open the Project page, click ⏏ > 🖥 > **Action**, and enable **Remote Debugging** > **Geocaging**. You can modify the FG and CV radius and height, and the area is displayed on the map.

© 2026 DJI All Rights Reserved.

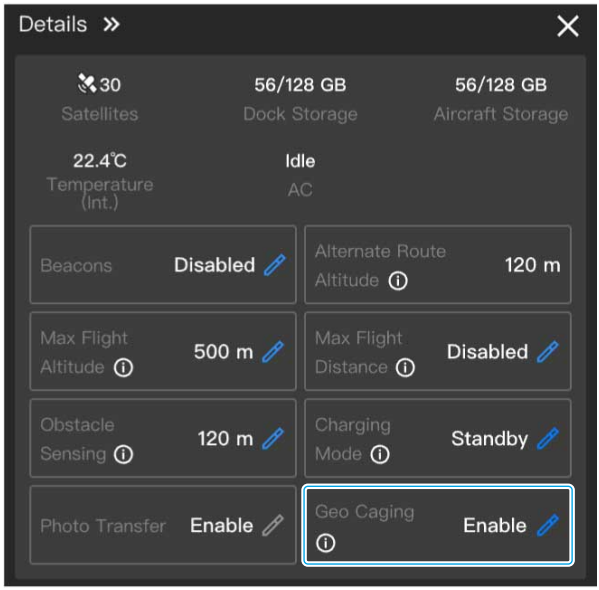

	FG	CV
Minimum Radius	100 m	FG radius + 100 m
Minimum Height	35 m	FG height + 35 m

The maximum configurable height of Geocaging is 1.5 km, and the maximum configurable radius is 30 km. Leave a safe distance of at least 100 m between the FG and the CV.

Height Definition: https://fh.dji.com/user-manual/en/real-time-project-information/online-project-information.html. The vertical height limit of Geocaging is measured above the takeoff point (ATO), and only one vertical limit is available.

- Users can only modify the Geocaging Settings when the aircraft is powered on and not performing any flight tasks.
- Make sure the FG height is higher than the aircraft RTH height.
- Geocaging does not conflict with the distance and height limits or GEO Zones. A flight task will be restricted if any of these limits is triggered.

The accuracy of the map scale display at the bottom right corner is 100%. The following actions are available on the map:

- View for the map orientation.

© 2026 DJI All Rights Reserved.

- Click 3D to enable the 3D map. Press and hold the Control/Ctrl key and left button of the mouse together to rotate the map.
- Click ⓘ to view GEO Zone information.
- Click ⊕ and the project point of interest will be displayed in the middle of the web page.
- Click ◉ to view the map lab.
- ⊡ : Lock mode, the aircraft will be displayed in the center and the map view will change following the aircraft movement.
- ↗ : Free mode, users can change the map view freely.
- Click ✈ to display AirSense warnings.

Display Warnings and Information

Takeoff Warnings: The aircraft cannot take off if the device or any task point is outside of the FG and the user will receive a warning message.

When Geocaging is enabled, the device can check the running status of the Geocaging function and monitor aircraft operation status in real time. If Geocaging cannot function properly, the user will receive a warning message and the aircraft cannot take off.

Braking Distance in CV

When Geocaging is enabled, the aircraft will brake and hover when it reaches the Flight Geography (FG) boundary. The distance the aircraft travels from the moment it reaches the FG boundary until it comes to a stable hover consists of two parts:

- **Distance travelled**: The distance the aircraft continues to travel during the system response time (0.02 s) from the moment it reaches the FG boundary until braking begins.
- **Braking distance**: The distance the aircraft travels from the moment braking begins until it comes to a stable hover.

The sum of the two parts above is the total distance the aircraft travels beyond the FG. This total distance is distinct from the ground risk buffer. Refer to Ground Risk Buffer for information on the ground risk buffer.

The table below shows the distance travelled and the braking distance under different conditions when the aircraft flies out of the FG:

 © 2026 DJI All Rights Reserved.

	Conditions	Distance Travelled	Braking Distance
Worst-case (horizontal)	• Flying perpendicular to FG • Flying at maximum horizontal flight speed • With a maximum wind speed resistance • Wind blowing perpendicular to FG in the flight direction • With a net mass • With a maximum takeoff mass	Approx. 0.3 m	Approx. 26 m
Typical (horizontal)	• Flying perpendicular to FG • Flying at average flight speed • With a net mass • Without wind	Approx. 0.1 m	Approx. 20 m
Worst-case (vertical)	• Flying at maximum ascend or descend speed • With a maximum vertical wind speed in direction of flight • With a net mass • With a maximum takeoff mass	Approx. 0.16 m	Approx. 4 m
Typical (vertical)	• Flying at average flight speed • Ascending or descending at nominal speed • With a net mass • Without wind	Approx. 0.05 m	Approx. 2 m

* The detailed information on the above conditions can be found in https://enterprise.dji.com/dock-4/specs.

This section applies to C6 category aircraft operating under the Specific Standard Scenario STS-02. The braking distance is used to determine the safety margin after the aircraft reaches the FG boundary, and is distinct from the ground risk buffer (determined in accordance with EASA MOC Light-UAS.2511).

- The standard deviation of GNSS: ±10 m (vertical) and ±10 m (horizontal).
- The aircraft hovering and flight accuracy range with RTK positioning in windless or breezy conditions: ±0.1 m (vertical) and ±0.1 m (horizontal).
- The maximum deviation between the aircraft location displayed on DJI FlightHub 2 and the actual location: 5 m.

© 2026 DJI All Rights Reserved.

Flight Termination System (FTS)

Trigger Method

FTS will be automatically triggered when Geocaging is enabled and the aircraft flies out of the OV. For the aircraft behavior after FTS activation, including motor stop and parachute deployment, refer to Using the Parachute.

FTS can be triggered manually when the GNSS signal is weak or based on the user's judgment. For the DJI FlightHub 2 operation path and backup web trigger, refer to Using the Parachute.

FTS Status Check

The FTS is built into the aircraft and requires no additional module installation. It is available when the aircraft is powered on. The aircraft does not support starting the motors at idle on the ground. The FTS automatically performs a self-check when the aircraft is powered on. If the FTS module has an abnormality, such as a connection failure, a Health Management System (HMS) warning will be reported in DJI FlightHub 2.

Post Inspection

If FTS is triggered, parts inspection, cleaning, and replacement are required after the FTS procedure. Refer to the Maintenance Manual for more information.

Risk and Warnings

The FTS module uses the built-in cellular module. Make sure to operate in areas with a good 4G signal. If the FTS signal is lost for more than 120 s, a warning will appear. The system will attempt to restore the signal every 500 ms after the signal is lost. Check the cellular module's internet connection and try to restore the connection.

The FTS has no operational distance limit. In areas with a good 4G signal, the aircraft can be controlled through the FTS.

EASA Notice

Make sure to read the information notices document included in the package before use.

Visit the link below for more EASA notice information on traceability.

https://www.easa.europa.eu/en/document-library/general-publications/drones-information-notices

Original Instructions

This manual is provided by SZ DJI Technology, Inc., and the content is subject to change.

 © 2026 DJI All Rights Reserved.

Address: Lobby of T2, DJI Sky City, No. 53 Xianyuan Road, Xili Community, Xili Street, Nanshan District, Shenzhen, China, 518055.

7.8 FAR Remote ID Compliance Information

The unmanned aircraft system is equipped with a Remote ID system that meets the requirements of 14 CFR Part 89.

- The aircraft automatically initiates a pre-flight self-test (PFST) of the Remote ID system before takeoff and cannot take off if it does not pass the PFST [1]. The results of the PFST of the Remote ID system can be viewed in a DJI flight control app such as DJI Enterprise App or in a DJI cloud platform such as DJI FlightHub 2.
- The aircraft monitors Remote ID system functionality from preflight until shutdown. The Matrice 5TD supports multi-aircraft avoidance based on Remote ID. Remote ID alerts are displayed as messages in DJI FlightHub 2 and DJI Enterprise App.
- Developers who develop third-party applications based on the DJI Mobile SDK shall obtain and display the PFST results and the failure status of the Remote ID system during operation by calling specific APIs. [2]
- Developers who develop third-party platforms based on the DJI Cloud API shall obtain and display the PFST results and the failure status of the Remote ID system during operation by calling specific APIs. [3]
- You can visit the official website of FAA to learn more about aircraft registration and Remote ID requirements.

[1] The pass criterion for PFST is that the hardware and software of the Remote ID required-data source and transmitter radio in the Remote ID system are functioning properly.

[2] For detailed API information, please visit https://developer.dji.com/mobile-sdk/

[3] For detailed API information, please visit https://developer.dji.com/cloud-api/

7.9 Frequently Asked Questions and Solutions

Visit the following link for frequently asked questions and solutions:

https://enterprise.dji.com/dock-4/faq

7.10 After-sales Service

Warranty Policy

Warranty period may vary according to local laws and regulations.

© 2026 DJI All Rights Reserved.

Visit https://www.dji.com/service/policy to check the product warranty period and warranty policy.

Handling Procedures for Flight Accident

When your aircraft encounters a flight accident, please follow the steps below to handle it.

Flyaway Accident

1. Contact DJI Support immediately to describe the flyaway incident, and state whether the parachute deployed and the on-site conditions.
2. Check the flight records via DJI FlightHub 2, and locate the aircraft and parachute based on the actual terrain and the audible and visual signals of the parachute.
3. Export the flight controller data and flight records via DJI FlightHub 2, and contact DJI Support or the local dealer to request data analysis assistance.
4. DJI will provide a solution based on the analysis results.

Collision or Crash Accident

1. After the accident, take photos of the aircraft status and the surrounding environment promptly, and record the aircraft status before the accident and the course of the accident. If the parachute has been fully or partially deployed, DO NOT reset, disassemble, clean, or continue using it, so as not to affect subsequent inspection and accident analysis.
2. Make sure the aircraft is powered off, remove its battery, and store the battery in an isolation box. Note: If the accident is severe, DO NOT power on the aircraft again, as this may burn the internal wiring and cause greater loss.
3. If the aircraft can be powered on normally, export the flight controller data and flight logs via DJI FlightHub 2 and contact DJI Support or the local dealer for data analysis assistance.
4. Send the aircraft back for inspection as instructed by DJI Support or the local dealer. If the parachute has been deployed, it does not support factory repair or reuse. If you dispute the deployment trigger, send the parachute back for log analysis as instructed.

Shipping the Product for Repair

Choose one of the methods below to ship the product for repair:

 © 2026 DJI All Rights Reserved.

1. **Official Website Self-Service Repair**

   Log in to the DJI self-service repair website https://repair.dji.com/repair/index and follow the on-screen instructions to complete the Mail-In Repair service.

2. **Contact Local Dealer for Assistance**

   Contact your dealer and describe the type of service required. The dealer will help arrange repair shipping.

3. **Official Support Hotline Service**

   Call the technical support number for your region and describe the required service, such as repair, return, or replacement; send the product back as instructed.

   Visit the following website to view phone support options for the hotline service:

   https://www.dji.com/support

© 2026 DJI All Rights Reserved.

WE ARE HERE FOR YOU

Contact
DJI SUPPORT

The content is subject to change without prior notice.
Download the latest version from

https://enterprise.dji.com/dock-4/downloads

If you have questions or suggestions about this manual, contact us at the following email address:
DocSupport@dji.com.

DJI and MATRICE are trademarks of DJI.
Copyright © 2026 DJI All Rights Reserved.