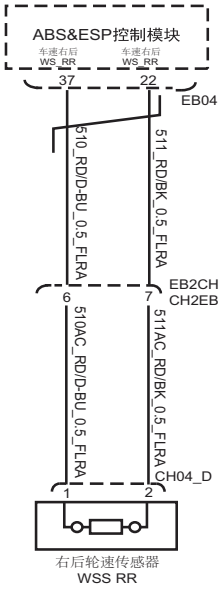
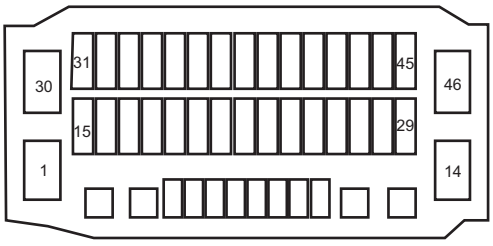
C003A-08、 C00A6-00、 C003B-00、 C00A7-00、 C003B-08

Description of fault diagnosis codes
C003A-08：Right Rear Wheel Speed Sensor multi Failures
C00A6-00：Wheel-speed sensor, rear right:short to GND
C003B-00：Wheel-speed sensor, rear right:open
C00A7-00：Wheel-speed sensor, rear right:short to UBATT
C003B-08：Wheel-speed sensor, rear right:(signal failure) direction wrong
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • ABS&ESP module fault • Rear right wheel-speed sensor fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
C003A-08
C00A6-00
C003B-00
C00A7-00
C003B-08
To set the effect of a fault code condition
1 2
Description of circuit diagram
The ABS&ESP module monitors the rear right wheel-speed sensor via low level reference circuit and signal circuit.

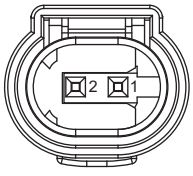
Circuit diagram



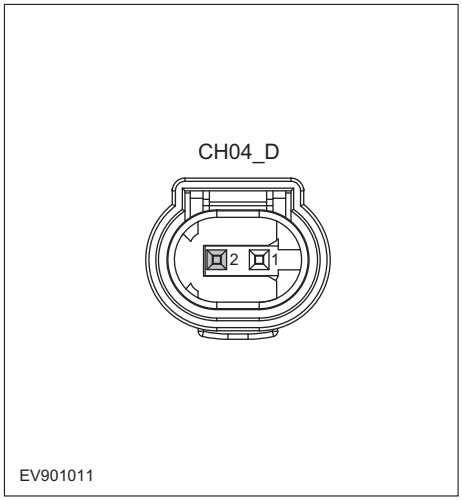
EB04

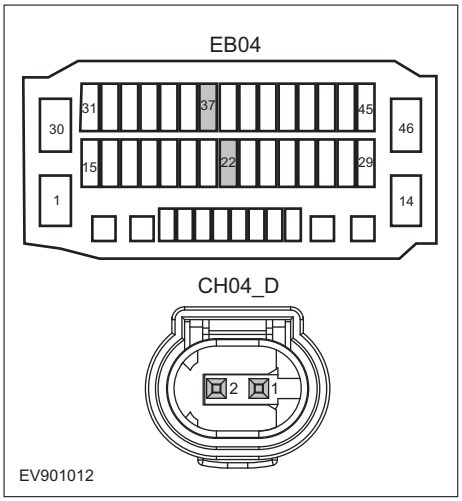


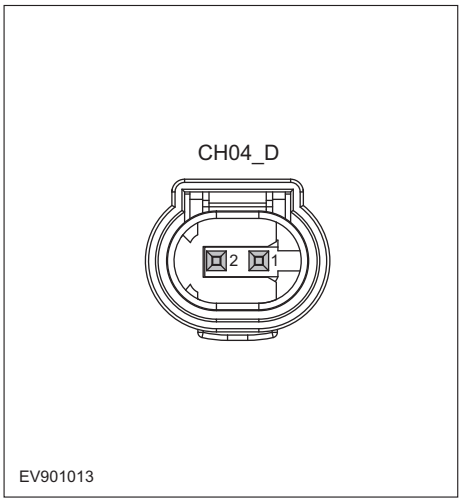
CH04_D

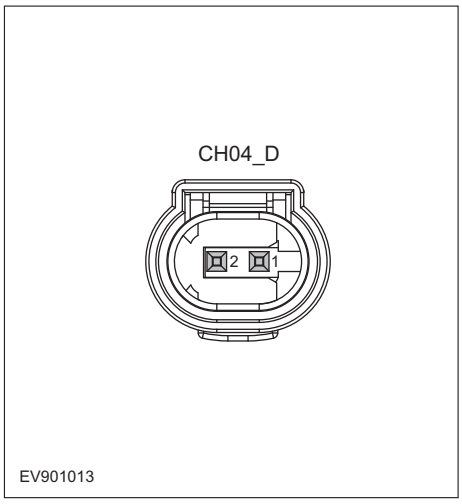


EV901028

Troubleshooting steps		
Step 1	General inspection.	
		1 Check fuse for damage. 2 Check battery capacity. 3 Check the harness plug of rear right wheel-speed sensor and ABS&ESP module for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Check the ABS&ESP module with a diagnostic apparatus. 4 Is there any other fault code except for C003A-08/C00A6-00/C003B-00/C00A7-00/C003B-08?
		YES → Refer to:DTC Summary List (ABS&ESP).
NO ↓		
Step 3	Check the power supply circuit of rear right wheel-speed sensor circuit.	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug CH04_D of rear right wheel-speed sensor. 3 Turn the ignition switch to ON. 4 Measure the voltage between harness terminal on rear right wheel-speed sensor and ground. Measuring circuit: voltage between terminal 2 on plug CH04_D and ground. **Standard value:4.8~5.2V** 5 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 4	Check the power supply circuit of rear right wheel-speed sensor (open circuit)
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB04 of ABS&ESP module.. 3 Measure the resistance between plug terminals on rear right wheel-speed sensor and ABS&ESP module. Measuring circuit: resistance between terminal 1 on plug CH04_D and terminal 37 on plug EB04. Measuring circuit: resistance between terminal 2 on plug CH04_D and terminal 22 on plug EB04. **Standard value: ≈ 0Ω** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 5	Check the power supply circuit of rear right wheel-speed sensor (short circuit)
	1 Turn the ignition switch to OFF. 2 Measure the resistance between harness plug on rear right wheel-speed sensor and ground. Measuring circuit: resistance between terminal 1 on plug CH04_D and ground. Measuring circuit: resistance between terminal 2 on plug CH04_D and ground. **Standard value: ∞** 3 Measure the voltage between harness plug on rear right wheel-speed sensor and ground. Measuring circuit: voltage between terminal 1 on plug CH04_D and ground. Measuring circuit: voltage between terminal 2 on plug CH04_D and ground. **Standard value: ≈ 0V** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 6	Check the rear right wheel-speed sensor (parts).
	1 Measure the resistance of rear right wheel-speed sensor directly. Measuring circuit: resistance between terminal 1 and terminal 2 on plug CH04_D. **Standard value:** 2 Measure the resistance between the rear right wheel-speed sensor and the housing. Measuring circuit: resistance between terminal 1 on plug CH04_D and the housing. Measuring circuit: resistance between terminal 2 on plug CH04_D and the housing. **Standard value: ∞** 3 Check whether the result is normal or not?
	NO → Replace the rear right wheel-speed sensor.
YES ↓	
Step 7	Check if ABS&ESP module is normal.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB04 of ABS&ESP module. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the air conditioning control module plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the air conditioning control module.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,	
Next Step ↓	
Diagnosis end.	