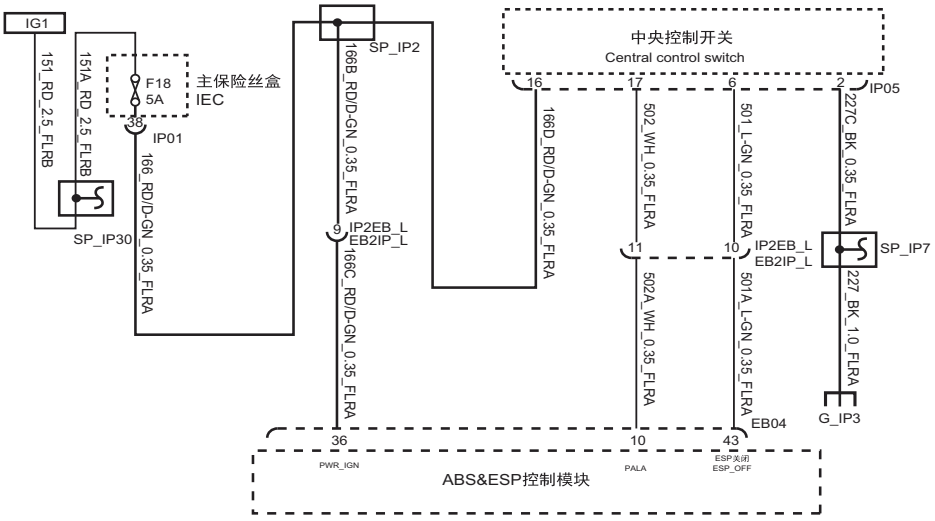
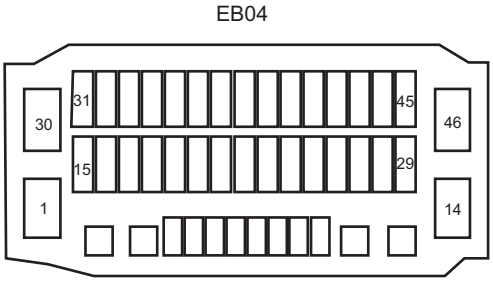
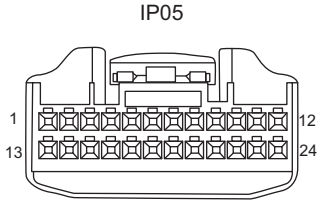
C104C-04

Description of fault diagnosis codes
C104C-04：PATA switch failure
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • ABS&ESP module fault • Central control switch fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
C104C-04
To set the effect of a fault code condition
1 2
Description of circuit diagram
The ABS&ESP module monitors the central control switch via low level reference circuit and signal circuit. The central control switch realizes relevant functions by sending the operation signal to the ABS&ESP module.

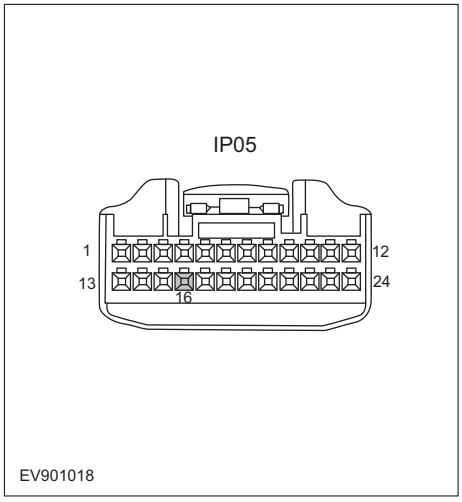
Circuit diagram

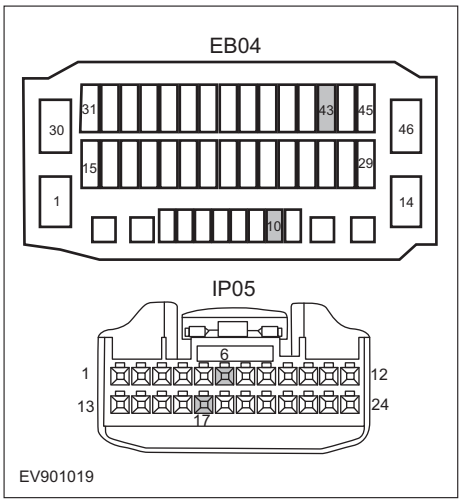


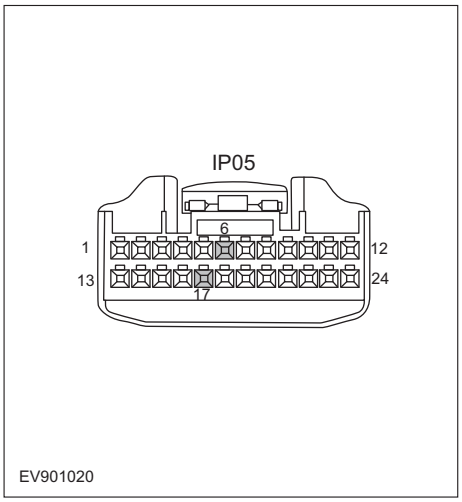


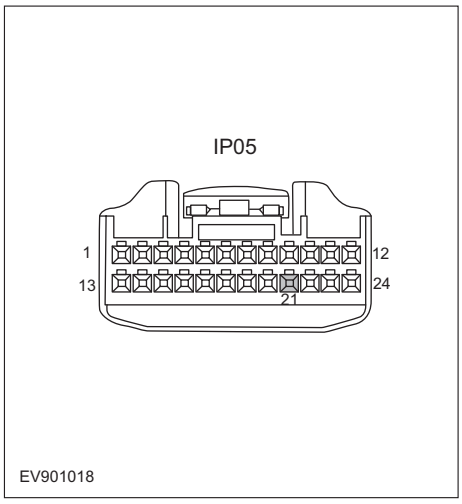


EV901017

Troubleshooting steps	
Step 1	General inspection.
	1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of central control switch , ABS&ESP for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Check the ABS&ESP module with a diagnostic apparatus. 4 Is there any other fault code except for C104C-04?
	YES → Refer to:DTC Summary List (ABS&ESP).
NO ↓	
Step 3	Check the power supply circuit of central control switch circuit.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug IP05 of central control switch. 3 Turn the ignition switch to ON. 4 Measure the voltage between the harness terminal of central control switch and ground. Measuring circuit: voltage between terminal 16 on plug IP05 and ground. **Standard value:10~14V** 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 4	Check the circuit of central control switch circuit (open circuit)
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB04 of ABS&ESP module.. 3 Measure the resistance between harness terminals on central control switch and ABS&ESP module. Measuring circuit: resistance between terminal 6 on plug IP05 and terminal 43 on plug EB04. Measuring circuit: resistance between terminal 17 on plug IP05 and terminal 10 on plug EB04. **Standard value: ≈ 0Ω** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 5	Check the circuit of central control switch circuit (short circuit)
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminal of central control switch and ground. Measuring circuit: resistance between terminal 6 on plug IP05 and ground. Measuring circuit: resistance between terminal 17 on plug IP05 and ground. **Standard value: ∞** 3 Measure the voltage between the harness terminal of central control switch and ground. Measuring circuit: voltage between terminal 6 on plug IP05 and ground. Measuring circuit: voltage between terminal 17 on plug IP05 and ground. **Standard value: ≈ 0V** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 6	Check whether the grounding circuit of central control switch circuit is open.
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminal of central control switch and ground. Measuring circuit: resistance between terminal 2 on plug IP05 and ground. **Standard value: < 1Ω** 3 Test whether the resistance is less than 1Ω?
	NO → Repair the central control switch.
YES ↓	
Step 7	Check if ABS&ESP module is normal.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB04 of ABS&ESP module. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the air conditioning control module plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the air conditioning control module.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,	
Next Step ↓	
Diagnosis end.	