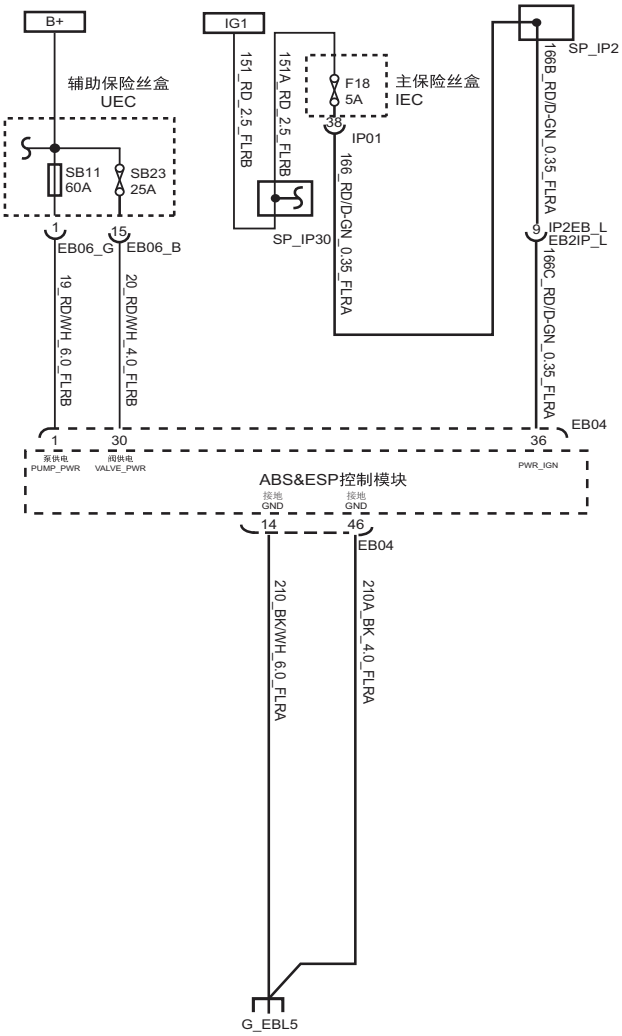
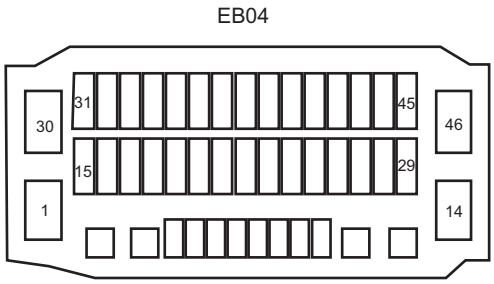
C00A8-00、C00A9-00、C00AA-00、C00AB-00、C00AC-00、C0196-04、C1000-04、C0040-08、C1099-08、C155C-00、C155D-45、C0111-96、C0112-96、C156C-92、C0061-08、C0062-08、C0063-08、C0072-04

Description of fault diagnosis codes
C0045-10：Pressure sensor fault.（line）
C0044-60：Pressure sensor fault.（signal）
C00A8-00：IIS (Integrated Inertial Sensor) not calibrated or failed
C00A9-00：Wheel-speed sensor, front left:general error
C00AA-00：Wheel-speed sensor, front right:general error
C00AB-00：Wheel-speed sensor, front left:general error
C00AC-00：Wheel-speed sensor, rear right:general error
C0196-04：IIS (Integrated Inertial Sensor) fault: hardware failure, temperature, range, internal fault
C1000-04：ECU error (general system problem)
C0040-08：BLS fault:Plausibility
C1099-08：Wheel-speed sensor generic error:direction wrong
C155C-00：PB Command Blocked
C155D-45：PBC Shadow Memory cell defect
C156C-92：APB Electrical Failure Gen
C0061-08：Lateral acceleration signal failure
C0062-08：Longitudinal acceleration signal failure
C0063-08：Yaw rate signal failure
C0072-04：Brake Disc Over heat
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • ABS&ESP module
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
C0045-10
C0044-60
C00A8-00

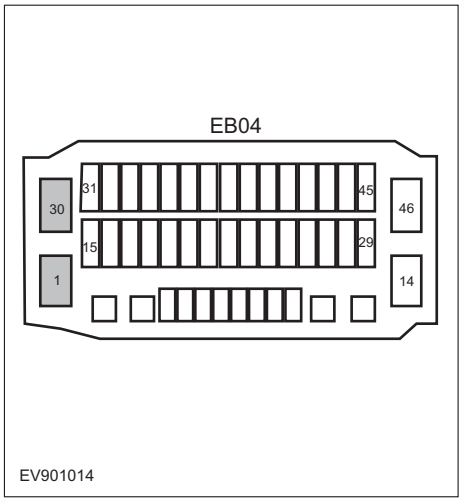
C00A9-00
C00AA-00
C00AB-00
C00AC-00
C0196-04
C1000-04
C0040-08
C1099-08
C155C-00
C155D-45
C156C-92
C0061-08
C0062-08
C0063-08
C0072-04
To set the effect of a fault code condition
Description of circuit diagram
The ABS&ESP module will continuously monitor whether the sensor and actuator are in normal range. Meanwhile,it will check the connector for virtual connection, short circuit, open circuit and the connection rationality with other signals. In case of any fault, the body control module will save the fault code and enable the safety mode.

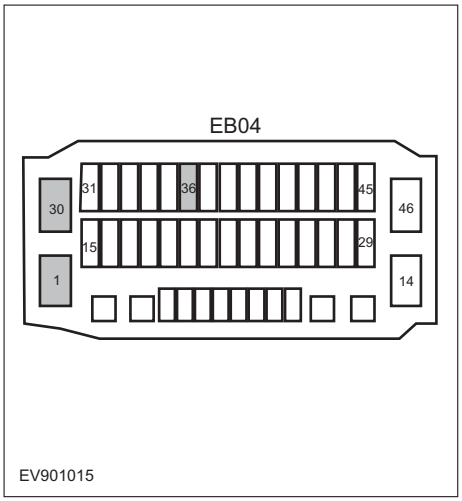
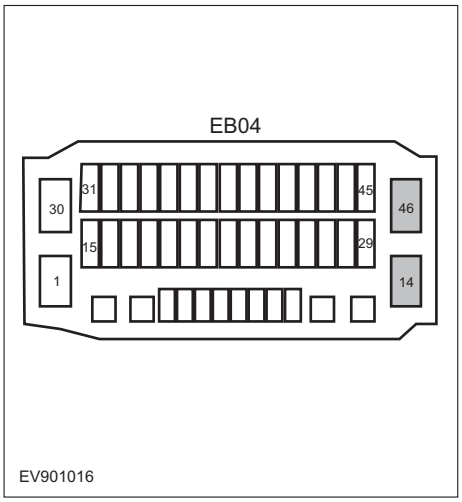
Circuit diagram





EV901029

Troubleshooting steps	
Step 1	General inspection.
	1 Check fuses SB11/SB23/F18 for damage. 2 Check battery capacity. 3 Check the harness plug of ABS&ESP for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Check the ABS&ESP module with a diagnostic apparatus. 4 Is there any other fault code except for C0045-10、C0044-60、C00A8-00、C00A9-00、C00AA-00、C00AB-00、C00AC-00、C0196-04、C1000-04、C0040-08、C1099-08、C155C-00、C155D-45、C156C-92、C0061-08、C0062-08、C0063-08、C0072-04?
	YES → Refer to:DTC Summary List (ABS&ESP).
NO ↓	
Step 3	Check the battery voltage of ABS&ESP module.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB04 of ABS&ESP module.. 3 Measure the voltage between Measuring circuit: voltage between terminal 1 on plug EB04 and ground. Measuring circuit: voltage between terminal 30 on plug EB04 and ground. **Standard value:10~14V** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 4	Check the power voltage when the ABS&ESP module is started or operating
	1 Turn the ignition switch to ON. 2 Measure the voltage between Measuring circuit: voltage between terminal 1 on plug EB04 and ground. Measuring circuit: voltage between terminal 30 on plug EB04 and ground. Measuring circuit: voltage between terminal 36 on plug EB04 and ground. **Standard value:10~14V** 3 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Test whether the grounding circuit of ABS&ESP module is open.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB04 of ABS&ESP module.. 3 Measure the resistance between harness plug of ABS&ESP module and ground. Measuring circuit: resistance between terminal 14 on plug EB04 and ground. Measuring circuit: resistance between terminal 46 on plug EB04 and ground. **Standard value: < 1Ω** 4 Test whether the resistance is less than 1Ω?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 6	Check if ABS&ESP module is normal.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB04 of ABS&ESP module. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the air conditioning control module plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
	YES → Replace the air conditioning control module.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,	
Next Step ↓	
Diagnosis end.	