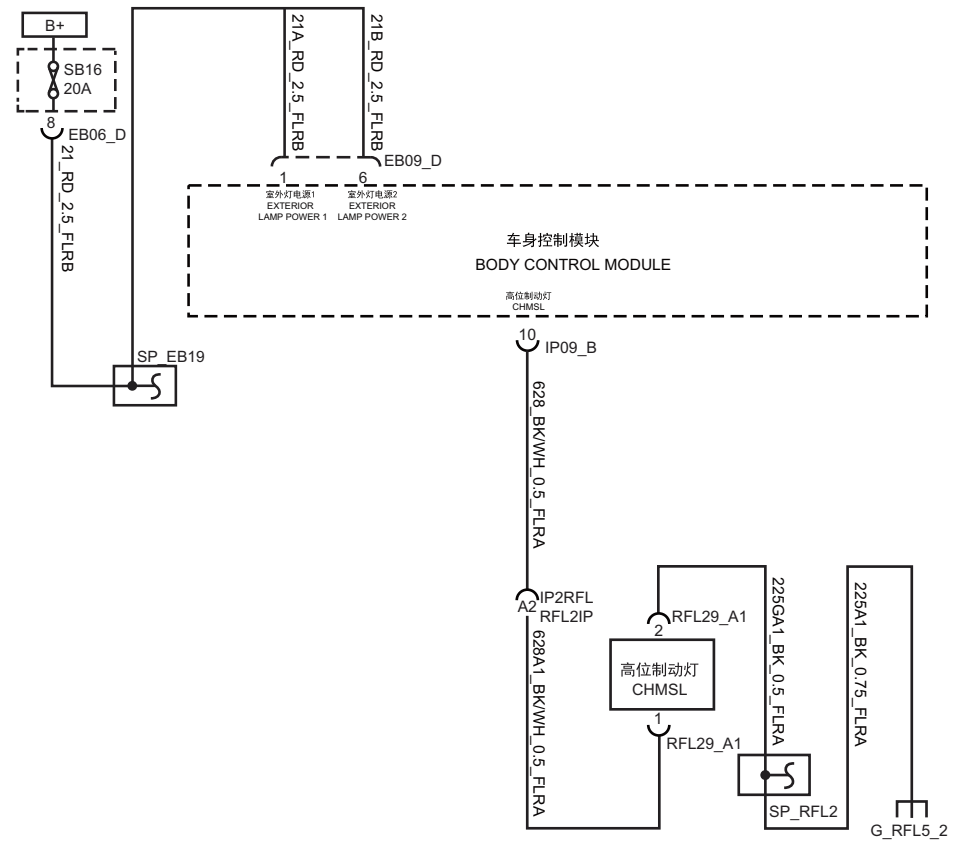
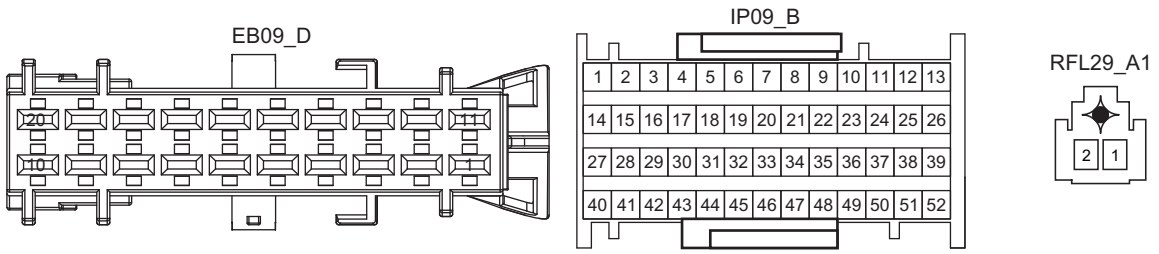
B1263-11、 B1263-12、 B1263-13

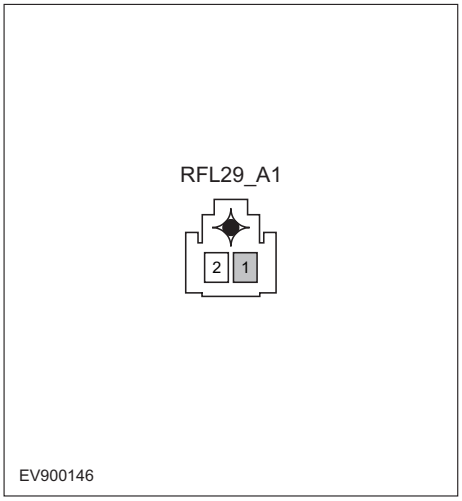
Description of fault diagnosis codes	Fault diagnosis code
B1263-11：High position light circuit short to ground	B1263-11：High position light circuit short to ground
B1263-12：High position light circuit short to battery	B1263-12：High position light circuit short to battery
B1263-13：High position light circuit open	B1263-13：High position light circuit open
Detection tools	
1 Multimeter and diagnostic apparatus	
Possible causes	
• Circuit,terminal and adapting piece fault • BCM fault • High position brake lamp fault • Insurance fuse fault	
Conditions for fault code operation	
Turn the ignition switch to ON position.	
Conditions for fault code setting	
B1263-11	
Position light output circuit short to ground	
B1263-12	
Position light output circuit short to battery	
B1263-13	
Position light output circuit open	
To set the effect of a fault code condition	
High position light function fails to effect	
Description of circuit diagram	

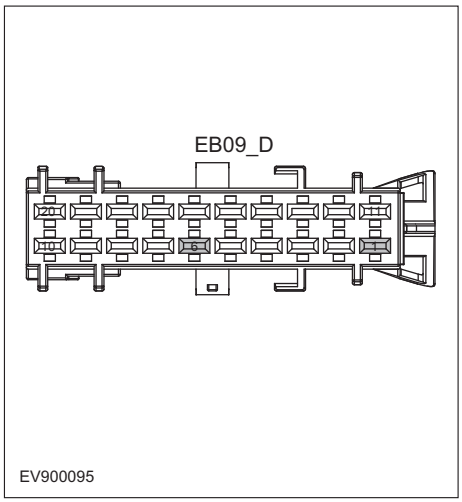
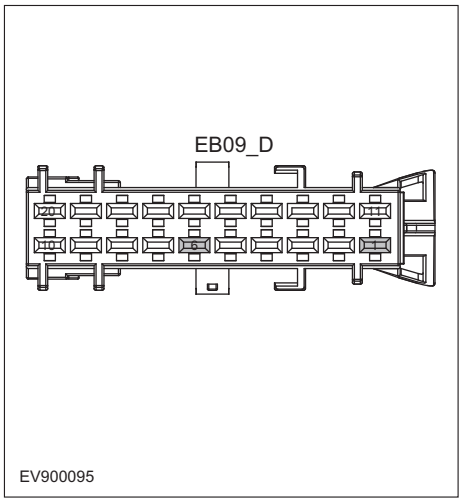
Circuit diagram

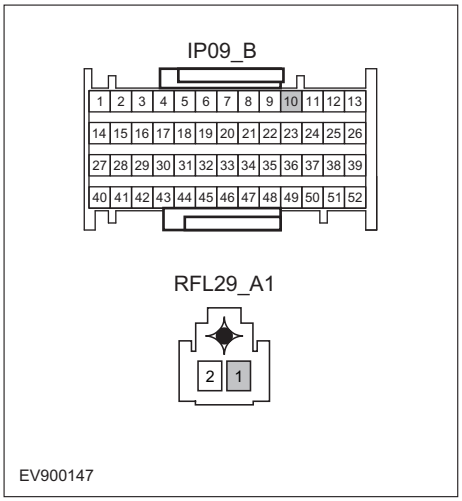
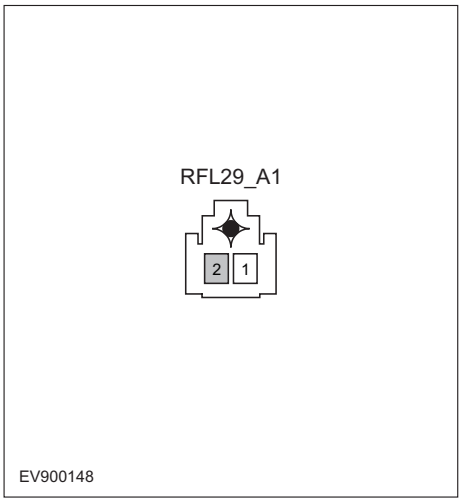




EV900145

Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse SB16 for damage. 2 Check battery capacity. 3 Check the harness plug of air conditioning control module for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Check the body control module with a diagnostic apparatus. 4 Is there any other fault code except for B1263-11/B1263-12/B1263-13?
		YES → Refer to:DTC Summary list(BCM).
NO ↓		
Step 3	Check the supply power of high position brake lamp when it is started or operating.	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug RFL29_A1 of high position brake lamp. 3 Turn the ignition switch to ON. 4 Measure the voltage between the harness terminal of high position brake lamp and ground. Measuring circuit: voltage between terminal 1 on plug RFL29_A1 and ground. **Standard value:10~14V** 5 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 4	Check the power voltage of outdoor light of BCM
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB09_D of BCM. 3 Measure the voltage between the harness terminal of BCM and ground. Measuring circuit: voltage between terminal 1 on plug EB09_D and ground. Measuring circuit: voltage between terminal 6 on plug EB09_D and ground. **Standard value:10~14V** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Check the power voltage of outdoor light when the BCM is started or operating
	1 Turn the ignition switch to ON. 2 Measure the voltage between the harness terminal of BCM and ground. Measuring circuit: voltage between terminal 1 on plug EB09_D and ground. Measuring circuit: voltage between terminal 6 on plug EB09_D and ground. **Standard value:10~14V** 3 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 6	Check the circuit between high position brake lamp and BCM (open circuit).
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug IP09_B of BCM. 3 Measure the resistance between the harness terminal of high position brake lamp and of BCM. Measuring circuit: resistance between terminal 1 on plug RFL29_A1 and terminal 10 on plug IP09_B. **Standard value: ≈ 0Ω** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 7	Test whether the grounding circuit of high position brake lamp is open.
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminal of high position brake lamp and ground. Measuring circuit: resistance between terminal 2 on plug RFL29_A1 and ground. **Standard value: < 1Ω** 3 Test whether the resistance is less than 1Ω?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 8	Test whether BCM is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB09_C、EB09_D、IP09_A、IP09_B of BCM. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the BCM plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the BCM.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,	
Next Step ↓	
Diagnosis end.	