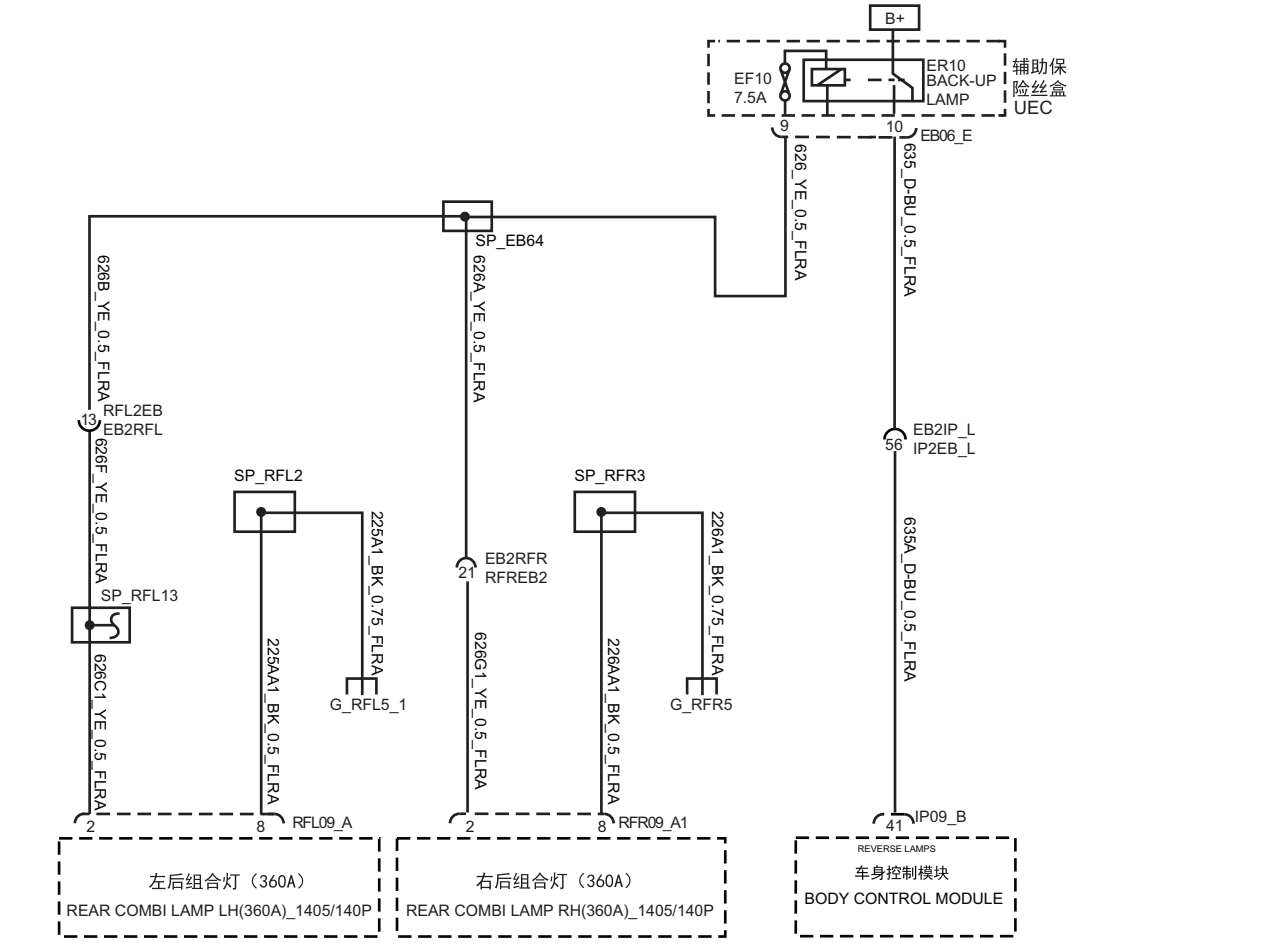
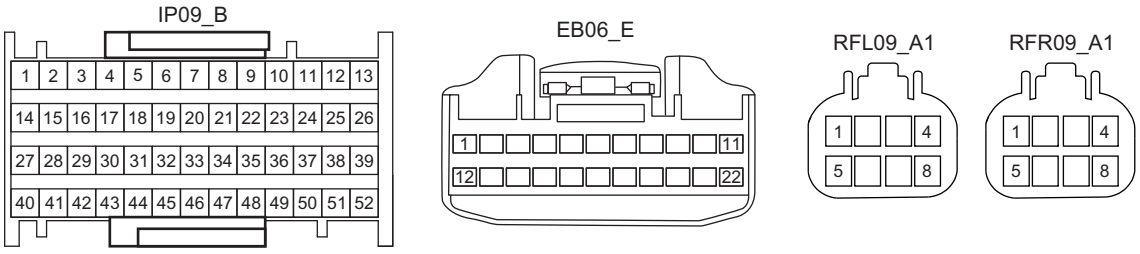
## B1280-11、 B1280-12、 B1280-13

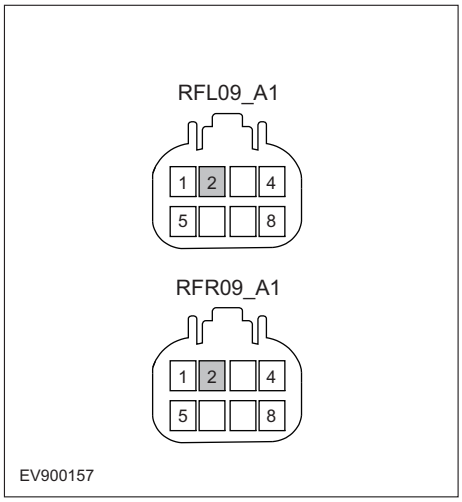
| **Fault diagnosis code** |
| --- |
| B1280-11：Revert light circuit short to ground |
| B1280-12：Revert light circuit short to battery |
| B1280-13：Revert light circuit open |
| **Detection tools** |
| 1 Multimeter and diagnostic apparatus |
| **Possible causes** |
| • Circuit,terminal and adapting piece fault<br>• BCM fault<br>• Revert lamp circuit fault<br>• Insurance fuse fault<br>• Relay fault |
| **Conditions for fault code operation** |
| Turn the ignition switch to ON position. |
| **Conditions for fault code setting** |
| B1280-11 |
| Revert lamp output circuit short to ground |
| B1280-12 |
| Revert lamp output circuit short to battery |
| B1280-13 |
| Revert lamp output circuit open |
| **To set the effect of a fault code condition** |
| Revert lamp function fails to effect |
| **Description of circuit diagram** |
| |

**Circuit diagram**



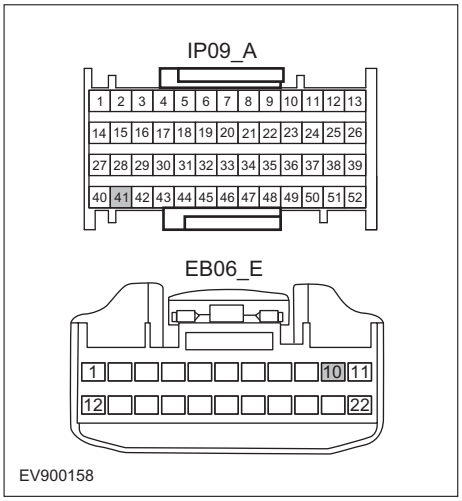




EV900156

| **Troubleshooting steps** | |
|---|---|
| Step 1 | General inspection. |
| | 1 Check the fuse EF10 for damage.<br>2 Check the relay ER03/ER10 for damage.<br>3 Check battery capacity.<br>4 Check the harness plug of air conditioning control module for damage, poor contact, aging and looseness.<br>5 Check whether the result is normal or not? |
| | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | |
| Step 2 | Check fault codes. |
| | 1 Connect the fault diagnosis instrument to the diagnosis interface.<br>2 Turn the ignition switch to ON position.<br>3 Check the body control module with a diagnostic apparatus.<br>4 Is there any other fault code except for B1280-11/B1280-12/B1280-13? |
| | **YES →** Refer to:DTC Summary list(BCM). |
| **NO ↓** | |
| Step 3 | Check the supply power of revert lamp when it is started or operating. |
|  | 1 Turn the ignition switch to OFF.<br>2 Disconnect the harness plug RFL09_A of left revert lamp.<br>3 Disconnect the harness plug RFR09_A of right revert lamp.<br>4 Turn the ignition switch to ON.<br>5 Lift the vehicle so that the wheels are suspended, and then put the vehicle into R gear(before mounting, make necessary safety measures according to the field conditions).<br>6 Measure the voltage between the harness terminal of revert lamp and ground.<br>Measuring circuit: voltage between terminal 2 on plug RFL09_A and ground.<br>Measuring circuit: voltage between terminal 2 on plug RFR09_A and ground.<br>**Standard value:10~14V**<br>7 Check whether the result is normal or not? |
| | **NO →** Repair or replace the faulted parts. |

**YES ↓**

| Step 4 | Check the circuit between relay of revert lamp and BCM (open circuit). |
|---|---|




1 Turn the ignition switch to OFF.

2 Disconnect the harness plug IP09_B of BCM.

3 Disconnect the harness plug EB06_E of UEC.

4 Measure the resistance between the harness terminal of UEC and the BCM.

Measuring circuit: resistance between terminal 10 on plug EB06_E and terminal 41 on plug IP09_B.

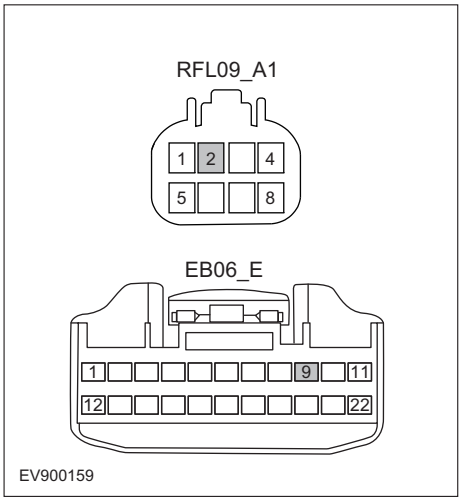
**Standard value: ≈ 0Ω**

5 Check whether the result is normal or not?

**NO →** Repair or replace the faulted parts.

**YES ↓**

| Step 5 | Check the circuit between relay of left side revert lamp and BCM (open circuit). |
|---|---|




1 Measure the resistance between the harness terminal of UEC and revert lamp.

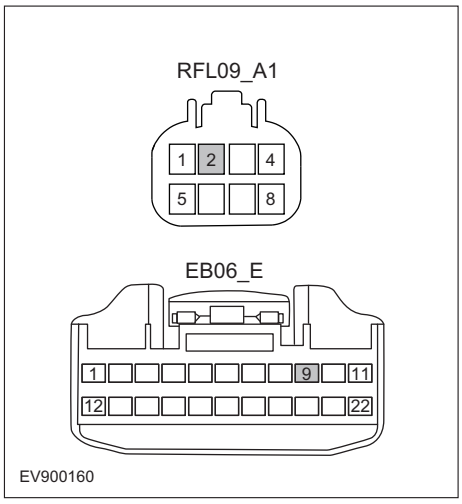
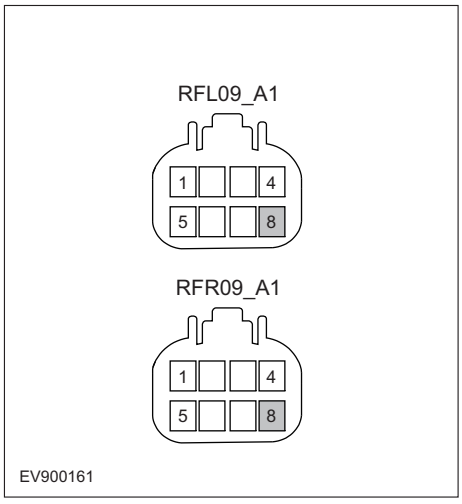
Measuring circuit: resistance between terminal 9 on plug EB06_E and terminal 2 on plug RFL09_A.

**Standard value: ≈ 0Ω**

2 Check whether the result is normal or not?

**NO →** Repair or replace the faulted parts.

**YES ↓**

| Step 6 | Check the circuit between relay of right side revert lamp and revert lamp (open circuit). |
|---|---|
|  | 1 Measure the resistance between the harness terminal of UEC and revert lamp.<br>Measuring circuit: resistance between terminal 9 on plug EB06_E and terminal 2 on plug RFR09_A.<br>**Standard value: ≈ 0Ω**<br>2 Check whether the result is normal or not? |
| | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | |
| Step 7 | Test whether the grounding circuit of revert lamp is open. |
|  | 1 Turn the ignition switch to OFF.<br>2 Measure the resistance between the harness terminal of revert lamp and ground.<br>Measuring circuit: resistance between terminal 8 on plug RFL09_A and ground.<br>Measuring circuit: resistance between terminal 8 on plug RFR09_A and ground.<br>**Standard value: < 1Ω**<br>3 Test whether the resistance is less than 1Ω? |
| | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | |

| Step 8 | Test whether BCM is norm. |
|---|---|
| | 1 Turn the ignition switch to OFF.<br>2 Disconnect and check the harness plug EB09_C、EB09_D、IP09_A、IP09_B of BCM.<br>3 Check and repair.<br>• Corrosion(install new adapting piece or terminal-cleaning module and pin).<br>• Pin damaged or bent-install new terminal/pin.<br>• Fly out of pins-install new pins as needed.<br>4 Reconnect the BCM plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed.<br>5 Run the system and determine if the problem persists? |
| | **YES →** Replace the BCM. |
| **NO ↓** | |
| At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems, | |
| **Next Step ↓** | |
| Diagnosis end. | |