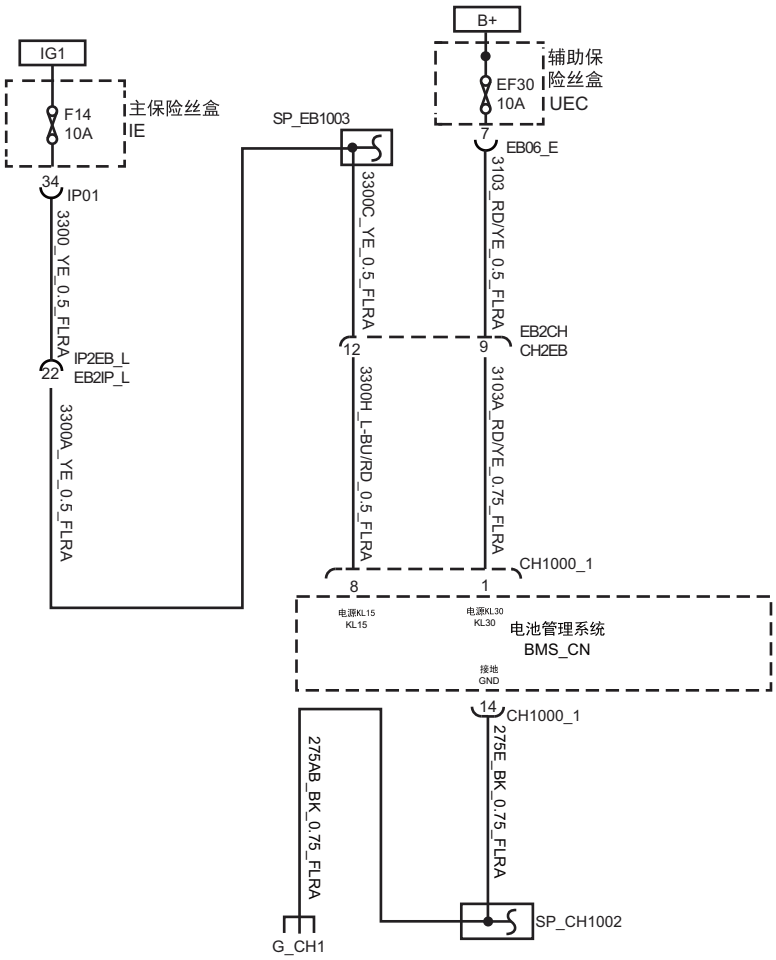
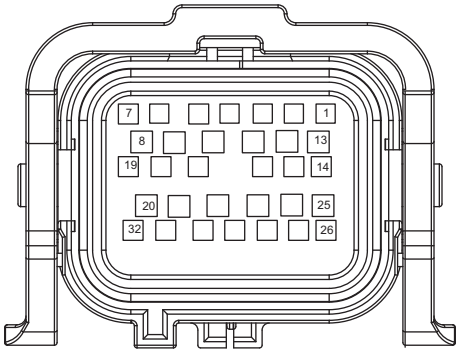
P0562-F1、 P0563-F1

Fault diagnosis code
P0562-F1：BMS Voltage below the Low_Threshold
P0563-F1：BMS Voltage above the High_Threshold
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • Battery • BMS • Charging system • Insurance fuse
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P0562-F1
Low-voltage power supply voltage is lower than the normal operating range: BMS lead-acid sampling voltage ⩽ 8400mV
P0563-F1
Low-voltage power supply voltage is higher than the normal operating range: BMS lead-acid sampling voltage ⩾ 16900mV
To set the effect of a fault code condition
BMS function is limited
Description of circuit diagram
The BMS will monitor whether all sensors and actuators are within normal range all the time. Meanwhile,it will check the connector for virtual connection, short circuit, open circuit and the connection rationality with other signals. When fault occurs, the BMS module will save the fault code corresponding to that fault and enable safety mode.

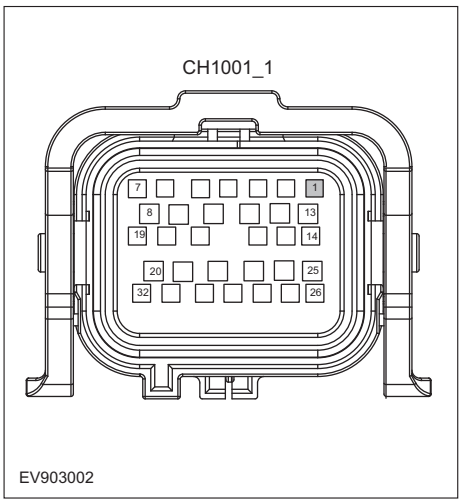
Circuit diagram

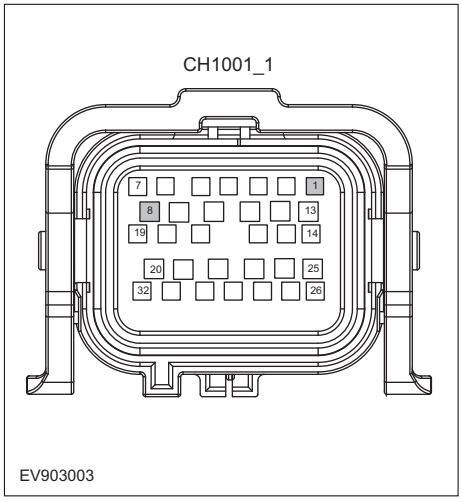
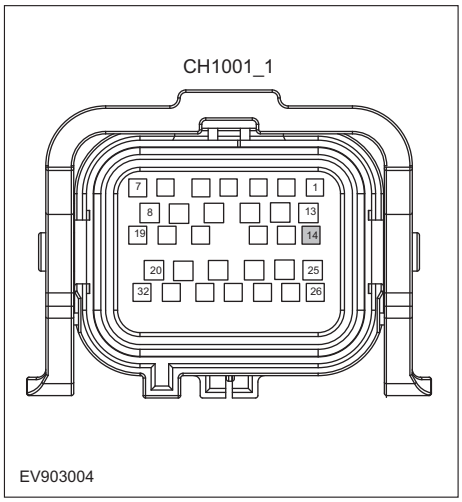


CH1001_1



EV903001

<table>
<tr><td colspan="3">Troubleshooting steps</td></tr>
<tr><td>Step 1</td><td colspan="2">General inspection.</td></tr>
<tr><td colspan="2"></td><td>1 Check fuses EF30/F14 for damage.
2 Check battery capacity.
3 Check the harness plug of BMS for damage, poor contact, aging and looseness.
4 Check whether the result is normal or not?</td></tr>
<tr><td colspan="2"></td><td>NO → Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">YES ↓</td></tr>
<tr><td>Step 2</td><td colspan="2">Check fault codes.</td></tr>
<tr><td colspan="2"></td><td>1 Connect the fault diagnosis instrument to the diagnosis interface.
2 Turn the ignition switch to ON position.
3 Diagnose the BMS with diagnostic apparatus.
4 If there is any fault code except for P0562-F1,P0563-F1?</td></tr>
<tr><td colspan="2"></td><td>YES → Refer to:DTC Summary list(BMS).</td></tr>
<tr><td colspan="3">NO ↓</td></tr>
<tr><td>Step 3</td><td colspan="2">Check the power voltage of BMS battery.</td></tr>
<tr><td colspan="2"> 
</td><td>1 Turn the ignition switch to OFF.
2 Disconnect the harness plug CH1000_1 of BMS.
3 Measure the voltage between the harness terminal of BMS and ground.
Measuring circuit: voltage between terminal 1 on plug CH1000_1 and ground.
Standard value:10~14V
4 Check whether the result is normal or not?</td></tr>
<tr><td colspan="2"></td><td>NO → Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">YES ↓</td></tr>
</table>

Step 4	Check the power voltage when the BMS is started or operating
	1 Turn the ignition switch to ON. 2 Measure the voltage between the harness terminal of BMS and ground. Measuring circuit: voltage between terminal 1 on plug CH1000_1 and ground. Measuring circuit: voltage between terminal 8 on plug CH1000_1 and ground. **Standard value:10~14V** 3 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Test whether the grounding circuit of BMS is open.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug CH1000_1 of BMS. 3 Measure the resistance between the harness terminal of BMS and ground. Measuring circuit: resistance between terminal 14 on plug CH1000_1 and ground. **Standard value: < 1Ω** 4 Test whether the resistance is less than 1Ω?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 6	Test whether BMS is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug CH1000_1 of BMS. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the BMS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the BMS.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	
Diagnosis end.	