

## P0D94-00


| **Fault diagnosis code** |
| --- |
| vehicle Charging electronic lock state abnormal |
| **Detection tools** |
| 1 Multimeter and diagnostic apparatus |
| **Possible causes** |
| • Circuit,terminal and adapting piece fault<br>• Electronic lock instrument fault |
| **Conditions for fault code operation** |
| Turn the ignition switch to ON position. |
| **Conditions for fault code setting** |
| P0D94-00 |
| The electronic lock fails to be locked or unlocked, and the electronic lock is unlocked abnormally during charging:<br>1. Electronic lock fails to lock<br>2. Electronic lock fails to unlock<br>3. The electronic lock is unlocked abnormally during charging |
| **To set the effect of a fault code condition** |
| 1. Electronic lock fails to lock<br>2. Electronic lock fails to unlock<br>3. The electronic lock is unlocked abnormally during charging |
| **Description of circuit diagram** |
| |


**Circuit diagram**

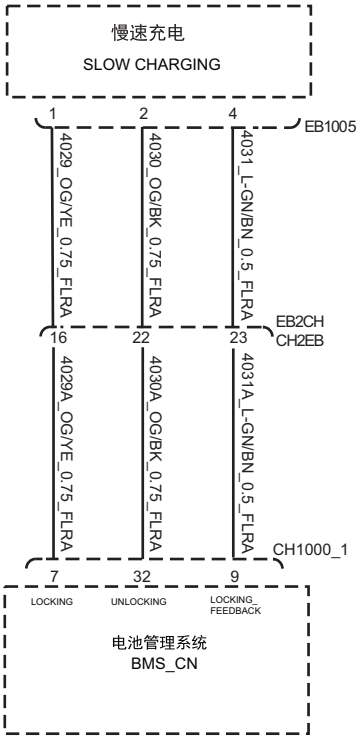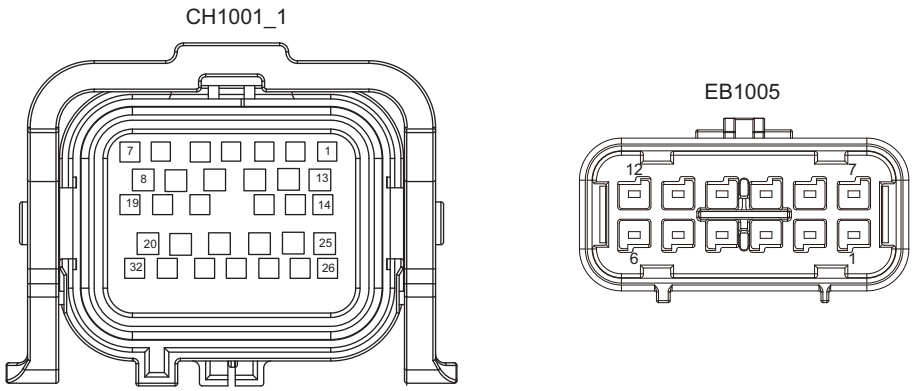


EV903007

| **Troubleshooting steps** | |
|---|---|
| Step 1 | General inspection. |
| | 1 Check the fuse for damage.<br>2 Check battery capacity.<br>3 Check the harness plug of BMS for damage, poor contact, aging and looseness.<br>4 Check whether the result is normal or not? |
| | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | |
| Step 2 | Check fault codes. |
| | 1 Connect the fault diagnosis instrument to the diagnosis interface.<br>2 Turn the ignition switch to ON position.<br>3 Diagnose the BMS with diagnostic apparatus.<br>4 Is there any other fault code except for P0D94-00? |
| | **YES →** Refer to:DTC Summary list(BMS). |
| **NO ↓** | |
| Step 3 | Check the circuit between slow charging and BMS. (Open circuit) |
|  | 1 Turn the ignition switch to OFF.<br>2 Disconnect the harness plug EB1005 of slow charging.<br>3 Disconnect the harness plug CH1000_1 of BMS.<br>4 Measure the resistance between the harness terminals of slow charging and CCS.<br>Measuring circuit: resistance between terminal 1 on plug EB1005 and terminal 7 on plug CH1000_1.<br>Measuring circuit: resistance between terminal 2 on plug EB1005 and terminal 32 on plug CH1000_1.<br>Measuring circuit: resistance between terminal 4 on plug EB1005 and terminal 9 on plug CH1000_1.<br>**Standard value: < 1Ω**<br>5 Check whether the result is normal or not? |
| | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | |
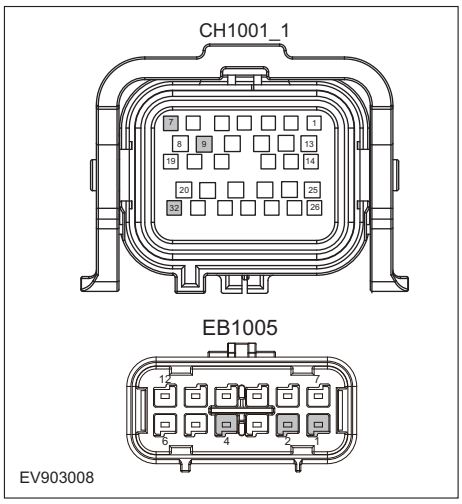
| Step 4 | Check the circuit of slow charging. (Short circuit) |
|---|---|
|  | 1 Turn the ignition switch to OFF.<br>2 Connect the harness plug CH1000_1 of BMS.<br>3 Measure the resistance between the harness terminal of slow charging and ground.<br>Measuring circuit: resistance between terminal 1 on plug EB1005 and ground.<br>Measuring circuit: resistance between terminal 2 on plug EB1005 and ground.<br>Measuring circuit: resistance between terminal 4 on plug EB1005 and ground.<br>**Standard value: ∞**<br>4 Measure the voltage between the harness terminal of slow charging and ground.<br>Measuring circuit: voltage between terminal 1 on plug EB1007 and ground.<br>Measuring circuit: voltage between terminal 2 on plug EB1007 and ground.<br>Measuring circuit: voltage between terminal 4 on plug EB1007 and ground.<br>**Standard value: ≈ 0V**<br>5 Check whether the result is normal or not? |
| | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | |
| Step 5 | Test whether BMS is norm. |
| | 1 Turn the ignition switch to OFF.<br>2 Disconnect and check the harness plug CH1000_1 of BMS.<br>3 Check and repair.<br>• Corrosion(install new adapting piece or terminal-cleaning module and pin).<br>• Pin damaged or bent-install new terminal/pin.<br>• Fly out of pins-install new pins as needed.<br>4 Reconnect the BMS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed.<br>5 Run the system and determine if the problem persists? |
| | **YES →** Replace the BMS. |
| **NO ↓** | |
| At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems. | |
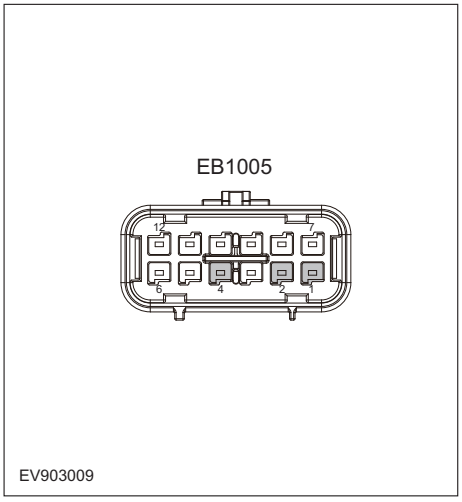
| **Next Step ↓** |
| --- |
| Diagnosis end. |