
U1007-00、U1001-00、U0111-87、U0074-88、U0111-87、U0112-87、U0140-87、U1009-00、U1013-00

Fault diagnosis code
U1007-00：DC charge equipment fault
U0111-87：Vehicle CAN BusOff fault
U0074-88：BMS internal CAN Busoff fault
U0111-87：Vehicle CAN Bus error
U0112-87：BMS internal CAN Bus error
U1001-00：BMS Charging CAN Busoff fault
U1009-00：Internal daisy chain no update fault
U1013-00：BMS stop charging abnormally
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • PEU Module
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
U1007-00
The CC sampling voltage is out of the normal voltage range
U0111-87
The BMS cannot receive all ACAN packets.
U0074-88
The SCAN bus is Busoff.
U0111-87
The BMS cannot receive all ACAN packets.
U0112-87
The BMS cannot receive all SCAN packets.
U1001-00
The TCAN bus is Busoff.
U1009-00
The daisy chain communication data between the sampling chips has not been updated continuously.
U1013-00
During the charging process, the BMS fault causes the charging exit.
To set the effect of a fault code condition


Description of circuit diagram
The device is connected to serial data circuit, which is used to monitor the communication situation of serial data during normal operation of vehicle. The devices will exchange the operation information and commands mutually. The device has programming information required to be exchanged on the serial data circuit. The receiver device will also monitor such information; in addition, there are some regular information indication transmitter devices available.


Circuit diagram

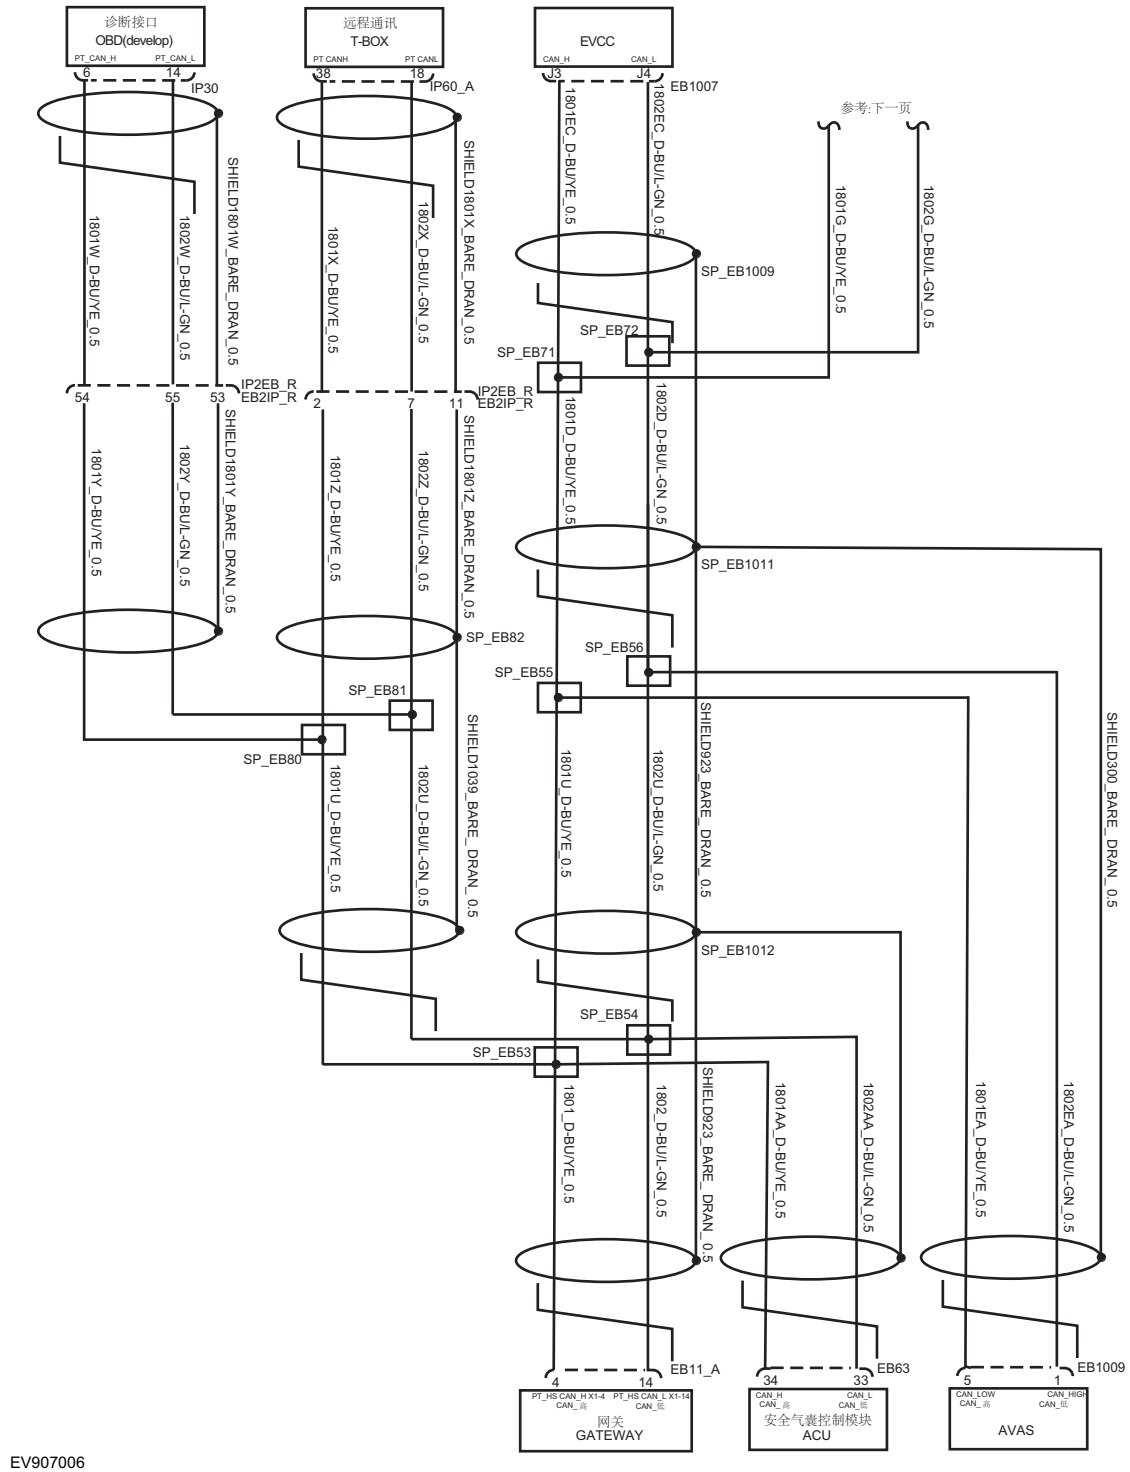


EV907006


Circuit diagram

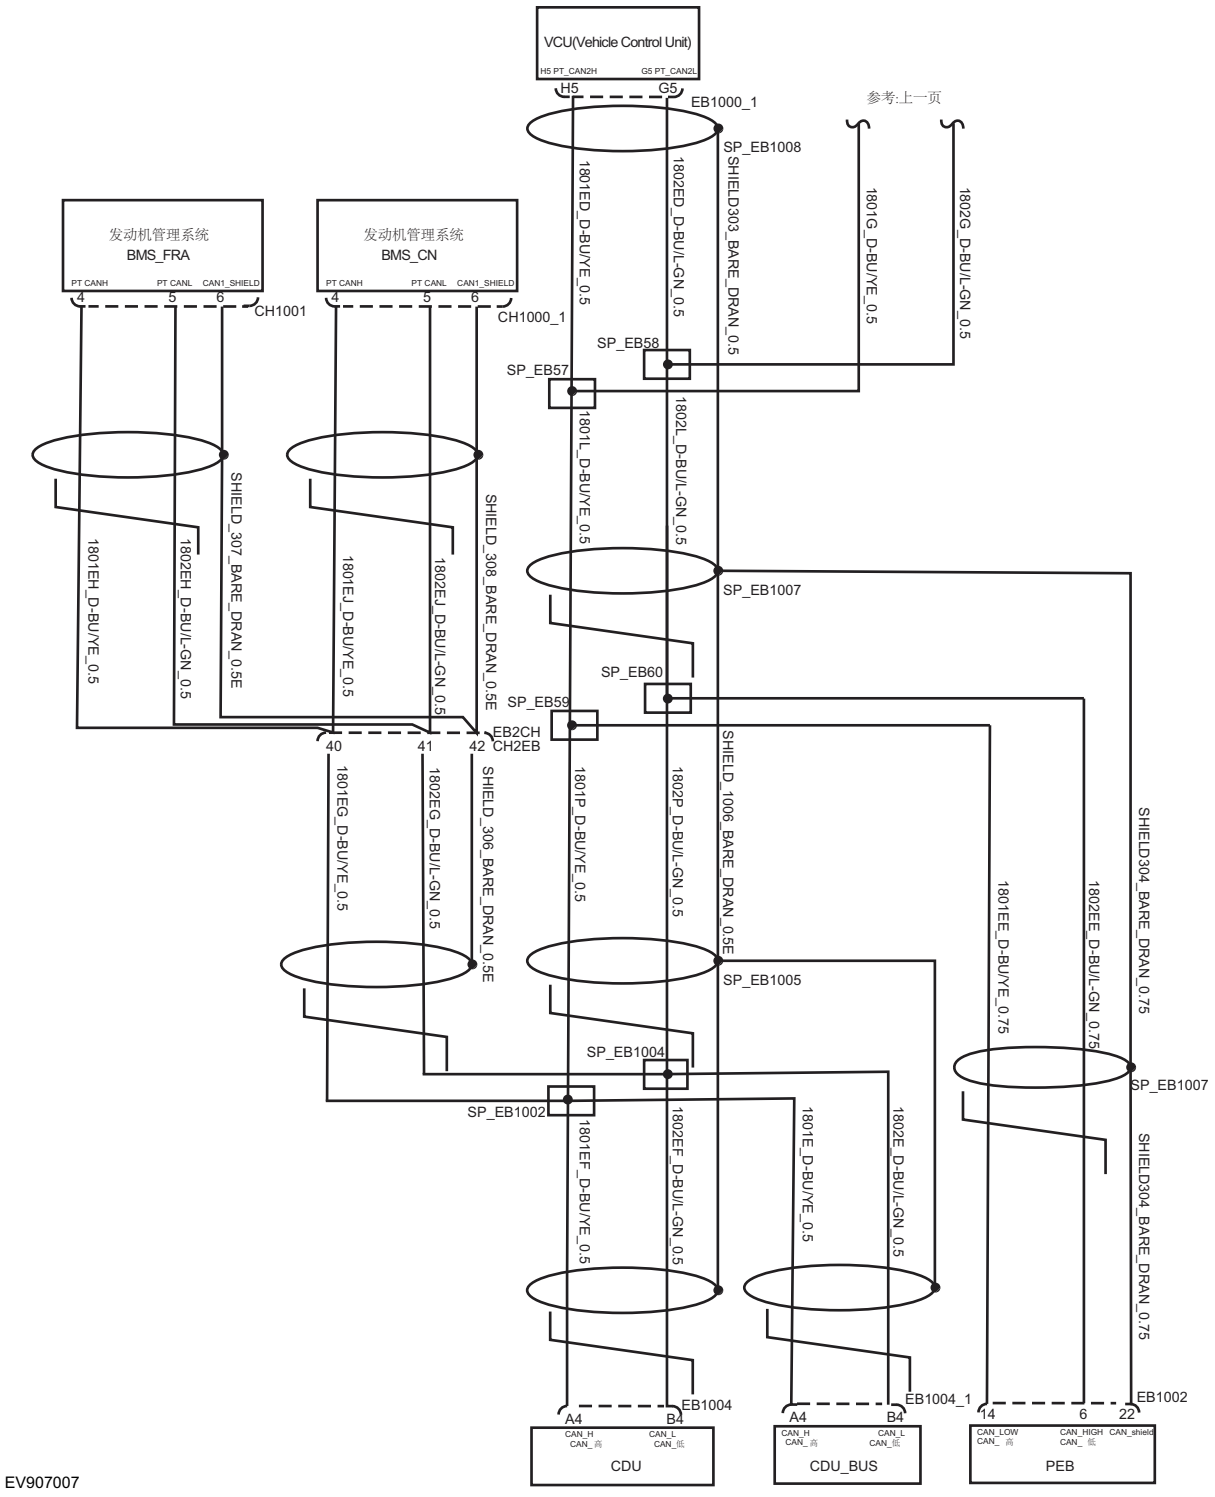

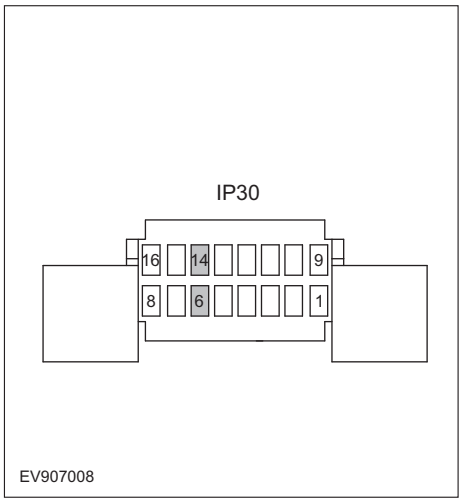Troubleshooting steps	
Step 1	General inspection.
	1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of CDU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the CDU with diagnostic apparatus. 4 If there is any fault code except for U1007-00, U0111-87, U0074-88、U0111-87、U0112-87、U1001-00、U1009-00、U1013-00?
	YES → Refer to:DTC Summary list(BMS).
NO ↓	
Step 3	Inspection for CAN communication network completeness.
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminals of diagnose interface. Measuring circuit: resistance between terminal 6 and terminal 14 on plug IP30. **Standard value: ≈ 60Ω** 3 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 4	Check the terminating resistance of GAW module and VCU resistor.

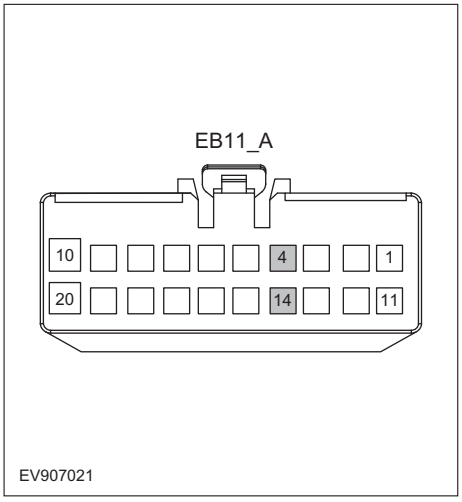

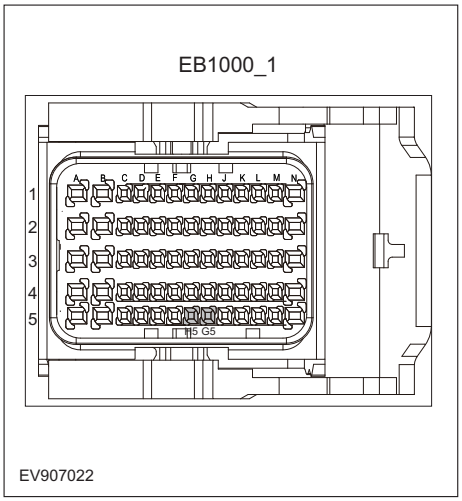

1 Turn the ignition switch to OFF.

2 Disconnect the harness plug EB11_A of network gateway module.

3 Measure the resistance between harness terminals on network gateway module.

Measuring circuit: the resistance between terminal 4 and 14 on plug EB11_A.

Standard value: 110~130Ω

4 Connect the harness plug EB11_A of network gateway module.

5 Disconnect the harness plug EB1000_1 of GAW module.

6 Measure the resistance between harness terminals on GAW module.

Measuring circuit: resistance between terminal H5 and terminal G5 on plug EB1000_1.

Standard value: 110~130Ω

7 Check whether the result is normal or not?

	NO → Repair or replace the faulted parts.

YES ↓

Step 5	Test whether BMS is norm.

1 Turn the ignition switch to OFF.

2 Disconnect and check the harness plug CH1000_1 of BMS.

3 Check and repair.

- Corrosion(install new adapting piece or terminal-cleaning module and pin).
- Pin damaged or bent-install new terminal/pin.
- Fly out of pins-install new pins as needed.

4 Reconnect the BMS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed.

5 Run the system and determine if the problem persists?

	YES → Replace the BMS.

NO ↓
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.
Next Step ↓
Diagnosis end.