

P0D94-00

Fault diagnosis code
P0D94-00：abnormal electronic lock
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • Electronic lock instrument fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P0D94-00
The electronic lock is abnormal (the drive signal and the feedback signal are inconsistent), the European standard is 0X401, bit14 and bit15 are 1: the gun lock detection position is abnormal and forwarded
To set the effect of a fault code condition
1. Electronic lock fails to lock 2. Electronic lock fails to unlock 3. The electronic lock is unlocked abnormally during charging
Description of circuit diagram


Circuit diagram

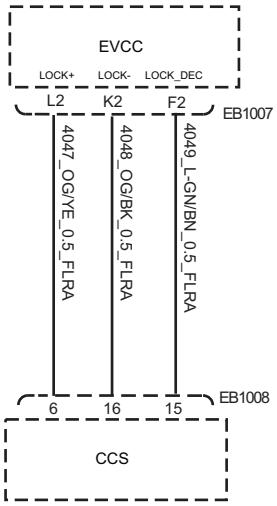


EB1007

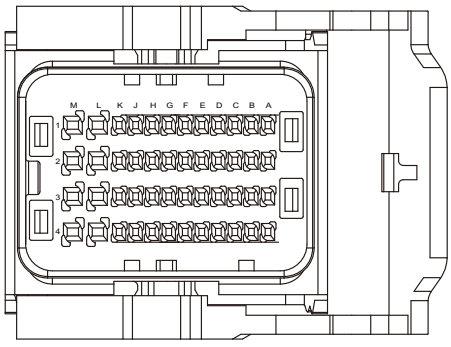


EB1008

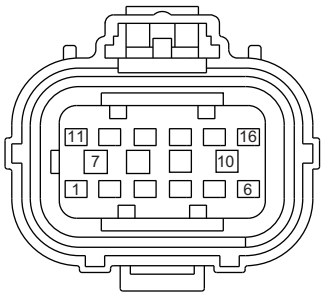

EV903007

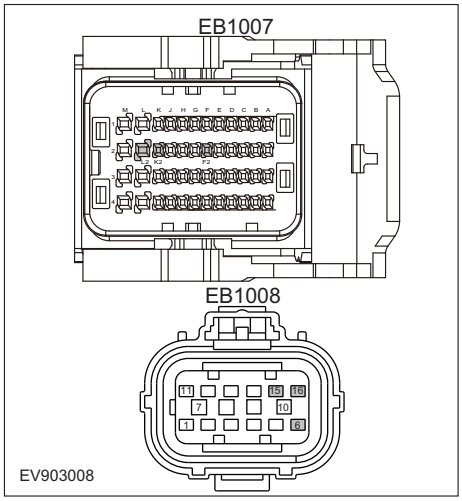Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of BMS for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the BMS with diagnostic apparatus. 4 Is there any other fault code except for P0D94-00?
		YES → Refer to:DTC Summary list(BMS).
NO ↓		
Step 3	Check the circuit between EVCC and CCS. (Open circuit)	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB1007 of EVCC. 3 Disconnect the harness plug EB1008 of CCS. 4 Measure the resistance between the harness terminals of EVCC and CCS. Measuring circuit: resistance between terminal F2 on plug EB1007 and terminal 15 on plug EB1008. Measuring circuit: resistance between terminal K2 on plug EB1007 and terminal 16 on plug EB1008. Measuring circuit: resistance between terminal L2 on plug EB1007 and terminal 6 on plug EB1008. **Standard value: < 1Ω** 5 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

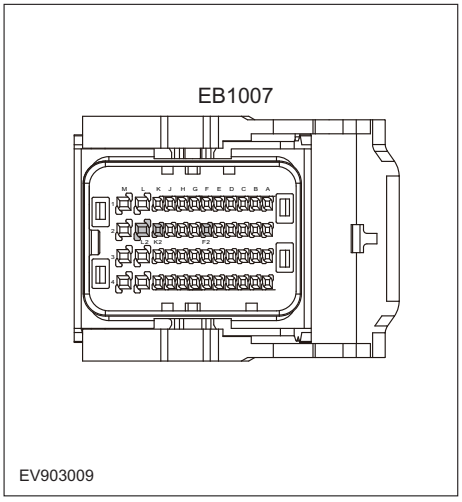Step 4	Check EVCC circuit. (Short circuit)
	1 Turn the ignition switch to OFF. 2 Connect the harness plug EB1008 of CCS. 3 Measure the resistance between the harness terminal of EVCC and ground. Measuring circuit: resistance between terminal F2 on plug EB1007 and ground. Measuring circuit: resistance between terminal K2 on plug EB1007 and ground. Measuring circuit: resistance between terminal L2 on plug EB1007 and ground. **Standard value: ∞** 4 Measure the voltage between the harness terminal of BMS and ground. Measuring circuit: voltage between terminal F2 on plug EB1007 and ground. Measuring circuit: voltage between terminal K2 on plug EB1007 and ground. Measuring circuit: voltage between terminal L2 on plug EB1007 and ground. **Standard value: ≈ 0V** 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Test whether BMS is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug CH1001 of BMS. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the BMS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the BMS.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	

Next Step ↓
Diagnosis end.