

P1B2E-00、P1B2F-00、P1B31-00、P1B32-00

Fault diagnosis code
P1B2E-00：The positive temperature sensor of the fast charging gun is short-circuited or open-circuited to the power supply
P1B2F-00：The positive temperature sensor of the fast charging gun is shorted to ground
P1B31-00：The negative temperature sensor of the fast charging gun is short circuit or open circuit to the power supply
P1B32-00：The negative temperature sensor of the fast charging gun is shorted to ground
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • Temperature sensor fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1B2E-00
The positive temperature sensor of the fast charging gun is short-circuited or open-circuited to the power supply, and the European standard does not need to do this fault.
P1B2F-00
The positive temperature sensor of the fast charging gun is shorted to ground, and the European standard does not need to do this fault.
P1B31-00
The negative temperature sensor of the fast charging gun is short-circuited or open-circuited to the power supply, and the European standard does not need to do this fault.
P1B32-00
The negative temperature sensor of the fast charging gun is short-circuited to the ground, and the European standard does not need to do this fault.
To set the effect of a fault code condition
The temperature sensor of the charging socket is faulty, and the collected temperature value is invalid
Description of circuit diagram


Circuit diagram

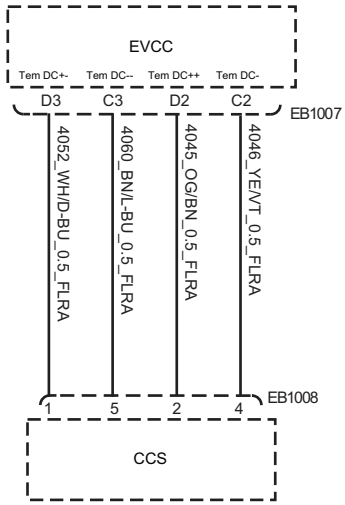


EB1007

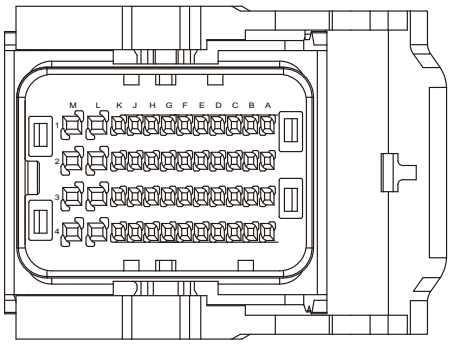


EB1008

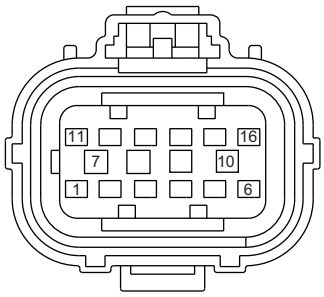

EV903010

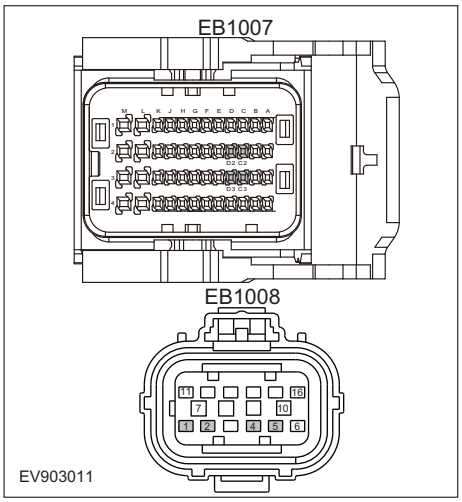Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of BMS for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the BMS with diagnostic apparatus. 4 Is there any other fault code except for P1B2E-00、P1B2F-00、P1B31-00、P1B32-00?
		YES → Refer to:DTC Summary list(BMS).
NO ↓		
Step 3	Check the circuit between EVCC and CCS. (Open circuit)	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB1007 of EVCC. 3 Disconnect the harness plug EB1008 of CCS. 4 Measure the resistance between the harness terminals of EVCC and CCS. Measuring circuit: resistance between terminal C2 on plug EB1007 and terminal 4 on plug EB1008. Measuring circuit: resistance between terminal C3 on plug EB1007 and terminal 5 on plug EB1008. Measuring circuit: resistance between terminal D2 on plug EB1007 and terminal 2 on plug EB1008. Measuring circuit: resistance between terminal D3 on plug EB1007 and terminal 1 on plug EB1008. **Standard value: < 1Ω** 5 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

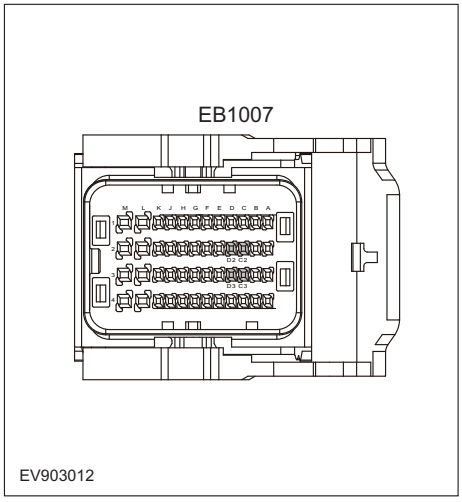Step 4	Check EVCC circuit. (Short circuit)
	1 Turn the ignition switch to OFF. 2 Connect the harness plug EB1008 of CCS. 3 Measure the resistance between the harness terminal of EVCC and ground. Measuring circuit: resistance between terminal C2 on plug EB1007 and ground. Measuring circuit: resistance between terminal C3 on plug EB1007 and ground. Measuring circuit: resistance between terminal D2 on plug EB1007 and ground. Measuring circuit: resistance between terminal D3 on plug EB1007 and ground. **Standard value: ∞** 4 Measure the voltage between the harness terminal of BMS and ground. Measuring circuit: voltage between terminal C2 on plug EB1007 and ground. Measuring circuit: voltage between terminal C3 on plug EB1007 and ground. Measuring circuit: voltage between terminal D2 on plug EB1007 and ground. Measuring circuit: voltage between terminal D3 on plug EB1007 and ground. **Standard value: ≈ 0V** 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Test whether BMS is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug CH1001 of BMS. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the BMS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the BMS.

NO ↓
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.
Next Step ↓
Diagnosis end.