

P1B43-00

Fault diagnosis code
P1B43-00：exist Crash Signal
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • BMS fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1B43-00
The collision signal is abnormal (any fault of software and hardware is triggered, and both software and hardware are filtered 3 times)
To set the effect of a fault code condition
Enable emergency mode
Description of circuit diagram


Circuit diagram

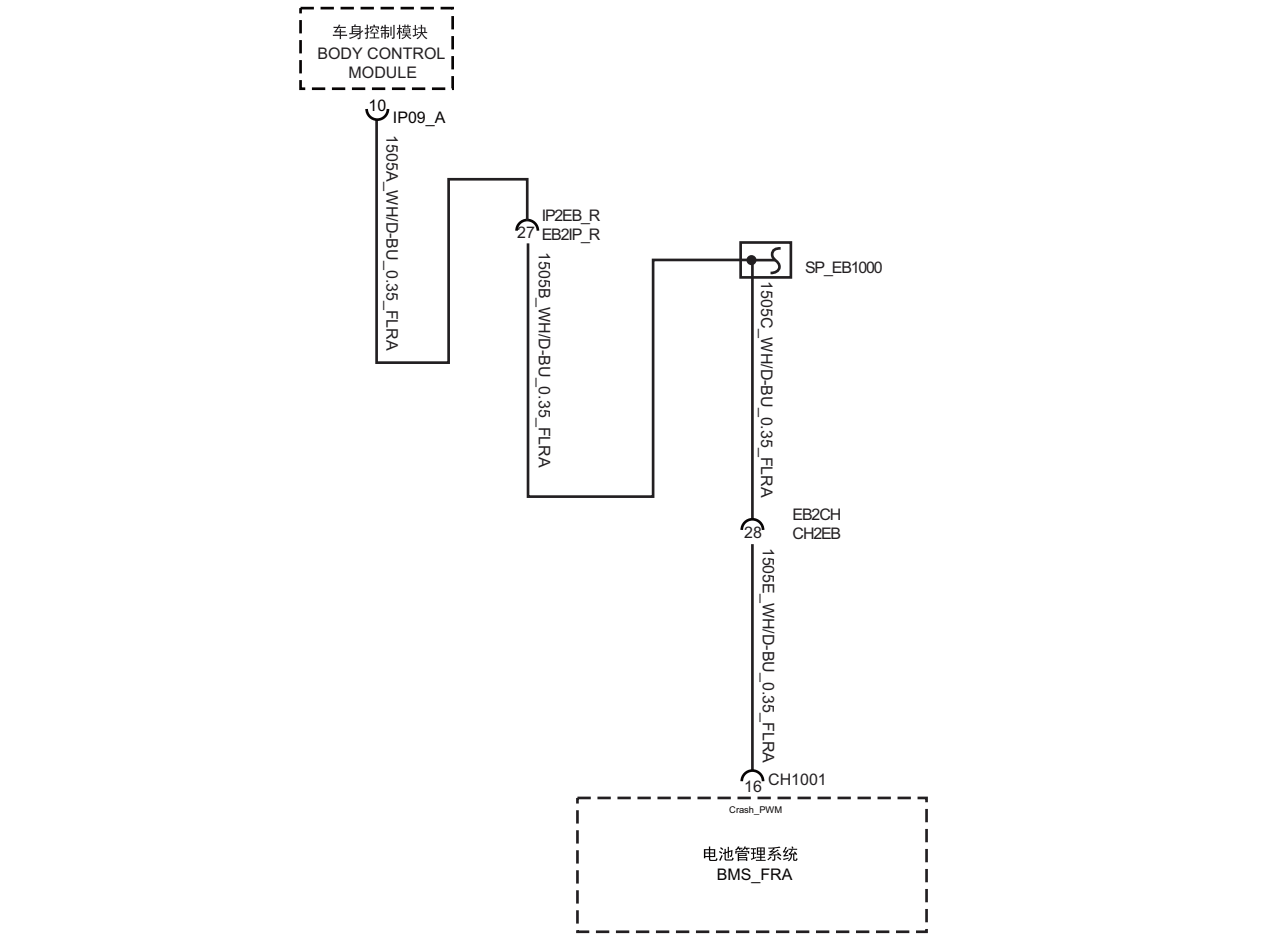


CH1001

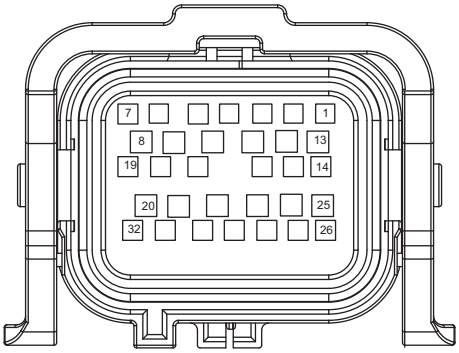


IP09_A

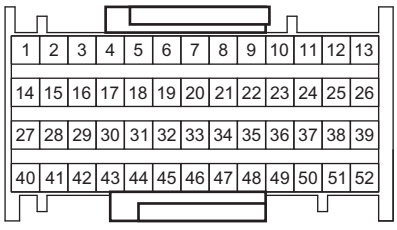

EV903016

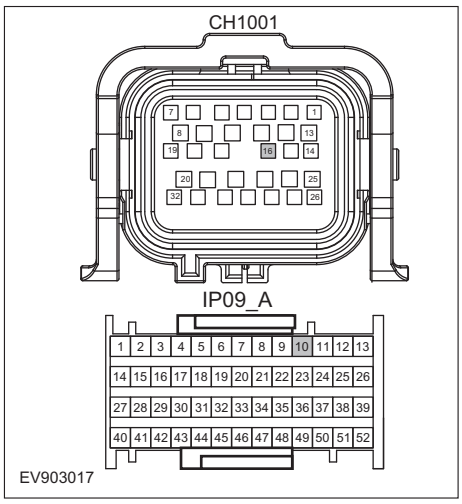Troubleshooting steps	
Step 1	General inspection.
	1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of BMS for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the BMS with diagnostic apparatus. 4 Is there any other fault code except for P1B43-00?
	YES → Refer to:DTC Summary list(BMS).
NO ↓	
Step 3	Check the circuit between BMS and BCM. (Open circuit)
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug CH1001 of BMS. 3 Disconnect the harness plug IP09_A of BCM. 4 Measure the resistance between the harness terminals of BMS and BCM. Measuring circuit: resistance between terminal 16 on plug CH1001 and terminal 10 on plug IP09_A. **Standard value: < 1Ω** 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

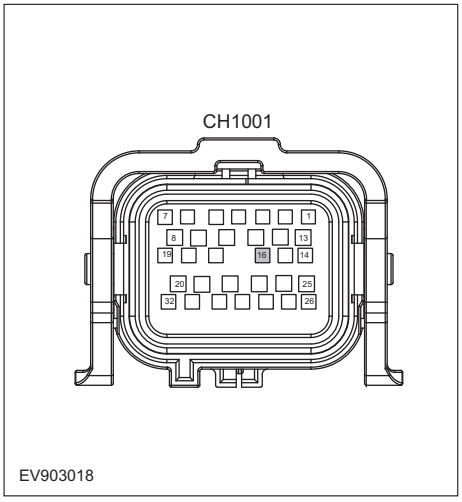Step 4	Check BMS circuit. (Short circuit)
	1 Turn the ignition switch to OFF. 2 Connect the harness plug IP09_A of body control module. 3 Measure the resistance between the harness terminal of BMS and ground. Measuring circuit: resistance between terminal 16 on plug CH1001 and ground. **Standard value: ∞** 4 Measure the voltage between the harness terminal of BCM and ground. Measuring circuit: voltage between terminal 16 on plug CH1001 and ground. **Standard value: ≈ 0V** 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Test whether BMS is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug CH1001 of BMS. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the BMS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the BMS.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	
Diagnosis end.	