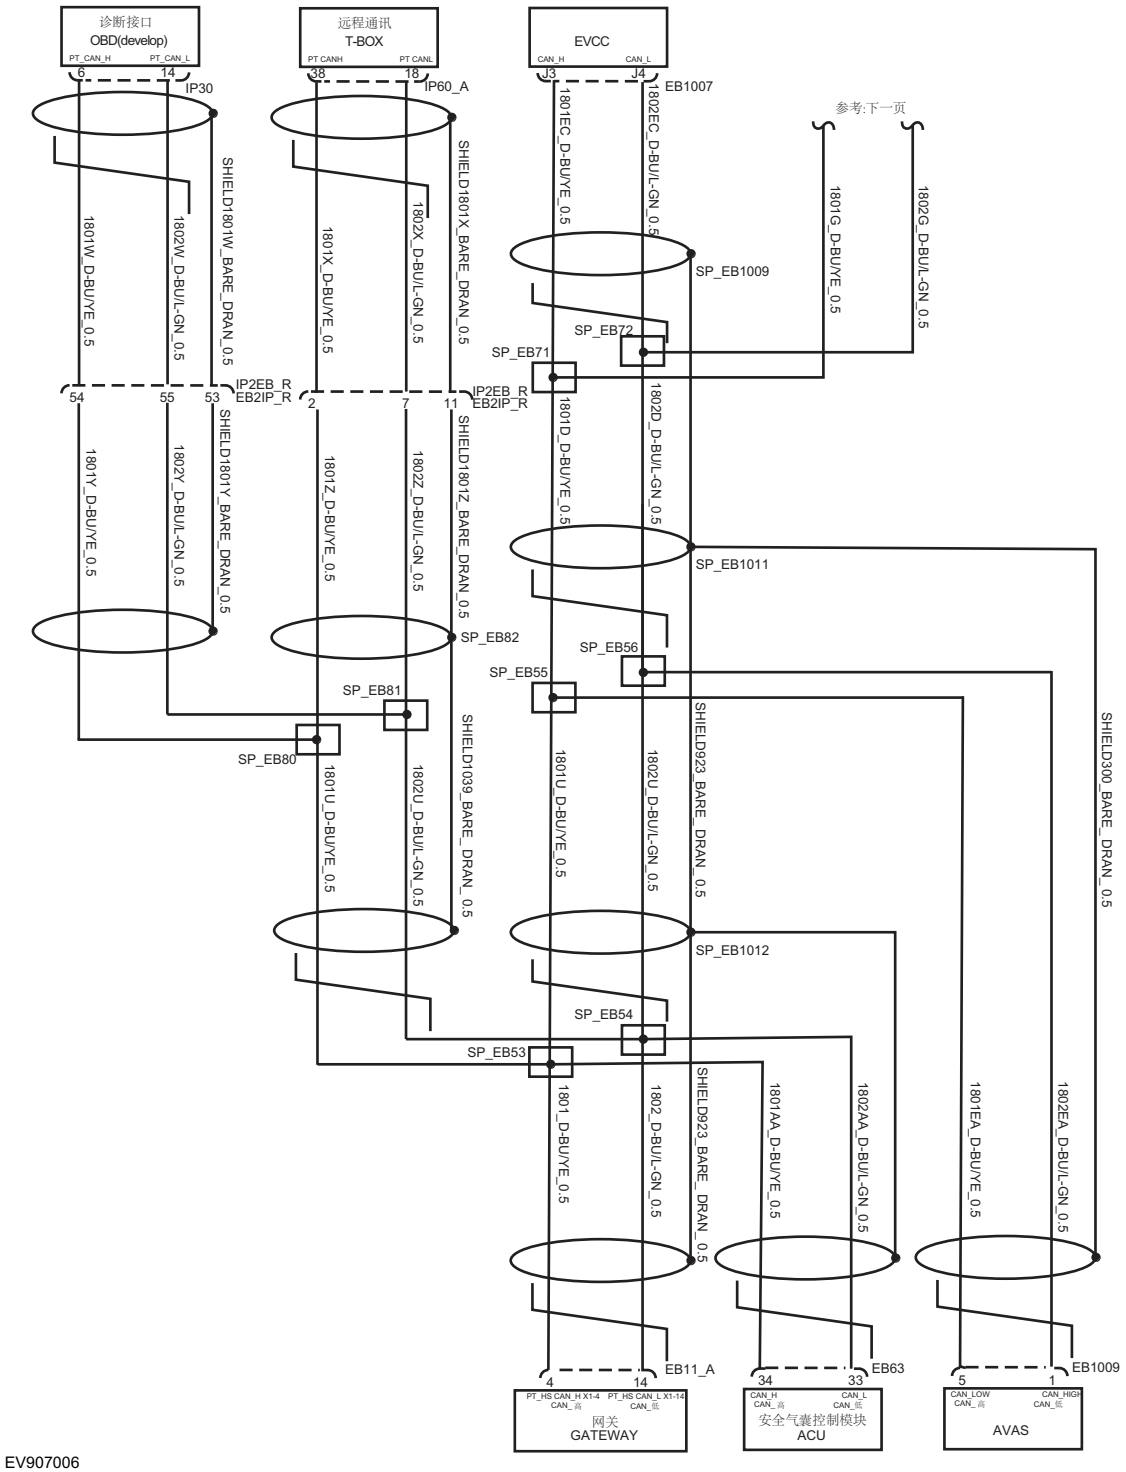
U0073-88、U0111-87、U0151-87、UC19B-87、UD000-00、UD001-00、UD002-00、UD003-00、UD004-00、UD005-00、C0111-96、C0112-96、UD006-00、C1001-04、UD007-00、UD008-00、UD009-00

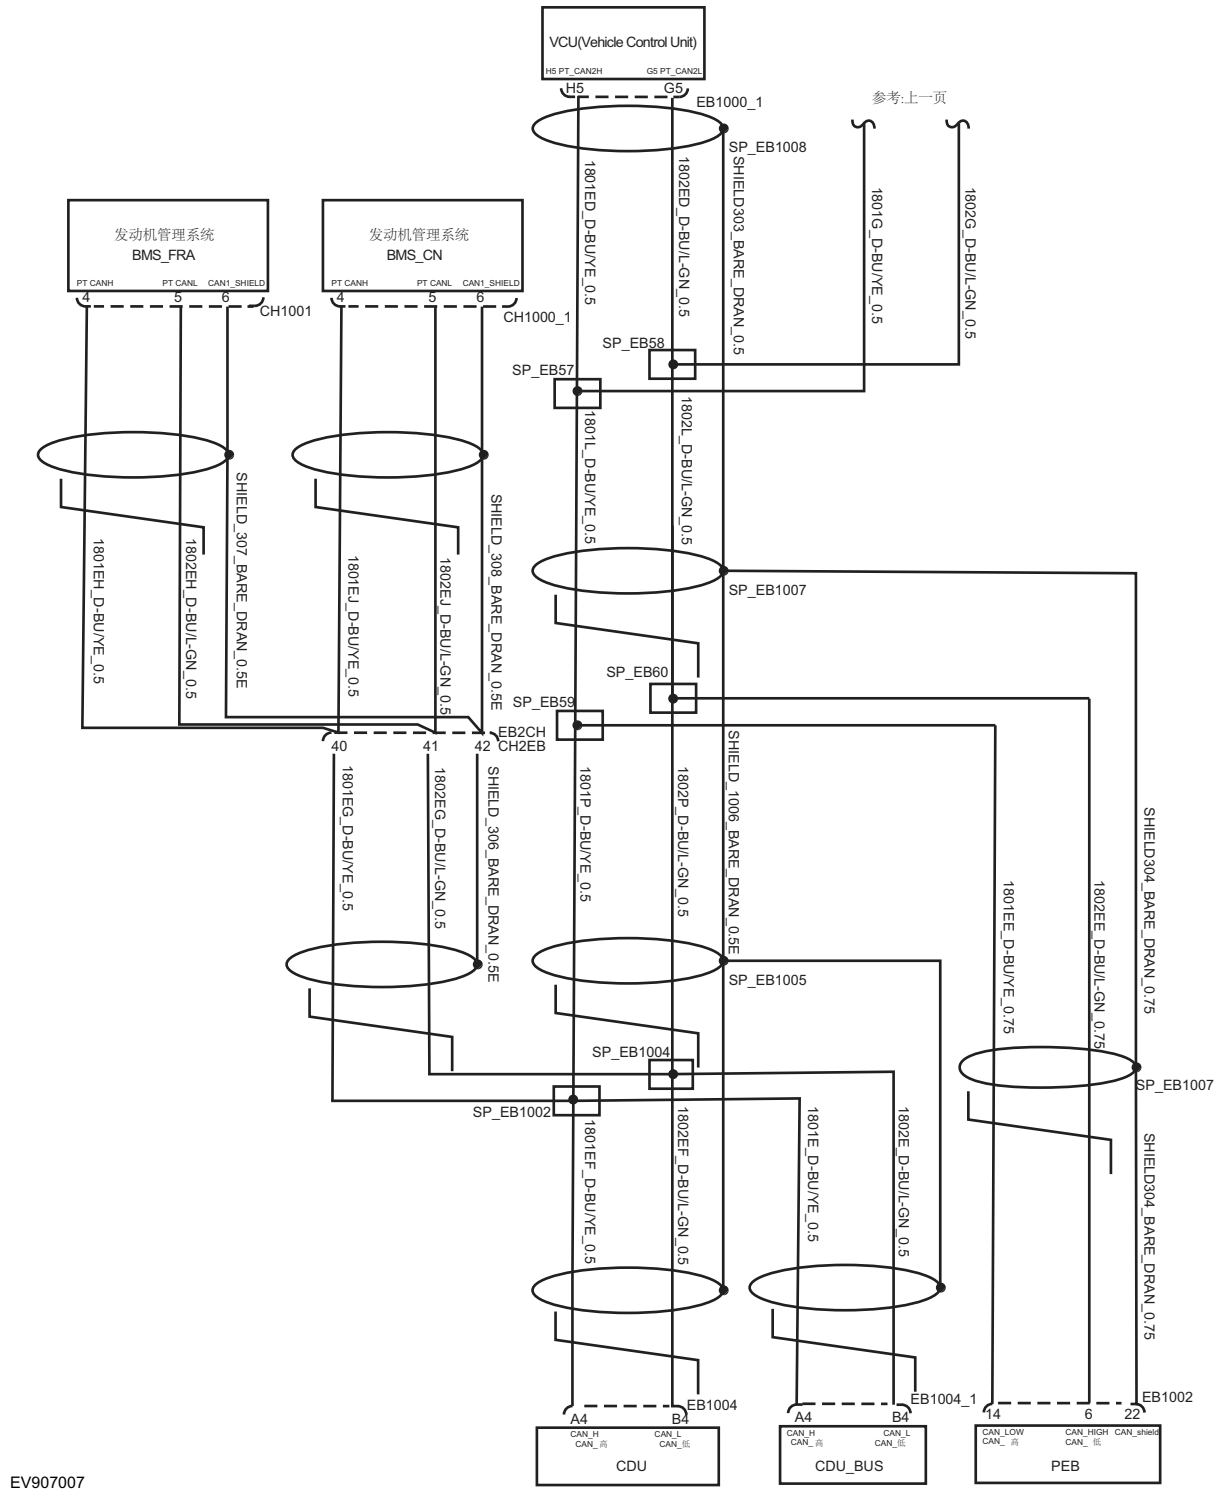
Fault diagnosis code
U0073-88：power CAN Busoff
U0111-87：BMSandVCUCommunication timed out
U0151-87：BMSandSRSCommunication timed out
UC19B-87：BMSandOBCCommunication timed out
UD000-00：BMSReceive charging pile timeout messages
UD001-00：DC chargingCAN Busoff
UD002-00：BMSReceiving charging pileCRM00time out
UD003-00：BMSReceiving charging pileCRMAAtime out
UD004-00：BMSReceiving charging pileCTSCMLtime out
UD005-00：BMSReceiving charging pileCROtime out
UD006-00：BMSReceiving charging pileCCStime out
UD007-00：BMSReceiving charging pileCSTtime out
UD008-00：BMSReceiving charging pileCSDtime out
UD009-00：Internal communication failure
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • PEU Module
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
U0073-88
power CAN bus off
U0111-87
The BMS cannot receive all VCU packets for at least 10 periods.
U0151-87
The BMS cannot receive all SRS packets for at least 10 periods.
UC19B-87
The BMS cannot receive all OBC packets for at least 10 periods.
UD000-00
BMS receive charging pile timeout messages

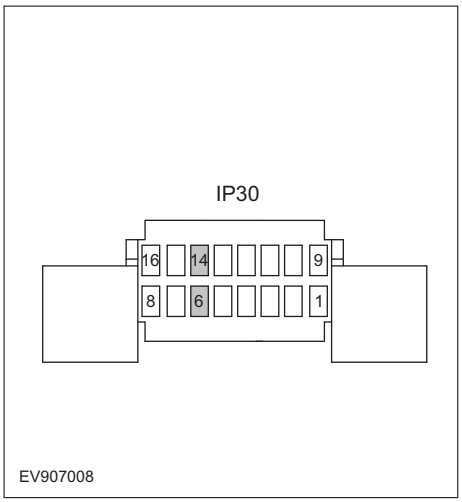
UD001-00
CAN Bus off
UD002-00
During charging, the BMS received CRMAA packets from the charging pile timed out
UD003-00
During charging, the BMS received CRMAA packets from the charging pile timed out
UD004-00
During charging, the BMS received CSCML packets from the charging pile timed out
UD005-00
During charging, the BMS received CRO packets from the charging pile timed out
UD006-00
During charging, the BMS received CCS packets from the charging pile timed out
UD007-00
During charging, the BMS received CST packets from the charging pile timed out
UD008-00
During charging, the BMS received CSD packets from the charging pile timed out
UD009-00
There is a communication failure in the internal CAN (BMU1\BMU2\BMU3\HVU\Hall), and the data before the disconnection is maintained in the high voltage state.
To set the effect of a fault code condition
Description of circuit diagram
The device is connected to serial data circuit, which is used to monitor the communication situation of serial data during normal operation of vehicle. The devices will exchange the operation information and commands mutually. The device has programming information required to be exchanged on the serial data circuit. The receiver device will also monitor such information; in addition, there are some regular information indication transmitter devices available.

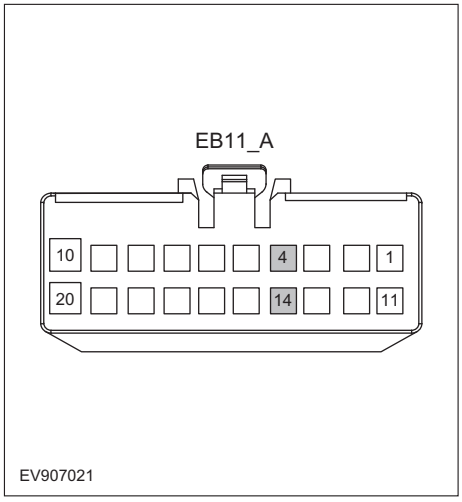
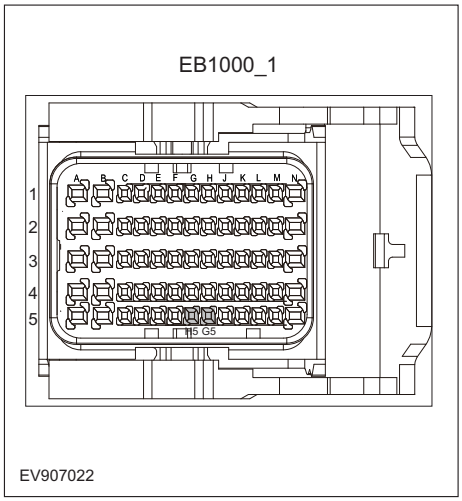
Circuit diagram



Circuit diagram



<table>
<tr><td colspan="3">Troubleshooting steps</td></tr>
<tr><td>Step 1</td><td colspan="2">General inspection.</td></tr>
<tr><td colspan="2"></td><td>1 Check the fuse for damage.
2 Check battery capacity.
3 Check the harness plug of CDU for damage, poor contact, aging and looseness.
4 Check whether the result is normal or not?</td></tr>
<tr><td colspan="2"></td><td>NO → Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">YES ↓</td></tr>
<tr><td>Step 2</td><td colspan="2">Check fault codes.</td></tr>
<tr><td colspan="2"></td><td>1 Connect the fault diagnosis instrument to the diagnosis interface.
2 Turn the ignition switch to ON position.
3 Diagnose the CDU with diagnostic apparatus.
4 Is there any other fault code except for U0073-88、U0111-87、 U0151-87、 UC19B-87、 UD000-00、 UD001-00、UD002-00、UD003-00、UD004-00、UD005-00、UD006-00、 UD007-00、 C0062-08、 UD008-00、 UD009-00?</td></tr>
<tr><td colspan="2"></td><td>YES → Refer to:DTC Summary list(BMS).</td></tr>
<tr><td colspan="3">NO ↓</td></tr>
<tr><td>Step 3</td><td colspan="2">Inspection for CAN communication network completeness.</td></tr>
<tr><td colspan="2"> 
</td><td>1 Turn the ignition switch to OFF.
2 Measure the resistance between the harness terminals of diagnose interface.
Measuring circuit: resistance between terminal 6 and terminal 14 on plug IP30.
Standard value: ≈ 60Ω
3 Check whether the result is normal or not?</td></tr>
<tr><td colspan="2"></td><td>NO → Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">YES ↓</td></tr>
</table>

Step 4	Check the terminating resistance of GAW module and VCU resistor.
 	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB11_A of network gateway module. 3 Measure the resistance between harness terminals on network gateway module. Measuring circuit: the resistance between terminal 4 and 14 on plug EB11_A. **Standard value: 110~130Ω** 4 Connect the harness plug EB11_A of network gateway module. 5 Disconnect the harness plug EB1000_1 of GAW module. 6 Measure the resistance between harness terminals on GAW module. Measuring circuit: resistance between terminal H5 and terminal G5 on plug EB1000_1. **Standard value: 110~130Ω** 7 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 5	Test whether BMS is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug CH1001 of BMS. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the BMS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the BMS.
NO ↓	

At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.
Next Step ↓
Diagnosis end.