

P1B19-00、P1B1A-00、P1B1C-00、P1B1D-00


Fault diagnosis code
P1B19-00：The positive temperature sensor of the slow charging gun is short-circuited or open-circuited to the power supply
P1B1A-00：The positive temperature sensor of the slow charging gun is shorted to ground
P1B1C-00：The negative temperature sensor of the slow charging gun is short-circuited or open-circuited to the power supply
P1B1D-00：Slow charge gun negative temperature sensor short circuit to ground
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • Temperature sensor fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1B19-00
The positive temperature sensor of the slow charging gun is short-circuited or open-circuited to the power supply
P1B1A-00
The positive temperature sensor of the slow charging gun is shorted to ground
P1B1C-00
The negative temperature sensor of the slow charging gun is short-circuited or open-circuited to the power supply
P1B1D-00
Slow charge gun negative temperature sensor short circuit to ground
To set the effect of a fault code condition
The temperature sensor of the charging socket is faulty, and the collected temperature value is invalid
Description of circuit diagram


Circuit diagram

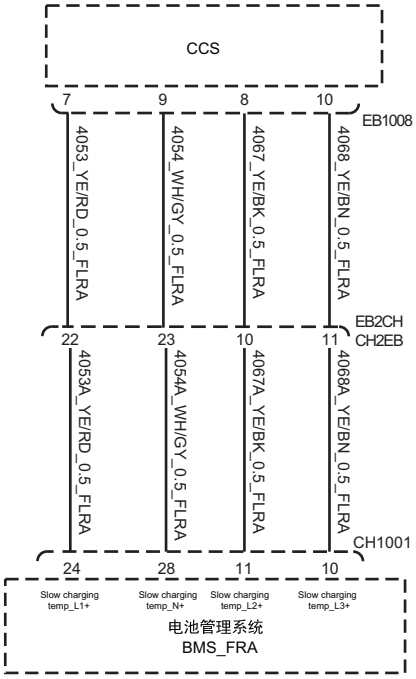

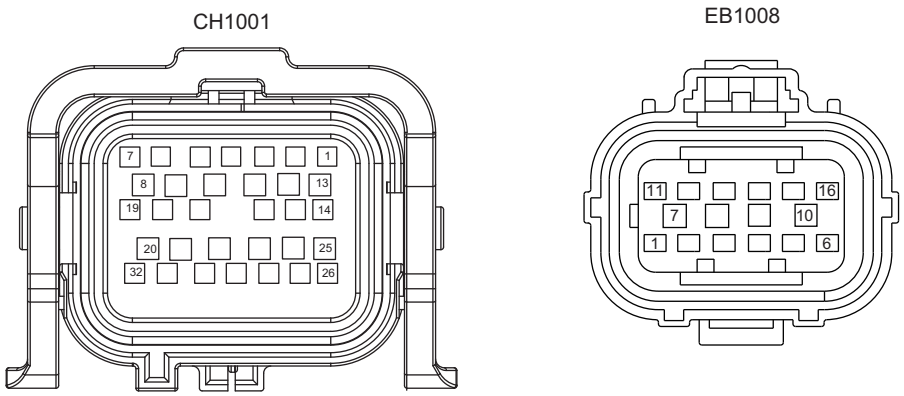

EV903013

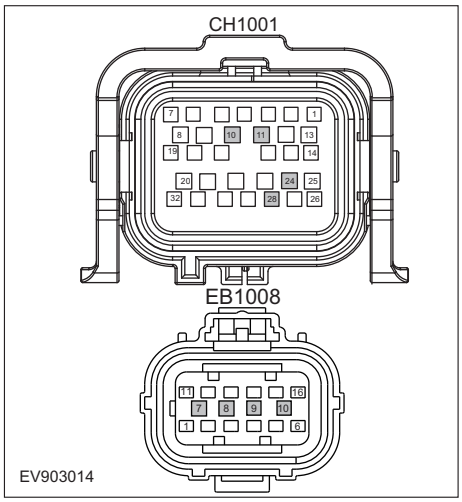Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of BMS for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO ➞ Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the BMS with diagnostic apparatus. 4 Is there any other fault code except for P1B19-00、P1B1A-00、P1B1C-00、P1B1D-00?
		YES ➞ Refer to:DTC Summary list(BMS).
NO ↓		
Step 3	Check the circuit between BMS and CCS. (Open circuit)	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug CH1001 of BMS. 3 Disconnect the harness plug EB1008 of CCS. 4 Measure the resistance between the harness terminals of BMS and CCS. Measuring circuit: resistance between terminal 10 on plug CH1001 and terminal 10 on plug EB1008. Measuring circuit: resistance between terminal 11 on plug CH1001 and terminal 8 on plug EB1008. Measuring circuit: resistance between terminal 24 on plug CH1001 and terminal 7 on plug EB1008. Measuring circuit: resistance between terminal 28 on plug CH1001 and terminal 9 on plug EB1008. **Standard value: < 1Ω** 5 Check whether the result is normal or not?
		NO ➞ Repair or replace the faulted parts.
YES ↓		

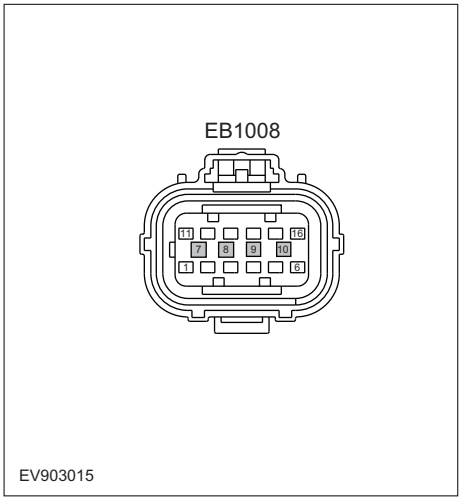Step 4	Check CCS circuit. (Short circuit)
	1 Turn the ignition switch to OFF. 2 Connect the harness plug CH1001 of BMS. 3 Measure the resistance between the harness terminal of CCS and ground. Measuring circuit: resistance between terminal 7 on plug EB1008 and ground. Measuring circuit: resistance between terminal 8 on plug EB1008 and ground. Measuring circuit: resistance between terminal 9 on plug EB1008 and ground. Measuring circuit: resistance between terminal 10 on plug EB1008 and ground. **Standard value: ∞** 4 Measure the voltage between the harness terminal of CCS and ground. Measuring circuit: voltage between terminal 7 on plug EB1008 and ground. Measuring circuit: voltage between terminal 8 on plug EB1008 and ground. Measuring circuit: voltage between terminal 9 on plug EB1008 and ground. Measuring circuit: voltage between terminal 10 on plug EB1008 and ground. **Standard value: ≈ 0V** 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Test whether BMS is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug CH1001 of BMS. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the BMS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the BMS.

NO ↓
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.
Next Step ↓
Diagnosis end.