
## P1F05-00

| |
|---|
| **Fault diagnosis code** |
| P1F05-00：Chamber temperature overtemperature |
| **Detection tools** |
| 1 Multimeter and diagnostic apparatus |
| **Possible causes** |
| • Circuit,terminal and adapting piece fault<br>• Cooling system fault<br>• The Chamber temperature of CDU fault |
| **Conditions for fault code operation** |
| Turn the ignition switch to ON position. |
| **Conditions for fault code setting** |
| P1F05-00 |
| |
| **To set the effect of a fault code condition** |
| |
| **Description of circuit diagram** |
| |

## Circuit diagram

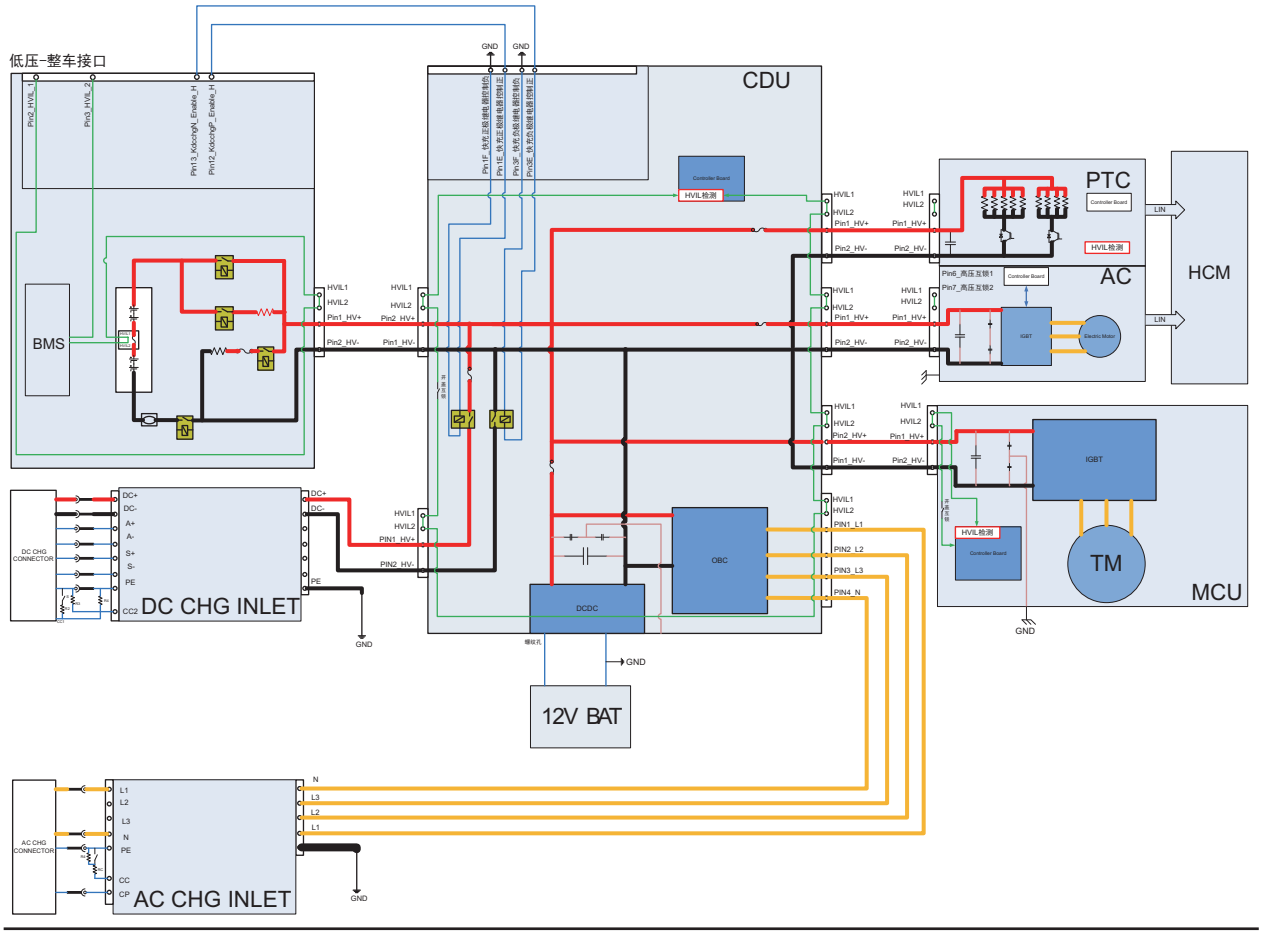


EV904014

| **Troubleshooting steps** | | |
|---|---|---|
| Step 1 | General inspection. | |
| | | 1 Check the fuse for damage.<br>2 Check battery capacity.<br>3 Check the harness plug of CDU for damage, poor contact, aging and looseness.<br>4 Check whether the result is normal or not? |
| | | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | | |
| Step 2 | Check fault codes. | |
| | | 1 Connect the fault diagnosis instrument to the diagnosis interface.<br>2 Turn the ignition switch to ON position.<br>3 Diagnose the GAW module with diagnostic apparatus.<br>4 Is there any other fault code except for P1F05-00? |
| | | **YES →** Refer to:DTC Summary list(CDU). |
| **NO ↓** | | |
| Step 3 | Check cooling system. | |
| | | 1 Check whether there is leakage or poor heat dissipation in the cooling system.<br>2 Check whether the result is normal or not? |
| | | **NO →** Repair the cooling system. |
| **YES ↓** | | |
| Step 4 | Check the connecting cable of CDU. | |
| | | 1 Turn the ignition switch to OFF.<br>2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual.<br>3 Disconnect the harness plug battery pack high voltage.<br>4 Disconnect the high voltage harness plug of CDU.<br>5 Check whether the CDU connection cable is rotten, damaged, and water enters.<br>6 Check whether the result is normal or not? |
| | | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | | |

| | | |
|---|---|---|
| Step 5 | Check CDU internal circuit. | |
| | | 1 Turn the ignition switch to OFF.<br>2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual.<br>3 Open the CDU end cover.<br>4 Check CDU internal circuit.<br>5 Check whether the result is normal or not? |
| | | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | | |
| Step 6 | Test whether CDU is norm. | |
| | | 1 Turn the ignition switch to OFF.<br>2 Disconnect and check the harness plug EB1004、BT1001、BTN_1001、BTN_1002 of CDU.<br>3 Check and repair.<br>• Corrosion(install new adapting piece or terminal-cleaning module and pin).<br>• Pin damaged or bent-install new terminal/pin.<br>4 Fly out of pins-install new pins as needed.<br>5 Reconnect the CDU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed.<br>6 Run the system and determine if the problem persists? |
| | | **YES →** Change the CDU Module |
| **NO ↓** | | |
| At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems. | | |
| **Next Step ↓** | | |
| Diagnosis end. | | |