

P1AE1-00

Fault diagnosis code
P1AE1-00：DCDC temperature 2 over temperature (synchronous rectifier)
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • Cooling system fault • The DCDC of CDU fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1AE1-00
To set the effect of a fault code condition
Description of circuit diagram

Circuit diagram

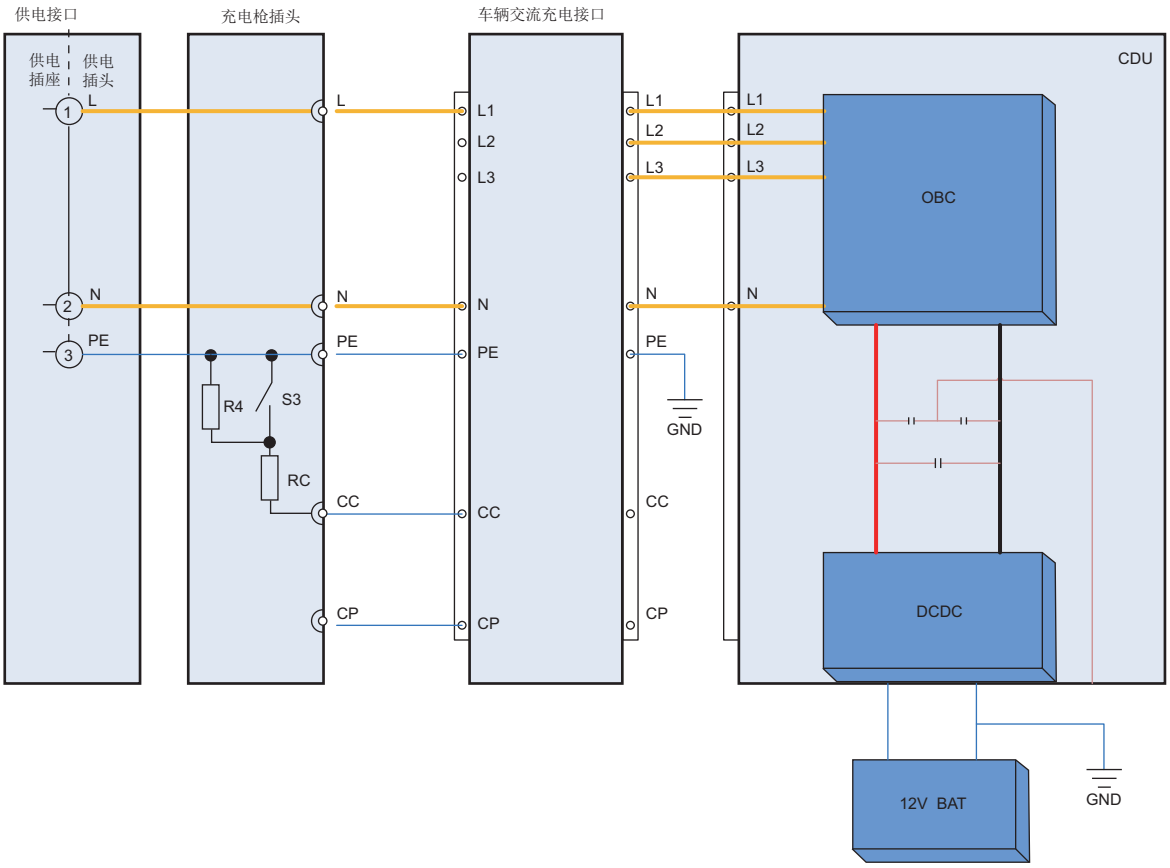

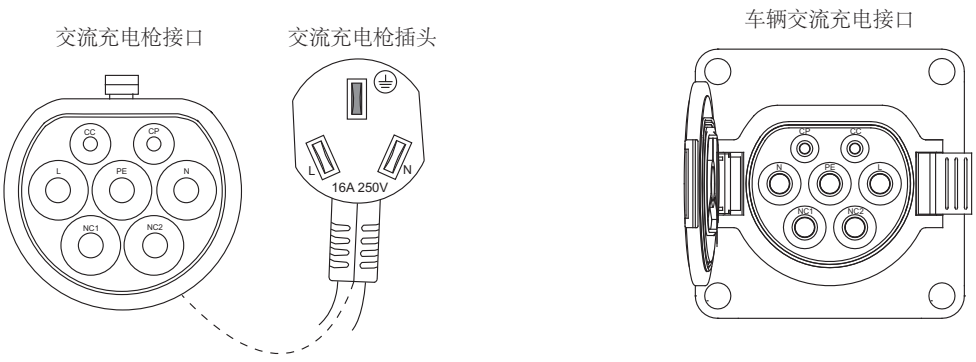

EV904015

Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of CDU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the GAW module with diagnostic apparatus. 4 Is there any other fault code except for P1AE1-00?
		YES → Refer to:DTC Summary list(CDU).
NO ↓		
Step 3	Check cooling system.	
		1 Check whether there is leakage or poor heat dissipation in the cooling system. 2 Check whether the result is normal or not?
		NO → Repair the cooling system.
YES ↓		
Step 4	Check the connecting cable of CDU.	
		1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Disconnect the harness plug battery pack high voltage. 4 Disconnect the high voltage harness plug of CDU. 5 Check whether the CDU connection cable is rotten, damaged, and water enters. 6 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 5	Check CDU internal circuit.	
		1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Open the CDU end cover. 4 Check CDU internal circuit. 5 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 6	Test whether CDU is norm.	
		1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1004、BT1001、BTN_1001、BTN_1002 of CDU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the CDU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
		YES → Change the CDU Module
NO ↓		
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.		
Next Step ↓		
Diagnosis end.		