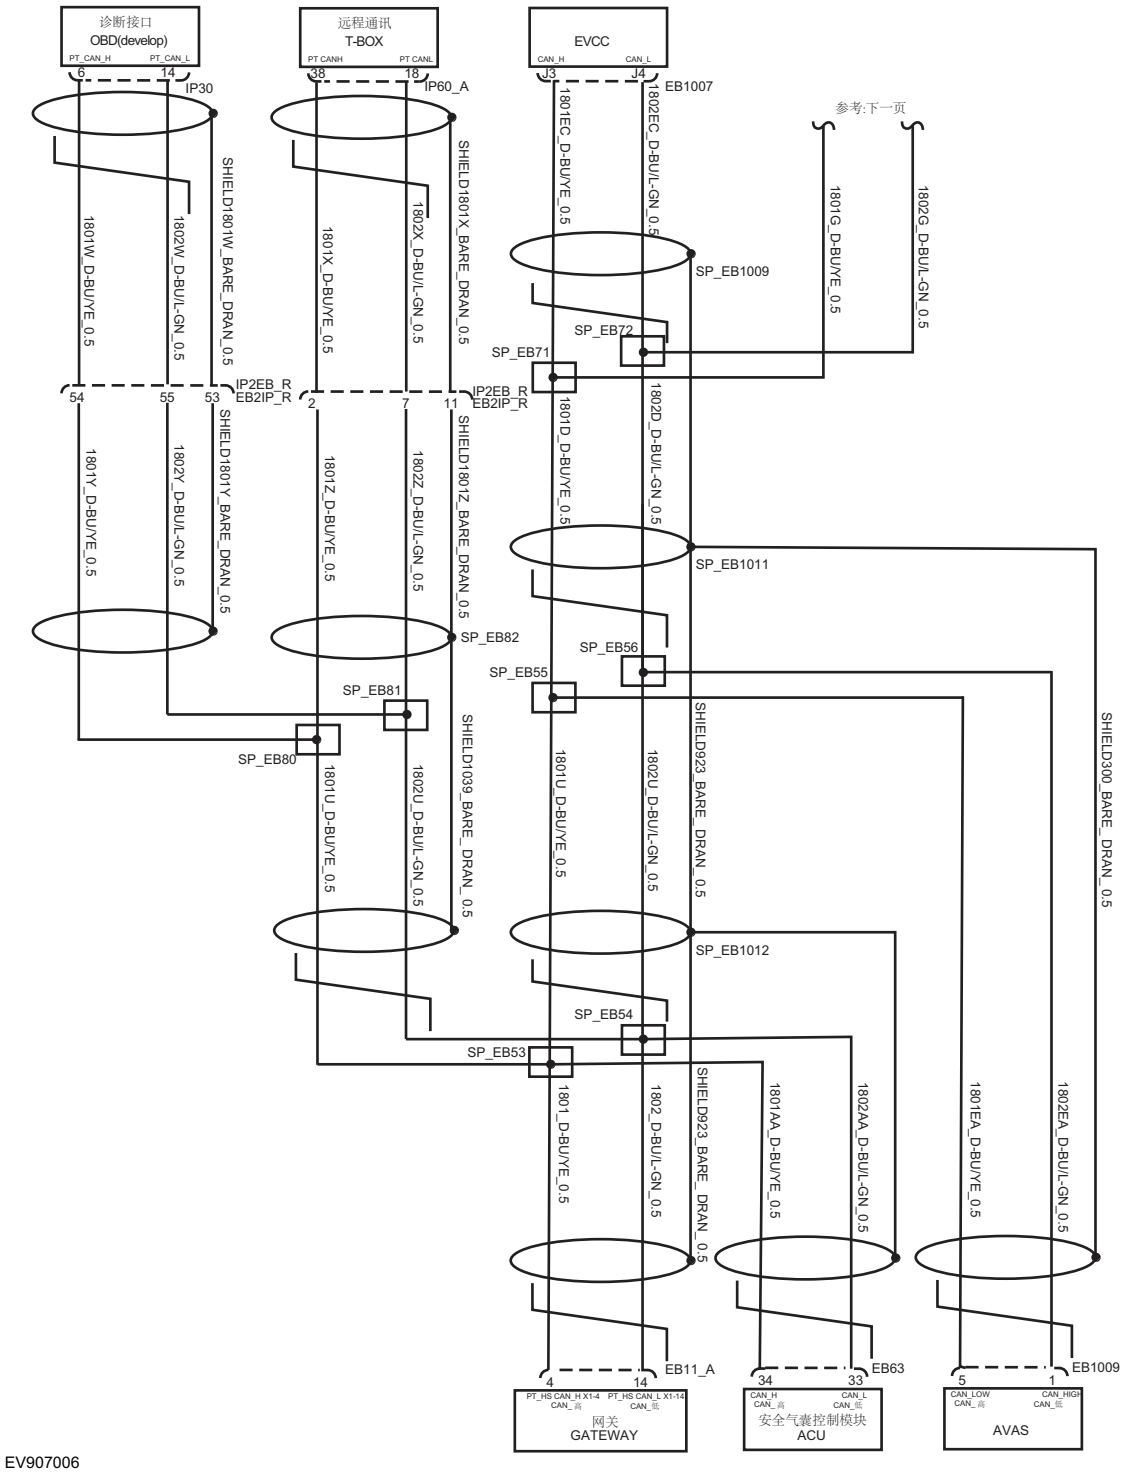
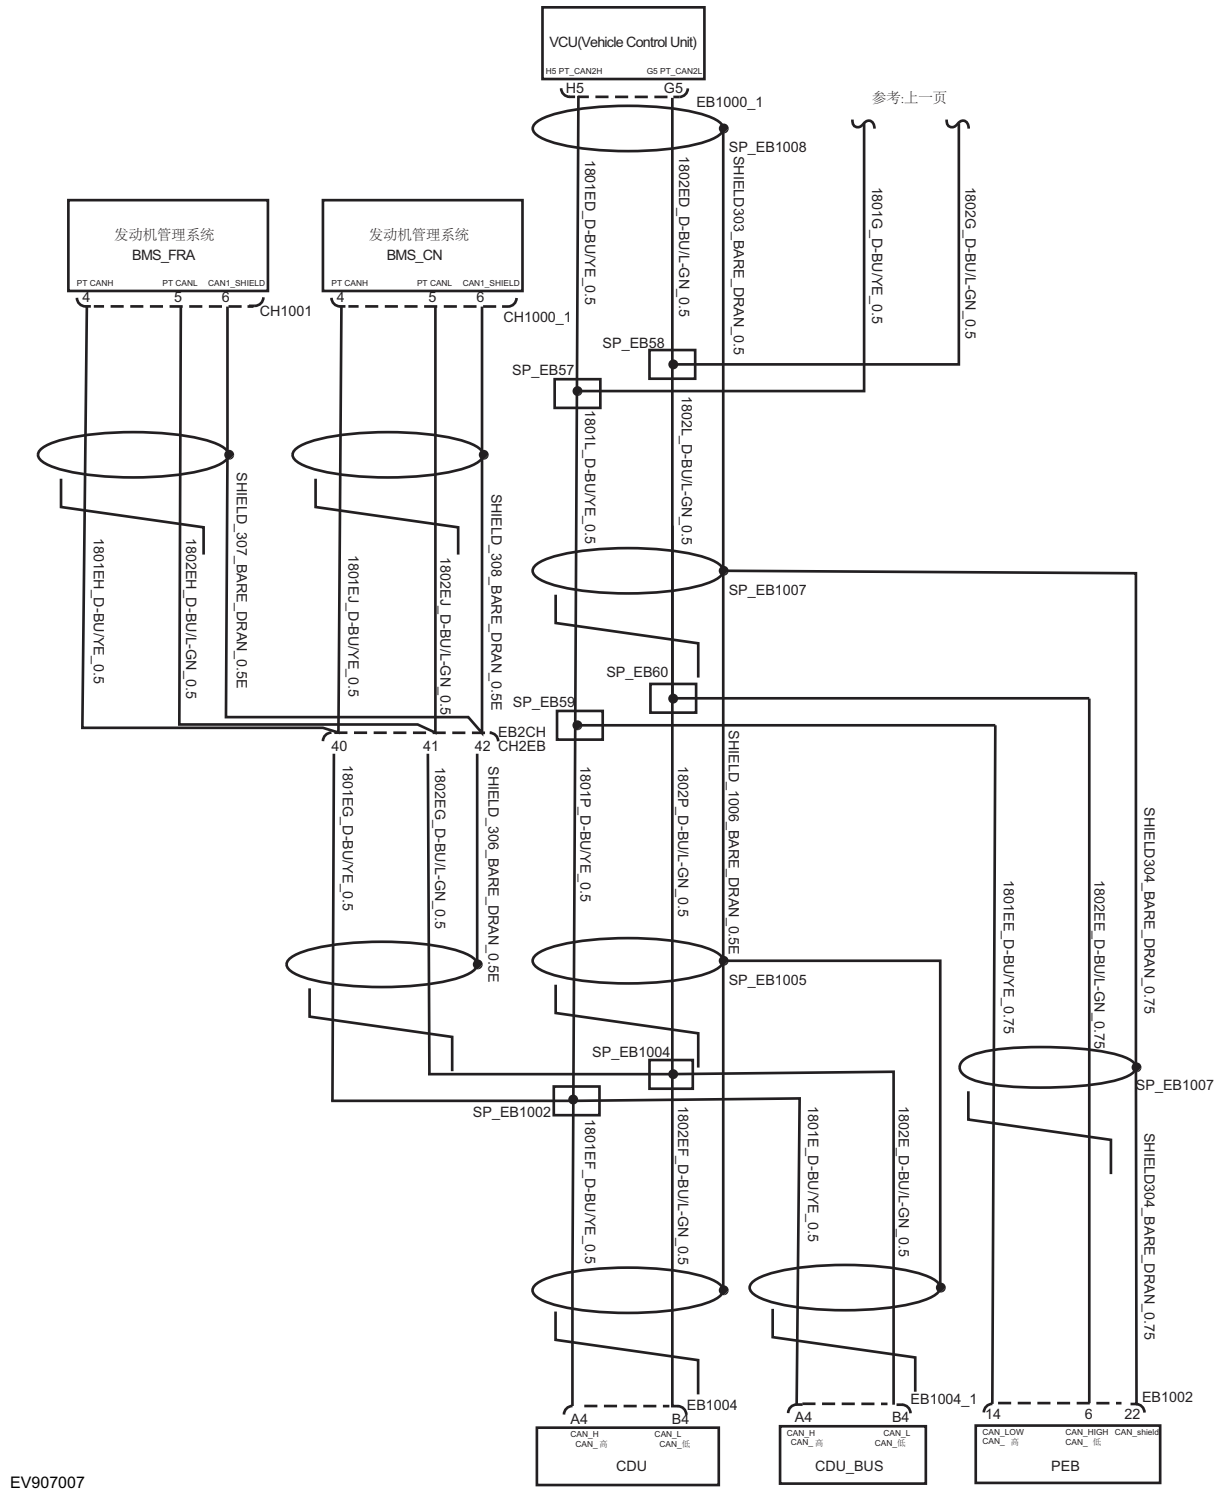
P1F09-00、P1F11-00、U0111-87、U0294-87、U0073-88

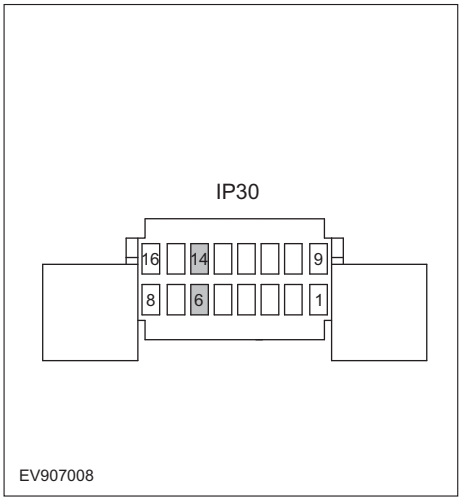
Fault diagnosis code
P1F09-00：SCI1 communication failure
P1F11-00：SCI2 communication failure
U0111-87：Abnormal communication between OBC and BMS CAN (598 or 603 message lost)
U0294-87：Communication between DCDC and VCU CAN is abnormal (282 packets are lost)
U0073-88：BUS OFF
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • CDU Module
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1F09-00
P1F11-00
U0111-87
U0294-87
U0073-88
To set the effect of a fault code condition
Description of circuit diagram
The device is connected to serial data circuit, which is used to monitor the communication situation of serial data during normal operation of vehicle. The devices will exchange the operation information and commands mutually. The device has programming information required to be exchanged on the serial data circuit. The receiver device will also monitor such information; in addition, there are some regular information indication transmitter devices available.

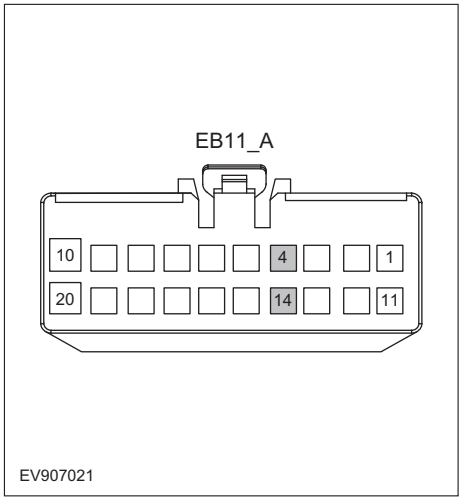
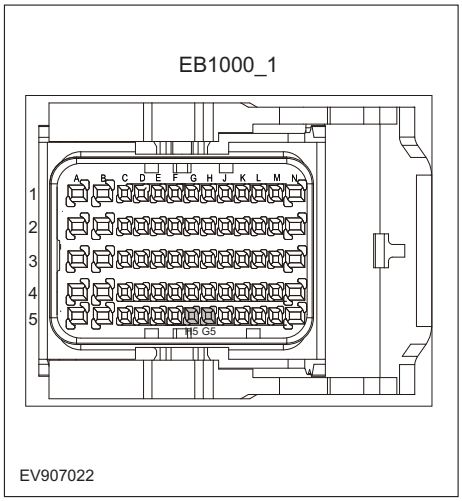
Circuit diagram



Circuit diagram



Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of CDU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the GAW module with diagnostic apparatus. 4 Is there any other fault code except for P1F09-00/P1F11-00/U0111-87/U0294-87/U0073-88?
		YES → Refer to:DTC Summary list(CDU).
NO ↓		
Step 3	Inspection for CAN communication network completeness.	
		1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminals of diagnose interface. Measuring circuit: resistance between terminal 6 and terminal 14 on plug IP30. **Standard value: ≈ 60Ω** 3 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 4	Check the terminating resistance of GAW module and VCU resistor.
 	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB11_A of network gateway module. 3 Measure the resistance between harness terminals on network gateway module. Measuring circuit: the resistance between terminal 4 and 14 on plug EB11_A. **Standard value: 110~130Ω** 4 Connect the harness plug EB11_A of network gateway module. 5 Disconnect the harness plug EB1000_1 of GAW module. 6 Measure the resistance between harness terminals on GAW module. Measuring circuit: resistance between terminal H5 and terminal G5 on plug EB1000_1. **Standard value: 110~130Ω** 7 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Test whether CDU is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1004、BT1001、BTN_1001、BTN_1002 of CDU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the CDU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
	YES → Change the CDU Module

NO ↓
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.
Next Step ↓
Diagnosis end.