

U1D0C-23、 U1D0D-11

Fault diagnosis code
U1D0C-23：LDW(Lane Departure Warning) Switch Button Stuck
U1D0D-11：LDW(Lane Departure Warning) switch indicator light short to ground
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • DAS module fault • Control switch fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
U1D0C-23
The LDW switch keeps being pushed and the switch card stalls.
U1D0D-11
The LDW switch indicator is broken.
To set the effect of a fault code condition
1.The LDW switch is faulty, and cannot determine whether the LDW function is being developed, and the LDW function cannot be used properly. 2.LDW drive light is off.
Description of circuit diagram
The DAS module monitors control switch via low level reference circuit and signal circuit.


Circuit diagram

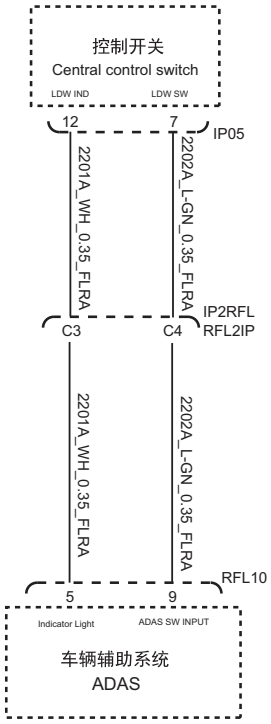


RFL10

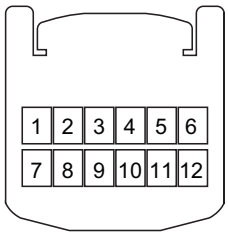


IP05

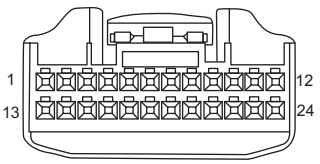

EV905008

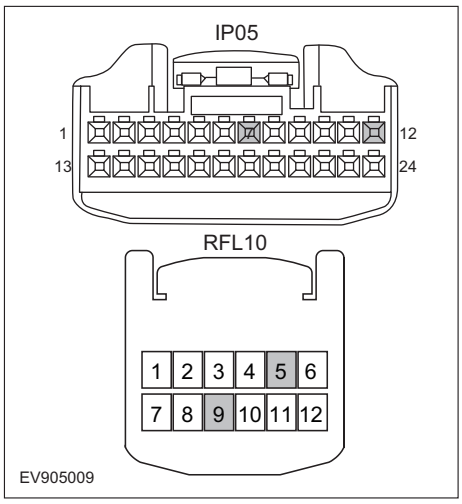Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of control switch, DAS for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the DAS with diagnostic apparatus. 4 If there is any fault code except for U1D0C-23,U1D0D-11?
		YES → Refer to:DTC Summary list(DAS).
NO ↓		
Step 3	Check the circuit of control switch circuit (open circuit).	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug RFL10 of DAS module. 3 Measure the resistance between the harness terminal of control switch and the DAS. Measuring circuit: resistance between terminal 7 on plug IP05 and terminal 9 on plug RFL10. Measuring circuit: resistance between terminal 12 on plug IP05 and terminal 5 on plug RFL10. **Standard value: ≈ 0Ω** 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

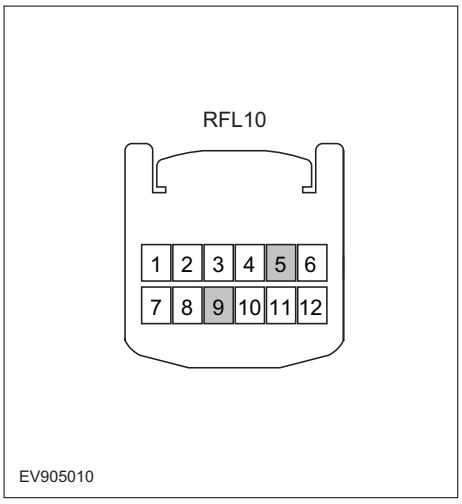Step 4	Check the circuit of control switch circuit (short circuit).
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminal of control switch and ground. Measuring circuit: resistance between terminal 7 on plug IP05 and ground. Measuring circuit: resistance between terminal 12 on plug IP05 and ground. **Standard value: ∞** 3 Measure the voltage between the harness terminal of control switch and ground. Measuring circuit: voltage between terminal 7 on plug IP05 and ground. Measuring circuit: voltage between terminal 12 on plug IP05 and ground. **Standard value: ≈ 0V** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Replace the control switch in good condition.
	1 Replace the control switch in good condition. 2 Reconnect all disconnected wiring harness terminals. 3 Connect the fault diagnosis instrument to the diagnosis interface. 4 Turn the ignition switch to ON position. 5 Use the diagnostic apparatus to read DAS and DTC. 6 Clear the DAS and DTC. 7 Turn the ignition switch to OFF. 8 Waiting at least 15 seconds to allow the module to shut down properly. 9 Turn the ignition switch to ON again. 10 Use the diagnostic apparatus to read DAS and DTC again. 11 Test whether the faulted code is existed.
	NO → Replace the control switch.
YES ↓	

Step 6	Test whether DAS is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug RFL10 of DAS. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the DAS plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Change the DAS Module
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	
Diagnosis end.	