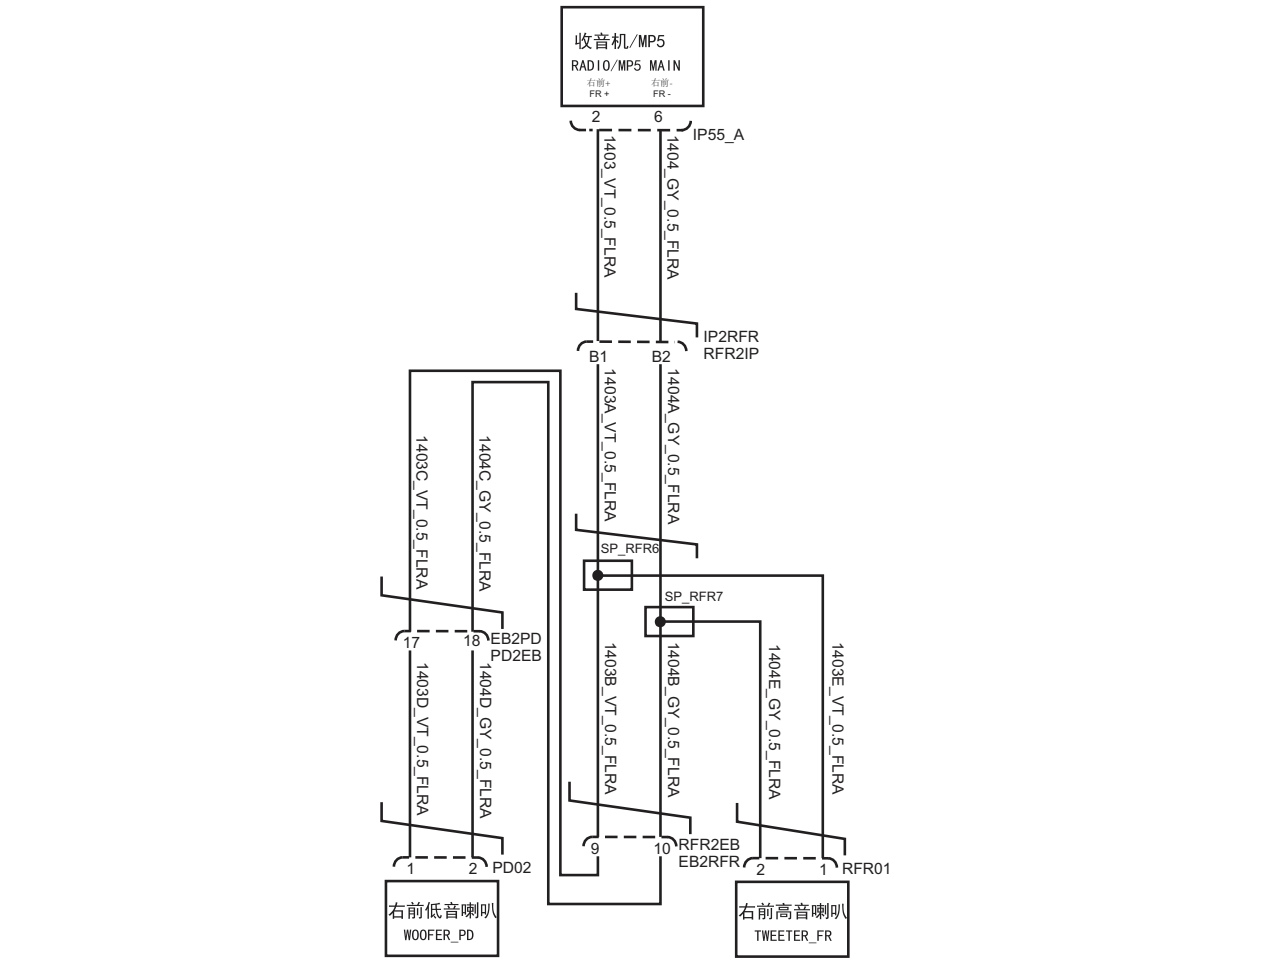
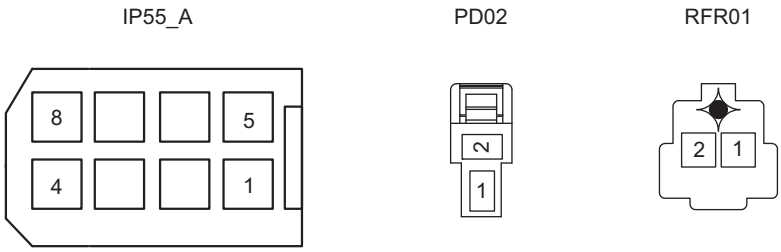
B0259-14

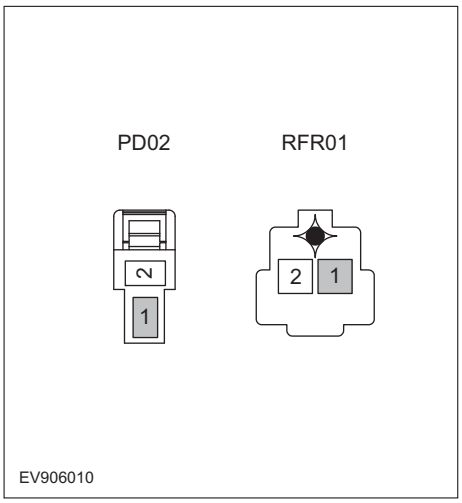
Description of fault diagnosis codes
B0259-14：Right Front Circuit short to ground or open
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • FICM Module fault • Right front tweeter fault/Right front woofer fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
B0259-14
To set the effect of a fault code condition
1 2
Description of circuit diagram
The FICM module monitors Right front tweeter/Right front woofer via low level reference circuit and signal circuit.

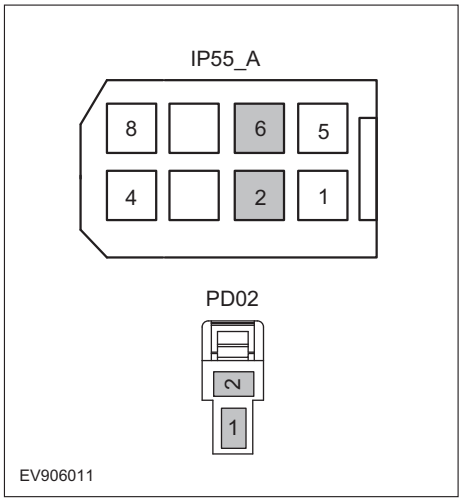
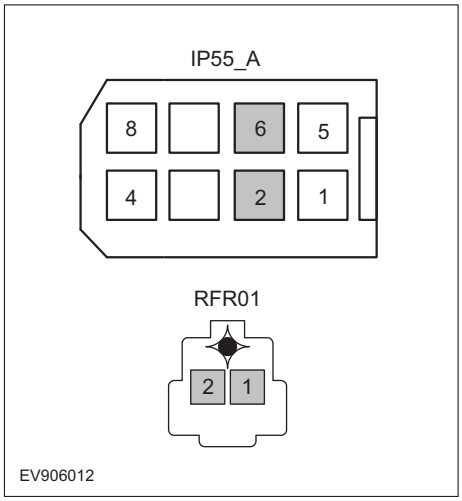
Circuit diagram

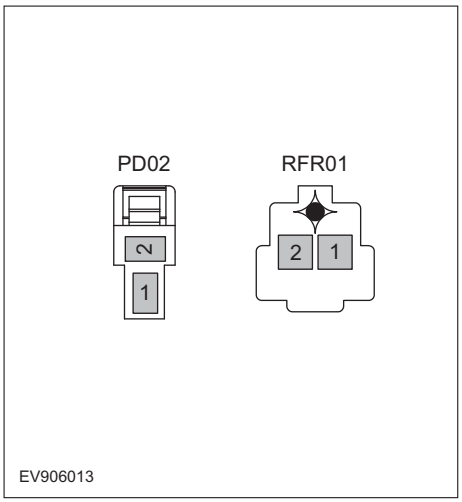


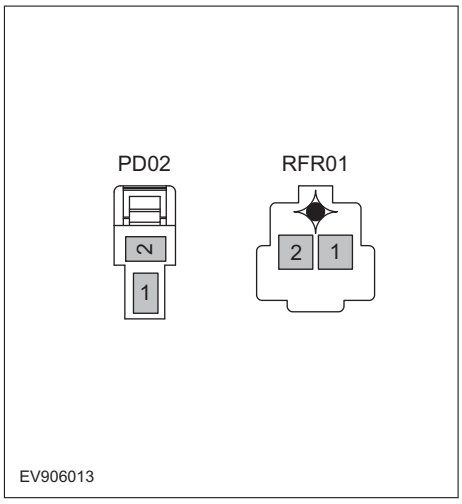


EV906009

Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of right front horn, FICM for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the FICM with diagnostic apparatus. 4 Is there any other fault code except for B0259-14?
		YES → Refer to:DTC Summary List (FICM).
NO ↓		
Step 3	Check the power supply circuit of right front honk.	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug PD02 of right front woofer. 3 Disconnect the harness plug RFR01 of right front tweeter . 4 Turn the ignition switch to ON. 5 Measure the voltage between the harness terminal of right front honk and ground. Measuring circuit: voltage between terminal 1 on plug PD02 and ground. Measuring circuit: voltage between terminal 1 on plug RFR01 and ground. **Standard value:10~14V** 6 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 4	Check the circuit of right front honk.(open)
 	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug IP55_A of FICM module. 3 Measure the resistance between the harness terminal of right front woofer and of FICM. Measuring circuit: resistance between terminal 1 on plug PD02 and terminal 2 on plug IP55_A. Measuring circuit: resistance between terminal 2 on plug PD02 and terminal 6 on plug IP55_A. **Standard value: ≈ 0Ω** 4 Measure the resistance between the harness terminal of right front tweeter and of FICM. Measuring circuit: resistance between terminal 1 on plug RFR01 and terminal 3 on plug IP55_A. Measuring circuit: resistance between terminal 2 on plug RFR01 and terminal 7 on plug IP55_A. **Standard value: ≈ 0Ω** 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 5	Check the circuit of right front honk.(short)
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminal of left front woofer and ground. Measuring circuit: resistance between terminal 1 on plug PD02 and ground. Measuring circuit: resistance between terminal 2 on plug PD02 and ground. **Standard value: ∞** 3 Measure the resistance between the harness terminal of right front tweeter and ground. Measuring circuit: resistance between terminal 1 on plug RFR01 and ground. Measuring circuit: resistance between terminal 2 on plug RFR01 and ground. **Standard value: ∞** 4 Measure the resistance between the harness terminal of left front woofer and ground. Measuring circuit: voltage between terminal 1 on plug PD02 and ground. Measuring circuit: voltage between terminal 2 on plug PD02 and ground. **Standard value: ≈ 0V** 5 Measure the resistance between the harness terminal of right front tweeter and ground. Measuring circuit: voltage between terminal 1 on plug RFR01 and ground. Measuring circuit: voltage between terminal 2 on plug RFR01 and ground. **Standard value: ≈ 0V** 6 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 6	Check the front right honk (parts).
	1 Measure the resistance of right front woofer terminal directly. Measuring circuit: resistance between terminal 1 and terminal 2 on plug PD02. **Standard value:** 2 Measure the resistance of right front tweeter terminal directly. Measuring circuit: resistance between terminal 1 and terminal 2 on plug RFR01. **Standard value:** 3 Measure the resistance between the right front woofer terminal and the housing. Measuring circuit: resistance between terminal 1 on plug PD02 and the housing. Measuring circuit: resistance between terminal 2 on plug PD02 and the housing. **Standard value: ∞** 4 Measure the resistance between the harness terminal of right front tweeter and ground. Measuring circuit: resistance between terminal 1 on plug RFR01 and the housing. Measuring circuit: resistance between terminal 2 on plug RFR01 and the housing. **Standard value: ∞** 5 Check whether the result is normal or not?
	NO → Change the right front tweeter/right front woofer.

YES ↓

Step 7	Test whether FICM is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug IP55_A, IP55_A of FICM. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the FICM plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?

	YES → Change the FICM Module
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,	
Next Step ↓	
Diagnosis end.	