

B0258-14


Description of fault diagnosis codes
B0258-14：Left Front Circuit short to ground or open
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • FICM Module fault • Left front tweeter fault/Left front woofer fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
B0258-14
To set the effect of a fault code condition
1 2
Description of circuit diagram
The FICM module monitors Left front tweeter/Left front woofer via low level reference circuit and signal circuit.

Circuit diagram

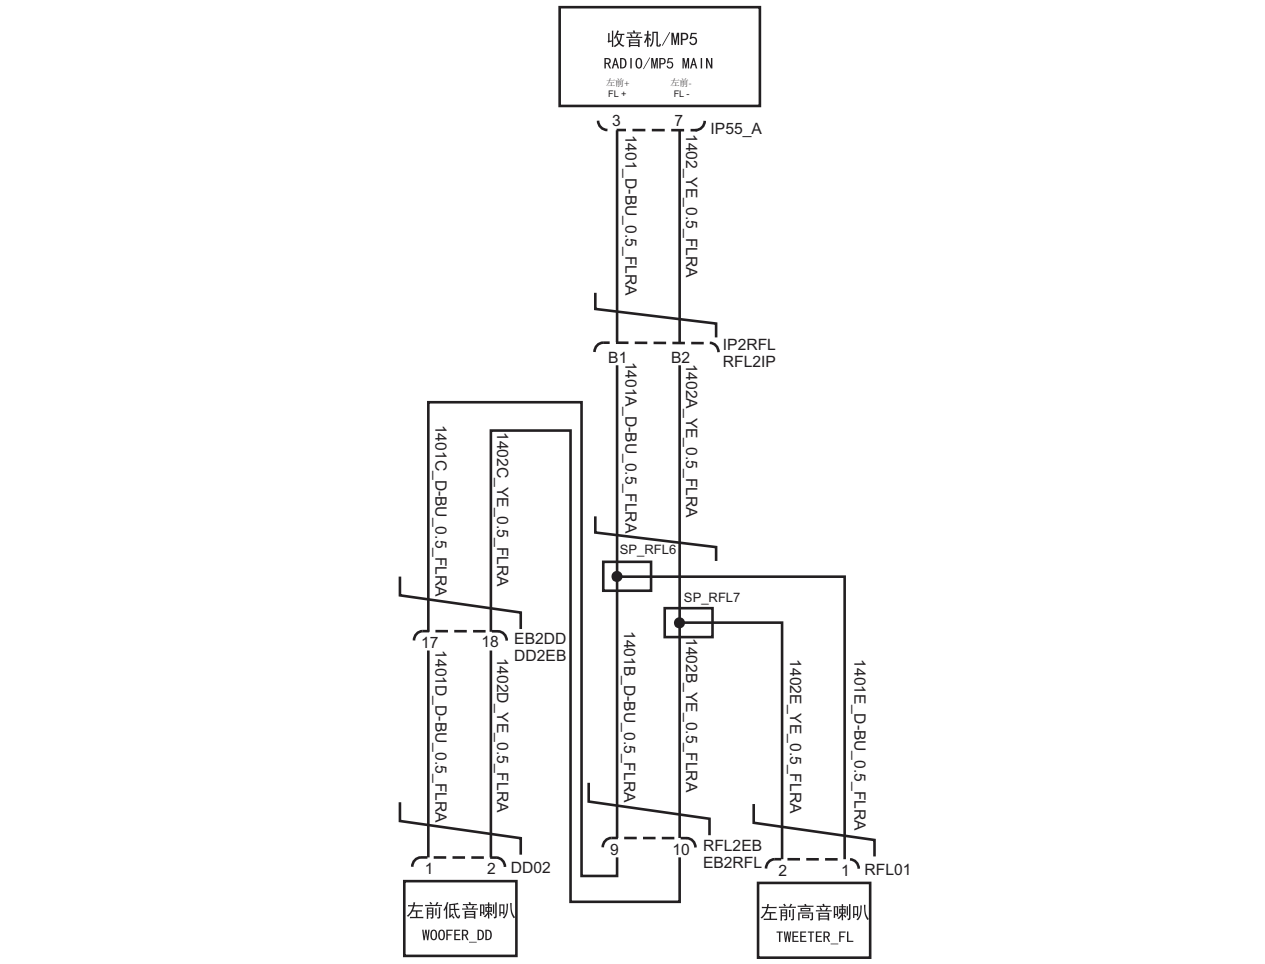


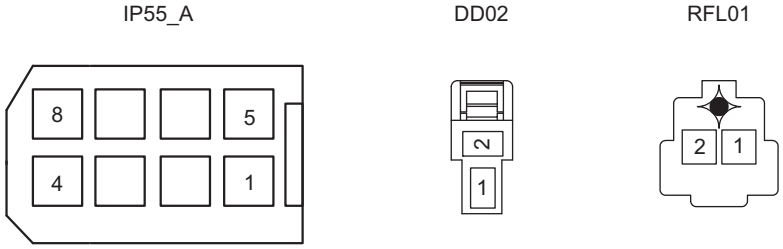


EV906004

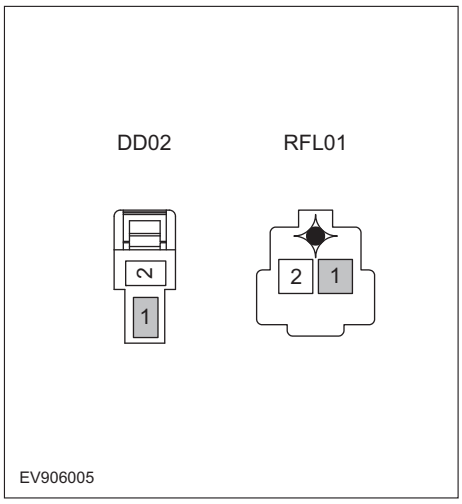Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of left front horn, FICM for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the FICM with diagnostic apparatus. 4 Is there any other fault code except for B0258-14?
		YES → Refer to:DTC Summary List (FICM).
NO ↓		
Step 3	Check the power supply circuit of left front honk.	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug DD02 of left front woofer. 3 Disconnect the harness plug RFL01 of left front tweeter . 4 Turn the ignition switch to ON. 5 Measure the voltage between the harness terminal of left front honk and ground. Measuring circuit: voltage between terminal 1 on plug DD02 and ground. Measuring circuit: voltage between terminal 1 on plug RFL01 and ground. **Standard value:10~14V** 6 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 4	Check the circuit of left front honk.(open)

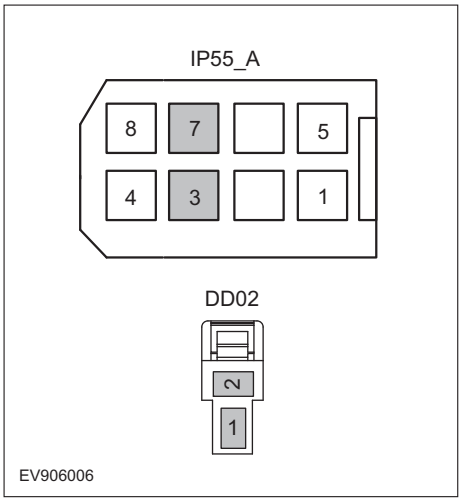

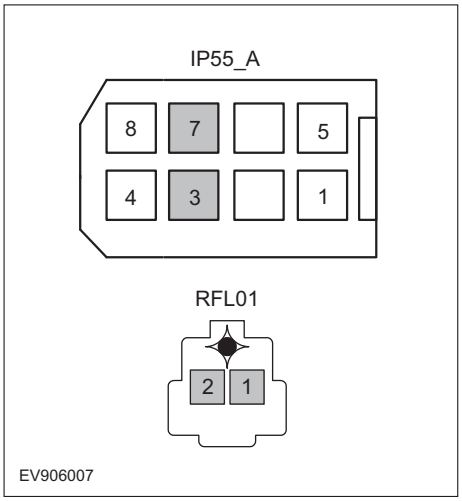

1 Turn the ignition switch to OFF.

2 Disconnect the harness plug IP55_A of FICM module.

3 Measure the resistance between the harness terminal of left front woofer and of FICM.

Measuring circuit: resistance between terminal 1 on plug DD02 and terminal 3 on plug IP55_A.

Measuring circuit: resistance between terminal 2 on plug DD02 and terminal 7 on plug IP55_A.

Standard value: ≈ 0Ω

4 Measure the resistance between the harness terminal of left front tweeter and of FICM.

Measuring circuit: resistance between terminal 1 on plug RFL01 and terminal 3 on plug IP55_A.


Measuring circuit: resistance between terminal 2 on plug RFL01 and terminal 7 on plug IP55_A.


Standard value: ≈ 0Ω

5 Check whether the result is normal or not?

NO → Repair or replace the faulted parts.

YES ↓

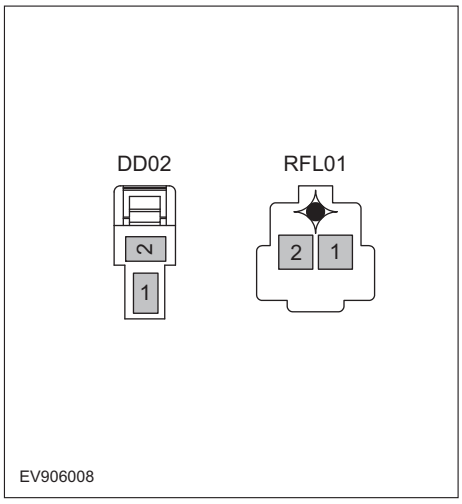Step 5	Check the circuit of left front honk.(short)
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminal of left front woofer and ground. Measuring circuit: resistance between terminal 1 on plug DD02 and ground. Measuring circuit: resistance between terminal 2 on plug DD02 and ground. **Standard value: ∞** 3 Measure the resistance between the harness terminal of left front tweeter and ground. Measuring circuit: resistance between terminal 1 on plug RFL01 and ground. Measuring circuit: resistance between terminal 2 on plug RFL01 and ground. **Standard value: ∞** 4 Measure the voltage between the harness terminal of left front woofer and ground. Measuring circuit: voltage between terminal 1 on plug DD02 and ground. Measuring circuit: voltage between terminal 2 on plug DD02 and ground. **Standard value: ≈ 0V** 5 Measure the voltage between the harness terminal of left front tweeter and ground. Measuring circuit: voltage between terminal 1 on plug RFL01 and ground. Measuring circuit: voltage between terminal 2 on plug RFL01 and ground. **Standard value: ≈ 0V** 6 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

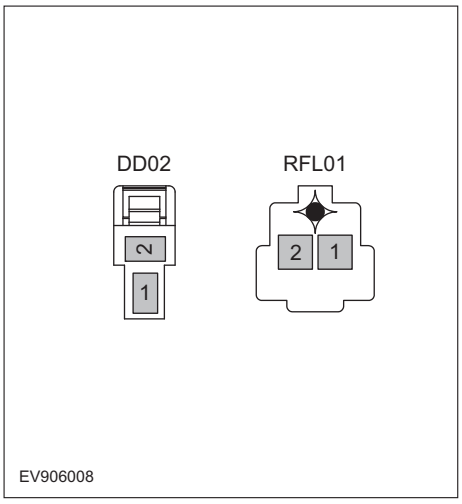Step 6	Check the front left honk (parts).
	1 Measure the resistance of left front woofer terminal directly. Measuring circuit: resistance between terminal 1 and terminal 2 on plug DD02. **Standard value:** 2 Measure the resistance of left front woofer terminal directly. Measuring circuit: resistance between terminal 1 and terminal 2 on plug RFL01. **Standard value:** 3 Measure the resistance between the left front honk terminal and the housing. Measuring circuit: resistance between terminal 1 on plug DD02 and the housing. Measuring circuit: resistance between terminal 2 on plug DD02 and the housing. **Standard value: ∞** 4 Measure the resistance between the harness terminal of left front tweeter and ground. Measuring circuit: resistance between terminal 1 on plug RFL01 and the housing. Measuring circuit: resistance between terminal 2 on plug RFL01 and the housing. **Standard value: ∞** 5 Check whether the result is normal or not?
	NO → Change the left front tweeter/left front woofer.
YES ↓	
Step 7	Test whether FICM is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug IP55_A, IP55_A of FICM. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the FICM plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?

	YES → Change the FICM Module
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,	
Next Step ↓	
Diagnosis end.	