

U0075-88

Description of fault diagnosis codes
U0075-88：Control Module Communication Bus Off on BD(Power) CAN
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • GAW module
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
U0075-88
To set the effect of a fault code condition
Description of circuit diagram
The device is connected to serial data circuit, which is used to monitor the communication situation of serial data during normal operation of vehicle. The devices will exchange the operation information and commands mutually. The device has programming information required to be exchanged on the serial data circuit. The receiver device will also monitor such information; in addition, there are some regular information indication transmitter devices available.


Circuit diagram

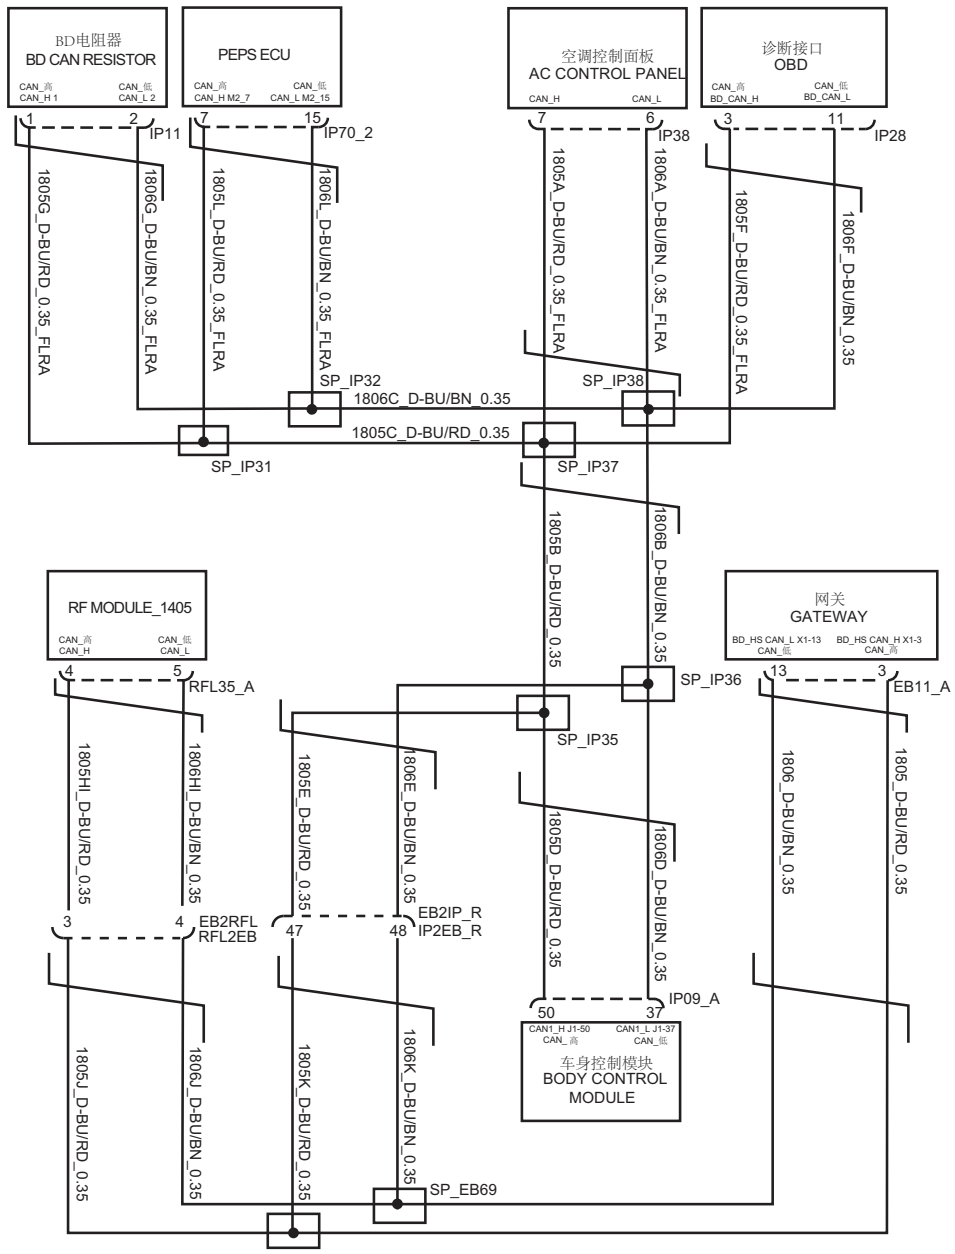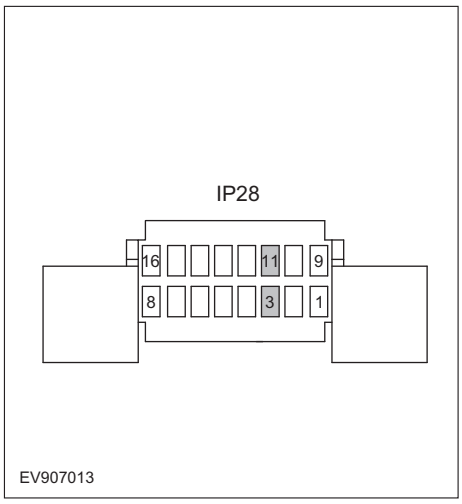

EV907012

Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of GAW module for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the GAW module with diagnostic apparatus. 4 Is there any other fault code except for U0075-88?
		YES → Refer to:DTC Summary list(GAW).
NO ↓		
Step 3	Inspection for CAN communication network completeness.	
		1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminals of diagnose interface. Measuring circuit: the resistance between terminal 3 and 11 on plug IP28. **Standard value: ≈ 60Ω** 3 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 4	Check the terminating resistance of network gateway module and BD resistor.

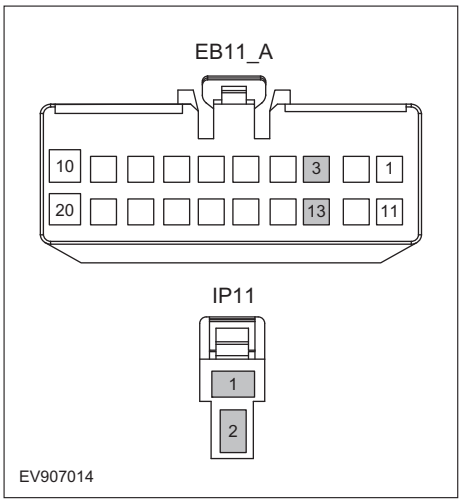

1 Turn the ignition switch to OFF.

2 Disconnect the harness plug EB11_A of network gateway module.

3 Measure the resistance between harness terminals on network gateway module.

Measuring circuit: the resistance between terminal 3 and 13 on plug EB11_A.

Standard value: 110~130Ω

4 Connect the harness plug EB11_A of network gateway module.

5 Disconnect the harness plug IP11 of BD resistor.

6 Measure the resistance between the harness terminals of BD resistor.

Measuring circuit: resistance between terminal 1 and terminal 2 on plug IP11.

Standard value: 110~130Ω

7 Check whether the result is normal or not?

NO → Repair or replace the faulted parts.

YES ↓

Step 5	Check if GAW module is normal.

1 Turn the ignition switch to OFF.

2 Disconnect and check the harness plug EB11_A of GAW module.

3 Check and repair.

- Corrosion(install new adapting piece or terminal-cleaning module and pin).
- Pin damaged or bent-install new terminal/pin.
- Fly out of pins-install new pins as needed.

4 Reconnect the GAW module plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed.

5 Run the system and determine if the problem persists?

YES → Repair GAW module

NO ↓

At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,

Next Step ↓

Diagnosis end.