

B1610-1C、 U3003-16、 U3003-17、 U0155-87、 U0315-87、 U0140-87


Description of fault diagnosis codes
B1610-1C：IPK CAN message no receive
U3003-16：BCM CAN message no receive
U3003-17：ABS CAN message no receive
U0155-87：EMS CAN message no receive
U0315-87：TBOX CAN message no receive
U0140-87：Bus off
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • Air conditioning control module
Conditions for fault code operation
The ignition switch is in ON position.
Conditions for fault code setting
B1610-1C
U3003-16
U3003-17
U0155-87
U0315-87
U0140-87
To set the effect of a fault code condition
Description of circuit diagram
The device is connected to serial data circuit, which is used to monitor the communication situation of serial data during normal operation of vehicle. The devices will exchange the operation information and commands mutually. The device has programming information required to be exchanged on the serial data circuit. The receiver device will also monitor such information; in addition, there are some regular information indication transmitter devices available.

Circuit diagram

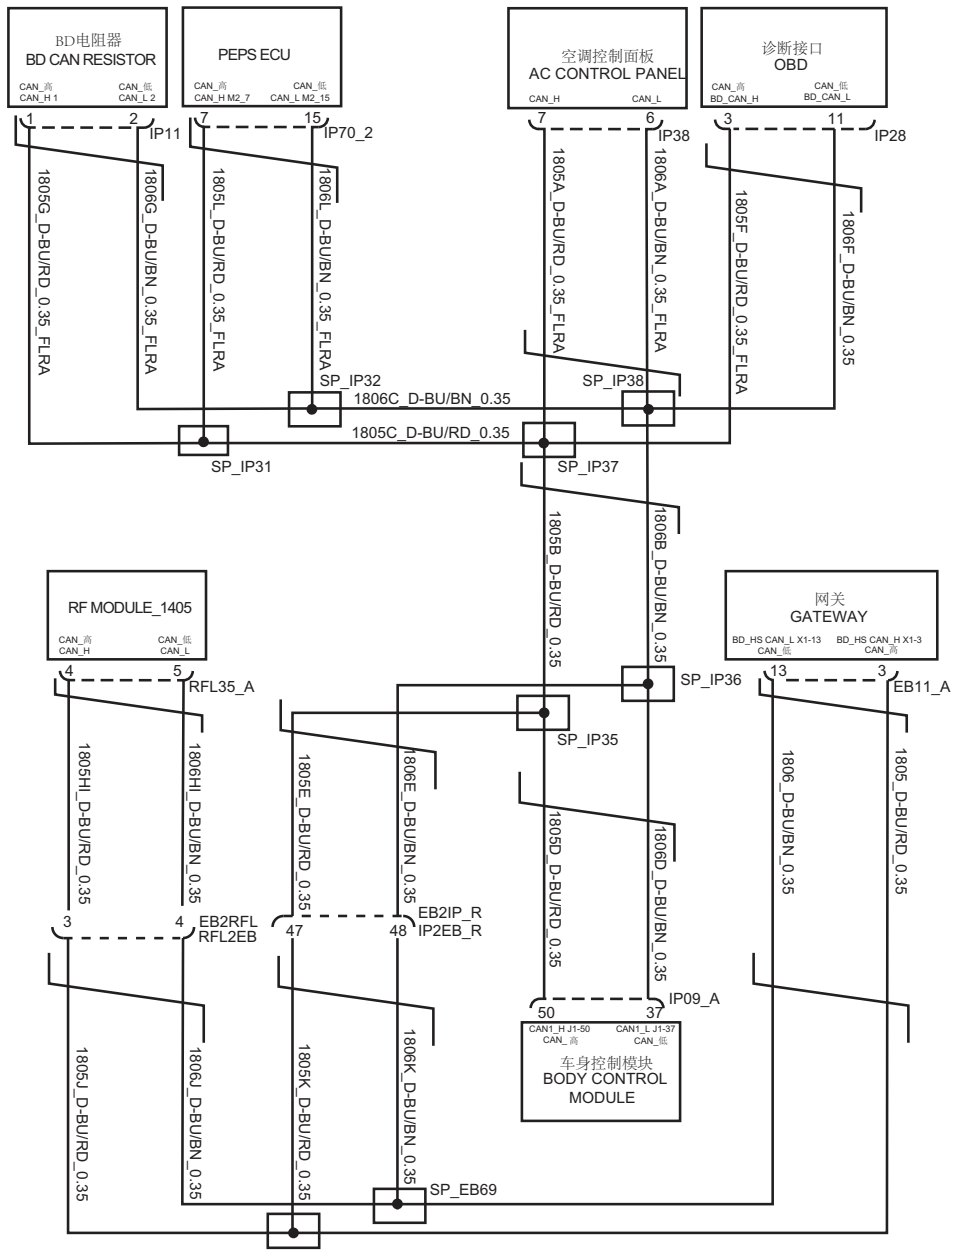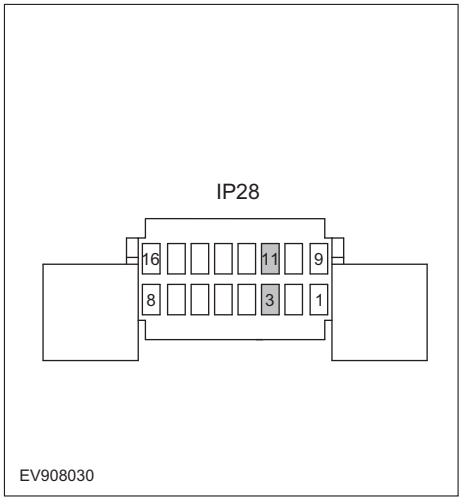

EV908029

Troubleshooting procedures	
Step 1	General inspection.
	1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of air conditioning control module for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the air condition control system with diagnostic apparatus. 4 If there is any fault code except for B1610-1C/U3003-16/U0155-87/U0315-87/U0140-87?
	YES → Refer to:DTC Summary List (HVAC).
NO ↓	
Step 3	Inspection for CAN communication network completeness.
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminals of diagnose interface. Measuring circuit: measure the resistance between terminal 3 and 11 on plug IP28. **Standard value: ≈ 60Ω** 3 Check whether the result is normal or not?
	NO → Please repair or replace the faulted parts.
YES ↓	

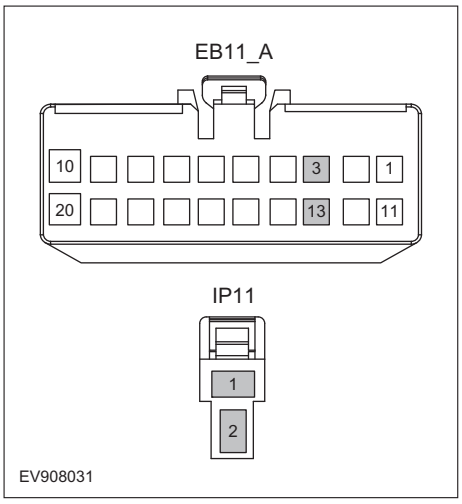Step 4	Check the terminating resistance of network gateway module and BD resistor.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB11_A of network gateway module. 3 Measure the resistance between harness terminals on network gateway module. Measuring circuit: the resistance between terminal 3 and 13 on plug EB11_A. **Standard value: 110~130Ω** 4 Connect the harness plug EB11_A of network gateway module. 5 Disconnect the harness plug IP11 of BD resistor. 6 Measure the resistance between the harness terminals of BD resistor. Measuring circuit: the resistance between terminal 1 and 2 on plug IP11. **Standard value: 110~130Ω** 7 Check whether the result is normal or not?
	NO → Please repair or replace the faulted parts.
YES ↓	
Step 5	Check if air conditioning module is normal.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug IP38 of air conditioning controller. 3 Check and repair; • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the air conditioning control module plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the air conditioning control module.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,	
Next Step ↓	
Diagnosis end.	