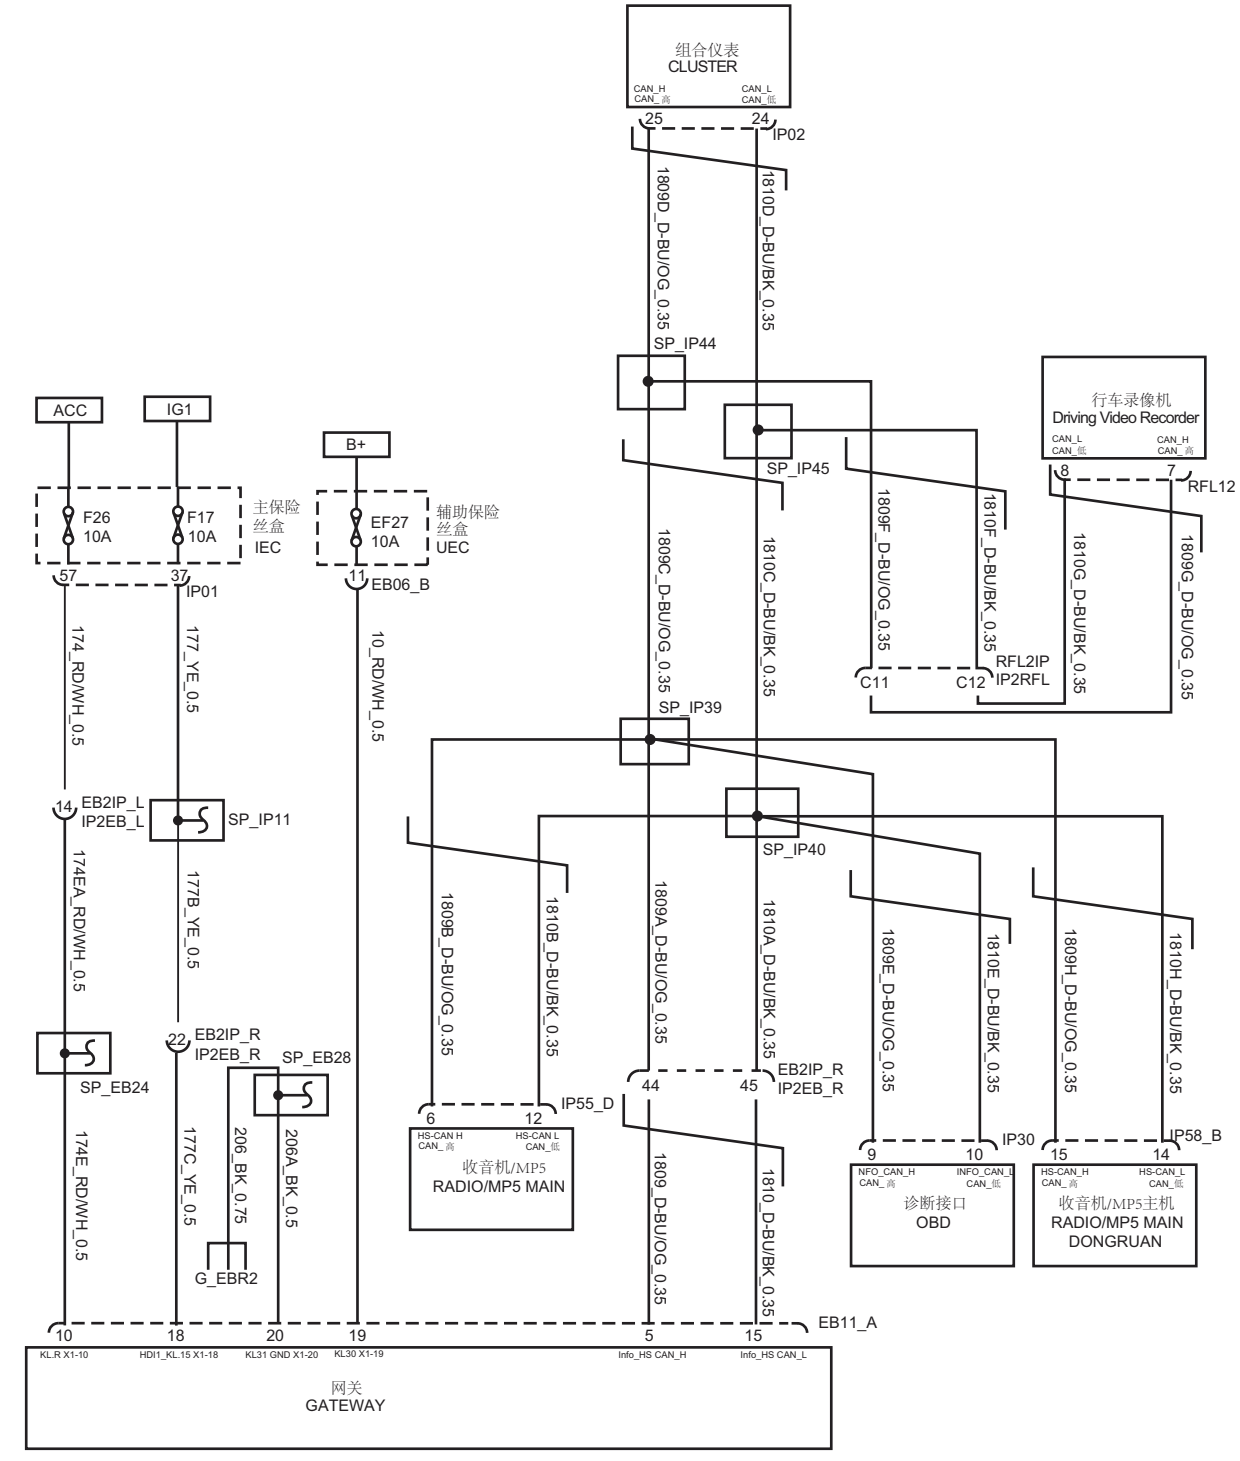
U0001-87、U0121-87、U0140-87、U0100-87、U0102-87、U0103-87、U0104-87、U0105-87、U0107-87、U0108-87

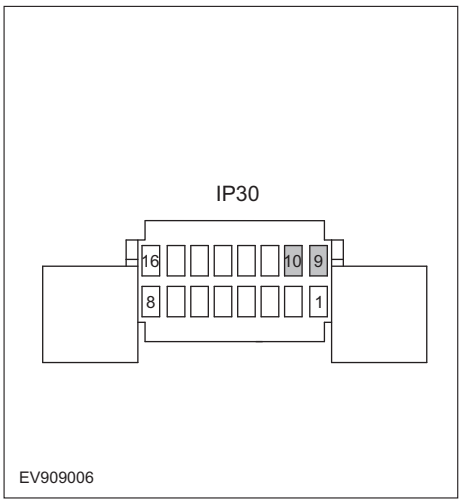
Description of fault diagnosis codes
U0001-87：CAN Bus Off Error - incorrect baud rate or CAN short circuit
U0121-87：Lost communication with ABS
U0140-87：Lost communication with BCM
U0100-87：Lost communication with DAS
U0102-87：Lost communication with EPS
U0103-87：Lost communication with ESP
U0104-87：Lost communication with PEPS
U0105-87：Lost communication with SRS
U0107-87：Lost communication with TPMS
U0108-87：Lost communication with FICM
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • IPK
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
U0001-87
U0121-87
U0140-87
U0100-87
U0102-87
U0103-87
U0104-87
U0105-87

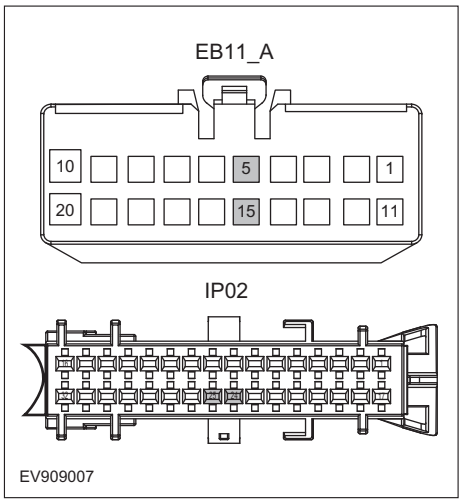
U0107-87
U0108-87
To set the effect of a fault code condition
Description of circuit diagram
The device is connected to serial data circuit, which is used to monitor the communication situation of serial data during normal operation of vehicle. The devices will exchange the operation information and commands mutually. The device has programming information required to be exchanged on the serial data circuit. The receiver device will also monitor such information; in addition, there are some regular information indication transmitter devices available.

Circuit diagram



EV909005

<table>
<tr><td colspan="3">Troubleshooting steps</td></tr>
<tr><td>Step 1</td><td colspan="2">General inspection.</td></tr>
<tr><td colspan="2"></td><td>1 Check the fuse for damage.
2 Check battery capacity.
3 Check the harness plug of IPK for damage, poor contact, aging and looseness.
4 Check whether the result is normal or not?</td></tr>
<tr><td colspan="2"></td><td>NO → Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">YES ↓</td></tr>
<tr><td>Step 2</td><td colspan="2">Check fault codes.</td></tr>
<tr><td colspan="2"></td><td>1 Connect the fault diagnosis instrument to the diagnosis interface.
2 Turn the ignition switch to ON position.
3 Diagnose the IPK module with diagnostic apparatus.
4 If there is any fault code except for U0121-87/U0140-87/U0102-87/U0103-87/U0104-87?</td></tr>
<tr><td colspan="2"></td><td>YES → Refer to:DTC Summary list(IPK).</td></tr>
<tr><td colspan="3">NO ↓</td></tr>
<tr><td>Step 3</td><td colspan="2">Inspection for CAN communication network completeness.</td></tr>
<tr><td colspan="2"> 
</td><td>1 Turn the ignition switch to OFF.
2 Measure the resistance between the harness terminals of diagnose interface.
Measuring circuit: resistance between terminal 9 and terminal 10 on plug IP30.
Standard value: ≈ 60Ω
3 Check whether the result is normal or not?</td></tr>
<tr><td colspan="2"></td><td>NO → Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">YES ↓</td></tr>
</table>

Step 4	Check the terminating resistance of GAW module and VCU resistor.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB11_A of network gateway module. 3 Measure the resistance between harness terminals on network gateway module. Measuring circuit: the resistance between terminal 5 and 15 on plug EB11_A. **Standard value: 110~130Ω** 4 Connect the harness plug EB11_A of network gateway module. 5 Disconnect the harness plug IP02 of VCU module. 6 Measure the resistance between harness terminals on VCU module. Measuring circuit: resistance between terminal 24 and terminal 25 on plug IP02. **Standard value: 110~130Ω** 7 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Test whether the grounding circuit of IPK module is open.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug IP02 of IPK module. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the IPK plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Repair the IPK.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems,	
Next Step ↓	
Diagnosis end.	