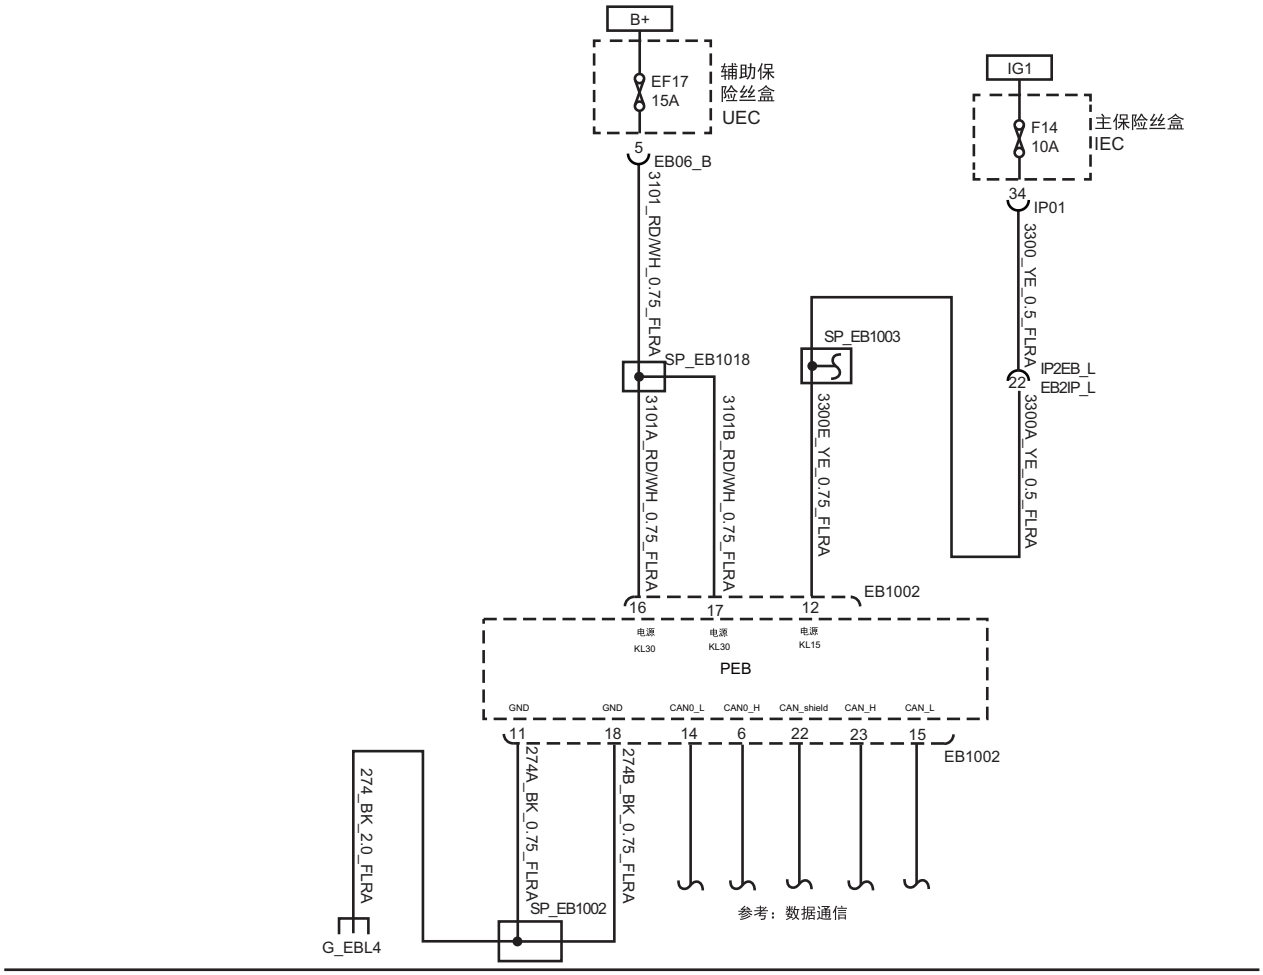
P0562-A2、 P0563-A3、 P1A0C-16、 P1A0D-17

Fault diagnosis code
P0562-A2：12V power supply undervoltage
P0563-A3：12V power supply overvoltage
P1A0C-16：12V power signal ultra low limit
P1A0D-17：12V power signal super high limit
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • Battery • PEU • Charging system • Insurance fuse
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P0562-A2
The voltage of the low-voltage supply is less than 8V under IGBT open-tube mode
P0563-A3
The voltage of the low-voltage supply is greater than 16V under IGBT open-tube mode
P1A0C-16
The voltage of low-voltage power supply is less than 5.5V
P1A0D-17
The voltage of low-voltage power supply is greater than 20V
To set the effect of a fault code condition
When vehicle lost power, there is forced power at high speed

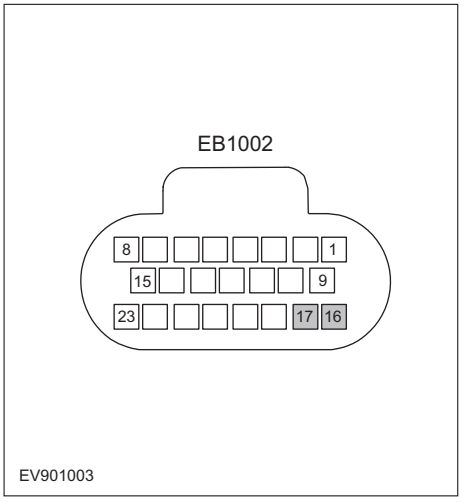
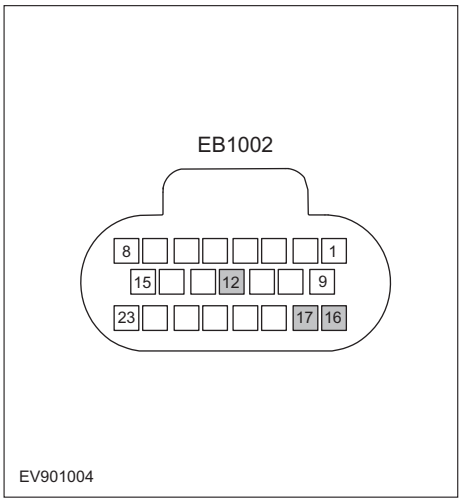
Circuit diagram

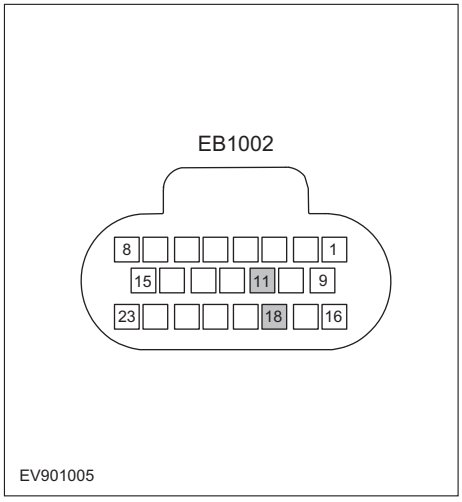




EV901002

Troubleshooting steps		
Step 1	General inspection.	
		1 Check fuses EF17/F14 for damage. 2 Check battery capacity. 3 Check the harness plug of air conditioning control module for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the PEU with diagnostic apparatus. 4 Is there any other fault code except for P0562-A2、P0563-A3、 P1A0C-16、 P1A0D-17?
		YES → Refer to:DTC Summary list(PEU).
NO ↓		
Step 3	Check charging system	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Use the diagnostic apparatus to read DCDC charging parameters. 4 Check whether the charging voltage is normal?
		NO ↓ Check charging system
YES ↓		

Step 4	Check the power voltage of PEU battery.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB1002 of PEU. 3 Measure the voltage between the harness terminal of PEU and ground. Measuring circuit: voltage between terminal 16 on plug EB1002 and ground. Measuring circuit: voltage between terminal 17 on plug EB1002 and ground. **Standard value:10~14V** 4 Check whether the result is normal or not?
	NO → Repair the circuit.
YES ↓	
Step 5	Check the power voltage when the PEU is started or operating
	1 Turn the ignition switch to ON. 2 Measure the voltage between the harness terminal of PEU and ground. Measuring circuit: voltage between terminal 16 on plug EB1002 and ground. Measuring circuit: voltage between terminal 17 on plug EB1002 and ground. Measuring circuit: voltage between terminal 12 on plug EB1002 and ground. **Standard value:10~14V** 3 Check whether the result is normal or not?
	NO → Repair the circuit.
YES ↓	

Step 6	Test whether the grounding circuit of PEU is open.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB1002 of PEU. 3 Measure the resistance between the harness terminal of PEU and ground. Measuring circuit: resistance between terminal 11 on plug EB1002 and ground. Measuring circuit: resistance between terminal 18 on plug EB1002 and ground. **Standard value: < 1Ω** 4 Test whether the resistance is less than 1Ω?
	NO → Repair the circuit.
YES ↓	
Step 7	Test whether PEU is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1002 of PEU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the PEU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Replace the PEU.
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	
Diagnosis end.	