
## P1936-11、 P1937-00、 P1938-00

| **Fault diagnosis code** |
| --- |
| P1936-11：EPP CAN instruction CRC error |
| P1937-00：EPP CAN command RLC error |
| P1938-00：EPP CAN command timeout error |
| **Detection tools** |
| 1 Multimeter and diagnostic apparatus |
| **Possible causes** |
| • Circuit,terminal and adapting piece fault<br>• PEU module fault<br>• EPP and CAN signal circuits of PEU fault |
| **Conditions for fault code operation** |
| Turn the ignition switch to ON position. |
| **Conditions for fault code setting** |
| P1936-11 |
| KL15 detection after power-on delay 1.5s, KL15 power-down after the detection stops. The CRC value does not match the received CRC value. Check whether the debounce count reaches the threshold 5 |
| P1937-00 |
| KL15 detection after power-on delay 1.5s, KL15 power-down after the detection stops. Check whether rolling counter has not updated the debounce count reaches the threshold 5 |
| P1938-00 |
| KL15 detection after power-on delay 1.5s, KL15 power-down after the detection stops. Check whether the debounce count of the CAN signal that contains the parking control instruction is not received reaches the threshold |
| **To set the effect of a fault code condition** |
| Parking system malfunction |

**Circuit diagram**

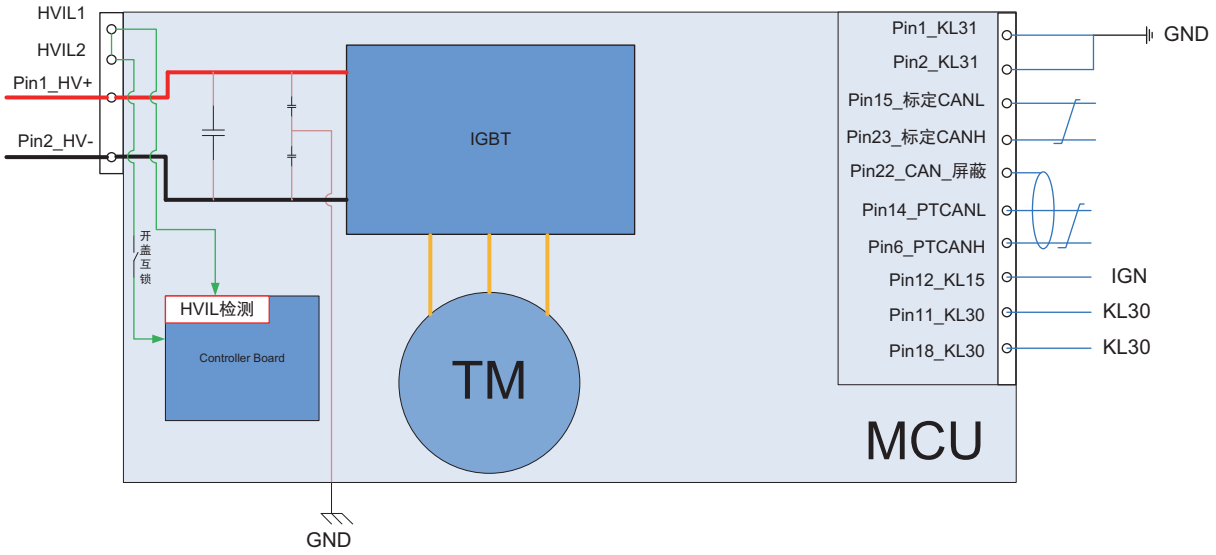


EV901001

| Troubleshooting steps | | |
|---|---|---|
| Step 1 | General inspection. | |
| | | 1 Check the fuse for damage.<br>2 Check battery capacity.<br>3 Check the harness plug of PEU for damage, poor contact, aging and looseness.<br>4 Check whether the result is normal or not? |
| | | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | | |
| Step 2 | Check fault codes. | |
| | | 1 Connect the fault diagnosis instrument to the diagnosis interface.<br>2 Turn the ignition switch to ON position.<br>3 Diagnose the PEU with diagnostic apparatus.<br>4 Is there any other fault code except for P1936-11/P1937-00/P1938-00? |
| | | **YES →** Refer to:DTC Summary list(PEU). |
| **NO ↓** | | |
| Step 3 | Check the connecting cable of PEU. | |
| | | 1 Turn the ignition switch to OFF.<br>2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual.<br>3 Disconnect the harness plug battery pack high voltage.<br>4 Disconnect the high voltage harness plug of PEU.<br>5 Check whether the PEU connection cable is rotten, damaged, and water enters.<br>6 Check whether the result is normal or not? |
| | | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | | |

| | |
|---|---|
| Step 4 | Perform initialization. |
| | 1 Turn the ignition switch to OFF.<br>2 Connect the fault diagnosis instrument to the diagnosis interface.<br>3 Turn the ignition switch to ON.<br>4 The governor was initialized with the diagnostic instrument.<br>5 Can the governor be initialized and is the governor restored? |
| | **NO →** Repair or change the governor. |
| **YES ↓** | |
| Step 5 | Check PEU internal circuit. |
| | 1 Turn the ignition switch to OFF.<br>2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual.<br>3 Open the PEU end cover.<br>4 Check the PEU internal circuit and components for obvious damage or . ablation.<br>5 Check whether the result is normal or not? |
| | **NO →** Repair or replace the faulted parts. |
| **YES ↓** | |
| Step 6 | Test whether PEU is norm. |
| | 1 Turn the ignition switch to OFF.<br>2 Disconnect and check the harness plug EB1002 of PEU.<br>3 Check and repair.<br>• Corrosion(install new adapting piece or terminal-cleaning module and pin).<br>• Pin damaged or bent-install new terminal/pin.<br>4 Fly out of pins-install new pins as needed.<br>5 Reconnect the PEU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed.<br>6 Run the system and determine if the problem persists? |
| | **YES →** Change the PEU Module |
| **NO ↓** | |
| At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems. | |
| **Next Step ↓** | |

Diagnosis end.