
P1942-00、 P1943-00、 P1944-1C、 P1945-1C、 P194B-00、 P1946-1C

Fault diagnosis code
P1942-00：Power30P voltage over range
P1943-00：V3P3 voltage out of range
P1944-1C：V15P_BB_Filt voltage out of range
P1945-1C：V5PSens voltage out of range
P194B-00：V5P_BB voltage out of range
P1946-1C：V15P voltage over range
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • PEU fault • High voltage insulation fault • The IGBT voltage circuit in the PEU is faulty
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1942-00
Power30P voltage is above the upper threshold （20V） or not below the lower threshold （5.5V）
P1943-00
V3P3 voltage is above the upper threshold （3.45V） or not below the lower threshold （3.1V）
P1944-1C
V15P_BB_Filt voltage is above the upper threshold （15.75V） or not below the lower threshold （13.5V）
P1945-1C
V5PSens voltage is above the upper threshold （6V） or not below the lower threshold （4.75V）
P194B-00
V5P_BB voltage is above the upper threshold （5.25V） or not below the lower threshold （4.75V）
P1946-1C
V15P voltage is above the upper threshold （18V） or not below the lower threshold （13V）
To set the effect of a fault code condition
When vehicle lost power, there is forced power at high speed

Circuit diagram

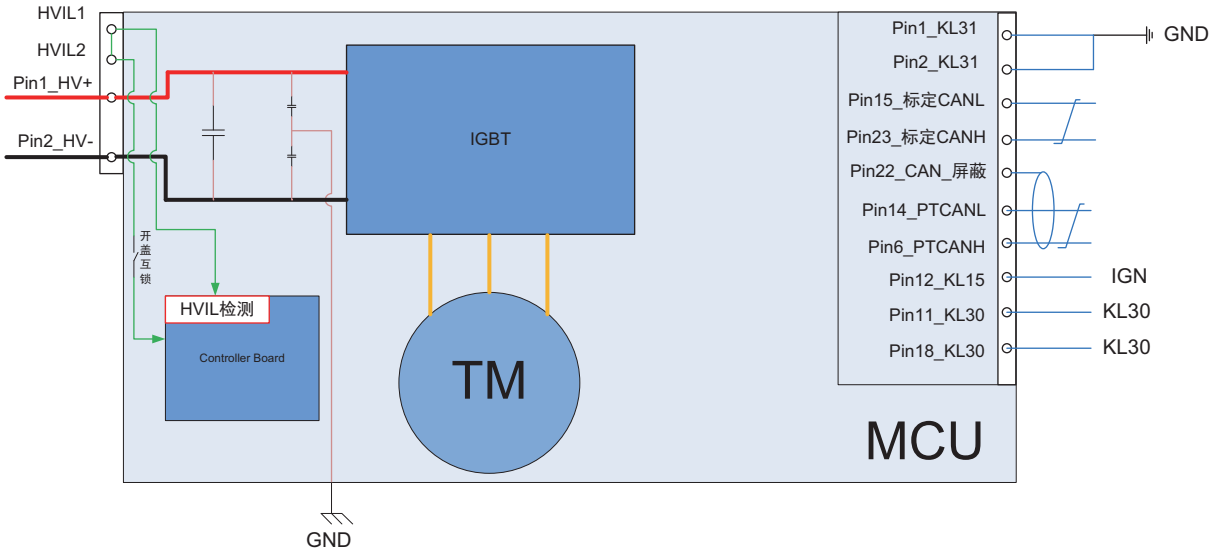

EV901001

Troubleshooting steps	
Step 1	General inspection.
	1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of PEU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the PEU with diagnostic apparatus. 4 If there is any fault code except for P1942-00、P1943-00、P1944-1C、 P1945-1C、 P194B-00、 P1946-1C?
	YES → Refer to:DTC Summary list(PEU).
NO ↓	
Step 3	Check the connecting cable of PEU.
	1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Disconnect the harness plug battery pack high voltage. 4 Disconnect the high voltage harness plug of PEU. 5 Check whether the PEU connection cable is rotten, damaged, and water enters. 6 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 4	Check the insulation of PEU.
	1 Use a megohm meter to check the insulation resistance of the PEU housing and grounding according to the procedure in the maintenance manual. **Standard value: >20MΩ** 2 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 5	Check the insulation of driving motor.	
		1 Use a megohm meter to check the insulation resistance of the driving motor housing and grounding according to the procedure in the maintenance manual. **Standard value: >20MΩ** 2 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 6	Perform initialization.	
		1 Turn the ignition switch to OFF. 2 Connect the fault diagnosis instrument to the diagnosis interface. 3 Turn the ignition switch to ON. 4 The governor was initialized with the diagnostic instrument. 5 Can the governor be initialized and is the governor restored?
		NO → Repair or change the governor.
YES ↓		
Step 7	Check PEU internal circuit.	
		1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Open the PEU end cover. 4 Check the PEU internal circuit and components for obvious damage or . ablation. 5 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 8	Test whether PEU is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1002 of PEU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the PEU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
	YES → Change the PEU Module
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	
Diagnosis end.	