
P1A52-92、 P1A53-92

Fault diagnosis code
P1A52-92：Abnormal active short circuit operation
P1A53-92：Active short circuit running time is too long
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • PEU module fault • High-voltage relay fault • PEU high-voltage relay circuit fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1A52-92
When the drive state is ASC and the electric speed is greater than 1500rpm, the stator current is less than the current threshold (100A） or the bus terminal voltage is greater than the voltage threshold （530V） .
P1A53-92
When the drive state is ASC, the IGBT temperature exceeds 80 ℃ (for 100ms) or the IGBT temperature exceeds 90 ℃ (for 30ms)
To set the effect of a fault code condition
When vehicle lost power, there is forced power at high speed

Circuit diagram

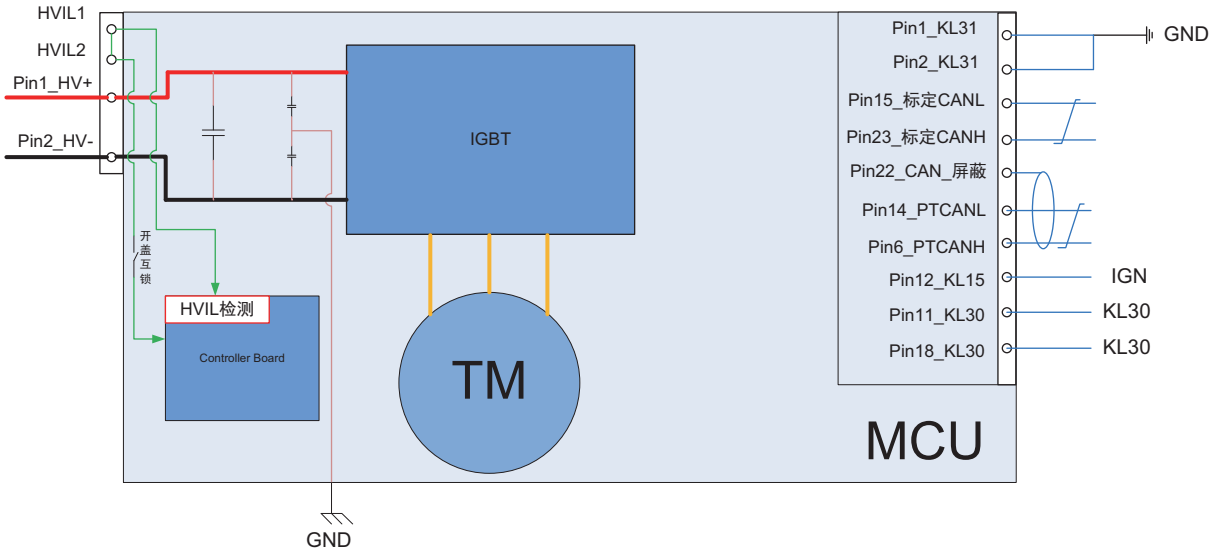

EV901001

Troubleshooting steps	
Step 1	General inspection.
	1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of PEU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the PEU with diagnostic apparatus. 4 If there is any fault code except for P1A52-92,P1A53-92?
	YES → Refer to:DTC Summary list(PEU).
NO ↓	
Step 3	Check BMS.
	1 Turn the ignition switch to OFF. 2 Connect the fault diagnosis instrument to the diagnosis interface. 3 Turn the ignition switch to ON position. 4 Diagnose the BMS with diagnostic apparatus. 5 Test whether the faulted code is existed.
	YES → DTC diagnosis is performed based on fault codes.
NO ↓	
Step 4	Check the connecting cable of PEU.
	1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Disconnect the harness plug battery pack high voltage. 4 Disconnect the high voltage harness plug of PEU. 5 Check whether the PEU connection cable is rotten, damaged, and water enters. 6 Check whether the result is normal or not?

	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Perform initialization.
	1 Turn the ignition switch to OFF. 2 Connect the fault diagnosis instrument to the diagnosis interface. 3 Turn the ignition switch to ON. 4 The governor was initialized with the diagnostic instrument. 5 Can the governor be initialized and is the governor restored?
	NO → Repair or change the governor.
YES ↓	
Step 6	Check the insulation of PEU.
	1 Use a megohm meter to check the insulation resistance of the PEU housing and grounding according to the procedure in the maintenance manual. **Standard value: >20MΩ** 2 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 7	Check the insulation of driving motor.
	1 Use a megohm meter to check the insulation resistance of the driving motor housing and grounding according to the procedure in the maintenance manual. **Standard value: >20MΩ** 2 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 8	Check the high-voltage relay circuit.
	1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Open the PEU end cover. 4 Check whether the high-voltage relay circuit exist the situation of open or short circuit. 5 Check whether the high-voltage relay circuit exist the situation of shorting to battery. 6 Check whether the result is normal or not?

	NO → Repair or replace the faulted parts.
YES ↓	
Step 9	Check the high-voltage relay monitoring module.
	1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Open the PEU end cover. 4 Check the high-voltage relay monitoring module for damage. 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 10	Test whether PEU is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1002 of PEU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the PEU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
	YES → Change the PEU Module
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	
Diagnosis end.	