
P0C19-00、 P1921-00、 P1922-00、 P1923-00

Fault diagnosis code
P0C19-00：Torque monitoring fault
P1921-00：Torque monitoring fault 1
P1922-00：Torque monitoring fault 2
P1923-00：Torque monitoring fault 3
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • PEU module fault • The torque monitoring circuit of PEU fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P0C19-00
The difference between the command torque and the estimated torque is more than 30Nm
P1921-00
Enabling conditions for diagnosis: 1、 The received torque request CAN signal is valid; 2、 The mode command is torque control; 3、 Motor speed is less than 50rpm(calibration threshold); 4、 When the torque estimation function is normal;\ When the torque request is positive, the estimated torque is less than -60N; or when the torque request is negative, the estimated torque is greater than 60N
P1922-00
Enabling conditions for diagnosis: 1、 The received torque request CAN signal is valid; 2、 The mode command is torque control; 3, The speed of the motor is greater than 50rpm ； The torque estimation function is normal; When the torque request is positive, the estimated torque is less than -60N or the difference between the estimated torque and the torque request is greater than 60Nm; When the torque request is negative, the estimated torque is greater than 60N or the difference between the estimated torque and the torque request is greater than -60Nm.
P1923-00
To set the effect of a fault code condition

When vehicle lost power, there is forced power at high speed

Circuit diagram

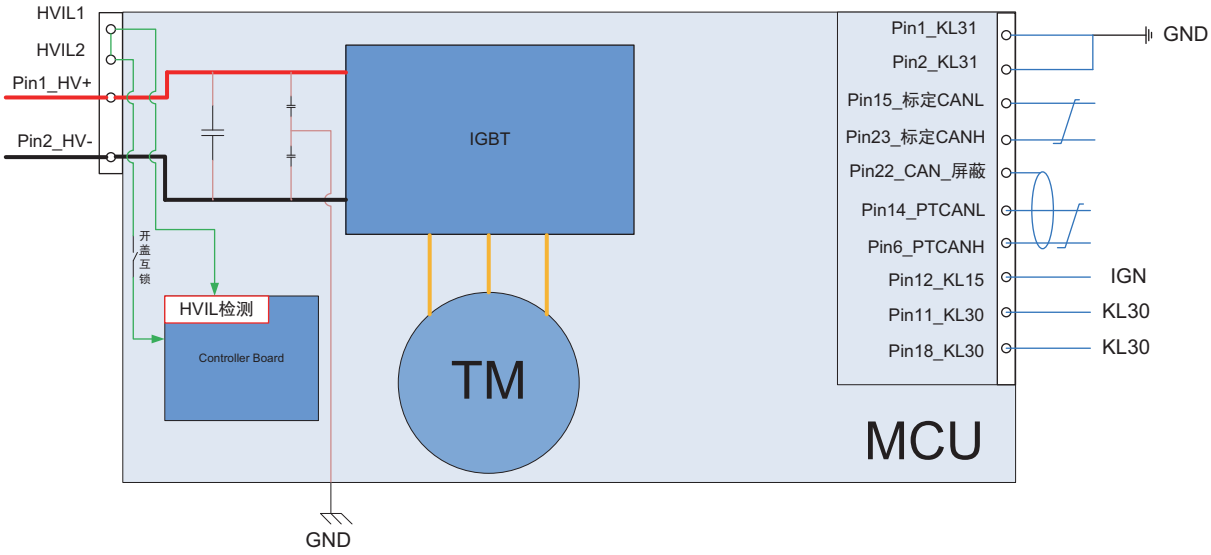

EV901001

Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of PEU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the PEU with diagnostic apparatus. 4 Is there any other fault code except for P0C19-00、P1921-00、 P1922-00、 P1923-00?
		YES → Refer to:DTC Summary list(PEU).
NO ↓		
Step 3	Check the connecting cable of PEU.	
		1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Disconnect the harness plug battery pack high voltage. 4 Disconnect the high voltage harness plug of PEU. 5 Check whether the PEU connection cable is rotten, damaged, and water enters. 6 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 4	Check the insulation of PEU.	
		1 Use a megohm meter to check the insulation resistance of the PEU housing and grounding according to the procedure in the maintenance manual. **Standard value: >20MΩ** 2 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 5	Check the insulation of driving motor.
	1 Use a megohm meter to check the insulation resistance of the driving motor housing and grounding according to the procedure in the maintenance manual. **Standard value: >20MΩ** 2 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 6	Perform initialization.
	1 Turn the ignition switch to OFF. 2 Connect the fault diagnosis instrument to the diagnosis interface. 3 Turn the ignition switch to ON. 4 The governor was initialized with the diagnostic instrument. 5 Can the governor be initialized and is the governor restored?
	NO → Repair or change the governor.
YES ↓	
Step 7	Check PEU internal circuit.
	1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Open the PEU end cover. 4 Check the PEU internal circuit and components for obvious damage or . ablation. 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 8	Test whether PEU is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1002 of PEU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the PEU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
	YES → Change the PEU Module
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	
Diagnosis end.	