
P1927-00、 P1928-00、 P1929-12、 P192A-11

Fault diagnosis code
P1927-00：Motor temperature out of range
P1928-00：Motor temperature sensor signal shorted to power supply
P1929-12：Motor temperature sensor signal shorted to ground
P192A-11：Motor temperature sensor signal is open
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • PEU module fault • The motor temperature circuit of PEU fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1927-00
Motor temperature is above the upper threshold （220 ℃） or not below the lower threshold （-50 ℃）
P1928-00
AD value of motor temperature sensor signal is greater than upper threshold （3931）
P1929-12
AD value of motor temperature sensor signal is greater than upper threshold （163）
P192A-11
AD value of motor temperature sensor signal is greater than upper threshold （3931）
To set the effect of a fault code condition

Circuit diagram

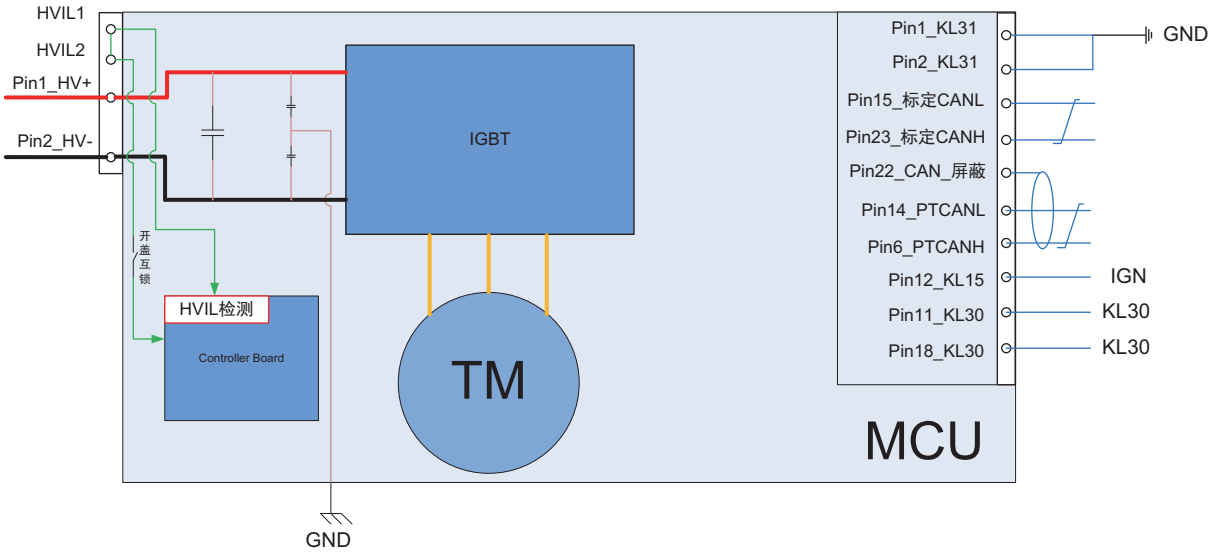

EV901001

Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of PEU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the PEU with diagnostic apparatus. 4 Is there any other fault code except for P1927-00、P1928-00、 P1929-12、 P192A-11?
		YES → Refer to:DTC Summary list(PEU).
NO ↓		
Step 3	Check the connecting cable of PEU.	
		1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Disconnect the harness plug battery pack high voltage. 4 Disconnect the high voltage harness plug of PEU. 5 Check whether the PEU connection cable is rotten, damaged, and water enters. 6 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 4	Perform initialization.
	1 Turn the ignition switch to OFF. 2 Connect the fault diagnosis instrument to the diagnosis interface. 3 Turn the ignition switch to ON. 4 The governor was initialized with the diagnostic instrument. 5 Can the governor be initialized and is the governor restored?
	NO → Repair or change the governor.
YES ↓	
Step 5	Check PEU internal circuit.
	1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Open the PEU end cover. 4 Check the PEU internal circuit and components for obvious damage or . ablation. 5 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 6	Test whether PEU is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1002 of PEU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the PEU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
	YES → Change the PEU Module
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	

Diagnosis end.