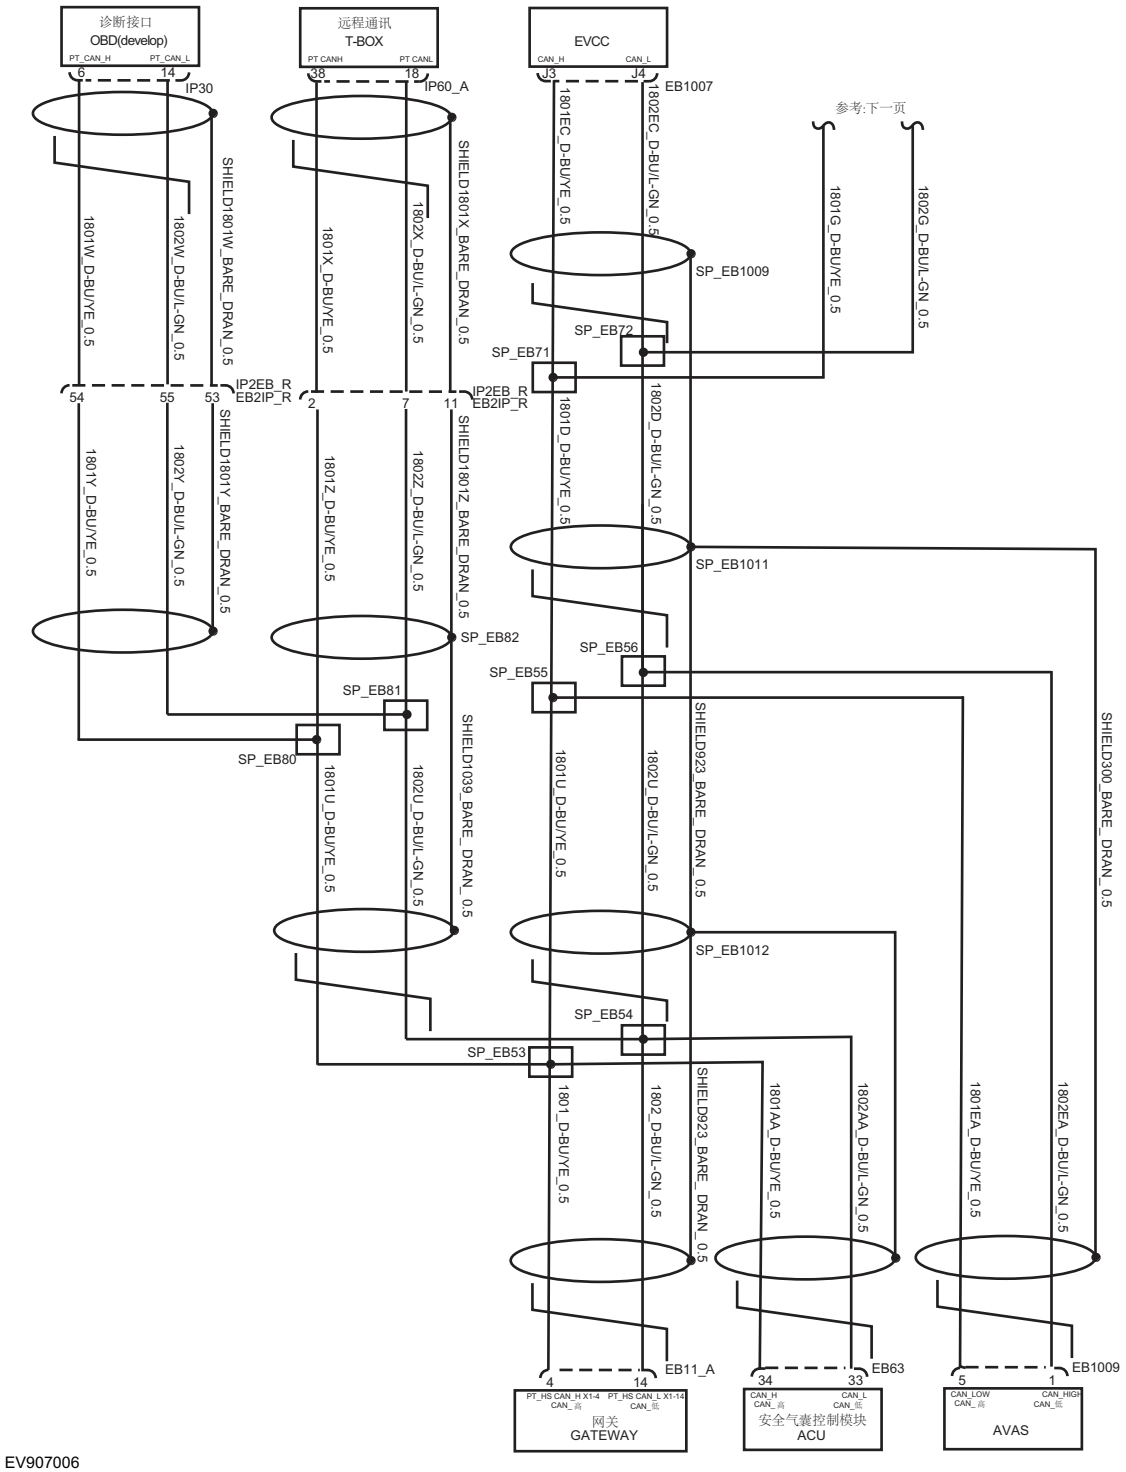
P1A8E-08、P1AA4-00、P1A48-00、P1A49-00、U0073-88、P1A8F-08、U0140-87、P1AA5-00、P194A-00

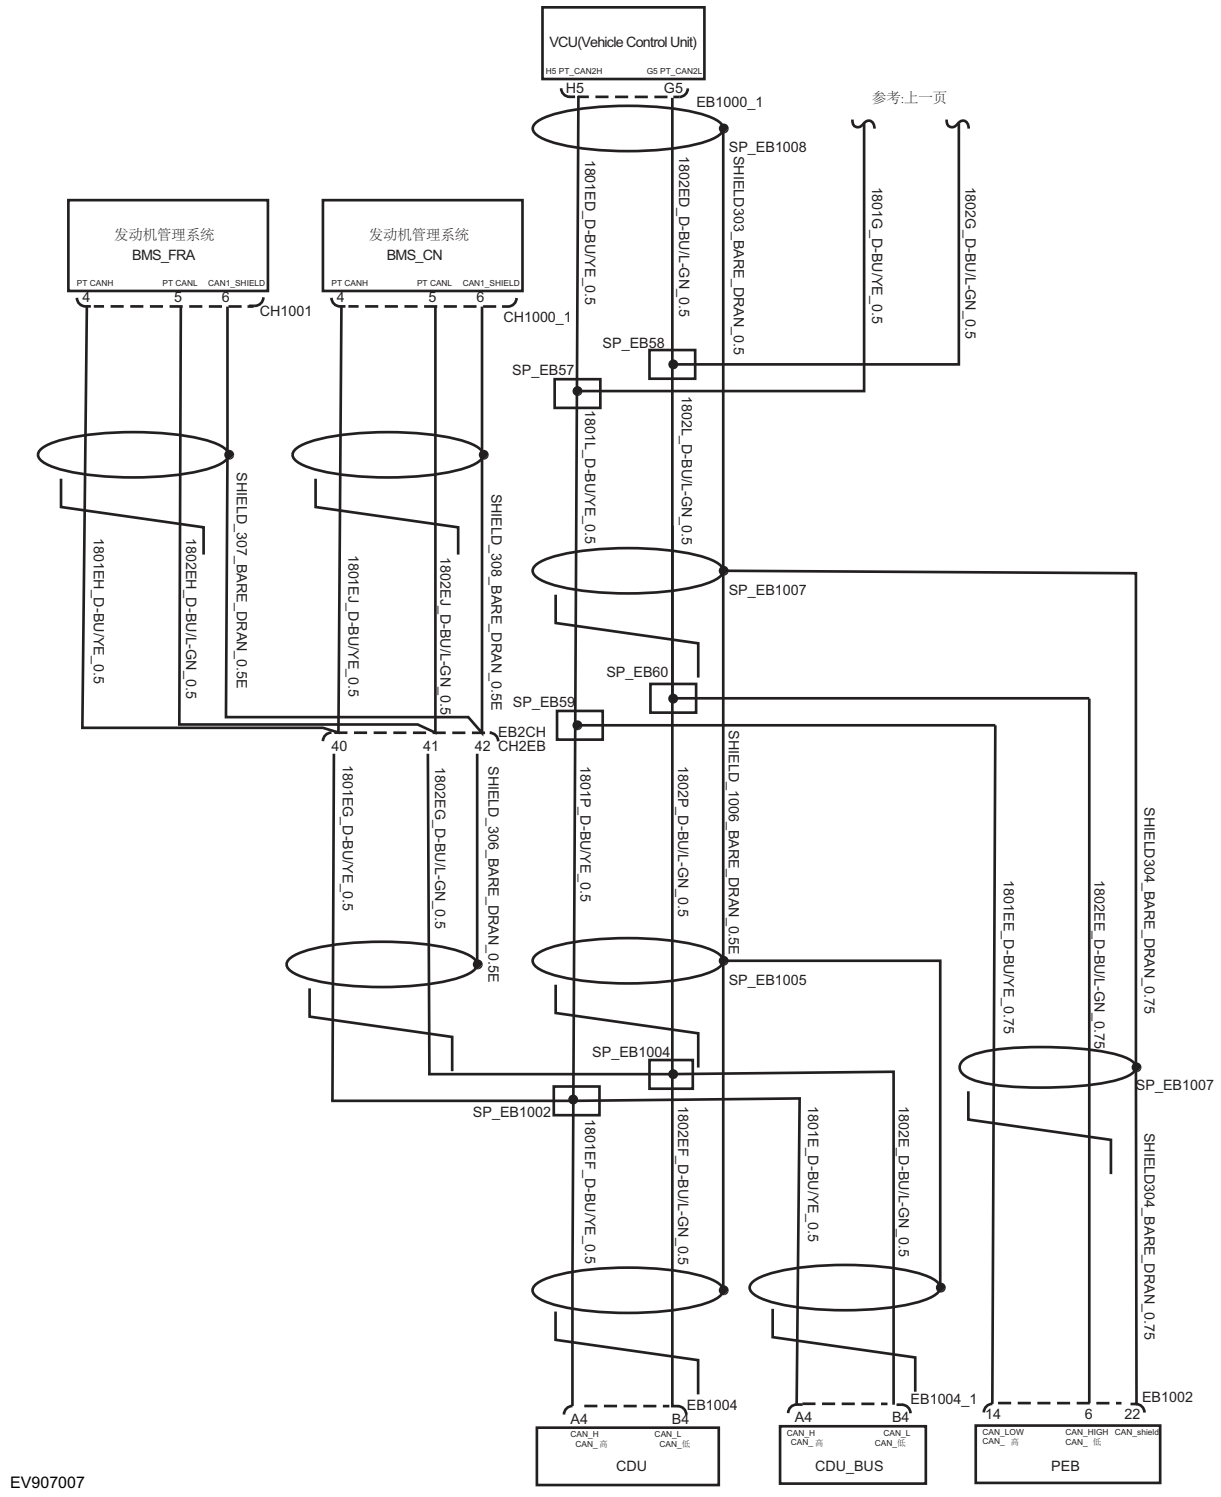
Fault diagnosis code
P1A8E-08：BMS message length error
P1A48-00：BMS receive timeout alarm
P1A49-00：BMS receive timeout fault
U0073-88：Can bus off
P1A8F-08：VCU packet length error
P1AA4-00：VCU receive timeout alarm
P1AA5-00：VCU receive timeout fault
P194A-00：VCU low-level node receive timeout
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • PEU Module
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1A8E-08
P1A48-00
KL15 post-power-on delay detection of 1.5s, BMS reception timeout of 10 times the period or more than 500ms
P1A49-00
U0073-88
The send error counter value is greater than 255
P1A8F-08
P1AA4-00
KL15 post-power-on delay detection of 1.5s, VCU node 0x211 or 0x282 receives a timeout of 10 times the period more than 500ms
P1AA5-00
P194A-00
KL15 post-power-on delay detection of 1.5s, VCU 0x1E2 receives timeout of 10 times the period or more than 500ms

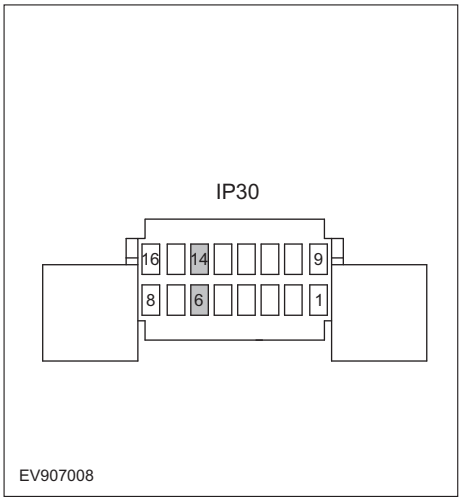
To set the effect of a fault code condition
Description of circuit diagram
The device is connected to serial data circuit, which is used to monitor the communication situation of serial data during normal operation of vehicle. The devices will exchange the operation information and commands mutually. The device has programming information required to be exchanged on the serial data circuit. The receiver device will also monitor such information; in addition, there are some regular information indication transmitter devices available.

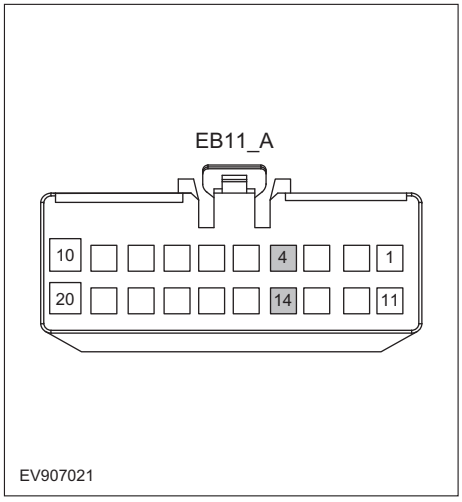
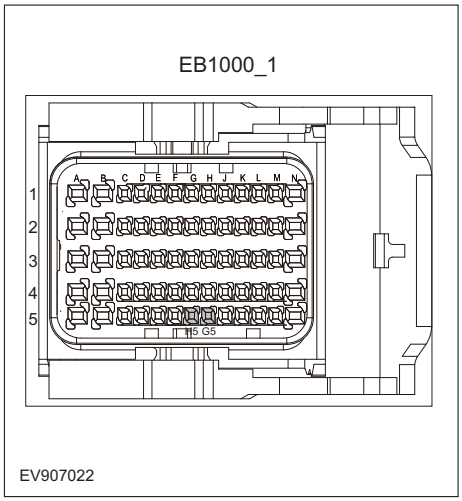
Circuit diagram



Circuit diagram



<table>
<tr><td colspan="3">Troubleshooting steps</td></tr>
<tr><td>Step 1</td><td colspan="2">General inspection.</td></tr>
<tr><td colspan="2"></td><td>1 Check the fuse for damage.
2 Check battery capacity.
3 Check the harness plug of CDU for damage, poor contact, aging and looseness.
4 Check whether the result is normal or not?</td></tr>
<tr><td colspan="2"></td><td>NO ➞ Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">YES ↓</td></tr>
<tr><td>Step 2</td><td colspan="2">Check fault codes.</td></tr>
<tr><td colspan="2"></td><td>1 Connect the fault diagnosis instrument to the diagnosis interface.
2 Turn the ignition switch to ON position.
3 Diagnose the CDU with diagnostic apparatus.
4 If there is any fault code except for P1A8E-08, P1A48-00, P1A49-00、U0073-88、P1A8F-08、P1AA4-00、P1AA5-00、 P194A-00?</td></tr>
<tr><td colspan="2"></td><td>YES ➞ Refer to:DTC Summary list(PEU).</td></tr>
<tr><td colspan="3">NO ↓</td></tr>
<tr><td>Step 3</td><td colspan="2">Inspection for CAN communication network completeness.</td></tr>
<tr><td colspan="2"> 
</td><td>1 Turn the ignition switch to OFF.
2 Measure the resistance between the harness terminals of diagnose interface.
Measuring circuit: resistance between terminal 6 and terminal 14 on plug IP30.
Standard value: ≈ 60Ω
3 Check whether the result is normal or not?</td></tr>
<tr><td colspan="2"></td><td>NO ➞ Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">YES ↓</td></tr>
</table>

Step 4	Check the terminating resistance of GAW module and VCU resistor.
 	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug EB11_A of network gateway module. 3 Measure the resistance between harness terminals on network gateway module. Measuring circuit: the resistance between terminal 4 and 14 on plug EB11_A. **Standard value: 110~130Ω** 4 Connect the harness plug EB11_A of network gateway module. 5 Disconnect the harness plug EB1000_1 of GAW module. 6 Measure the resistance between harness terminals on GAW module. Measuring circuit: resistance between terminal H5 and terminal G5 on plug EB1000_1. **Standard value: 110~130Ω** 7 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	

Step 5	Test whether PEU is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1002 of PEU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the PEU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
	YES → Change the PEU Module
NO ↓	

At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.
Next Step ↓
Diagnosis end.