
P1AD7-A2、 P1AD8-A2、 P1AD9-A2

Fault diagnosis code
P1AD7-A2：2002 U-phase lower bridge Vee undervoltage error
P1AD8-A2：2002 V-phase lower bridge Vee undervoltage error
P1AD9-A2：2002 W-phase lower bridge Vee undervoltage error
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • PEU module fault • The PEU lower bridge Vee circuit fault
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1AD7-A2
P1AD8-A2
P1AD9-A2
To set the effect of a fault code condition

Circuit diagram

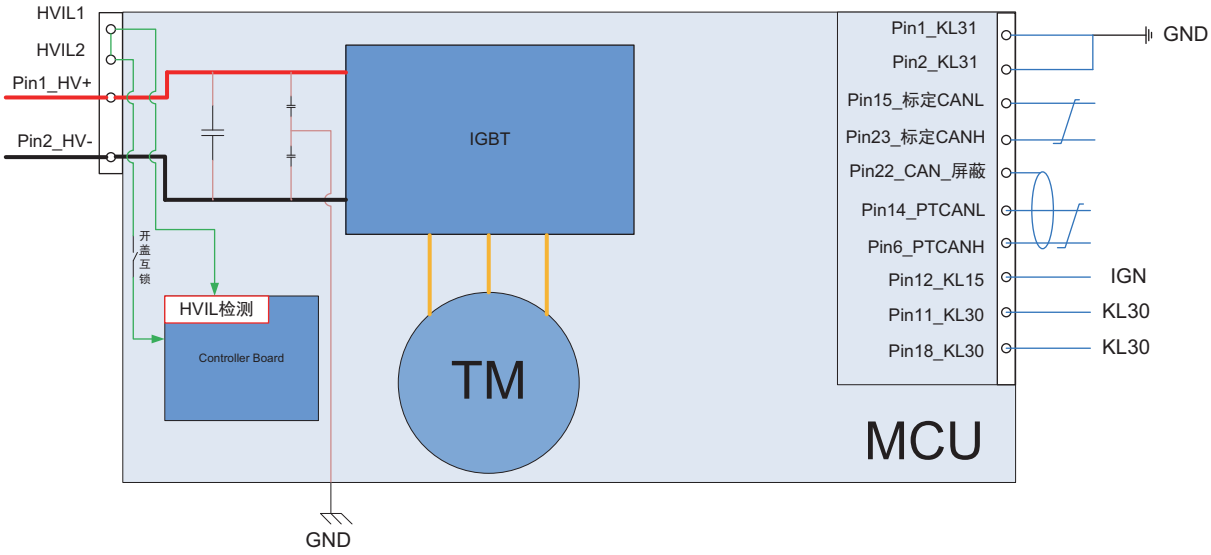

EV901001

Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of PEU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the PEU with diagnostic apparatus. 4 Is there any other fault code except for P1AD7-A2/ P1AD8-A2/P1AD9-A2?
		YES → Refer to:DTC Summary list(PEU).
NO ↓		
Step 3	Check the connecting cable of PEU.	
		1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Disconnect the harness plug battery pack high voltage. 4 Disconnect the high voltage harness plug of PEU. 5 Check whether the PEU connection cable is rotten, damaged, and water enters. 6 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		

Step 4	Perform initialization.	
		1 Turn the ignition switch to OFF. 2 Connect the fault diagnosis instrument to the diagnosis interface. 3 Turn the ignition switch to ON. 4 The governor was initialized with the diagnostic instrument. 5 Can the governor be initialized and is the governor restored?
		NO → Repair or change the governor.
YES ↓		
Step 5	Check PEU internal circuit.	
		1 Turn the ignition switch to OFF. 2 Make protective preparations according to the safety operation specifications of the high voltage voltage in the maintenance manual. 3 Open the PEU end cover. 4 Check the PEU internal circuit and components for obvious damage or . ablation. 5 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 6	Test whether PEU is norm.	
		1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1002 of PEU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. 4 Fly out of pins-install new pins as needed. 5 Reconnect the PEU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 6 Run the system and determine if the problem persists?
		YES → Change the PEU Module
NO ↓		
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.		
Next Step ↓		

Diagnosis end.