


P1C00、 P1C01、 P1C03

Fault diagnosis code
P1C00：DEM_stMotCoTSenSBCfmd
P1C01：DEM_stMotCoTSenSGCfmd
P1C03：DEM_stMotCoTSenPlaus
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Circuit,terminal and adapting piece fault • VCU module fault • The inlet temperature sensor of the motor controller is faulty
Conditions for fault code operation
Turn the ignition switch to ON position.
Conditions for fault code setting
P1C00
The voltage of the temperature sensor at the water inlet of the charger is greater than or equal to 4.9V
P1C01
The voltage of the temperature sensor at the water inlet of the charger is lower than or equal to 4.9V
P1C03
The diagnosis has been disabled
To set the effect of a fault code condition
Description of circuit diagram
The VCU module monitors the the temperature sensor at the water inlet via low level reference circuit and signal circuit.

Circuit diagram

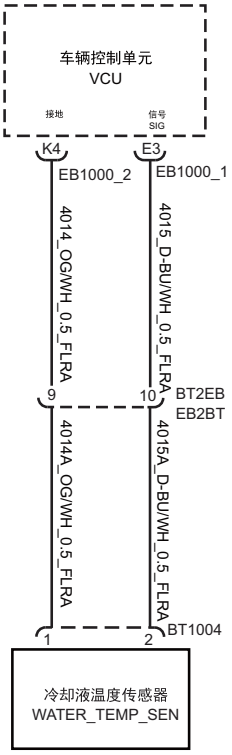




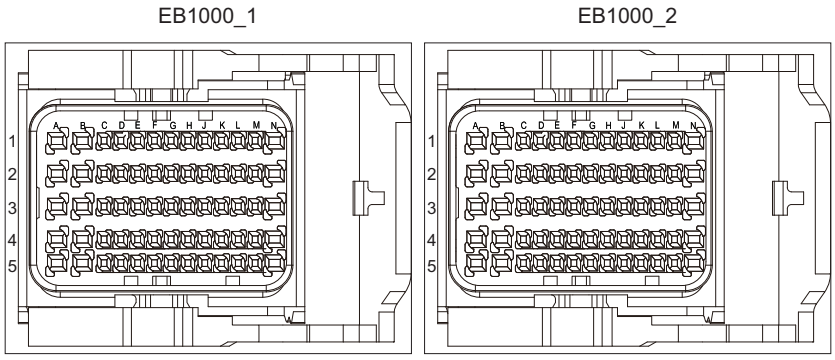


EV901206

Troubleshooting steps		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the harness plug of the temperature sensor at the water inlet of the motor controller, VCU for damage, poor contact, aging and looseness. 4 Check whether the result is normal or not?
		NO → Repair or replace the faulted parts.
YES ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the VCU with diagnostic apparatus. 4 Is there any other fault code except for P1C00/P1C01/P1C03?
		YES → Refer to:DTC Summary list(VCU).
NO ↓		

Step 3	Check the circuit of temperature sensor at the water inlet of the motor controller(open circuit).

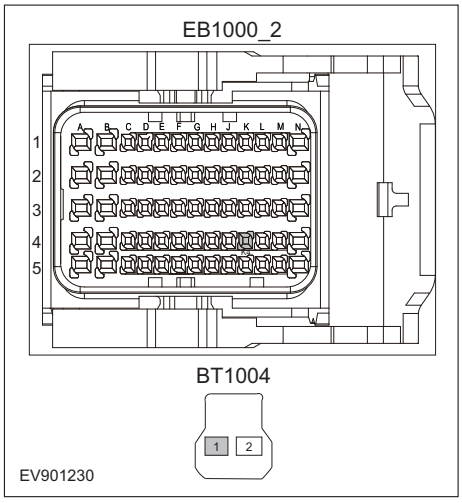

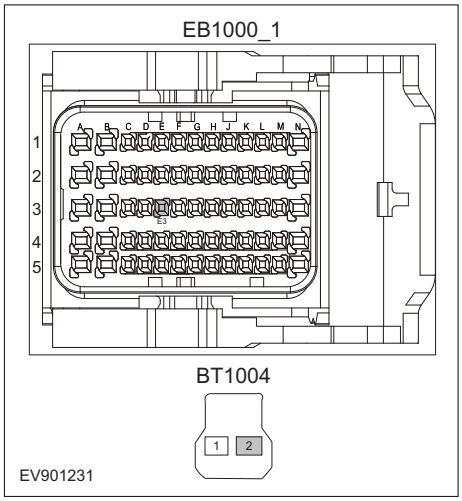

1 Turn the ignition switch to OFF.

2 Disconnect the harness plug BT1004 of temperature sensor at the water inlet of the motor controller.

3 Disconnect the harness plug EB1000_1, EB1000_2 of VCU module.

4 Measure the resistance between the harness terminal of temperature sensor at the water inlet of the motor controller and the VCU.

Measuring circuit: resistance between terminal 1 on plug BT1004 and terminal K4 on plug EB1000_2.



Measuring circuit: resistance between terminal 2 on plug BT1004 and terminal E3 on plug EB1000_1.

Standard value: ≈ 0Ω

5 Check whether the result is normal or not?

NO → Repair or replace the faulted parts.

YES ↓

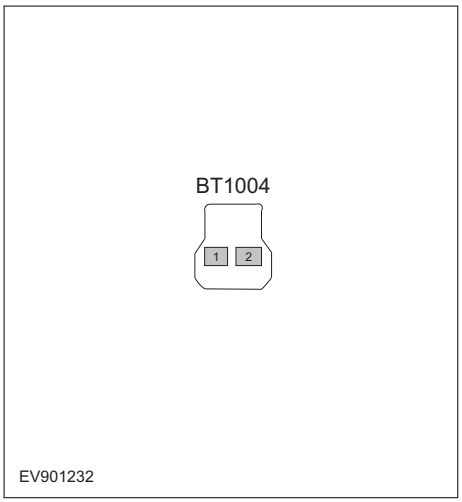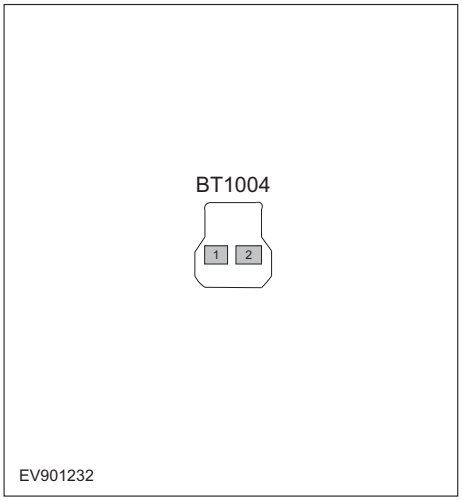Step 4	Check the circuit of temperature sensor at the water inlet of the motor controller(short circuit).
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness plug of temperature sensor at the water inlet of the motor controller and ground. Measuring circuit: resistance between terminal 1 on plug BT1004 and ground. Measuring circuit: resistance between terminal 2 on plug BT1004 and ground. **Standard value: ∞** 3 Measure the voltage between the harness plug of temperature sensor at the water inlet of the motor controller and ground. Measuring circuit: voltage between terminal 1 on plug BT1004 and ground. Measuring circuit: voltage between terminal 2 on plug BT1004 and ground. **Standard value: ≈ 0V** 4 Check whether the result is normal or not?
	NO → Repair or replace the faulted parts.
YES ↓	
Step 5	Check the circuit of temperature sensor at the water inlet of the motor controller(components).
	1 Measure the resistance of terminals on temperature sensor at the water inlet of the motor controller directly. Measuring circuit: resistance between terminal 1 and terminal 2 on plug BT1004. **Standard value:** 2 Measure the resistance between the harness plug of temperature sensor at the water inlet of the motor controller and the housing. Measuring circuit: resistance between terminal 1 on plug BT1004 and the housing. Measuring circuit: resistance between terminal 2 on plug BT1004 and the housing. **Standard value: ∞** 3 Check whether the result is normal or not?
	NO → Replace temperature sensor at the water inlet of the motor controller.
YES ↓	

Step 6	Test whether VCU is norm.
	1 Turn the ignition switch to OFF. 2 Disconnect and check the harness plug EB1000_1, IP55_A of VCU. 3 Check and repair. • Corrosion(install new adapting piece or terminal-cleaning module and pin). • Pin damaged or bent-install new terminal/pin. • Fly out of pins-install new pins as needed. 4 Reconnect the VCU plug and all other previously disconnected plug. Make sure the pin is properly positioned and fixed. 5 Run the system and determine if the problem persists?
	YES → Change the VCU Module
NO ↓	
At this point the system is functioning normally. The problem may be caused by module connections. Address the root cause of any connector or pin problems.	
Next Step ↓	
Diagnosis end.	