



Step 4	Check the control circuit of oil metering unit (open circuit).
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Measure the resistance between the harness plug of oil metering unit and engine control module. Measuring circuit: the resistance between terminal 1 of EN11 plug and No.60 terminal of EN01 plug. **Standard value: ≈ 0Ω** 4 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	
Step 5	Check the control circuit of oil metering unit (short circuit).
	1 Check the resistance between the harness plug of oil metering unit and ground. Measure circuit: The resistance between terminal 1 of EN11 plug and ground. **Standard value: ∞** 2 Check the voltage between the harness plug of oil metering unit and ground. Measure circuit: The voltage between terminal 1 of EN11 plug and ground. **Standard value: 0V** 3 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	

Step 6	Check the control signal of oil metering unit.
	1 Connect the harness plug of engine control unit. 2 Turn the ignition switch to ON position. 3 Check the voltage between the plug of oil metering unit and ground. Measuring circuit: the voltage between terminal 1 of EN11 plug and ground. **Standard value: 3.0~4.0V** 4 Check whether the result is normal.
	No → Replace engine control module.
Yes ↓	
Step 7	Check the oil metering unit (parts inspection).
	1 Measure the resistance of terminal of oil metering unit. Measuring circuit: the resistance between terminal 1 and terminal 2 of oil metering unit. **Standard value: 2.6~3.15Ω (20 ℃)** 2 Check whether the result is normal.
	No → Replace and check the oil metering unit.
Next ↓	
Step 8	Complete the check and confirm whether the system works normally nor not.


P0251、P0252、 P1092

Description of fault diagnosis codes
P0251-11：short circuit to ground of metering unit output
P0251-12：short circuit to battery of metering unit output
P0251-F1：open load of metering unit output
P0251-F2：maximum positive deviation of rail pressure exceeded(MeUn control)
P0251-F4：maximum negative rail pressure deviation with metering unit on lower limit is exceeded
P0252-92：over teperature of device driver of metering unit
P1092-F5：maximum positive deviation of rail pressure exceeded concerning set flow of fuel
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Fault in harness or harness plug • Oil metering unit fault • Engine control module fault.
Description of circuit diagram
The oil gauging unit is a proportional solenoid valve, controlled by the engine control module, which can control the oil amount getting into the high-pressure oil pump, so as control the common rail pressure.


Circuit diagram

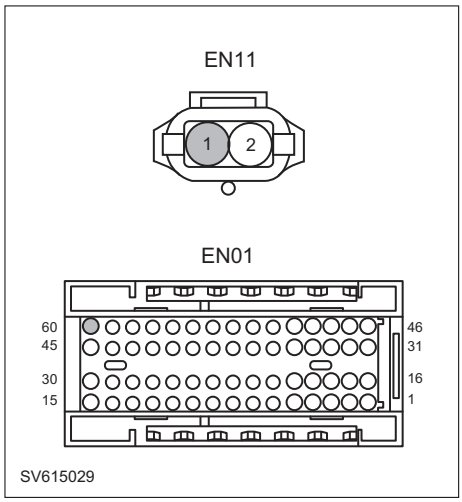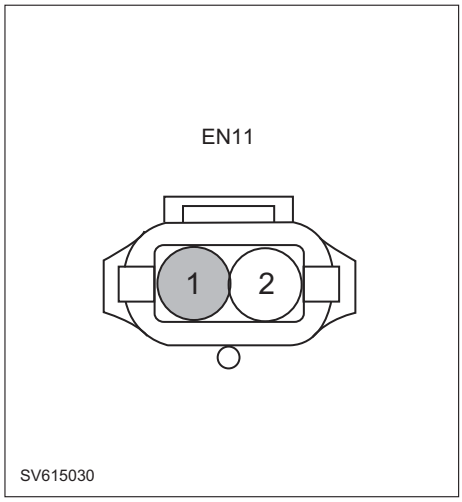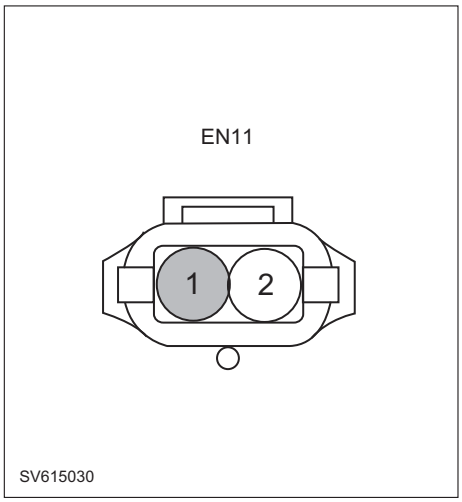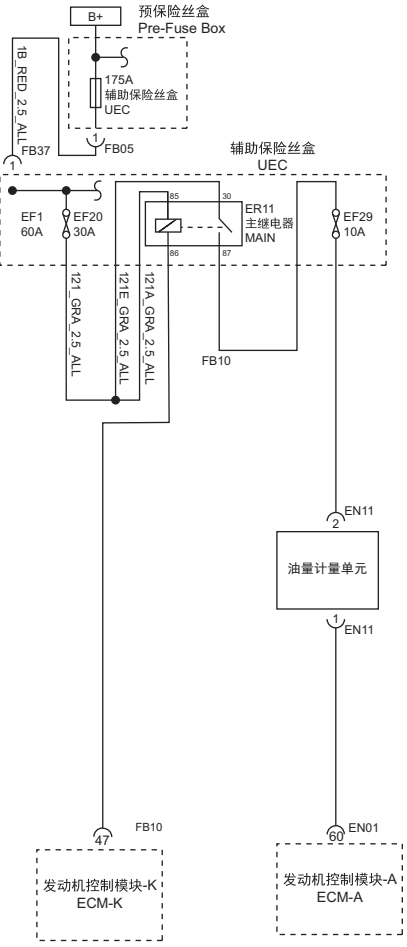


EN11

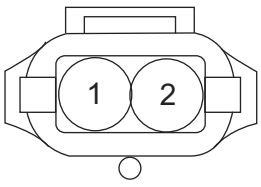

EN01

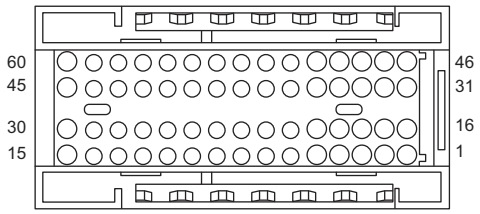

SV615021

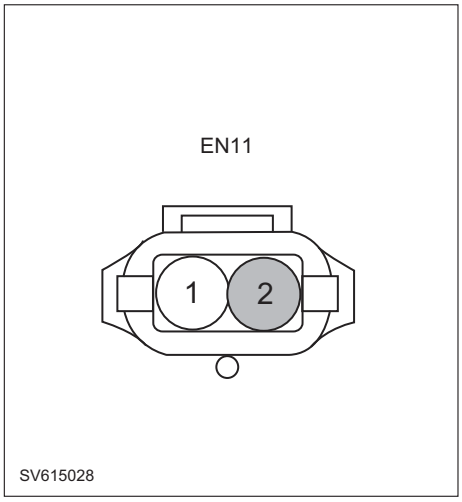Troubleshooting procedures		
Step 1	General inspection.	
		1 Check the fuse EF29 for damage. 2 Check battery capacity. 3 Check the harness plugs of engine control module and oil metering unit for damage, poor contact, aging and looseness. 4 Check whether the result is normal.
		No → Repair or replace the faulted parts.
Yes ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to diagnosis interface. 2 Turn the ignition switch to ON. 3 Diagnose the engine control system with diagnostic apparatus. 4 Are there any other fault codes except for P0251, P0252 and P1092?
		Yes → Reference:DTC Summary List (EU5).
No ↓		
Step 3	Check the power supply circuit of oil metering unit.	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of high pressure oil pump. 3 Turn the ignition switch to ON. 4 Check the voltage between the harness plug of oil metering unit and ground. Measuring circuit: the voltage between terminal 2 of EN11 plug and ground. **Standard value: 10~14V** 5 Check whether the result is normal?
		No → Repair or replace the faulted parts.
Yes ↓		