
P060B、P060C、P062B、P062F、P1006、P1008、P1009、P1012 - P1019、P101A - P101F、P1020、P1031、P1090、P1091、P110A - P110E、P1600、P1601、P1608、P1609、P160A 、P16E6、P16E7


Description of fault diagnosis codes
P060B-A1：ECU internal diagnositic error (MoC)
P060B-00：ECU internal diagnositic error (MoC)
P060B-F0：ECU internal diagnositic error (MoC)
P060C-13：ECU internal diagnositic error (MoC)
P060C-F0：ECU internal diagnositic error (MoC)
P060C-F1：ECU internal diagnositic error (MoC)
P060C-F2：ECU internal diagnositic error (MoC)
P060C-F3：ECU internal diagnositic error (MoC)
P060C-F4：ECU internal diagnositic error (MoC)
P060C-F4：ECU internal diagnositic error (MoC)
P060C-F5：ECU internal diagnositic error (MoC)
P060C-F6：ECU internal diagnositic error (MoC)
P060C-F7：ECU internal diagnositic error (MoC)
P060C-F8：ECU internal diagnositic error (MoC)
P060C-F9：ECU internal diagnositic error (MoC)
P060C-FA：ECU internal diagnositic error (MoC)
P060C-FB：ECU internal diagnositic error (MoC)
P060D-F0：ECU internal diagnositic error (MoF)
P062B-F6：CY33X is defect
P062F-44：EEP Write Error based on the error for one block
P062F-F0：EEP Erase Error based on the error for more blocks
P062F-F1：EEP Read Error based on the error for more blocks
P062F-F2：Error during read/write operation
P062F-F3：Invalid variant dataset Identifier error
P062F-F4：Variant dataset switching error
P062F-F5：EEPROM read error of the code-word EEPROM
P1006-00：Working limitation information
P1008-00：Injection cut off demand (ICO) for shut off coordinator
P1009-00：Indicates if a TMFW resonance shutoff condition is active
P1012-00：ECU internal diagnositic error (MoF)
P1013-00：ECU internal diagnositic error (MoF)
P1014-00：ECU internal diagnositic error (MoF)

P1015-00：ECU internal diagnositic error (MoF)
P1016-00：ECU internal diagnositic error (MoF)
P1017-00：ECU internal diagnositic error (MoF)
P1018-00：ECU internal diagnositic error (MoF)
P1019-00：ECU internal diagnositic error (MoF)
P101A-00：ECU internal diagnositic error (MoF)
P101B-00：ECU internal diagnositic error (MoF)
P101C-00：ECU internal diagnositic error (MoF)
P101D-00：ECU internal diagnositic error (MoF)
P101E-00：ECU internal diagnositic error (Mon)
P101F-00：ECU internal diagnositic error (Mon)
P1020-00：ECU internal diagnositic error (Mon)
P1031-64:Not plausible fault: PhyMod_trq2qBas_MAP contains non strictly monotonus q curves
P1090-F0:ECU internal diagnositic error (MoF)
P1091-F1:ECU internal diagnositic error (MoF)
P110A-F0:performance limiter for level 0
P110B-F1:performance limiter for level 1
P110C-F2:performance limiter for level 2
P110D-F3:performance limiter for level 3
P110E-F4:performance limiter is active
P1600-00:ECU internal diagnositic error (Mon)
P1601-00:ECU internal diagnositic error (Mon)
P1608-00:SoftwareResets 0
P1609-00:SoftwareResets 1
P160A-00:SoftwareResets 2
P16E6-F0:Diagnosis fault check to report error in DCS intervention permissibility DCS
P16E7-F0:Diagnosis fault check to report error in TSC intervention permissibility TSC
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Fault in harness or harness plug • Damages of engine control module
Description of circuit diagram
The electronic control unit (ECU) will monitor whether all sensors and actuators are within normal range all the time. Mean-time, it will also detect virtual connection of joints, short circuit, open circuit and the rationality between other signals. When fault occurs, the electronic control unit (ECU) will save the fault code corresponding to that fault and enable safety mode.


Circuit diagram

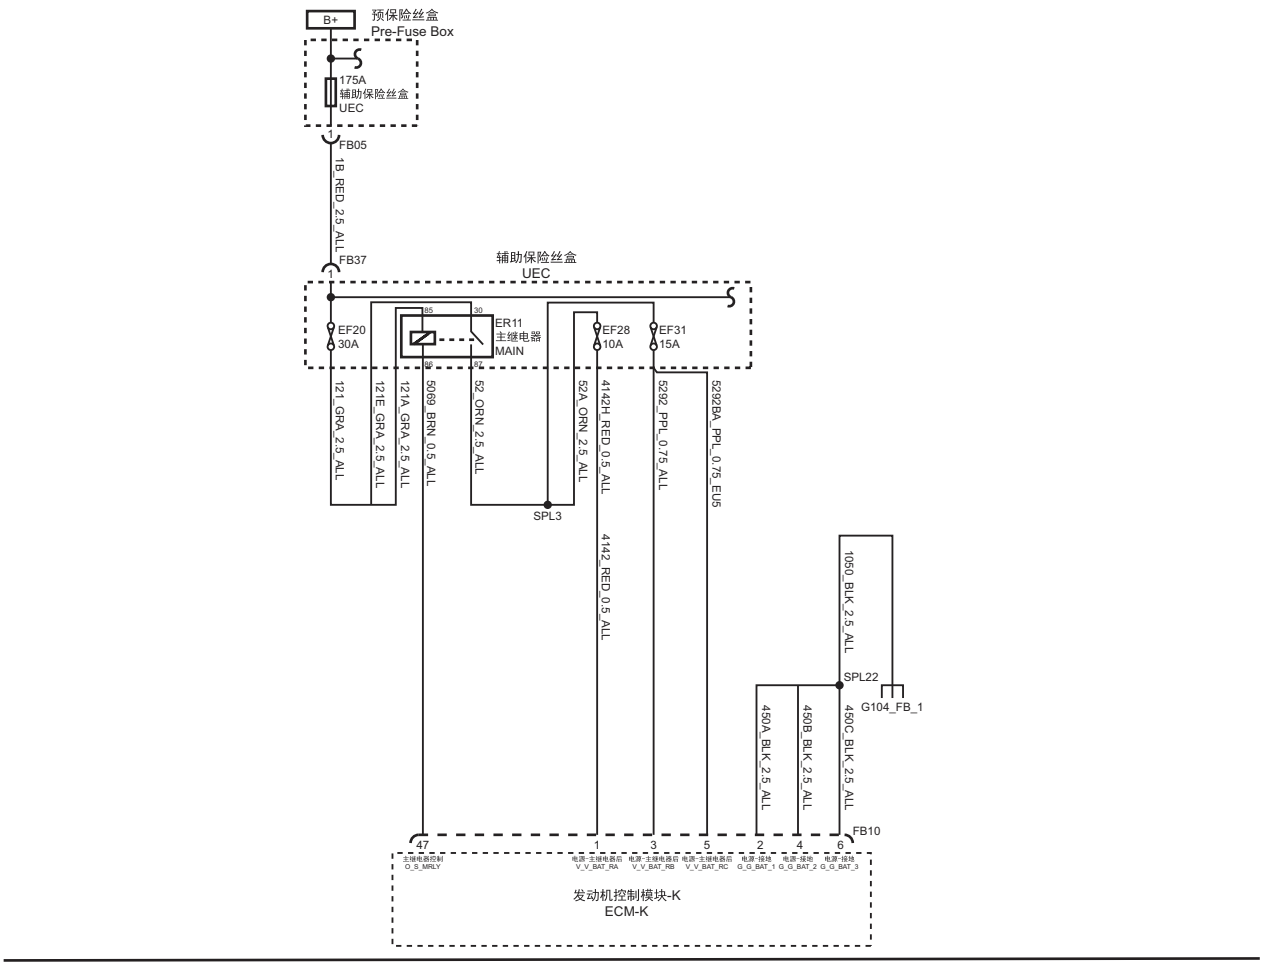


FB10

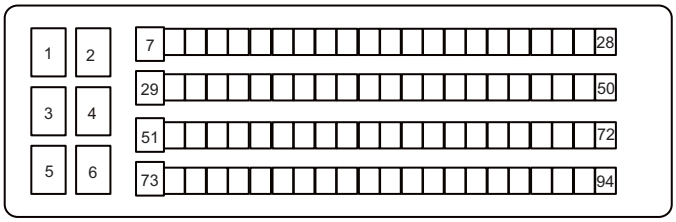

SV610811

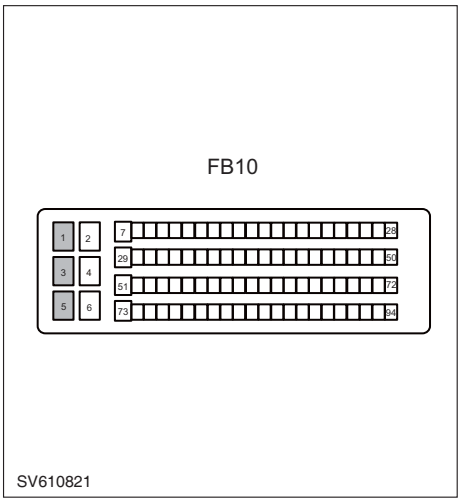Troubleshooting procedures	
Step 1	General inspection.
	1 Check the fuse EF28、 EF31 for damage. 2 Check battery capacity. 3 Check the harness plug of engine control module for damage, poor contact, aging and looseness. 4 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the engine control system with diagnostic apparatus. 4 If there is any fault code except for faults in the engine control module?
	Yes → Refer to: DTC Summary List (EU5).
No ↓	
Step 3	Check the power supply circuit of engine control module.
	1 Turn the ignition switch to ON position. 2 Measure the voltage between harness plug terminal on engine control module and ground. Measuring circuit: the voltage between terminal 1 of plug FB10 and ground. Measuring circuit: the voltage between terminal 3 of plug FB10 and ground. Measuring circuit: the voltage between terminal 5 of plug FB10 and ground. **Standard value: 10~14V** 3 Check whether the result is normal?
	No → Go to Step 5.
Yes ↓	

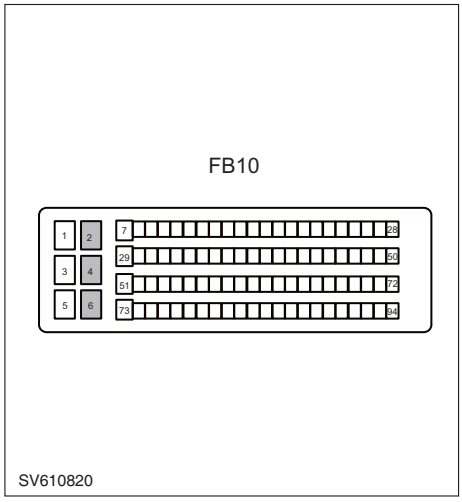Step 4	Check the grounding circuit of engine control module.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Measure the resistance between harness plug terminal on engine control module and ground. Measuring circuit: resistance between terminal 2 of plug FB10 and ground. Measuring circuit: resistance between terminal 4 of plug FB10 and ground. Measuring circuit: resistance between terminal 6 of plug FB10 and ground. **Standard value: ≈ 0Ω** 4 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	
Step 5	Check the power supply circuit (open circuit) of engine control module.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Unplug the main relay. 4 Measure the resistance between plug terminals on main relay and engine control module. Measure circuit:Resistance between terminal 87 of main relay and terminal 1 of plug FB10. Measure circuit:Resistance between terminal 87 of main relay and terminal 3 of plug FB10. Measure circuit:Resistance between terminal 87 of main relay and terminal 5 of plug FB10. **Standard value: ≈ 0Ω** 5 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	

Step 6	Check the power supply circuit (short circuit) of engine control module.	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Unplug the main relay. 4 Measure the resistance between harness plug terminal on engine control module and ground. Measure circuit: the resistance between terminal 1 of FB10 plug and ground. Measure circuit: the resistance between terminal 3 of FB10 plug and ground. Measure circuit: the resistance between terminal 5 of FB10 plug and ground. **Standard value: ∞** 5 Check whether the result is normal?
		No → Repair or replace the faulted parts.
Yes ↓		
Step 7	Check the engine control module.	
		1 Replace engine control module.
Next ↓		
Step 8	Complete the check and confirm whether the system works normally nor not.	