

P062C、P215A、P1725


Description of fault diagnosis codes
P062C-62：Vehicle speed implausible due to Refernece Signal Check
P062C-64：Plausibility defect for vehicle speed
P215A-02：Fault identifier for Error in vehicle speed from CAN
P215A-08：Signal error for vehicle speed over CAN
P1725-F0：Signal error for vehicle speed over CAN
P215A-F0：Defect fault check for wheel error detection
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Fault in harness or harness plug
Description of circuit diagram
Vehicle speed signal is not directly connected with the engine control module. In fact, it is input into the engine control module through CAN communication after output to combination instrument for processing by ABS.

Circuit diagram

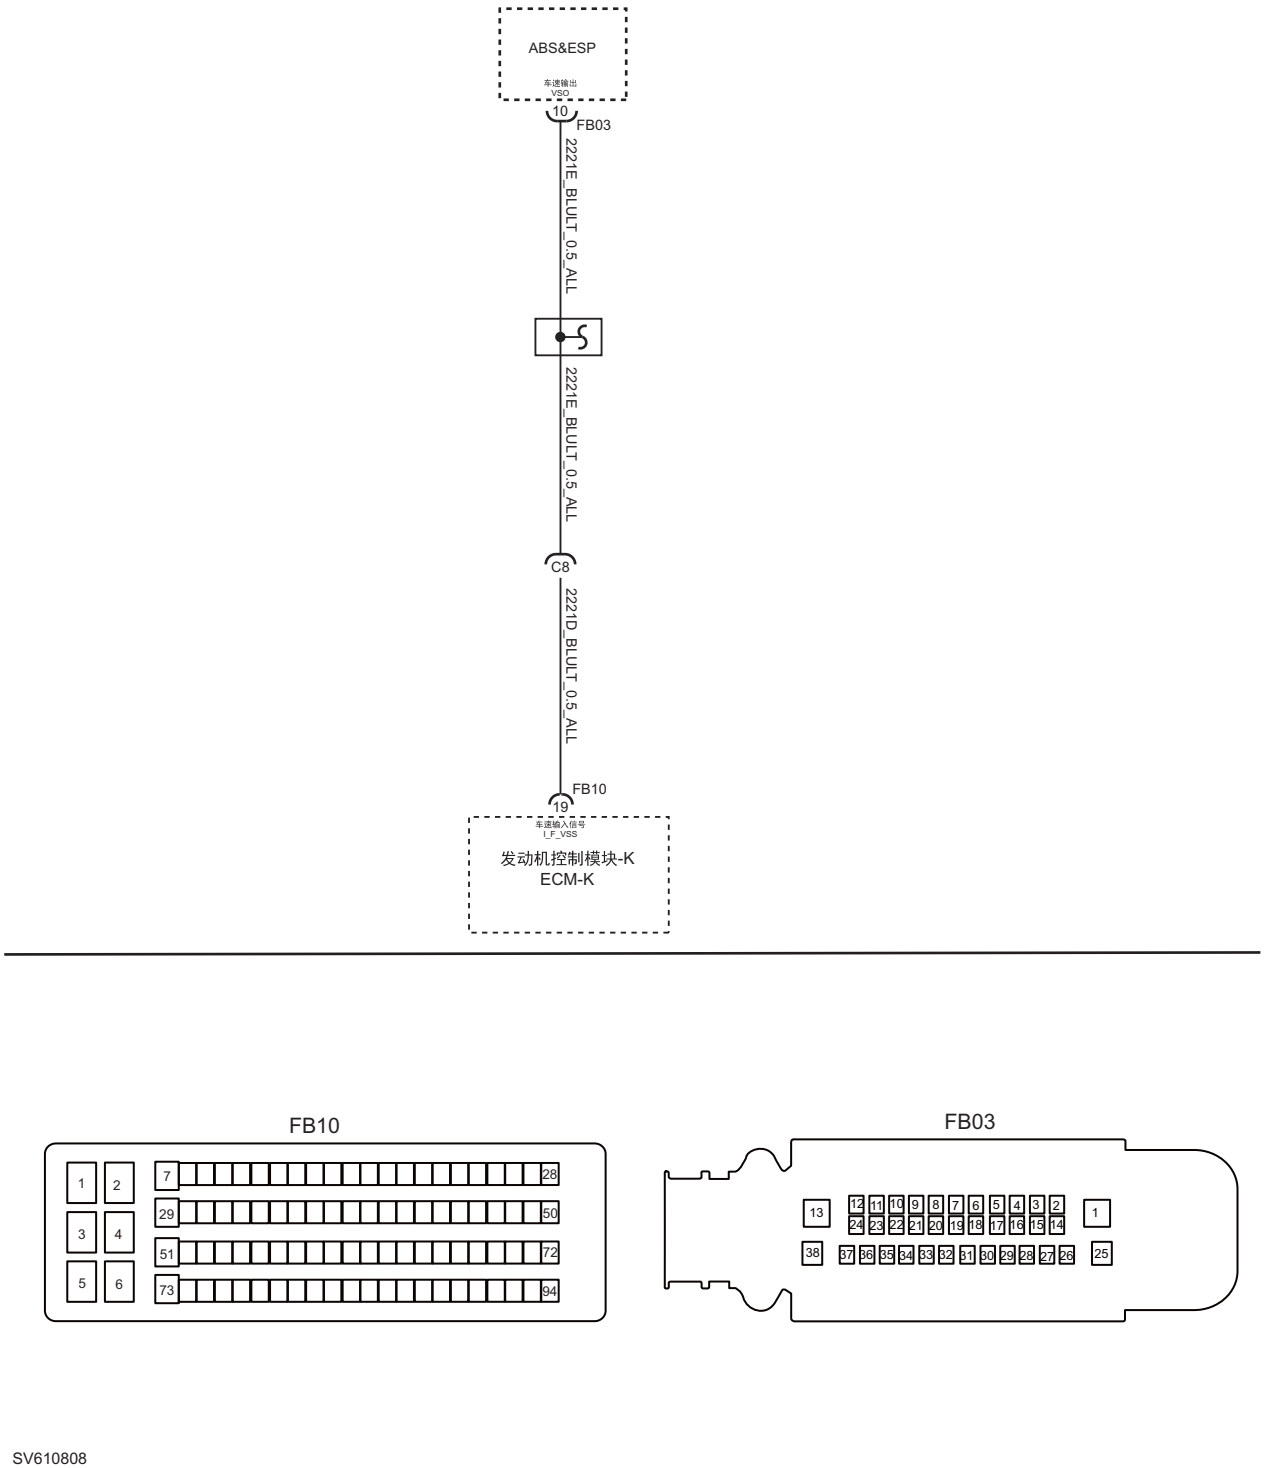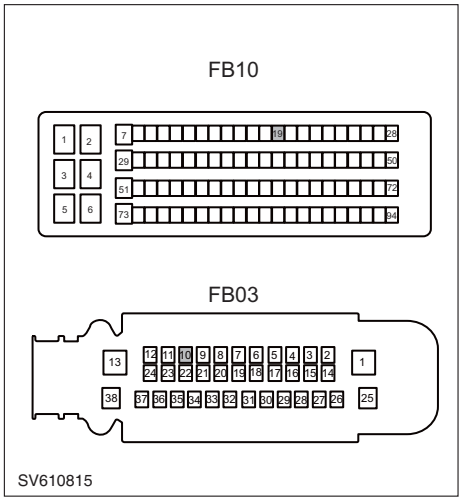

SV610808

<table>
<tr><td colspan="3">Troubleshooting procedures</td></tr>
<tr><td>Step 1</td><td colspan="2">General inspection.</td></tr>
<tr><td colspan="2"></td><td>1 Check the fuse for damage.
2 Check battery capacity.
3 Check if there is any damage, bad contact, aging and looseness phenomenon on harness plug of engine control module.
4 Check whether the result is normal?</td></tr>
<tr><td colspan="2"></td><td>No → Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">Yes ↓</td></tr>
<tr><td>Step 2</td><td colspan="2">Check fault codes.</td></tr>
<tr><td colspan="2"></td><td>1 Connect the fault diagnosis instrument to diagnosis interface.
2 Turn the ignition switch to ON.
3 Diagnose the engine control system with diagnostic apparatus.
4 If there is any fault code except for P062C/P215A/P1725?</td></tr>
<tr><td colspan="2"></td><td>Yes → Reference: DTC Summary List (EU5).</td></tr>
<tr><td colspan="3">No ↓</td></tr>
<tr><td>Step 3</td><td colspan="2">Check the vehicle speed input signal circuit (open circuit).</td></tr>
<tr><td colspan="2"> 
</td><td>1 Turn the ignition switch to OFF.
2 Disconnect the harness plug of engine control module.
3 Disconnect ABS&ESP harness plug.
4 Measure the resistance between harness plug terminal on engine control module and ABS&ESP harness terminal.
Measuring circuit: resistance between terminal 19 of plug FB10 and terminal 10 of plug FB03.
Standard value: ≈ 0Ω
5 Check whether the result is normal?</td></tr>
<tr><td colspan="2"></td><td>No → Repair or replace the faulted parts.</td></tr>
<tr><td colspan="3">Yes ↓</td></tr>
</table>

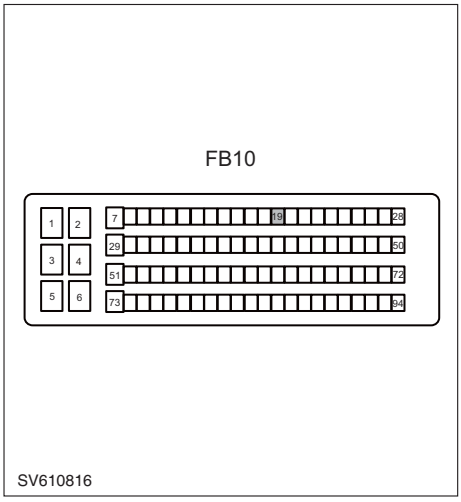Step 4	Check the vehicle speed input signal circuit (short circuit).
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Disconnect ABS&ESP harness plug. 4 Measure the circuit between harness terminal on engine control module and ground. Measuring circuit: resistance between terminal 19 of plug FB10 and ground. **Standard value: ∞** Measuring circuit: the voltage between terminal 19 of plug FB10 and ground. **Standard value: ≈ 0V** 5 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Next ↓	
Step 5	Complete the check and confirm whether the system works normally nor not.