


U0030、U1128、U112A、U113A、U113B、U1145、U1146

Description of fault diagnosis codes
U0030-16：Error status for indicating diagnosis disabled due to voltage strategy
U0030-88：Error status for the confirmed BUS OFF Error
U1128-81：Data length Error of CAN-Receive-Frame ESP1
U112A-87：Msg Loss Error of CAN-Receive-Frame ESP1
U113A-02：DFC to report absence of ESP node ESP1
U113B-02：DFC to report absence of VGTM node VGTM
U1145-41：ESP1 Frame Checksum Error ESP1
U1146-F1：Message Counter DFC for the receive frame ESP1
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Fault in harness or harness plug • Damages of engine control module
Description of circuit diagram
The device is connected to serial data circuit, which is used to monitor the communication situation of serial data during normal operation of vehicle. The devices will exchange the operation information and commands mutually. The device has programming information required to be exchanged on the serial data circuit. The receiver device will also monitor such information; in addition, there are some regular information indication transmitter devices available.

Circuit diagram

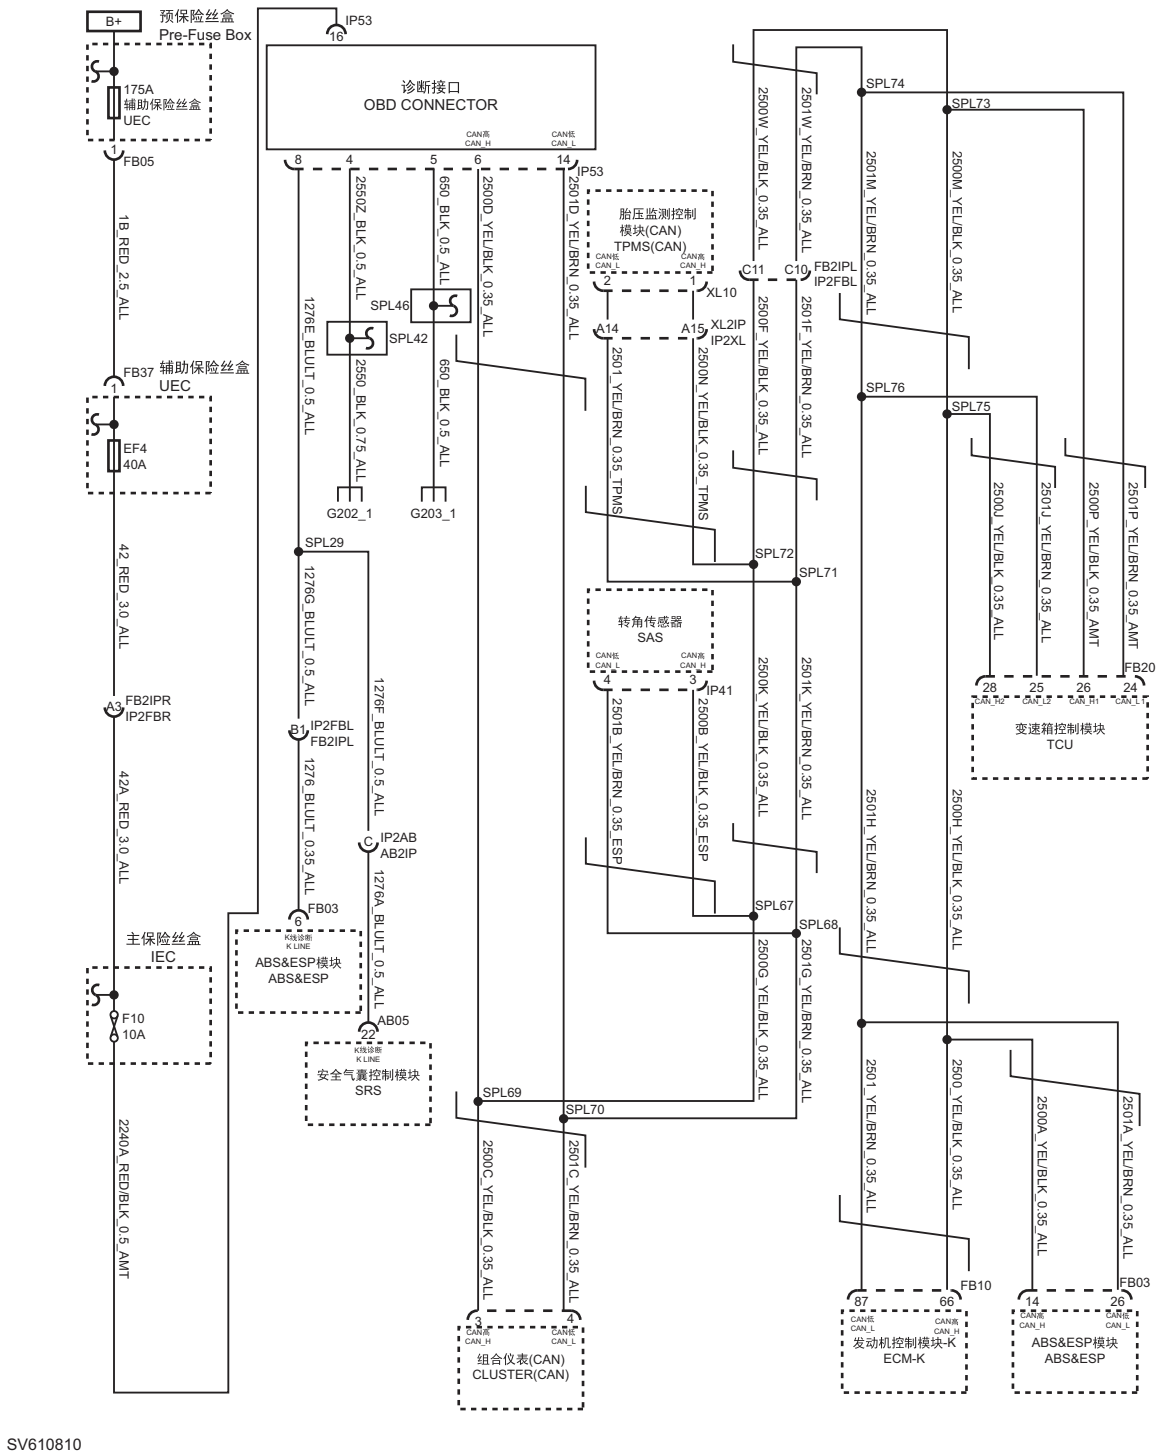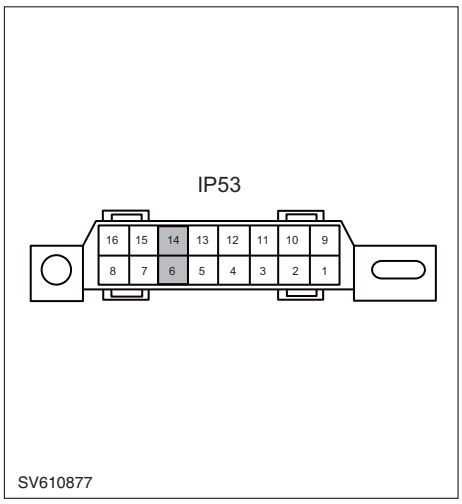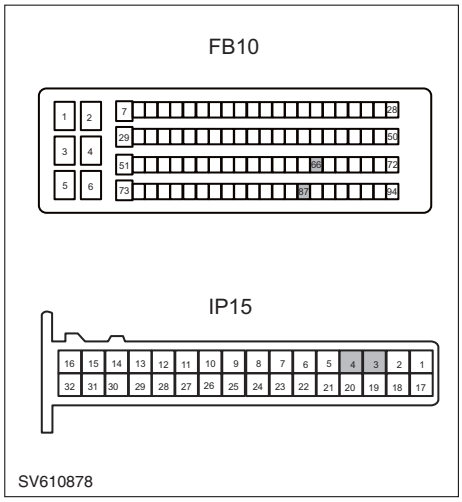

Troubleshooting procedures		
Step 1	General inspection.	
		1 Check if there is obvious damage on engine control module. 2 Check the harness plug of engine control module for damage, poor contact, aging and looseness. 3 Check whether the result is normal?
		No ➞ Repair or replace the faulted parts.
Yes ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the engine control system with diagnostic apparatus. 4 If there is any fault code except for U0030/U1128/U112A/U113A/U113B/U1145/U1146?
		Yes ➞ Refer to: DTC Summary List (EU5).
No ↓		
Step 3	Inspection for CAN communication network completeness.	
		1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness terminals of diagnose interface. Measuring circuit: resistance between terminal 6 and terminal 14 of plug IP53. **Standard value: ≈ 60Ω** 3 Check whether the result is normal?
		No ➞ Repair or replace the faulted parts.
Yes ↓		

Step 4	Check the terminating resistance of engine control module and combination instrument.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Measure the resistance between harness terminals on engine control module. Measuring circuit: resistance between terminal 66 and terminal 87 of plug FB10. **Standard value: 110~130Ω** 4 Connect the harness plug of engine control module. 5 Disconnect the harness plug of combination instrument. 6 Measure the resistance between the harness terminals of combination instrument. Measuring circuit: resistance between terminal 3 and terminal 4 of plug IP15. **Standard value: 110~130Ω** 7 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	
Step 5	Check the engine control module and combination instrument.
	1 Replace the engine control module and combination instrument.
Next ↓	
Step 6	Complete the check and confirm whether the system works normally nor not.