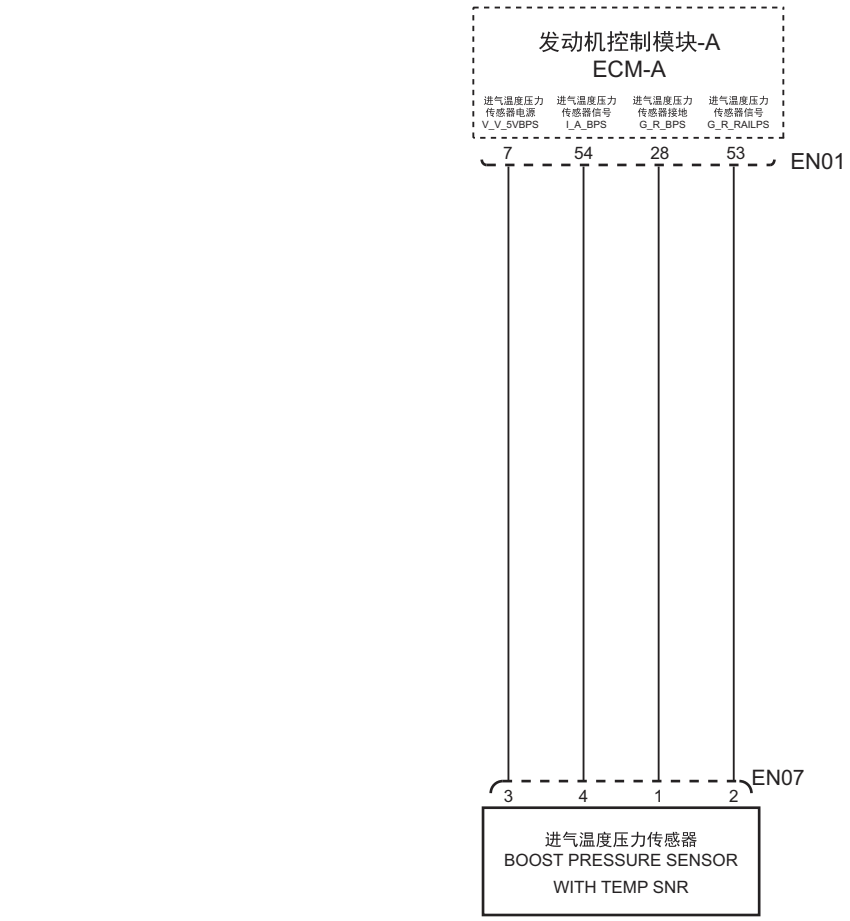
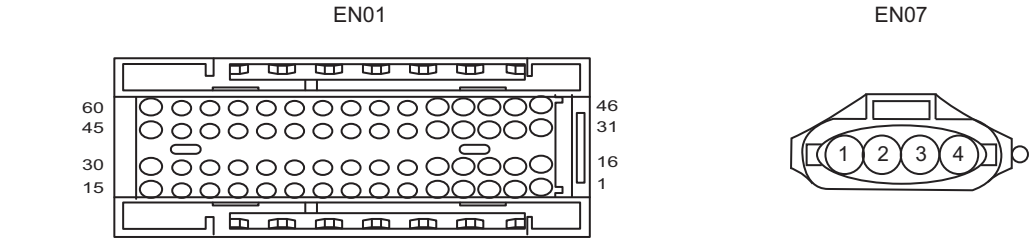
P0237 、 P0238

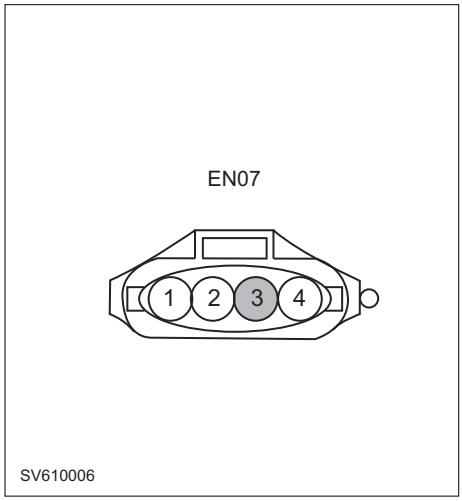
Description of fault diagnosis codes
P0237-11：Diagnostic fault check for SRC low in air pressure upstream of intake valve sensor
P0238-12：Diagnostic fault check for SRC high in air pressure upstream of intake valve sensor
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Fault in harness or harness plug • Fault in boost pressure temperature sensor
Description of circuit diagram
The boost pressure/temperature sensor and intake air temperature/pressure sensor are integrated in the same component. The sensor provides signal voltage to the engine control module (ECM), and makes the pressure variation correspond to the intake air pressure signal circuit.

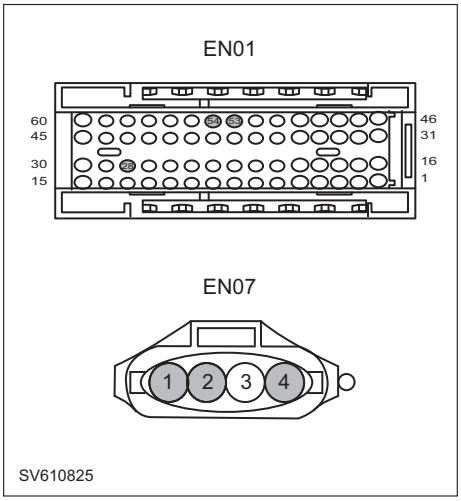
Circuit diagram

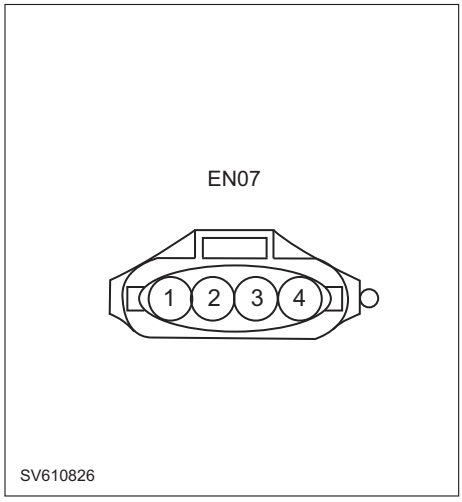


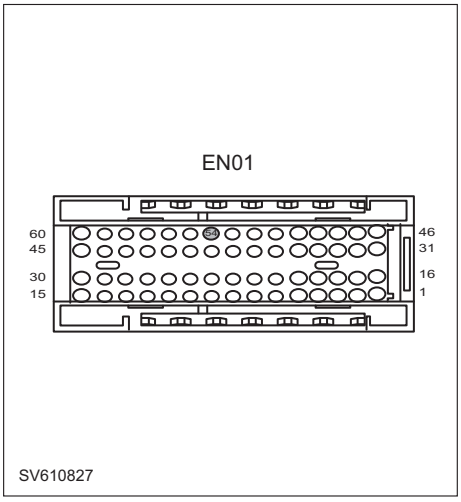


SV610824

Troubleshooting procedures		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check if there is any damage, bad contact, aging and looseness phenomenon on harness plug of engine control module and boost pressure temperature sensor. 4 Check whether the result is normal?
		No ➞ Repair or replace the faulted parts.
Yes ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to diagnosis interface. 2 Turn the ignition switch to ON. 3 Diagnose the engine control system with diagnostic apparatus. 4 If there is any fault code except for P0237/P0238?
		Yes ➞ Refer to:DTC Summary List (EU5).
No ↓		
Step 3	Check the power supply circuit of boost pressure temperature sensor.	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of boost pressure temperature sensor. 3 Turn the ignition switch to ON. 4 Measure the voltage between the harness terminal of boost pressure temperature sensor and ground. Measuring circuit: voltage between terminal 3 of plug EN07 and ground. **Standard value: 4.8~5.2V** 5 Measure if the voltage is normal.
		No ➞ Repair or replace the faulted parts.
Yes ↓		

Step 4	Check the harness continuity between boost pressure temperature sensor and engine control module.
	1 Turn the ignition switch to ON. 2 Disconnect the harness plug of engine control module. 3 Disconnect the harness plug of boost pressure temperature sensor. 4 Measure the resistance between harness plugs of boost pressure temperature sensor and engine control module. Measuring circuit: resistance between terminal 54 of plug EN01 and terminal 4 of plug EN07. Measuring circuit: resistance between terminal 28 of plug EN01 and terminal 1 of plug EN07. Measuring circuit: resistance between terminal 53 of plug EN01 and terminal 2 of plug EN07. **Standard value: ≈ 0Ω** 5 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	

Step 5	Check the boost pressure temperature sensor circuit (short circuit).
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of boost pressure temperature sensor. 3 Disconnect the harness plug of engine control module. 4 Measure the resistance between the harness plug of boost pressure temperature sensor and ground. Measuring circuit: the resistance between terminal 1 of plug EN07 and ground. Measuring circuit: the resistance between terminal 2 of plug EN07 and ground. Measuring circuit: the resistance between terminal 3 of plug EN07 and ground. Measuring circuit: the resistance between terminal 4 of plug EN07 and ground. **Standard value: ∞** 5 Measure the voltage between the harness plug of boost pressure temperature sensor and ground. Measuring circuit: voltage between terminal 1 of plug EN07 and ground. Measuring circuit: voltage between terminal 2 of plug EN07 and ground. Measuring circuit: voltage between terminal 3 of plug EN07 and ground. Measuring circuit: voltage between terminal 4 of plug EN07 and ground. **Standard value: ≈ 0V** 6 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	

Step 6	Check the boost pressure temperature sensor (component inspection).
	1 Turn the ignition switch to OFF. 2 Connect the harness plug of engine control module. 3 Connect the harness plug of boost pressure temperature sensor. 4 Turn the ignition switch to ON. 5 Read the data stream of boost pressure temperature sensor with diagnostic apparatus, or measure the sensor voltage directly. Measuring circuit: the voltage between terminal 54 of harness plug EN01 and ground. **Standard value: ≈ 1.2V (idling condition)** 6 Check if the voltage is normal.
	No → Replace the boost pressure temperature sensor.
Next ↓	
Step 7	Complete the check and confirm whether the system works normally nor not.