

P0633

Description of fault diagnosis codes
P0633-11：Short circuit to ground error for powerstage of Immobilizer Acknowledgment Module
P0633-12：Short circuit to battery error for powerstage of Immobilizer Acknowledgment Module
P0633-13：Open load error for powerstage of Immobilizer Acknowledgment Module
P0633-4B：Over temprature for powerstage of Immobilizer Acknowledgment Module
Detection tools
1 Multimeter, diagnostic apparatus
Possible causes
• Output signal line fault
Circuit diagram descriptions
The anti-theft device integrates in BCM, and the engine control module provides the output signal to BCM by providing an anti-theft device.


Circuit diagram

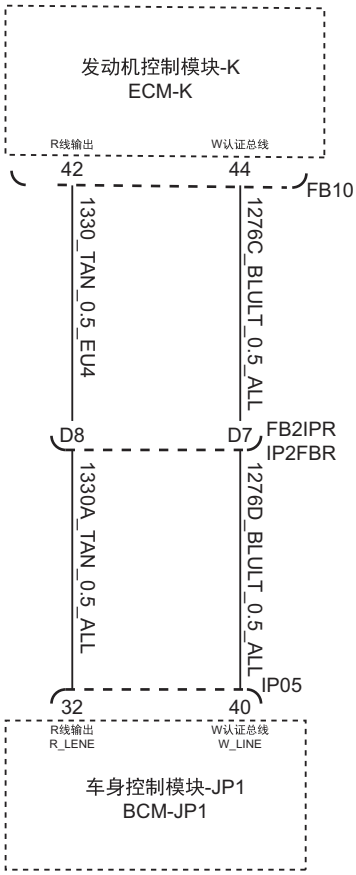


IP05

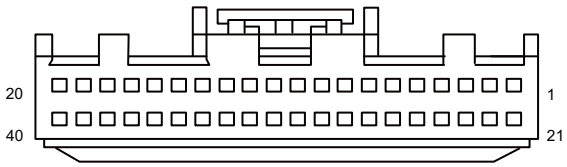


FB10

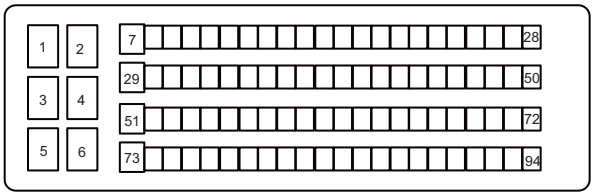

SV610111

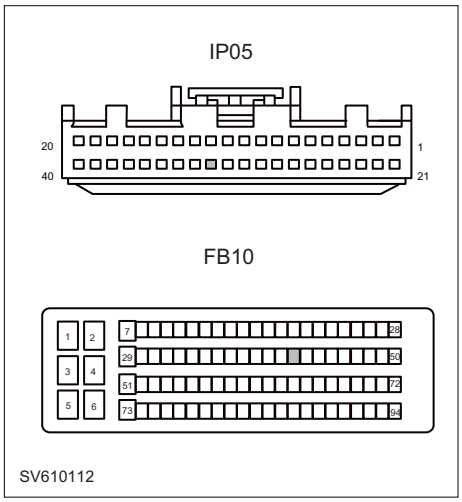Troubleshooting steps		
Step 1	General inspection.	
		1 Check fuses for damages. 2 Check battery capacity. 3 Check the harness plug for damage, poor contact, aging and looseness. 4 Check if the result is normal?
		No → Repair or replace the faulted parts.
Yes ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to the diagnosis interface. 2 Turn the ignition switch to ON. 3 Diagnose the engine control system with diagnostic apparatus. 4 If there is any fault code except forP0633-11、P0633-12、P0633-13 and P0633-4B?
		Yes → Refer to: DTC Summary List (EU5).
No ↓		
Step 3	Check the circuit of anti-theft output signal (open circuit).	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Disconnect the harness plug of BCM. 4 Measure the resistance between the plug of engine control module and the harness plug of BCM. Measuring circuit: resistance between terminal 90 on plug FB10 and terminal 32 on plug IP05. **Standard value:~0Ω** 5 Check if the result is normal?
		No → Repair or replace the faulted parts.
Yes ↓		

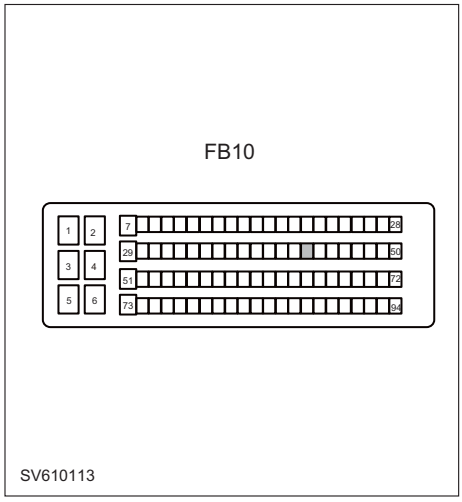Step 4	Check the circuit of anti-theft output signal (short circuit).
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Disconnect the harness plug of BCM. 4 Measure Measuring circuit: resistance between terminal 90 on plug PB10 and ground. **Standard value: ∞** 5 Measure and check if the harness of output signal is power short circuit. Measuring circuit: voltage between terminal 90 on plug PB10 and ground. **Standard value:~ 0V** 6 Check if the result is normal?
	No → Repair or replace the faulted parts.
Next ↓	
Step 4	Check results and confirm the system is under normal operation.