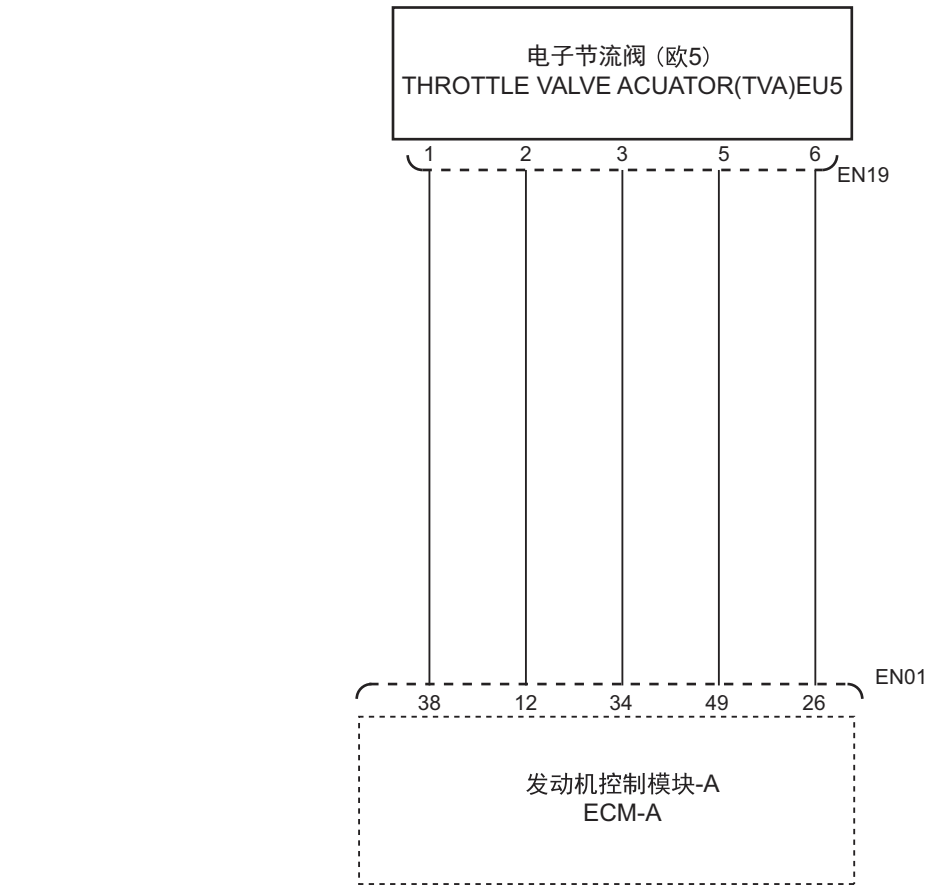
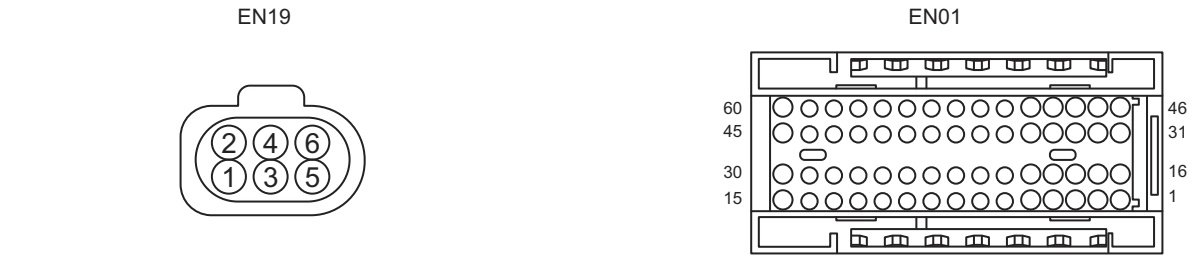
P2108、P2111、 P2112、 P2621、 P2622

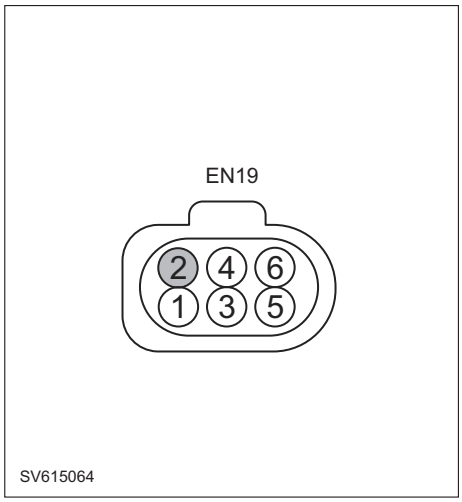
Description of fault diagnosis codes
P2108-84：DFC for short time valve drift at closed position of TVA valve
P2108-F0：DFC for valve drift at closed position of TVA valve
P2111-72：Jammed valve open of throttle valve
P2111-84：Permanent negative governor deviation for throttle valve
P2112-73：Jammed valve closed of throttle valve
P2112-85：Permanent positive governor deviation for throttle valve
P2621-11：SRC low for throttle valve position sensor value
P2622-12：SRC high for throttle valve position sensor value
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Fault in harness or harness plug • Throttle valve fault • Engine control module fault
Description of circuit diagram
The engine control module provides 5v reference voltage circuit to the throttle position sensor, and also provides grounding to low reference voltage circuit. The signal voltage provided by the throttle position sensor will vary with the opening degree of the throttle.

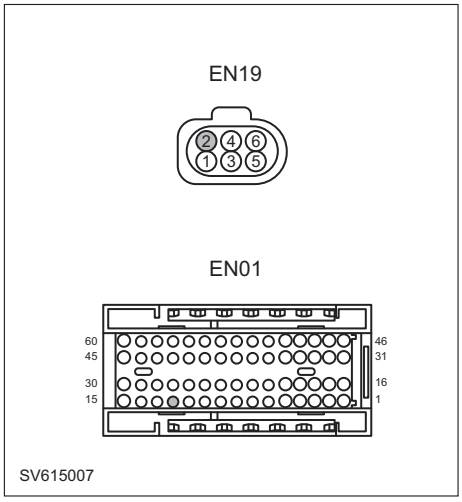
Circuit diagram

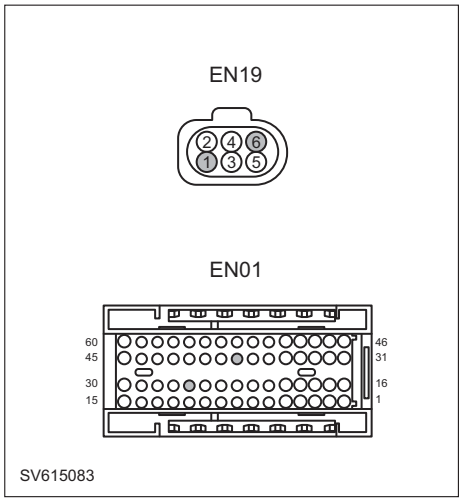
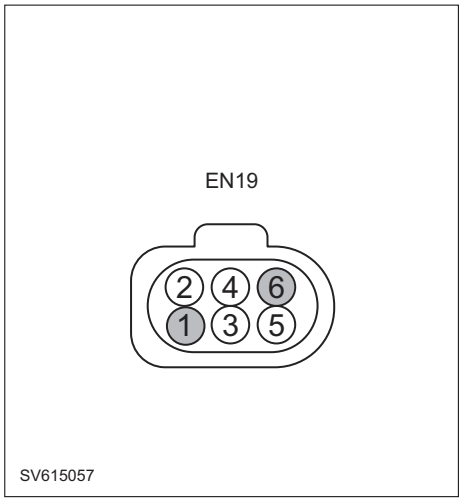




SV615006

Troubleshooting procedures		
Step 1	General inspection.	
		1 Check the fuse for damage. 2 Check battery capacity. 3 Check the engine control module and the harness plug of electronic throttle valve for damage, poor contact, aging and looseness. 4 Remove the air intake pipe and check whether there are dirty and foreign matters stuck in the case of electronic throttle valve. 5 Check whether the result is normal.
		No → Repair or replace the faulted parts.
Yes ↓		
Step 2	Check fault codes.	
		1 Connect the fault diagnosis instrument to diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the engine control system with diagnostic apparatus. 4 Is there any other fault code except for P2108, P2111, P2112, P2621, P2622?
		Yes → Reference: DTC Summary List (EU5).
No ↓		
Step 3	Check the power supply circuit of electronic throttle valve position sensor.	
		1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of electronic throttle valve. 3 Turn the ignition switch to ON. 4 Measure the voltage between the harness plug of electronic throttle valve and ground. Measure circuit: the voltage between EN19 harness plug terminal 2 and ground. **Standard value:4.8~5.2V** 5 Check whether the result is normal?
		No → Go to Step 6.
No ↓		

Step 4	Check the power supply circuit of electronic throttle valve position sensor (open circuit).
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of engine control module. 3 Measure the resistance of harness plug between throttle valve and engine control module. Measure circuit: the resistance between EN19 plug terminal 2 and EN01 plug terminal 12. **Standard value: ≈ 0Ω** 4 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	
Step 5	Check the power supply circuit of electronic throttle valve position sensor (short circuit).
	1 Turn the ignition switch to OFF. 2 Check the resistance between the harness plug of throttle valve and ground. Measure circuit: the resistance between EN19 plug terminal 2 and ground. **Standard value: ∞** 3 Check the voltage between the harness plug of throttle valve and ground. Measure circuit: the voltage between EN19 plug terminal 2 and ground. **Standard value: 0V** 4 Check whether the result is normal?
	No → Repair or replace the faulted parts .
Yes ↓	

Step 6	Check the circuit of electronic throttle valve position sensor (open circuit).
	1 Measure the resistance between the harness plug of electronic throttle valve and engine control module. Measure circuit: the resistance between EN19 plug terminal 1 and EN01 plug terminal 38. Measure circuit: the resistance between EN19 plug terminal 6 and EN01 plug terminal 26. **Standard value: 0Ω** 2 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	
Step 7	Check the circuit of electronic throttle valve position sensor (short circuit).
	1 Measure the resistance between the harness plug of electronic throttle valve and ground. Measure circuit: the resistance between EN19 plug terminal 1 and ground. Measure circuit: the resistance between EN19 plug terminal 6 and ground. **Standard value: ∞** 2 Measure the voltage between the harness plug of electronic throttle valve and ground. Measure circuit: the voltage between EN19 plug terminal 1 and ground. Measure circuit: the voltage between EN19 plug terminal 6 and ground. **Standard value: ≈ 0V** 3 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	

Step 8	Check the signal of electronic throttle valve position sensor.	
		1 Connect the harness plug of throttle valve. 2 Turn the ignition switch to ON position. 3 Use a diagnosis instrument to set the opening of the throttle valve as 0% and 50%. 4 Read the voltage and percentage of throttle valve position sensor signal using a diagnosis instrument. **Standard value: ≈ 0.67V (throttle valve position 0%)** **Standard value: ≈ 2.45V (throttle valve position 50%)** 5 Check whether the result is normal?
		No → Replace the electronic throttle valve.
Next ↓		
Step 9	Complete the check and confirm whether the system works normally nor not.	