

P2264、 P2269

Description of fault diagnosis codes
P2264-09：Max threshold error for the sensor self test
P2269-00：error to report detection of water in fuel
Detection tools
1 Multimeter and diagnostic apparatus
Possible causes
• Fault in harness or harness plug • Oil-water separation sensor fault
Description of circuit diagram
The oil-water separation sensor is used to detect and remind that the filter is accumulated with lots of water, then the sensor will send signal to the engine control module on its signal circuit, and the signal voltage corresponds to the water content status inside the filter. The oil-water separation sensor would self-diagnose after energization, and then it will output approx. 2.2s high level.


Circuit diagram

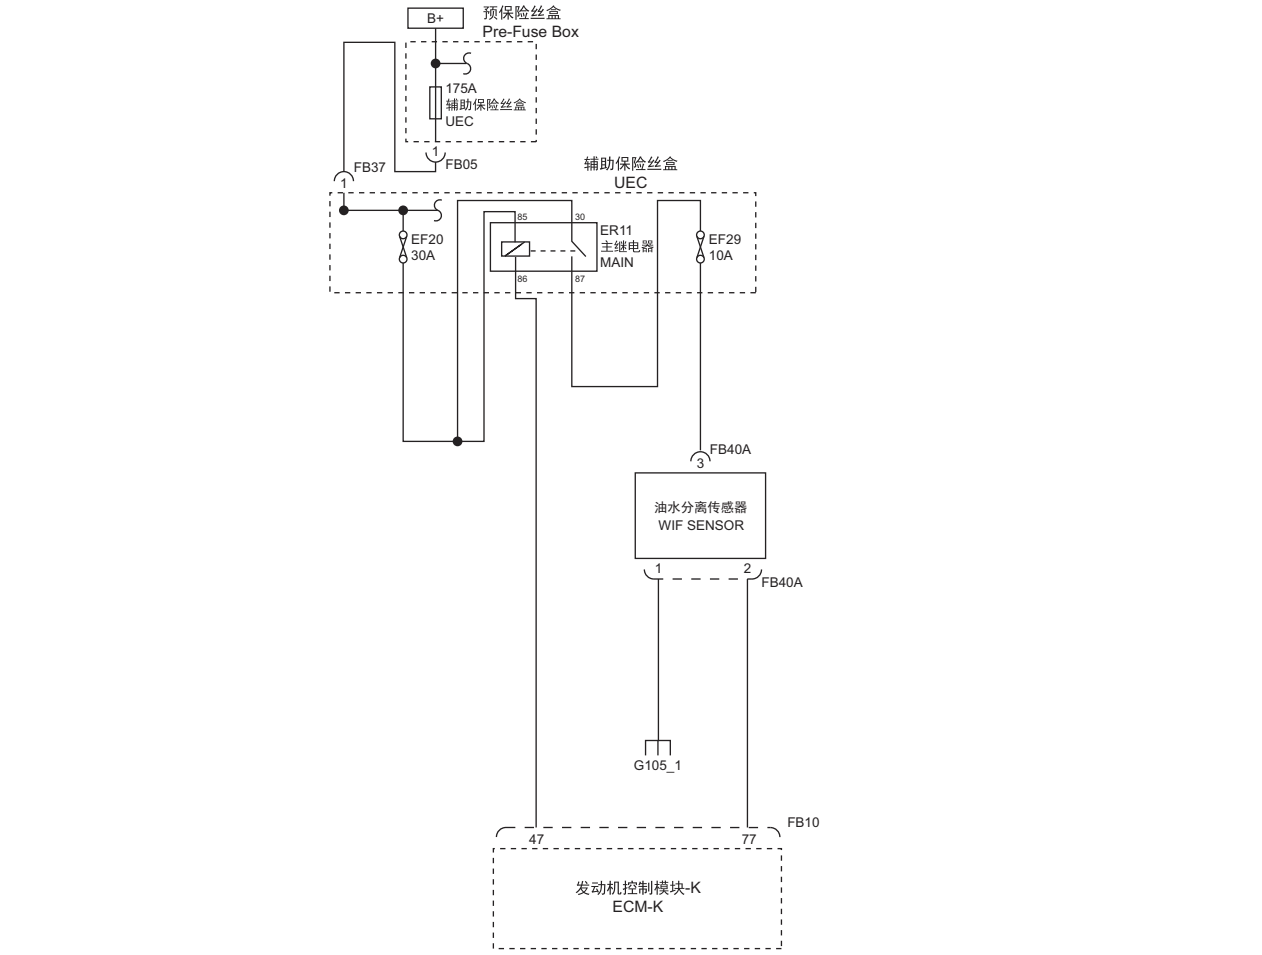


FB10


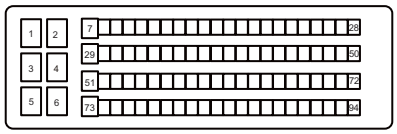


FB40A

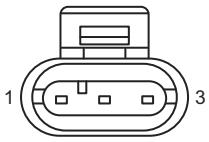

SV615020

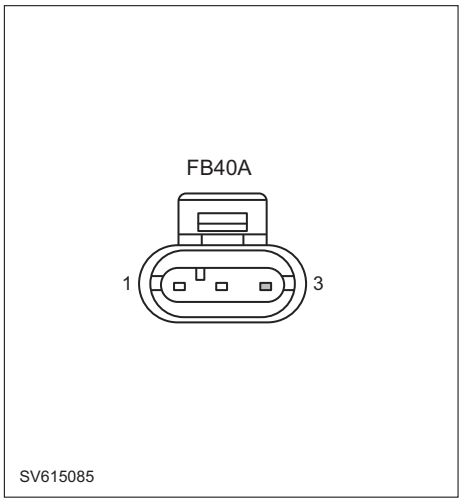Troubleshooting procedures	
Step 1	General inspection.
	1 Check the fuse EF29 for damage. 2 Check battery capacity. 3 Check the engine control module and the harness plug of oil-water separation sensor for damage, poor contact, aging and looseness. 4 Check whether the result is normal?
	No ➞ Repair or replace the faulted parts.
Yes ↓	
Step 2	Check fault codes.
	1 Connect the fault diagnosis instrument to diagnosis interface. 2 Turn the ignition switch to ON position. 3 Diagnose the engine control system with diagnostic apparatus. 4 Is there any other fault code except for P2264,P2269?
	Yes ➞ Reference: DTC Summary List (EU5).
No ↓	
Step 3	Check the power supply circuit of oil-water separation sensor.
	1 Turn the ignition switch to OFF. 2 Disconnect the harness plug of oil-water separation sensor. 3 Turn the ignition switch to ON position. 4 Check the resistance between the harness plug of oil-water separation sensor and ground. Measure circuit: the voltage between FB40A plug terminal 3 and ground. **Standard value: 10~14V** 5 Check whether the result is normal?
	No ➞ Repair or replace the faulted parts.

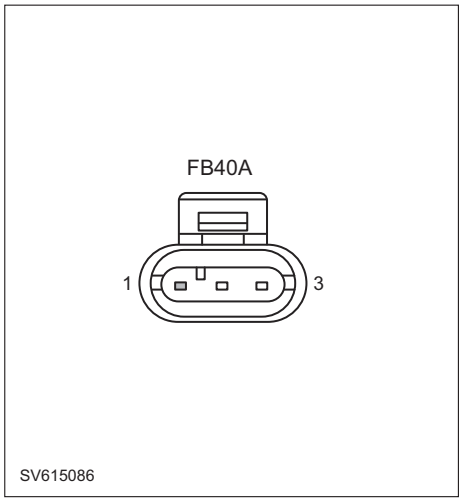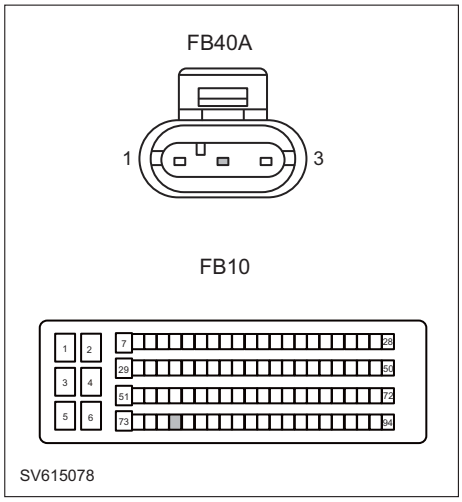Step 4	Check the ground circuit of oil-water separation sensor.
	1 Turn the ignition switch to OFF. 2 Measure the resistance between the harness plug of oil-water separation sensor and ground. Measure circuit: the resistance between FB40A plug terminal 1 and ground. **Standard value: ≈ 0Ω** 3 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	
Step 5	Check the signal circuit of oil-water separation sensor (open circuit).
	1 Disconnect the harness plug of engine control module. 2 Measure the resistance between the harness plug of oil-water separation sensor and engine control module. Measure circuit: the resistance between FB40A plug terminal 2 and FB10 plug terminal 77. **Standard value: ≈ 0Ω** 3 Check whether the result is normal?
	No → Repair or replace the faulted parts.
Yes ↓	

Step 6	Check the signal circuit of oil-water separation sensor (short circuit).
	1 Measure the resistance between the harness plug of oil-water separation sensor and ground. Measure circuit: the resistance between FB40A plug terminal 2 and ground. **Standard value: ∞** 2 Measure the voltage between the harness plug of oil-water separation sensor and ground. Measure circuit: the voltage between FB40A plug terminal 2 and ground. **Standard value: 0V** 3 Check whether the result is normal?
	Yes → Repair or replace the faulted parts.
No ↓	
Step 7	Check the oil-water separation sensor (components).
	1 Connect all harness plugs. 2 Turn the ignition switch to ON. 3 Measure the voltage between the harness plug of oil-water separation sensor and ground. Measure circuit: the voltage between FB40A plug terminal 2 and ground. **Standard value: 10~14V(within 2 seconds after power on)** 4 Check whether the result is normal?
	No → Replace the oil-water separation sensor.
Next ↓	
Step 8	Complete the check and confirm whether the system works normally nor not.