

P0633

故障诊断码说明	Fault diagnosis code
P0633-11：防盗器模块驱动电路对地短路	P0633-11：Short circuit to ground error for powerstage of Immobilizer Acknowledgment Module
P0633-12：防盗器模块驱动电路对电源短路	P0633-12：Short circuit to battery error for powerstage of Immobilizer Acknowledgment Module
P0633-13：防盗器模块驱动电路开路	P0633-13：Open load error for powerstage of Immobilizer Acknowledgment Module
P0633-4B：电控单元 (ECU) 内防盗器模块驱动芯片过热	P0633-4B：Over temprature for powerstage of Immobilizer Acknowledgment Module
检测工具	
1 万用表、诊断仪	
故障可能原因	
• 输出信号线路故障	
电路图说明	
防盗器集成在 BCM 当中，发动机控制模块通过提供防盗器输出信号给 BCM。	


电路图

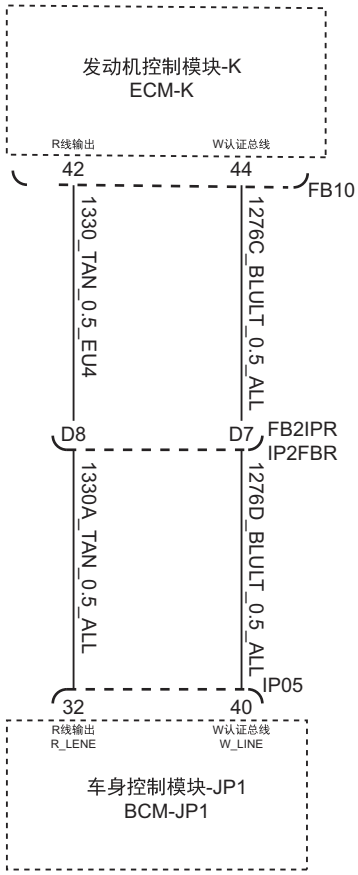


IP05

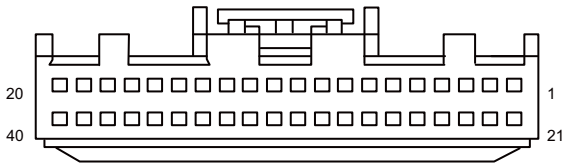


FB10

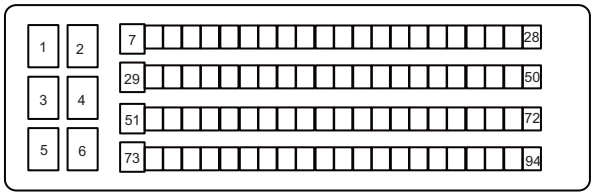

SV610111

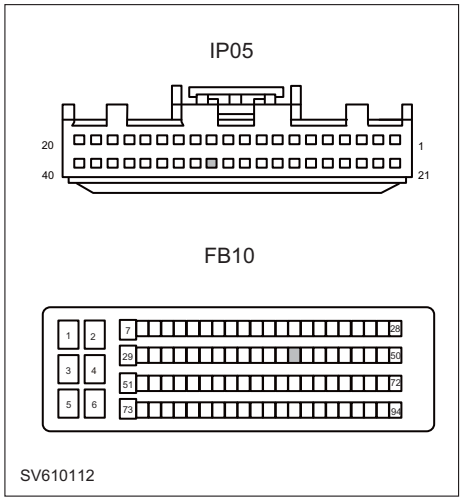故障排除的步骤	
步骤 1	一般检查。
	1 检查保险丝是否损坏。 2 检查蓄电池电量是否充足。 3 检查线束插头有无破损、接触不良、老化、松脱现象。 4 检查结果是否正常？
	否 → 维修或更换检测到故障的零件。
是 ↓	
步骤 2	检查故障码。
	1 连接故障诊断仪至诊断接口。 2 将点火开关转至 ON 位置。 3 使用诊断仪诊断发动机控制系统。 4 是否有 P0633-11、P0633-12、P0633-13、P0633-4B 之外的故障码？
	是 → 参见：DTC 总列表 (EU5)。
否 ↓	
步骤 3	检查防盗输出信号电路 （开路）。
	1 将点火开关转至 OFF 位置。 2 断开发动机控制模块线束插头。 3 断开 BCM 线束插头。 4 测量发动机控制模块插头与 BCM 线束插头之间的电阻。 测量电路：FB10 插头 90 号端子与 IP05 插头 32 号端子之间的电阻。 **标准值：~ 0Ω** 5 检查结果是否正常？
	否 → 维修或更换检测到故障的零件。
是 ↓	

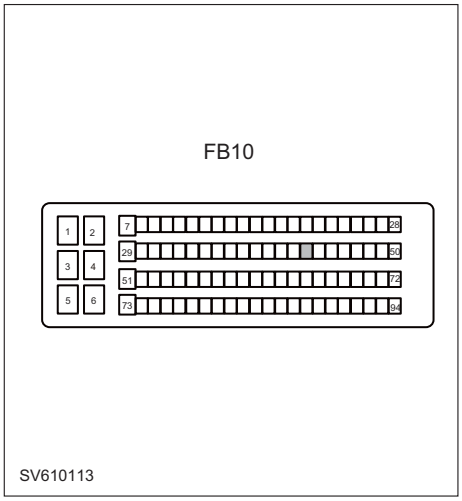步骤 4	检查防盗输出信号电路 （短路）。
	1 将点火开关转至 OFF 位置。 2 断开发动机控制模块线束插头。 3 断开 BCM 线束插头。 4 测量输出信号线束是否对地短路。 测量电路：PB10 插头 90 号端子与接地之间的电阻。 **标准值：无穷大** 5 测量输出信号线束是否对电源短路。 测量电路：PB10 插头 90 号端子与接地之间的电压。 **标准值：~ 0V** 6 检查结果是否正常？
	否 → 维修或更换检测到故障的零件。
下一步 ↓	
步骤 5	检查结果，确认系统工作正常。