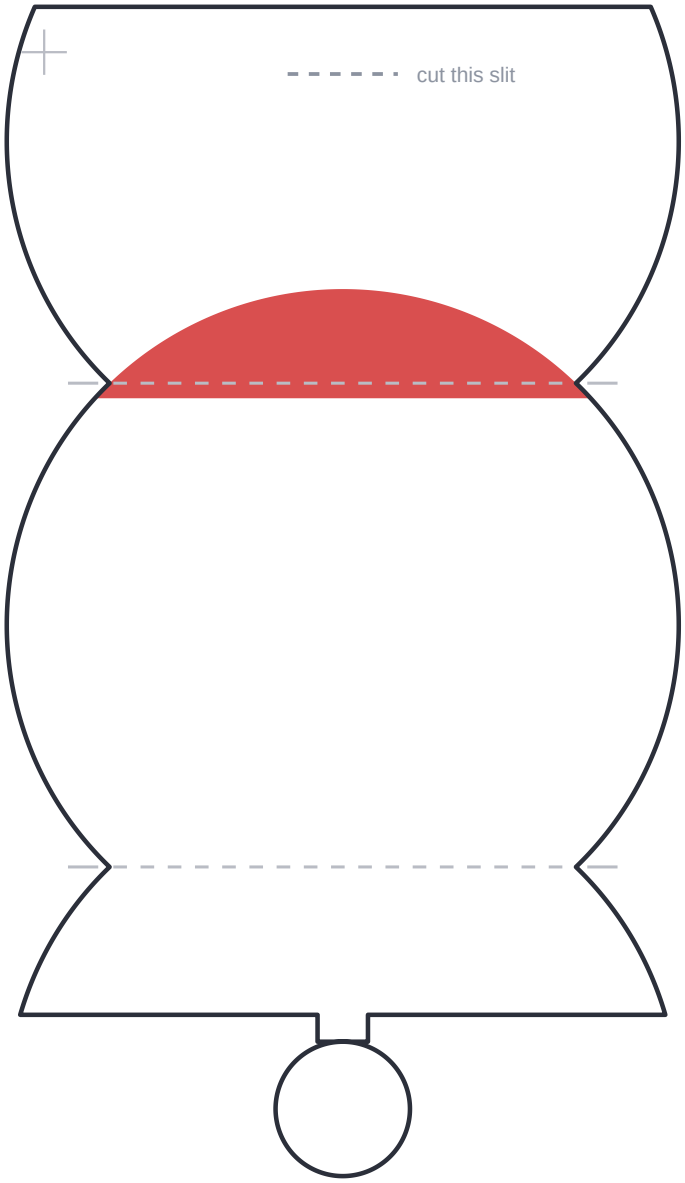

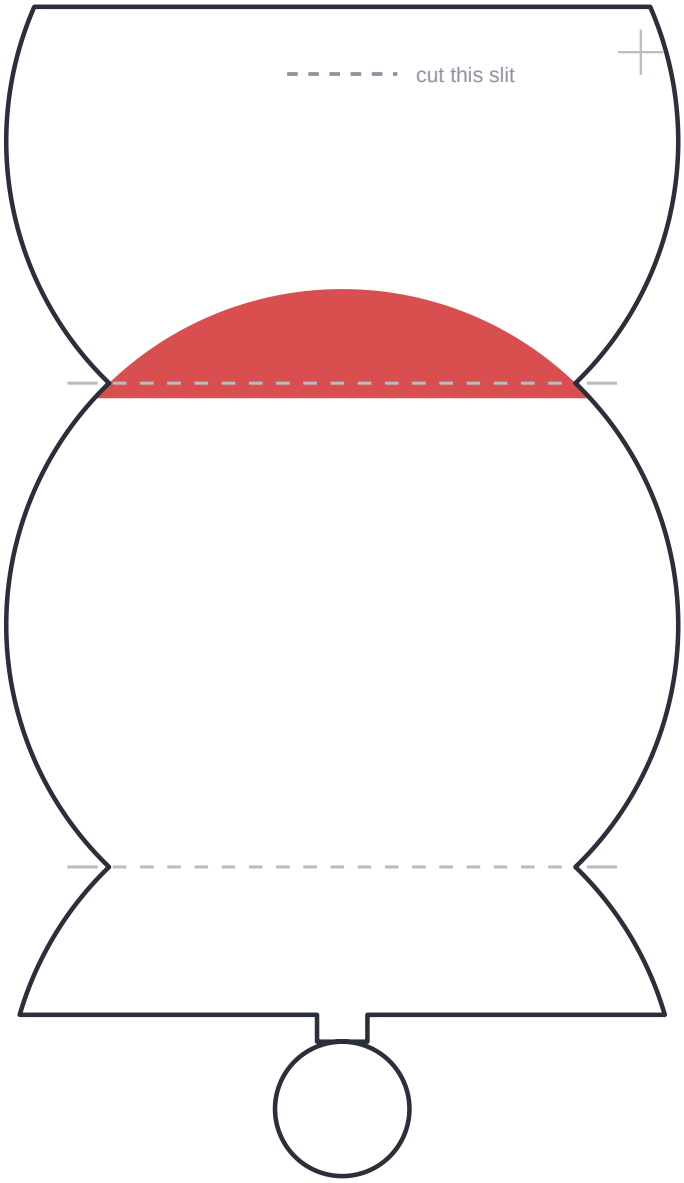

1. Print both sides at 100% — actual size, flipping on the LONG edge.
Hold the sheet to a lamp: the corner crosses should sit on top of each other.
2. Cut around the outside line. The whole invitation is one piece.
3. Cut the marked slit in the upper half. Craft knife, not scissors.
4. Score and fold the two dashed lines.
5. Fold the lower (white) half up, then the upper (red) half down over it.
6. Push the paper button up through the slit. It pops through, lies flat inside its printed ring, and holds both halves shut. Pop it back out to open.

The middle disc is left blank on purpose — about 62 x 64 mm of it stays hidden when closed.

50 mm — check your print scale

FRONT — cut from this side

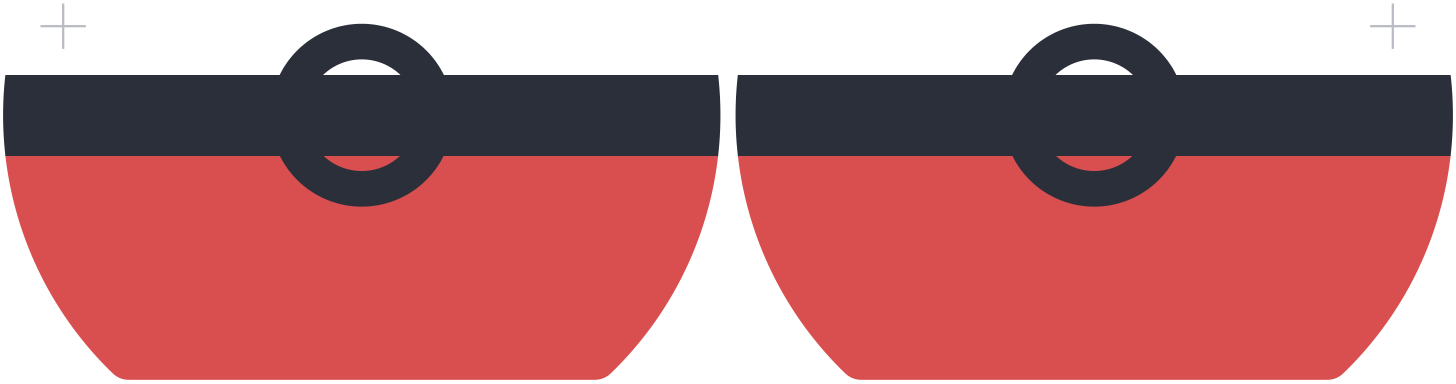

BACK — the red half’s artwork. Nothing here is cut.

BACK — prints on the reverse, flipped on the long edge