



Contents

Additional Explanation	2	Creating an Original Scale (USER SCALE)	31
Panel Descriptions	2	Setting a User Scale	31
Patch Mode	2	Recalling a User Scale	31
Performance Mode	2	System Settings	32
Key Touch	2	Procedure	32
Sample Import	2	System Parameters	32
Editing a Patch/Drum Kit	2	Connecting to a Computer via USB	35
Editing a Performance	2	Installing the USB Driver	35
Pattern Sequencer	3	Making USB Driver Settings	35
Realtime Erase	3	Using the XPS-30 with DAW Software	36
Saving a Pattern as a "Performance" (SAVE AS PERFORM)	3	Using the XPS-30 as a DAW Controller	36
Turning the Display Backlight On/Off	3	Using the XPS-30 to Control DAW Software	36
Demo Songs	3	Assigning Functions to Knobs and Sliders	37
Patch Mode	4	Using the XPS-30 as a MIDI Keyboard	37
Patch/Drum Kit Edit	4	Playing the XPS-30's Sound Generator from DAW Software	37
Procedure	4	Using the XPS-30 as an Audio Interface	38
About the Parameters	4	Saving the DAW CONTROL Settings	38
Patch Parameters	4	Error Messages	39
Drum Kit Parameters	14	MFX/Chorus/Reverb Parameters	40
Effects Edit	17	MFX Parameters (MFx, MFx1-3)	40
Signal Flow	17	Chorus Parameters	58
Procedure	17	Reverb Parameters	58
Effects Parameters	18	Waveform List	59
Performance Mode	19	Patch List	65
Performance Edit	19	Performance List	77
Procedure	19	Drum Kit List	77
Performance Parameters	19	Drum Kit Assign List	78
Part Edit	21	Rhythm Pattern List	87
Procedure	21	Pattern List	88
Performance Parameters	21	Arpeggio Style List	88
Effects Edit	23	Vocoder/Auto Pitch List	88
Signal Flow	23	Placing This Unit on a Stand	89
Procedure	23		
Effects Parameters	24		
Sample Edit	25		
Procedure	25		
Sample Parameters	25		
Editing Arpeggios	29		
Selecting Ascending/Descending Variations (Motif)	29		
Editing the Vocoder/Auto Pitch	30		
Saving the Vocoder/Auto Pitch Settings (Write)	30		


Additional Explanation

Panel Descriptions

[NUMERIC] button	When this button is on (lit), you can use the [0]–[9] buttons to enter numeric values. You can use this button only in the PATCH screen and PERFORM screen.
[ENTER] button	Used to execute an operation. List display You can move the cursor to a parameter and press the [ENTER] button to see a list of that parameter's values. You can select a value from the list that's shown. (Example) In the PATCH screen, move the cursor to the patch number and press the [ENTER] button to see the patch list. Press the [EXIT] button to return to the previous screen.

Patch Mode

- If you press the same category button in succession, the patch changes as follows each time you press the button.

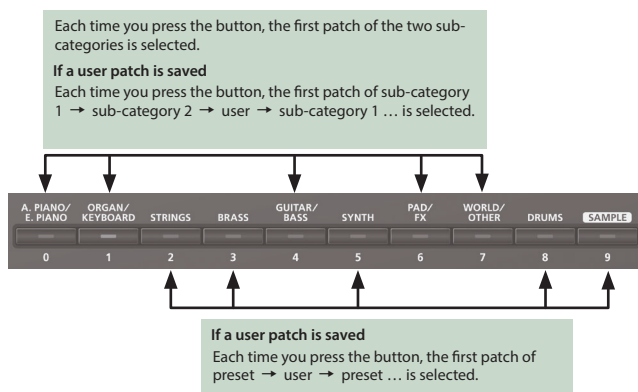


Performance Mode

- You can use pads [1]–[8] to select the applicable part (current part).
 - Pressing a pad [1]–[8] selects part 1–8.
 - Hold down the [SHIFT] button and press pad [1]–[8] to select part 9–16.

16-part mode

- Within Performance mode, the state in which neither split, dual, nor super layer is selected is called "16-part mode."

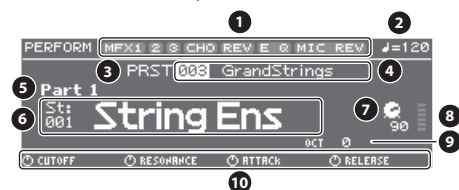

No.	Explanation
1	Effect on (lit)/off (unlit)
2	Tempo
3	Performance bank
4	Performance number/name
5	Current part

No.	Explanation
6	Category number/Patch name
7	Level of the current part
8	Level meter
9	Octave Shift setting
10	Parameters that can currently be adjusted by the control knobs

When you play the keyboard, you'll hear the current part and the parts whose keyboard switch (p. 19, p. 20, p. 22) is on.

Adjusting the volume

You can use the [UPPER] LEVEL slider and [LOWER] LEVEL slider to adjust the part 1 and part 2 volume (LEVEL).

Key Touch

- Depending on the KEY TOUCH setting, the [KEY TOUCH] button is lit or unlit.

Lit	When the Velocity setting is "REAL"
Unlit	When the Velocity setting is "1–127"

Sample Import

- When importing a sample, the OPTIMIZE window might appear depending on the user memory usage status.

OK	Memory is optimized, and then the sample import is executed.
CANCEL	Sample import is cancelled.

Editing a Patch/Drum Kit

PATCH EDIT

- In the PATCH EDIT screen when editing each tone, you can use pads [1]–[8] to perform the following operations.

Pads [5]–[8]	Turn each tone on (pad lit) or off. When a tone is on, a "✓" symbol appears.
Pads [1]–[4]	Make the pad(s) light to specify the tone(s) that you want to edit. You can also make multiple pads light to select multiple tones.

- In the PATCH EDIT screen, press the [MENU] button to open the INIT MENU window. Select "PATCH" or "TONE" and then press the [ENTER] button to initialize the selected patch or tone.

DRUM KIT EDIT

- A drum kit consists of a percussion instrument sound (tone) assigned to each key. The tone that's assigned to each key consists of a combination of up to four waves. Drum Kit Edit lets you edit the settings of the tone that's assigned to each key.
- In the DRUM KIT EDIT screen, when editing the four waves that make up the tone assigned to the selected key, you can use pads [1]–[8] to perform the following operations.

Pads [5]–[8]	Turn each wave on (pad lit) or off. When a wave is on, a "✓" symbol appears.
Pads [1]–[4]	Make the pad(s) light to specify the wave(s) that you want to edit. You can also make multiple pads light to select multiple waves.

- In the DRUM KIT EDIT screen, press the [MENU] button to open the INIT MENU window. Select "DRUM" or "TONE" and then press the [ENTER] button to initialize the selected drum kit or the tone of the selected key.

Editing a Performance

- "PERFORMANCE EDIT" lets you edit while viewing a list of the settings of all parts, and "PART EDIT" lets you edit each part of the performance individually.
 - * PERFORMANCE EDIT and PART EDIT have the same parameters in common.

- In the PERFORMANCE EDIT or PART EDIT screen, you can use pads [1]–[8] to select the part that you want to edit. If you hold down the [SHIFT] button and press a pad [1]–[8], a part 9–16 is selected.

- In the PERFORMANCE EDIT screen, press the [MENU] button to open the INIT MENU window. Select "PERFORM" or "PART" and press the [ENTER] button to initialize the selected performance or part.

Pattern Sequencer

- In the PATTERN SEQUENCER screen, you can long-press the [LOOP] button to open the LOOP window, where you can make loop-related settings. Press the [EXIT] button to close the LOOP window.

Parameter	Explanation
Loop Switch	Specifies whether playback will loop (ON) or not loop (OFF).
	* You can also switch this by pressing the [LOOP] button.
	OFF, ON
Loop Rec	Specifies whether to loop-record (ON) or not loop-record (OFF).
	* You can also switch this by pressing the [LOOP] button while holding down the [SHIFT] button.
	OFF, ON

- Use the [UPPER] slider to adjust the level of track 1, and the [LOWER] slider to adjust the level of track 2.
- Use the [PHRASE PAD] slider to increase or decrease the level that's specified for tracks 3–8 while maintaining the balance between these tracks.
- Press the [MIXER] button to open the MIXER screen. Here you can set the pan and level of each track.

	Part 1		Pf:001		Grand		Pno DS	
Track	1	2	3	4	5	6	7	8
Pan	0	0	0	L20	R20	0	0	0
Level	78	72	96	76	84	88	84	100

You can use pads [1]–[8] to select a track to edit.
Use the [UPPER]/[LOWER]/[PHRASE PAD] sliders to adjust the level.

MEMO

Tracks 1–7 are assigned to parts 1–7, and track 8 is assigned to part 10.

Realtime Erase

Erasing only specified notes during recording or playback (REALTIME NOTE ERASE)

- During recording or playback, hold down the [RHYTHM PATTERN] button and press the [ERASE] button.
The REALTIME NOTE ERASE window appears.
- Press a key on the keyboard to specify the note that you want to erase.
- Press the [ERASE] button.
While you continue holding down the key, only the note you specify is erased from the selected track.

Erasing only movements of knobs or the bender/modulation lever during recording or playback

- During recording or playback, hold down the [MUTE] button and press the [ERASE] button.
Only while you continue holding down these buttons, movements of the knobs and the bender/modulation lever are erased from the selected track.

Saving a Pattern as a "Performance" (SAVE AS PERFORM)

Settings related to the sound of the pattern (preset/user) used in the pattern sequencer can be saved as a performance.
For example, if you want to export a pattern to SMF, use your DAW to edit it into a complete song, and then use the XPS-30 to play this song data, the performance saved by the "SAVE AS PERFORM" function can be recalled to play the data using the original sound.

- In the PATTERN SEQUENCER screen, select a pattern.

PATTERN SEQUENCER		Stop	▲=092
Pattern:	PRST	001	Pop EDM 1
Track1	Pf:001	Grand	Pno DS
R.Ptn 1st Loop Rec:	OFF	Input Quantize:	ON
Beat:	4 / 4	Resolution:	1/16 (♩)
Count In:	OFF	Strength:	100%
1-01			

- Press the [MENU] button.
The MENU screen appears.
- Move the cursor to "PATTERN UTILITY," and press the [ENTER] button.

- Move the cursor to "SAVE AS PERFORM," and press the [ENTER] button.
The SAVE AS PERFORM screen appears.
- Use the value dial to select the write destination performance, and press the [ENTER] button.
A confirmation message appears.
If you decide to cancel, press the [EXIT] button.
- Move the cursor to "OK," and press the [ENTER] button.
Writing is complete when the screen indicates "Completed!"

NOTE

Never turn off the power while the screen indicates "Writing...."

Turning the Display Backlight On/Off

To reduce battery consumption, you can turn off the display backlight when it's not required.

- Hold down the [SHIFT] button and press the [EXIT] button.
The display backlight will turn off.

Turning the display backlight on

- Hold down the [SHIFT] button and press the [ENTER] button.
The display backlight will turn on.

Demo Songs

1	Wonder	Copyright © 2015 Roland Corporation
2	There There There	

Patch Mode

Patch/Drum Kit Edit

Procedure

1. Select a patch or drum kit that you want to edit.
2. Press the [SAMPLE IMPORT] button and [DAW CONTROL] button simultaneously.
The EDIT MENU screen appears.
3. Move the cursor to "PATCH EDIT" or "DRUM KIT EDIT," and press the [ENTER] button.
The PATCH EDIT or DRUM KIT EDIT screen appears.

MEMO

- In the PATCH EDIT screen when editing each tone, you can use pads [1]–[8] to perform the following operations.

Pads [5]–[8]	Turn each tone on (pad lit) or off. When a tone is on, a "✓" symbol appears.
Pads [1]–[4]	Make the pad(s) light to specify the tone(s) that you want to edit. You can also make multiple pads light to select multiple tones.

- In the PATCH EDIT screen, press the [MENU] button to open the INIT MENU window. Select "PATCH" or "TONE" and then press the [ENTER] button to initialize the selected patch or tone.

MEMO

- In the DRUM KIT EDIT screen, when editing the four waves that make up the tone assigned to the selected key, you can use pads [1]–[8] to perform the following operations.

Pads [5]–[8]	Turn each wave on (pad lit) or off. When a wave is on, a "✓" symbol appears.
Pads [1]–[4]	Make the pad(s) light to specify the wave(s) that you want to edit. You can also make multiple pads light to select multiple waves.

- In the DRUM KIT EDIT screen, press the [MENU] button to open the INIT MENU window. Select "DRUM" or "TONE" and then press the [ENTER] button to initialize the selected drum kit or the tone of the selected key.

4. Move the cursor to tab, and use the [◀] [▶] buttons to switch the pages.
5. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.
6. To save the edited settings, perform the operation "Saving Your Settings (Write)" (refer to owner's manual).

About the Parameters

- Parameters marked with a "★" can be controlled using Matrix control (p. 12).
- Some parameters (such as Rate or Delay Time) can be set in terms of a note value.


Sixty-fourth-note triplet	Sixty-fourth note	Thirty-second-note triplet	Thirty-second note
Sixteenth-note triplet	Dotted thirty-second note	Sixteenth note	Eighth-note triplet
Dotted sixteenth note	Eighth note	Quarter-note triplet	Dotted eighth note
Quarter note	Half-note triplet	Dotted quarter note	Half note
Whole-note triplet	Dotted half note	Whole note	Double-note triplet
Dotted whole note	Double note		

NOTE

If you specify the delay time as a note value, slowing down the tempo will not change the delay time beyond a certain length.
This is because there is an upper limit for the delay time; if the delay time is specified as a note value and you slow down the tempo until this upper limit is reached, the delay time cannot change any further. This upper limit is the maximum value that can be specified when setting the delay time as a numerical value.

Patch Parameters



COMMON

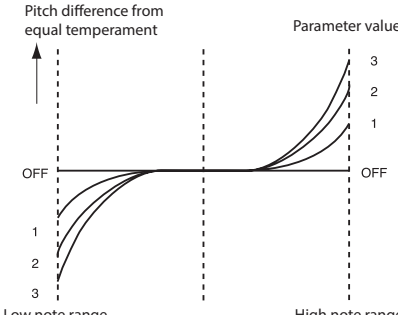Parameter	Value/Explanation
Patch Category	Specifies the type (category) of the patch. ★ If you select "NO ASSIGN" as the category, it won't be possible to select the patch on the XPS-30 itself. Refer to "Category List" (p. 5).
Patch Level	Specifies the volume of the patch. 0–127
Patch Pan	Specifies the pan of the patch. "L64" is far left, "0" is center, and "63R" is far right. L64–0–63R
Patch Priority	This determines how notes will be managed when the maximum polyphony is exceeded (128 voices). LAST The last-played voices will be given priority, and currently sounding notes will be turned off in order, beginning with the first-played note. LOUDEST The voices with the loudest volume will be given priority, and currently sounding notes will be turned off, beginning with the lowest-volume voice.
Octave Shift	Adjusts the pitch of the patch's sound up or down in units of an octave (±3 octaves). –3–3
Patch Coarse Tune	Adjusts the pitch of the patch's sound up or down in semitone steps (±4 octaves). –48–48
Patch Fine Tune	Adjusts the pitch of the patch's sound up or down in 1-cent steps (±50 cents). –50–50
Stretch Tune Depth	Stretched tuning (a system by which acoustic pianos are normally tuned, causing the lower range to be lower and the higher range to be higher than the mathematical tuning ratios would otherwise dictate) OFF Equal temperament 1–3 Higher settings will produce the greater difference in the pitch of the low and high ranges. 
Analog Feel	Specifies the depth of 1/f modulation that is to be applied to the patch. By adding this "1/f modulation," you can simulate the natural instability characteristic of an analog synthesizer. 0–127
Cutoff Offset	Cutoff Frequency Offset alters the cutoff frequency of the overall patch, while preserving the relative differences between the cutoff frequency values set for each tone in the Cutoff Frequency (p. 8). ★ This value is added to the cutoff frequency value of a tone, so if the cutoff frequency value of any tone is already set to "127" (maximum), positive "+" settings here will not produce any change. –63–+63
Resonance Offset	Resonance Offset alters the resonance of the overall patch, while preserving the relative differences between the resonance values set for each tone in the Resonance (p. 8). ★ This value is added to the resonance value of a tone, so if the resonance value of any tone is already set to "127" (maximum), positive "+" settings here will not produce any change. –63–+63
Attack Time Offset	Attack Time Offset alters the attack time of the overall patch, while preserving the relative differences between the attack time values set for each tone in the TVA–Env Time 1 (p. 10), TVF–Env Time 1 (p. 9). ★ This value is added to the attack time value of a tone, so if the attack time value of any tone is already set to "127" (maximum), positive "+" settings here will not produce any change. –63–+63
Release Time Offset	Release Time Offset alters the release time of the overall patch, while preserving the relative differences between the release time values set for each tone in the TVA–Env Time 4 (p. 10), TVF–Env Time 4 (p. 9). ★ This value is added to the release time value of a tone, so if the release time value of any tone is already set to "127" (maximum), positive "+" settings here will not produce any change. –63–+63

Parameter	Value/Explanation
Velocity Sens Offset	Velocity Sens Offset alters the Velocity Sensitivity of the overall patch while preserving the relative differences between the Velocity Sensitivity values set for each tone in the parameters below. Cutoff V-Sens (p. 9) Level V-Sens (p. 10) * This value is added to the velocity sensitivity value of a tone, so if the velocity sensitivity value of any tone is already set to "+63" (maximum), positive "+" settings here will not produce any change.
	-63--+63
Mono/Poly	Specifies whether the patch will play polyphonically (POLY) or monophonically (MONO). The "MONO" setting is effective when playing a solo instrument patch such as sax or flute.
	MONO Only the last-played note will sound.
	POLY Two or more notes can be played simultaneously.
Legato Switch	Specifies whether the Legato Switch will be used (ON) or not (OFF). With the Legato Switch parameter "ON," pressing a key while continuing to press a previous key causes the note to change pitch to the pitch of the most recently pressed key, sounding all the while. This creates a smooth transition between notes, which is effective when you wish to simulate the hammering-on and pulling-off techniques used by a guitarist. * Legato Switch is valid when the Mono/Poly is set to "MONO."
	OFF, ON
Legato Retrigger	The setting determines whether sounds are replayed (ON) or not (OFF) when performing legato. Normally you will leave this parameter "ON." When "OFF," when one key is held down and another key is then pressed, only the pitch changes, without the attack of the latter key being played. Set this to "OFF" when performing wind and string phrases or when simulating the mono synth keyboard sound. * Legato Retrigger is valid when the Mono/Poly is set to "MONO" and the Legato Switch is set to "ON."
	OFF, ON

MEMO

Let's say you have the Legato Switch set to "ON," and the Legato Retrigger set to "OFF." When you try to sound a legato (by pressing a higher key while a lower key is held down), the pitch may sometimes not be able to rise all the way to the intended pitch (stopping instead at an intermediate pitch). This can occur because the limit of pitch rise, as determined at the wave level, has been exceeded. Additionally, if differing upper pitch limits are used for the waves of a Patch that uses multiple tones, it may stop being heard in MONO. When making large pitch changes, set the Legato Retrigger to "ON."


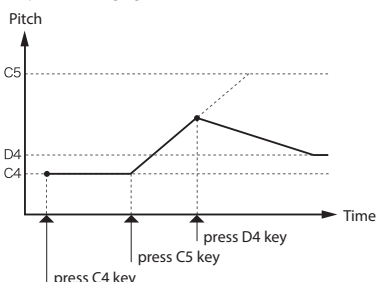
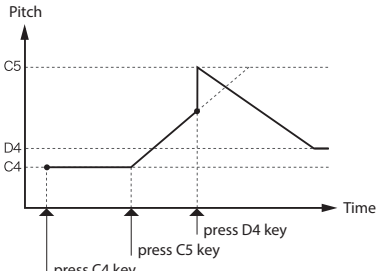
Portamento Switch	Specifies whether the portamento effect will be applied (ON) or not (OFF). OFF, ON
Portamento Mode	Specifies the performance conditions for which portamento will be applied.
	NORMAL Portamento will always be applied. LEGATO Portamento will be applied only when you play legato (i.e., when you press the next key before releasing the previous key).
Portamento Type	Specifies the type of portamento effect.
	RATE The time it takes will depend on the distance between the two pitches. TIME The time it takes will be constant, regardless of how far apart in pitch the notes are.
Portamento Start	When another key is pressed during a pitch change produced by portamento, a new pitch change will begin. This setting specifies the pitch at which the change will begin.
	PITCH Starts a new portamento when another key is pressed while the pitch is changing. 
Portamento Start	NOTE Portamento will begin anew from the pitch where the current change would end. 


Parameter	Value/Explanation
Portamento Time	When portamento is used, this specifies the time over which the pitch will change. Higher settings will cause the pitch change to the next note to take more time. 0-127

Category List







Category	Contents
---	No assign No assign
PNO	AC. Piano Acoustic Piano
EP	EL. Piano Electric Piano
KEY	Keyboards Other Keyboards (Clav, Harpsichord etc.)
BEL	Bell Bell, Bell Pad
MLT	Mallet Mallet
ORG	Organ Electric and Church Organ
ACD	Accordion Accordion
HRM	Harmonica Harmonica, Blues Harp
AGT	AC. Guitar Acoustic Guitar
EGT	EL. Guitar Electric Guitar
DGT	DIST. Guitar Distortion Guitar
BS	Bass Acoustic & Electric Bass
SBS	Synth Bass Synth Bass
STR	Strings Strings
ORC	Orchestra Orchestra Ensemble
HIT	Hit&Stab Orchestra Hit, Hit
WND	Wind Winds (Oboe, Clarinet etc.)
FLT	Flute Flute, Piccolo
BRS	AC. Brass Acoustic Brass
SBR	Synth Brass Synth Brass
SAX	Sax Sax
HLD	Hard Lead Hard Synth Lead
SLD	Soft Lead Soft Synth Lead
TEK	Techno Synth Techno Synth
PLS	Pulsating Pulsating Synth
FX	Synth FX Synth FX (Noise etc.)
SYN	Other Synth Poly Synth
BPD	Bright Pad Bright Pad Synth
SPD	Soft Pad Soft Pad Synth
VOX	Vox Vox, Choir
PLK	Plucked Plucked (Harp etc.)
ETH	Ethnic Other Ethnic
FRT	Fretted Fretted Inst (Mandolin etc.)
PRC	Percussion Percussion
SFX	Sound FX Sound FX
BTS	Beat&Groove Beat and Groove
DRM	Drums Drum Set
CMB	Combination Other patches which use Split and Layer

WAVE

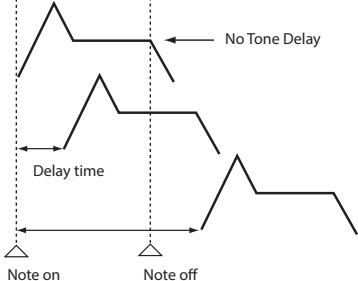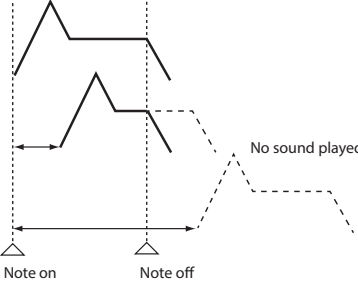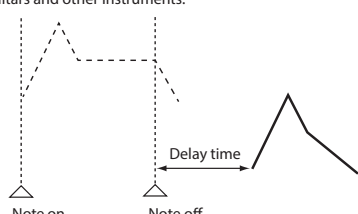Parameter	Value/Explanation
☐ 1- ☐ 4	Specify the on/off status of tones 1–4. If a tone is on, a “✓” mark is shown. OFF, ON
Wave Group	Selects the group for the waveform that is to be the basis of the tone.
	INTA, B Waveforms stored in internal
	EXP Waveforms for expansion sounds
	SAMP Imported user sample waveforms
Wave No. L (Mono) Wave No. R	MSAM Multisamples created by JUNO-DS Tone Manager (PC software)
	Selects the basic waveform for a tone. Along with the Wave number, the Wave name appears at the lower part of the display. When in mono, only the left side (L) is specified. When in stereo, the right side (R) is also specified.
Wave Gain	OFF, 1–2402 (The upper limit will depend on the wave group.)
	Sets the gain (amplification) of the waveform. The value changes in 6 dB (decibel) steps—an increase of 6 dB doubles the waveform's gain. If you intend to use the Booster to distort the waveform's sound, set this parameter to its maximum value (p. 7).
Wave Tempo Sync	-6, 0, +6, +12
	When you wish to synchronize a Phrase Loop to the clock (tempo), set this to “ON.” OFF, ON
Wave FXM Switch	MEMO Phrase loop refers to the repeated playback of a phrase that's been pulled out of a song (e.g., by using a sampler).
	Sets whether FXM will be used (ON) or not (OFF). OFF, ON
Wave FXM Color	MEMO FXM (Frequency Cross Modulation) uses a specified waveform to apply frequency modulation to the currently selected waveform, creating complex overtones. This is useful for creating dramatic sounds or sound effects.
	Specifies how FXM will perform frequency modulation. Higher settings result in a grainier sound, while lower settings result in a more metallic sound. 1–4
★ Wave FXM Depth	Specifies the depth of the modulation produced by FXM. 0–16
Tone Delay Mode	Selects the type of tone delay.
	NORM The tone begins to play after the time specified in the Tone Delay Time has elapsed.
	
	HOLD Although the tone begins to play after the time specified in the Tone Delay Time has elapsed, if the key is released before the time specified in the Tone Delay Time has elapsed, the tone is not played.
OFF-N	
	OFF-D Rather than being played while the key is pressed, the tone begins to play once the period of time specified in the Tone Delay Time has elapsed after release of the key. This is effective in situations such as when simulating noises from guitars and other instruments.
OFF-D	

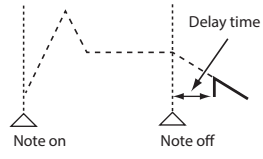Parameter	Value/Explanation
OFF-D	Rather than being played while the key is pressed, the tone begins to play once the period of time specified in the Tone Delay Time has elapsed after release of the key. Here, however, changes in the TVA Envelope begin while the key is pressed, which in many cases means that only the sound from the release portion of the envelope is heard. 
MEMO	If you have selected a waveform that is a decay-type sound (i.e., a sound that fades away naturally even if the key is not released), selecting “OFF-N” or “OFF-D” may result in no sound being heard.
Tone Delay Time	Specifies the time from when the key is pressed (or if the Delay Mode is set to “OFF-N” or “OFF-D,” the time from when the key is released) until when the tone will sound. 0–127, note

TMT


Parameter	Value/Explanation
Structure Type 1 & 2, 3 & 4	Determines how tone 1 and 2, or tone 3 and 4 are connected. The following 10 different Types of combination are available.
	1 With this type, tones 1 and 2 (or 3 and 4) are independent. Use this type when you want to preserve PCM sounds or create and combine sounds for each tone. 
	2 This type stacks the two filters together to intensify the characteristics of the filters. The TVA for tone 1 (or 3) controls the volume balance between the two tones. 
	3 This type mixes the sound of tone 1 (3) and tone 2 (4), applies a filter, and then applies a booster to distort the waveform. 
	4 This type applies a booster to distort the waveform, and then combines the two filters. The TVA for tone 1 (or 3) controls the volume balance between the two tones and adjusts booster level. 
	5 This type uses a ring modulator to create new overtones, and combines the two filters. The tone 1 (3) TVA will control the volume balance of the two tones, adjusting the depth of ring modulator. 
	6 This type uses a ring modulator to create new overtones, and in addition mixes in the sound of tone 2 (4) and stacks the two filters. Since the ring-modulated sound can be mixed with tone 2 (4), tone 1 (3) TVA can adjust the amount of the ring-modulated sound. 

Parameter	Value/Explanation
7	This type applies a filter to tone 1 (3) and ring-modulates it with tone 2 (4) to create new overtones.
8	This type sends the filtered tone 1 (3) and tone 2 (4) through a ring modulator, and then mixes in the sound of tone 2 (4) and applies a filter to the result.
9	This type passes the filtered sound of each tone through a ring modulator to create new overtones. The tone 1 (3) TVA will control the volume balance of the two tones, adjusting the depth of ring modulator.
10	This type passes the filtered sound of each tone through a ring modulator to create new overtones, and also mixes in the sound of tone 2 (4). Since the ring-modulated sound can be mixed with tone 2 (4), tone 1 (3) TVA can adjust the amount of the ring-modulated sound.

MEMO

- When type 2–10 is selected and one tone of a pair is turned off, the other tone will be sounded as type 1 regardless of the displayed setting.
- If you limit the keyboard area in which a tone will sound (Key Range Upper, Lower) or limit the range of velocities for which it will sound (Velo Range Upper, Lower), the result in areas or ranges where the tone does not sound is just as if the tone had been turned off. This means that if type 2–10 is selected and you create a keyboard area or velocity range in which one tone of a pair does not sound, notes played in that area or range will be sounded by the other tone as TYPE 1 regardless of the displayed setting.

Booster 1 & 2, 3 & 4	When a Structure Type of 3 or 4 is selected, you can adjust the depth of the booster. The booster increases the input signal in order to distort the sound. This creates the distortion effect frequently used with electric guitars. Higher settings will produce more distortion. 0, +6, +12, +18
Key Fade Upper, Lower	This determines what will happen to the tone's level when a note that's higher/lower than the tone's specified keyboard range is played. Higher settings produce a more gradual change in volume. If you don't want the tone to sound at all when a note below the keyboard range is played, set this parameter to "0." 0–127
Key Range Upper, Lower	Specifies the highest/lowest note that the tone will sound for each tone. * If you attempt to raise the lower key higher than the upper key, or to lower the upper key below the lower key, the other value will be automatically modified to the same setting. (Upper) LOWER–G9, (Lower) C–1–UPPER

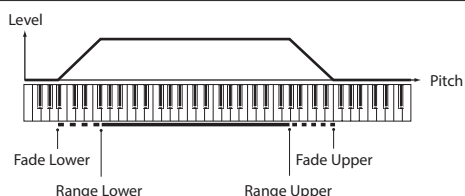


TMT Velocity Control	TMT Velocity Control determines whether a different tone is played or not depending on the force with which the key is played (velocity). * Instead of using Velocity, you can also have tones substituted using the Matrix control (p. 12). However, the keyboard velocity and the Matrix control cannot be used simultaneously to make different tones to sound. When using the Matrix control to switch tones, set the Velocity Control to "OFF."
OFF	Tones are not velocity-switched.
ON	Tones are switched according to the keyboard playing velocity.
RANDOM	The patch's constituent tones will sound randomly, regardless of the velocity.
CYCLE	The patch's constituent tones will sound consecutively, regardless of the velocity.
Velo Fade Upper, Lower	This determines what will happen to the tone's level when the tone is played at a velocity Upper/lower than its specified velocity range. Higher settings produce a more gradual change in volume. If you want notes played outside the specified key velocity range to not be sounded at all, set this to "0." 0–127

Parameter	Value/Explanation
Velo Range Upper, Lower	Sets the highest/lowest velocity at which the tone will sound. * If you attempt to set the Lower velocity limit above the Upper, or the Upper below the Lower, the other value will automatically be adjusted to the same setting. (Upper) LOWER–127, (Lower) 1–UPPER

MEMO

When using the Matrix Control to have different tones played, set the lowest value (Lower) and highest value (Upper) of the value of the MIDI message used.


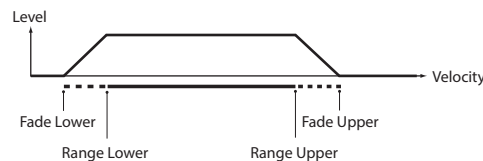


TMT Control Switch	Use the Matrix control to enable (ON), or disable (OFF) sounding of different tones. * You can also cause different tones to sound in response to notes played at different strengths (velocity) on the keyboard (p. 7). However, the Matrix control and the keyboard velocity cannot be used simultaneously to make different tones to sound. When you want to make the different tones to sound, set the TMT Velocity Control (p. 7) to "OFF." OFF, ON
--------------------	---



PITCH

Parameter	Value/Explanation
Tone Coarse Tune	Adjusts the pitch of the tone's sound up or down in semitone steps (± 4 octaves). -48–+48
Tone Fine Tune	Adjusts the pitch of the tone's sound up or down in 1-cent steps (± 50 cents). -50–+50
Random Pitch Depth	Specifies the width of random pitch deviation that will occur each time a key is pressed. If you do not want the pitch to change randomly, set this to "0." These values are in units of cents (1/100th of a semitone). 0–1200
Pitch Keyfollow	Specifies the amount of pitch change that will occur when you play a key one octave higher (i.e., 12 keys upward on the keyboard). If you want the pitch to rise one octave as on a conventional keyboard, set this to "+100." If you want the pitch to rise two octaves, set this to "+200." Conversely, set this to a negative value if you want the pitch to fall. With a setting of "0," all keys will produce the same pitch. -200–+200
Pitch Bend Range Up, Down	Specifies the degree of pitch change in semitones when the Pitch Bend lever is all the way right (left). For example if this is set to "+48 (-48)" and you move the pitch bend lever all the way to the right (left), the pitch will rise (fall) 4 octaves. (Up) 0–+48, (Down) 0– -48

PITCH ENV

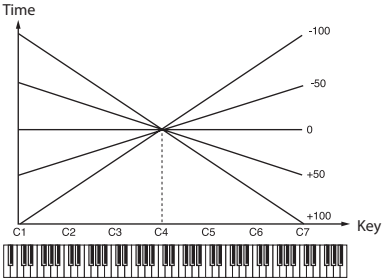
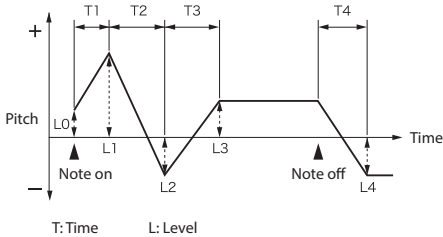
Parameter	Value/Explanation
Pitch Env Depth	Adjusts the effect of the Pitch Envelope. Higher settings will cause the pitch envelope to produce greater change. Negative (-) settings will invert the shape of the envelope. -12--+12
Pitch Env V-Sens	Keyboard playing dynamics can be used to control the depth of the pitch envelope. If you want the pitch envelope to have more effect for strongly played notes, set this parameter to a positive (+) value. If you want the pitch envelope to have less effect for strongly played notes, set this to a negative (-) value. -63--+63
Pitch Env T1 V-Sens	This allows keyboard dynamics to affect the Time 1 of the Pitch envelope. If you want Time 1 to be speeded up for strongly played notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63--+63
Pitch Env T4 V-Sens	Use this parameter when you want key release speed to affect the Time 4 value of the pitch envelope. If you want Time 4 to be speeded up for quickly released notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63--+63
Pitch Env Time KF	Use this setting if you want the pitch envelope times (Time 2–Time 4) to be affected by the keyboard location. Based on the pitch envelope times for the C4 key, positive (+) settings will cause notes higher than C4 to have increasingly shorter times, and negative (-) settings will cause them to have increasingly longer times. Larger settings will produce greater change. -100--+100 
★ Pitch Env Time 1–4	Specify the pitch envelope times (Time 1–Time 4). Higher settings will result in a longer time until the next pitch is reached. (For example, Time 2 is the time over which the pitch changes from Level 1 to Level 2.) 0–127
Pitch Env Level 0–4	Specify the pitch envelope levels (Level 0–Level 4). It determines how much the pitch changes from the reference pitch (the value set with Coarse Tune or Fine Tune on the Pitch screen) at each point. Positive (+) settings will cause the pitch to be higher than the standard pitch, and negative (-) settings will cause it to be lower. -63--+63 


TVF

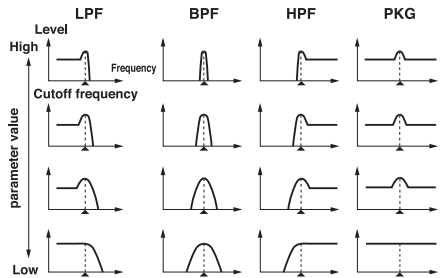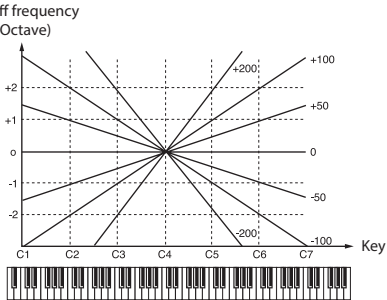Parameter	Value/Explanation
	Selects the type of filter. A filter cuts or boosts a specific frequency region to change a sound's brightness, thickness, or other qualities. * If you set "LPF2" or "LPF3," the setting for the Resonance (p. 8) will be ignored.
OFF	No filter is used.
LPF	Low Pass Filter. This reduces the volume of all frequencies above the cutoff frequency in order to round off, or un-brighten the sound. This is the most common filter used in synthesizers.
BPF	Band Pass Filter. This leaves only the frequencies in the region of the cutoff frequency, and cuts the rest. This can be useful when creating distinctive sounds.
HPF	High Pass Filter. This cuts the frequencies in the region below the cutoff frequency. This is suitable for creating percussive sounds emphasizing their higher tones.
PKG	Peaking Filter. This emphasizes the frequencies in the region of the cutoff frequency. You can use this to create wah-wah effects by employing an LFO to change the cutoff frequency cyclically.
LPF2	Low Pass Filter 2. Although frequency components above the cutoff frequency are cut, the sensitivity of this filter is half that of the LPF. This makes it a comparatively warmer low pass filter. This filter is good for use with simulated instrument sounds such as the acoustic piano.
LPF3	Low Pass Filter 3. Although frequency components above the cutoff frequency are cut, the sensitivity of this filter changes according to the cutoff frequency. While this filter is also good for use with simulated acoustic instrument sounds, the nuance it exhibits differs from that of the LPF2, even with the same TVF Envelope settings.
Filter Type	
★ Cutoff Frequency	Selects the frequency at which the filter begins to have an effect on the waveform's frequency components. "LPF/LPF2/LPF3" selected for the Filter Type Lower cutoff frequency settings reduce a tone's upper harmonics for a more rounded, warmer sound. Higher settings make it sound brighter. "BPF" selected for the Filter Type Harmonic components will change depending on the TVF Cutoff Frequency setting. This can be useful when creating distinctive sounds. "HPF" selected for the Filter Type Higher Cutoff Frequency settings will reduce lower harmonics to emphasize just the brighter components of the sound. "PKG" selected for the Filter Type The harmonics to be emphasized will vary depending on Cutoff Frequency setting. MEMO To edit the overall patch while preserving the relative differences in the Cutoff Frequency values set for each tone, set the Cutoff Offset (p. 4). 0–127
★ Resonance	Emphasizes the portion of the sound in the region of the cutoff frequency, adding character to the sound. Excessively high settings can produce oscillation, causing the sound to distort. 0–127
Cutoff Keyfollow	Use this parameter if you want the cutoff frequency to change according to the key that is pressed. Relative to the cutoff frequency at the C4 key (center C), positive (+) settings will cause the cutoff frequency to rise for notes higher than C4, and negative (-) settings will cause the cutoff frequency to fall for notes higher than C4. Larger settings will produce greater change. -200--+200 


Parameter	Value/Explanation
Cutoff V-Curve	Selects one of the following seven curves that determine how keyboard playing dynamics (velocity) influence the cutoff frequency. Set this to "FIXED" if you don't want the Cutoff frequency to be affected by the keyboard velocity. FIXED, 1–7 
Cutoff V-Sens	Use this parameter when changing the cutoff frequency to be applied as a result of changes in playing velocity. If you want strongly played notes to raise the cutoff frequency, set this parameter to positive (+) settings. If you want strongly played notes to lower the cutoff frequency, use negative (-) settings. MEMO To edit the overall patch while preserving the relative differences in the Cutoff V-Sens values set for each tone, set the Velocity Sens Offset (p. 5). However, this setting is shared by the Level V-Sens (p. 10). -63→+63
Resonance V-Sens	This allows keyboard velocity to modify the amount of Resonance. If you want strongly played notes to have a greater Resonance effect, set this parameter to positive (+) settings. If you want strongly played notes to have less Resonance, use negative (-) settings. -63→+63

TVF ENV

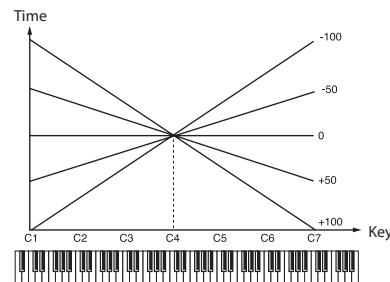Parameter	Value/Explanation
TVF Env Depth	Specifies the depth of the TVF envelope. Higher settings will cause the TVF envelope to produce greater change. Negative (-) settings will invert the shape of the envelope. -63→+63
TVF Env V-Curve	Selects one of the following 7 curves that will determine how keyboard playing dynamics will affect the TVF envelope. Set this to "FIXED" if you don't want the TVF Envelope to be affected by the keyboard velocity. FIXED, 1–7 
TVF Env V-Sens	Specifies how keyboard playing dynamics will affect the depth of the TVF envelope. Positive (+) settings will cause the TVF envelope to have a greater effect for strongly played notes, and negative (-) settings will cause the effect to be less. -63→+63
TVF Env T1 V-Sens	This allows keyboard dynamics to affect the Time 1 of the TVF envelope. If you want Time 1 to be speeded up for strongly played notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63→+63
TVF Env T4 V-Sens	The parameter to use when you want key release speed to control the Time 4 value of the TVF envelope. If you want Time 4 to be speeded up for quickly released notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63→+63
TVF Env Time Keyfollow	Use this setting if you want the TVA envelope times (Time 2–Time 4) to be affected by the keyboard location. Based on the TVF envelope times for the C4 key (center C), positive (+) settings will cause notes higher than C4 to have increasingly shorter times, and negative (-) settings will cause them to have increasingly longer times. Larger settings will produce greater change. -100→+100 
★ TVF Env Time 1–4	Specify the TVF envelope times (Time 1–Time 4). Higher settings will lengthen the time until the next cutoff frequency level is reached. (For example, Time 2 is the time over which Level 1 will change to Level 2.) 0–127
TVF Env Level 0–4	Specify the TVF envelope levels (Level 0–Level 4). These settings specify how the cutoff frequency will change at each point, relative to the standard cutoff frequency (the cutoff frequency value specified in the TVF screen). 0–127

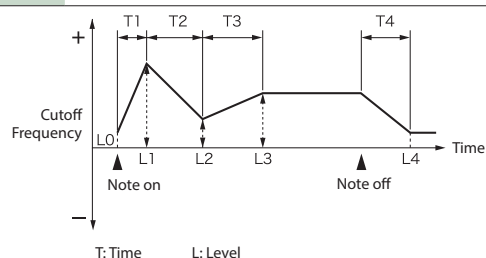



TVA

Parameter	Value/Explanation
★ Tone Level	Sets the volume of the tone. This setting is useful primarily for adjusting the volume balance between tones. 0–127
Level V-Curve	You can select from seven curves that determine how keyboard playing strength will affect the volume. If you do not want the volume of the tone to be affected by the force with which you play the key, set this to "FIXED." FIXED, 1–7 
Level V-Sens	Set this when you want the volume of the tone to change depending on the force with which you press the keys. Set this to a positive (+) value to have the changes in tone volume increase the more forcefully the keys are played; to make the tone play more softly as you play harder, set this to a negative (-) value. MEMO If you wish to make adjustments to the entire patch while maintaining the relative values of Level V-Sens among tones, adjust the Velocity Sens Offset (p. 5). However, this setting is shared by the Cutoff V-Sens (p. 9). -63–+63
Bias Level	Adjusts the angle of the volume change that will occur in the selected Bias Direction. Larger settings will produce greater change. Negative (-) values will invert the change direction. -100–+100
Bias Position	Specifies the key relative to which the volume will be modified. C–G9
Bias Direction	Selects the direction in which change will occur starting from the Bias Position. LWR The volume will be modified for the keyboard area below the Bias Point. UPR The volume will be modified for the keyboard area above the Bias Point. L&U The volume will be modified symmetrically toward the left and right of the Bias Point. ALL The volume changes linearly with the bias point at the center.

Bias

Bias causes the volume to be affected by the keyboard position. This is useful for changing volume through keyboard position (pitch) when playing acoustic instruments.

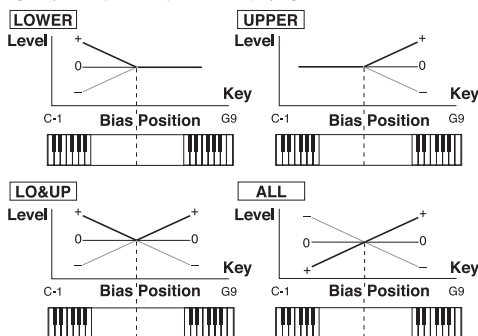

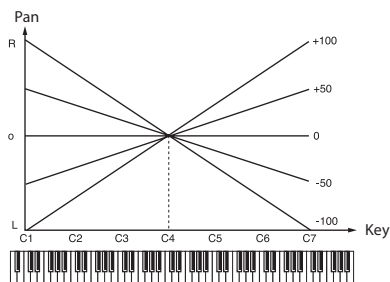
★ Tone Pan	Sets the pan of the tone. "L64" is far left, "0" is center, and "63R" is far right. L64–0–63R
Pan Keyfollow	Use this parameter if you want key position to affect panning. Positive (+) settings will cause notes higher than C4 key (center C) to be panned increasingly further toward the right, and negative (-) settings will cause notes higher than C4 key (center C) to be panned toward the left. Larger settings will produce greater change. -100–+100 
Random Pan Depth	Use this parameter when you want the stereo location to change randomly each time you press a key. Higher settings will produce a greater amount of change. 0–63


Parameter	Value/Explanation
Alternate Pan Depth	This setting causes panning to be alternated between left and right each time a key is pressed. Higher settings will produce a greater amount of change. "L" or "R" settings will reverse the order in which the pan will alternate between left and right. For example if two tones are set to "L" and "R" respectively, the panning of the two tones will alternate each time they are played. L63–0–63R

MEMO

When any value from Type "2"–"10" is selected for the Structure Type (p. 6) in the Pan Keyfollow, Random Pan Depth, Alternate Pan Depth settings, the output of tones 1 and 2 are joined in tone 2, and the output of tones 3 and 4 are joined in tone 4. For this reason, tone 1 will follow the settings of tone 2, and tone 3 will follow the settings of tone 4.

TVA ENV

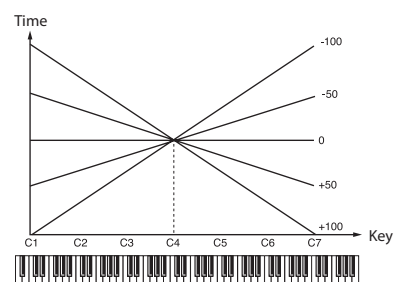Parameter	Value/Explanation
TVA-Env T1 V-Sens	This allows keyboard dynamics to affect the Time 1 of the TVA envelope. If you want Time 1 to be speeded up for strongly played notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63–+63
TVA-Env T4 V-Sens	The parameter to use when you want key release speed to control the Time 4 value of the TVA envelope. If you want Time 4 to be speeded up for quickly released notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63–+63
TVA-Env Time KF	Use this setting if you want the TVA envelope times (Time 2–Time 4) to be affected by the keyboard location. Based on the TVA envelope times for the C4 key (center C), positive (+) settings will cause notes higher than C4 to have increasingly shorter times, and negative (-) settings will cause them to have increasingly longer times. Larger settings will produce greater change. -100–+100 
★ TVA-Env Time 1–4	Specify the TVA envelope times (Time 1–Time 4). Higher settings will lengthen the time until the next volume level is reached. (For example, Time 2 is the time over which Level 1 will change to Level 2.) 0–127
TVA-Env Level 1–3	Specify the TVA envelope levels (Level 1–Level 3). These settings specify how the volume will change at each point, relative to the standard volume (the Tone Level value specified in the TVA screen). 0–127

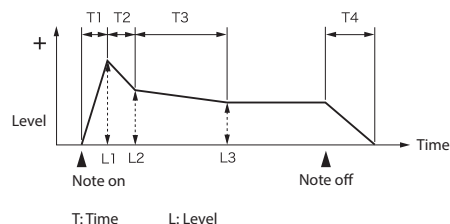

OUTPUT

Parameter	Value/Explanation
Patch Output Assign	Specifies how the direct sound of each patch will be output.
	MFx Output in stereo through MFx. You can also apply chorus or reverb to the sound that passes through MFx.
	L+R Output to the OUTPUT L (MONO) jack and OUTPUT R jack in stereo without passing through MFx.
	L, R Output to the OUTPUT L (MONO) jack or OUTPUT R jack in mono without passing through MFx.
Tone Output Assign	TONE Outputs according to the settings for each tone.
	Specifies how the direct sound of each tone will be output.
	* If the Patch Output Assign is set to anything other than "TONE," these settings will be ignored.
	* When the Structure Type (p. 6) has a setting of "2"–"10," the outputs of tones 1 and 2 will be combined with tone 2, and the outputs of tones 3 and 4 will be combined with tone 4. For this reason, tone 1 will follow the settings of tone 2, and tone 3 will follow the settings of tone 4.
Tone Output Level	* Chorus and reverb are output in mono at all times.
	MFx Output in stereo through MFx. You can also apply chorus or reverb to the sound that passes through MFx.
	L+R Output to the OUTPUT L (MONO) jack and OUTPUT R jack in stereo without passing through MFx.
	L, R Output to the OUTPUT L (MONO) jack or OUTPUT R jack in mono without passing through MFx.
Tone Chorus Send	Set the level of the signal that is sent to the output destination specified by Patch Output Assign or Tone Output Assign.
	0–127
Tone Reverb Send	Specifies the level of the signal sent to the chorus for each tone.
	0–127

LFO1, 2

Parameter	Value/Explanation
Waveform	Selects the waveform of the LFO.
	* If you set this to "BD-U" or "BD-D," you must turn the Key Trigger parameter to "ON." If this is "OFF," it will have no effect.
	SIN Sine wave
	TRI Triangle wave
	SAWU Sawtooth wave
	SAWD Sawtooth wave (negative polarity)
	SQR Square wave
	RND Random wave
	BD-U Once the attack of the waveform output by the LFO is allowed to develop in standard fashion, the waveform then continues without further change.
	BD-D Once the decay of the waveform output by the LFO is allowed to develop in standard fashion, the waveform then continues without further change.
	TRP Trapezoidal wave
	S&H Sample & Hold wave (one time per cycle, LFO value is changed)
	CHS Chaos wave
	VSIN Modified sine wave. The amplitude of a sine wave is randomly varied once each cycle.
★ Rate	A waveform generated by the data specified by LFO Step 1–16. This produces stepped change with a fixed pattern similar to a step modulator.
	Adjusts the modulation rate, or speed, of the LFO.
Rate Detune	* This setting will be ignored if the Waveform parameter is set to "CHS."
	0–127, note
Offset	LFO Rate Detune makes subtle changes in the LFO cycle rate (Rate) each time a key is pressed. Higher settings will cause greater change.
	* This parameter is invalid when Rate is set to "note."
Delay Time	0–127
	Raises or lowers the LFO waveform relative to the central value (pitch or cutoff frequency). Positive (+) settings will move the waveform so that modulation will occur from the central value upward. Negative (–) settings will move the waveform so that modulation will occur from the central value downward.
Delay Time	–100, –50, 0, +50, +100
	Delay Time (LFO Delay Time) specifies the time elapsed before the LFO effect is applied (the effect continues) after the key is pressed (or released).
Delay Time	* After referring to "How to Apply the LFO" (p. 12), change the setting until the desired effect is achieved.
	0–127


Parameter	Value/Explanation
Delay Time KF	Adjusts the value for the Delay Time depending on the key position, relative to the C4 key (center C). To decrease the time that elapses before the LFO effect is applied (the effect is continuous) with each higher key that is pressed in the upper registers, select a positive value; to increase the elapsed time, select a negative value.
	Larger settings will produce greater change. If you do not want the elapsed time before the LFO effect is applied (the effect is continuous) to change according to the key pressed, set this to "0."
Fade Mode	–100–+100
	Time
Fade Time	Key
	C1 C2 C3 C4 C5 C6 C7
Key Trigger	Specifies how the LFO will be applied.
	* After referring to "How to Apply the LFO" (p. 12), change the setting until the desired effect is achieved.
★ Pitch Depth	ON <, ON >, OFF <, OFF >
	Specifies the time over which the LFO amplitude will reach the maximum (minimum).
★ TVF Depth	* After referring to "How to Apply the LFO" (p. 12), change the setting until the desired effect is achieved.
	0–127
★ TVA Depth	Specifies whether the LFO cycle will be synchronized to begin when the key is pressed (ON) or not (OFF).
	OFF, ON
★ Pan Depth	Specifies how deeply the LFO will affect pitch.
	–63–+63
★ Pan Depth	Specifies how deeply the LFO will affect the cutoff frequency.
	–63–+63
★ Pan Depth	Specifies how deeply the LFO will affect the volume.
	–63–+63
★ Pan Depth	Specifies how deeply the LFO will affect the pan.
	–63–+63
★ Pan Depth	MEMO
	When the Structure Type (p. 6) is set to any value from "2" through "10," the output of tones 1 and 2 will be combined into tone 2, and the output of tones 3 and 4 will be combined into tone 4. This applies to the Pan Depth settings. For this reason, tone 1 will follow the settings of tone 2, and tone 3 will follow the settings of tone 4.
★ Pan Depth	–63–+63

STEP LFO

Parameter	Value/Explanation
Step Type	When generating an LFO waveform from the data specified in LFO Step1–16, specify whether the level will change abruptly at each step (TYP1) or will be connected linearly (TYP2).
	TYP1, TYP2
LFO Step 1–16	Specifies the data for the Step LFO. If the LFO Pitch Depth is +63, each +1 unit of the step data corresponds to a pitch of +50 cents.
	–36–+36


How to Apply the LFO

Apply the LFO gradually after the key is pressed

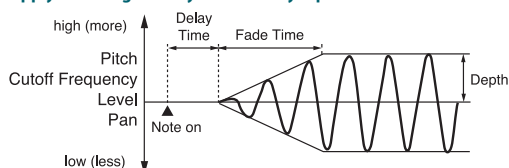


Parameter	Value/Explanation
Fade Mode	ON <
Delay Time	The time from when the keyboard is played until the LFO begins to be applied.
Fade Time	The time over which the LFO amplitude will reach the maximum after the Delay Time has elapsed.

Apply the LFO immediately when the key is pressed, and then gradually begin to decrease the effect

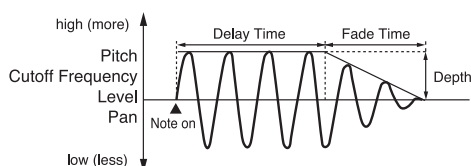


Parameter	Value/Explanation
Fade Mode	ON >
Delay Time	The time that the LFO will continue after the keyboard is played.
Fade Time	The time over which the LFO amplitude will reach the minimum after the Delay Time has elapsed.

Apply the LFO gradually after the key is released

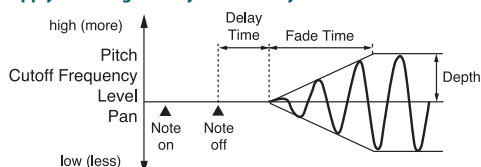

Parameter	Value/Explanation
Fade Mode	OFF <
Delay Time	The time from when the keyboard is released until the LFO begins to be applied.
Fade Time	The time over which the LFO amplitude will reach the maximum after the Delay Time has elapsed.

Apply the LFO from when the key is pressed until it is released, and gradually begin to decrease the effect when the key is released

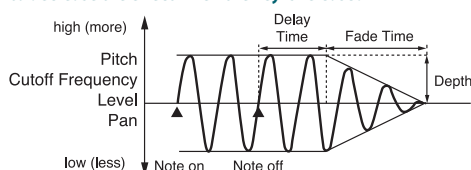

Parameter	Value/Explanation
Fade Mode	OFF >
Delay Time	The time that the LFO will continue after the keyboard is released.
Fade Time	The time over which the LFO amplitude will reach the minimum after the Delay Time has elapsed.

CTRL

Parameter	Value/Explanation				
Env Mode	When a loop waveform is selected, the sound will normally continue as long as the key is pressed. If you want the sound to decay naturally even if the key remains pressed, set this to "NOSUS." * If a one-shot type waveform is selected, it will not sustain even if this parameter is set to "SUST." NOSUS, SUST MEMO One-shot: These waveforms contain sounds that have short decays. A one-shot waveform records the initial rise and fall of the sound. Some of the XPS-30's one-shot waveforms are sounds that are complete in themselves, such as percussive instrument sounds. The XPS-30 also contains many other one-shot waveforms that are elements of other sounds. These include attack components such as piano-hammer sounds and guitar fret noises. Looped: These waveforms include sounds with long decays as well as sustained sounds. Loop waveforms repeatedly play back (loop) the portion of the waveform after the sound has reached a relatively steady state. The XPS-30's looped waveforms also include components of other sounds, such as piano-string resonant vibrations and the hollow sounds of brass instruments.				
Rx Bender	For each tone, specify whether MIDI Pitch Bend messages will be received (ON), or not (OFF). OFF, ON				
Rx Expression	For each tone, specify whether MIDI Expression messages will be received (ON), or not (OFF). OFF, ON				
Rx Hold-1	For each tone, specify whether MIDI Hold-1 messages will be received (ON), or not (OFF). * If "NOSUS" is selected for Env Mode parameter, this setting will have no effect. OFF, ON				
Rx Pan Mode	For each tone, specify how pan messages will be received. * The channels cannot be set so as not to receive Pan messages. <table border="1"> <tr> <td>CONT</td><td>Whenever Pan messages are received, the stereo position of the tone will be changed.</td></tr> <tr> <td>K-ON</td><td>The pan of the tone will be changed only when the next note is played. If a pan message is received while a note is sounding, the panning will not change until the next key is pressed.</td></tr> </table>	CONT	Whenever Pan messages are received, the stereo position of the tone will be changed.	K-ON	The pan of the tone will be changed only when the next note is played. If a pan message is received while a note is sounding, the panning will not change until the next key is pressed.
CONT	Whenever Pan messages are received, the stereo position of the tone will be changed.				
K-ON	The pan of the tone will be changed only when the next note is played. If a pan message is received while a note is sounding, the panning will not change until the next key is pressed.				
Redamper Sw	You can specify, on an individual tone basis, whether or not the sound will be held when a Hold 1 message is received after a key is released, but before the sound has decayed to silence. If you want to sustain the sound, set this "ON." When using this function, also set the Rx Hold-1 "ON." This function is effective for piano sounds. OFF, ON				

Matrix control

Ordinarily, if you wanted to change tone parameters using an external MIDI device, you would need to send System Exclusive messages—MIDI messages designed exclusively for the XPS-30. However, System Exclusive messages tend to be complicated, and the amount of data that needs to be transmitted can get quite large.

For that reason, a number of the more typical of the XPS-30's tone parameters have been designed so they accept the use of Control Change (or other) MIDI messages for the purpose of making changes in their values. This provides you with a variety of means of changing the way patches are played. For example, you can use the Pitch Bend lever to change the LFO cycle rate, or use the keyboard's touch to open and close a filter.

The function which allows you use MIDI messages to make these changes in realtime to the tone parameters is called the Matrix control. Up to four Matrix Controls can be used in a single patch.

To use the Matrix control, specify which MIDI message (Source) will be used to control which parameter (Dest), and how greatly (Sens), and the tone to which the effect is applied (Switch).

MTRX CTRL1-4

Parameter	Value/Explanation
Control 1-4 Source	Sets the MIDI message used to change the tone parameter with the Matrix Control.
	OFF Matrix control will not be used.
	CC01-32, 33-95 Controller numbers 1-32, 33-95
	PITCH BEND Pitch Bend
	AFTERTOUCH Aftertouch
	SYS CTRL1-SYS CTRL4 MIDI messages used as common matrix controls.
	VELOCITY Velocity (pressure you press a key with)
	KEY FOLLOW Key follow (keyboard position with C4 as 0)
	* Velocity and Key follow correspond to Note messages.
	TEMPO The specified tempo (sequencer tempo) or the tempo of an external MIDI sequencer.
	LFO1, 2 LFO1, 2
	PITCH ENV Pitch envelope
	TVF ENV TVF envelope
	TVA ENV TVA envelope

- Although there are no MIDI messages for LFO 1 through TVA Envelope, they can be used as Matrix Control. In this case, you can change the tone settings in realtime by playing patches.
- If you want to use common controllers for the entire XPS-30, select "SYS CTRL1"-"SYS CTRL4." MIDI messages used as System Control 1-4 are set with the System Ctrl 1-4 Source (p. 34).

MEMO

- There are parameters that determine whether or not Pitch bend, Controller number 11 (Expression) and Controller number 64 (Hold 1) are received (p. 12). When these settings are "ON," and the MIDI messages are received, then when any change is made in the settings of the desired parameter, the Pitch bend, Expression, and Hold 1 settings also change simultaneously. If you want to change the targeted parameters only, then set these to "OFF."
- There are parameters that let you specify whether specific MIDI messages will be received for each channel in a performance (p. 20). When a patch with Matrix control settings is assigned to a part, confirm that any MIDI messages used for the Matrix control will be received. If the XPS-30 is set up such that reception of MIDI messages is disabled, then the Matrix control will not function.

Control Dest1-4	Matrix control destination selects the tone parameter that is to be controlled when using the Matrix control. The following parameters can be controlled. When not controlling parameters with the Matrix Control, set this to "OFF." Up to four parameters can be specified for each Matrix Control, and controlled simultaneously.	
	OFF	Matrix control will not be used.
	Changing the pitch	
	PCH	Changes the pitch.
	Opening and closing the filter	
	CUT	Changes the cutoff frequency.
	RES	Emphasizes the overtones in the region of the cutoff frequency, adding character to the sound.
	Changing the volume and pan	
	LEV	Changes the volume level.
	PAN	Changes the pan.
	Changing how the effects are applied	
	DRY	Changes the volume of the original sound.
	CHO	Changes the amount of chorus.
	REV	Changes the amount of reverb.
	Applying LFO to modulate sounds	
	PIT-LFO1, 2	Changes the vibrato depth.
	TVF-LFO1, 2	Changes the wah depth.
	TVA-LFO1, 2	Changes the tremolo depth.
	PAN-LFO1, 2	Changes the effect that the LFO will have on pan.
	LFO-RATE	Changes the speed of the LFO cycles. The speed will not change if LFO Rate is set to "note."
	Changing the Pitch Envelope	
	PIT-ATK	Changes the Env Time 1 of the pitch envelope.
	PIT-DCY	Changes the Env Time 2 and Env Time 3 of the pitch envelope.
	PIT-REL	Changes the Env Time 4 of the pitch envelope.
	Changing the TVF Envelope	
	TVF-ATK	Changes the Env Time 1 of the TVF envelope.
	TVF-DCY	Changes the Env Time 2 and Env Time 3 of the TVF envelope.
	TVF-REL	Changes the Env Time 4 of the TVF envelope.
	Changing the TVA Envelope	
	TVA-ATK	Changes the Env Time 1 of the TVA envelope.
	TVA-DCY	Changes the Env Time 2 and Env Time 3 of the TVA envelope.
	TVA-REL	Changes the Env Time 4 of the TVA envelope.
	Splitting tones that are played	
	TMT	- If the Matrix control is used to split tones, set the TMT Velocity Control to "OFF," and the TMT Control Switch to "ON" (p. 7). - If the Matrix control is used to split tones, we recommend setting the Matrix control Sens to "+63." Selecting a lower value may prevent switching of the tones. Furthermore, if you want to reverse the effect, set the value to "-63." - If you want to use matrix control to switch smoothly between tones, use the Velo Fade Lower and Velo Fade Upper (p. 7). The higher the values set, the smoother the switch is between the tones.

Parameter	Value/Explanation	
	Changing the depth of frequency modulation for FXM	
	FXM	
	Changing specific MFX parameters	
	MFX1-4	Change the parameter that was specified by MFX Control 1-4 Assign. * If you have not made the necessary settings for using the MFX, the MFX will not be applied even if you attempt to control it as a Matrix control destination.
Control Sens1-4	Sets the amount of the Matrix Control's effect that is applied. If you wish to modify the selected parameter in a positive (+) direction—i.e., a higher value, toward the right, or faster etc. —from its current setting, select a positive (+) value. If you wish to modify the selected parameter in a negative (-) direction—i.e., a lower value, toward the left, or slower etc. —from its current setting, select a negative (-) value. For either positive or negative settings, greater absolute values will allow greater amounts of change. Set this to "0" if you don't want to apply the effect.	
	-63+63	
Control Switch1-4	Selects the tone to which the effect is applied when using the Matrix Control.	
	OFF	The effect will not be applied.
	ON	The effect will be applied.
	REVS	The effect will be applied in reverse

Drum Kit Parameters

MEMO

A drum kit consists of a percussion instrument sound (tone) assigned to each key. The tone that's assigned to each key consists of a combination of up to four waves. Drum Kit Edit lets you edit the settings of the tone that's assigned to each key.

COMMON

Parameter	Value/Explanation	
A0–C8 (Tone name)	Specifies the key to which the tone you want to edit is assigned. * You can also press a key to select this.	
Drum Kit Level	Sets the volume of the drum kit. 0–127	
Tone Name	Changes the name (tone name) of the tone that's assigned to the specified key. Refer to "Editing the tone name" (p. 14).	
Assign Type	Sets the way sounds are played when the same key is pressed a number of times.	
	MULTI	Layer the sound of the same keys. Even with continuous sounds where the sound plays for an extended time, such as with crash cymbals, the sounds are layered, without previously played sounds being eliminated.
	SINGLE	Only one sound can be played at a time when the same key is pressed. With continuous sounds where the sound plays for an extended time, the previous sound is stopped when the following sound is played.
Mute Group	On an actual acoustic drum set, an open hi-hat and a closed hi-hat sound can never occur simultaneously. To reproduce the reality of this situation, you can set up a Mute Group. The Mute Group function allows you to designate two or more tones that are not allowed to sound simultaneously. Up to 31 Mute Groups can be used. Tones that are not belong to any such group should be set to "OFF." OFF, 1–31	
Tone Env Mode	When a loop waveform (p. 12) is selected, the sound will normally continue as long as the key is pressed. If you want the sound to decay naturally even if the key remains pressed, set this to "NO-SUS." * If a one-shot type waveform (p. 12) is selected, it will not sustain even if this parameter is set to "SUSTAIN." NO-SUS, SUSTAIN	
Tone Pitch Bend Range	Specifies the amount of pitch change in semitones (4 octaves) that will occur when the pitch bend lever is moved. The amount of change when the lever is tilted is set to the same value for both left and right sides. 0–48	
Tone Rx Expression	For each tone, specify whether MIDI Expression messages will be received (ON), or not (OFF). OFF, ON	
Tone Rx Hold-1	For each tone, specify whether MIDI Hold-1 messages will be received (ON), or not (OFF). * If "NO-SUS" is selected for Tone Env Mode (p. 14), this setting will have no effect. OFF, ON	
Rx Pan Mode	For each tone, specify how pan messages will be received. * The channels cannot be set so as not to receive Pan messages.	
	CONT	Whenever Pan messages are received, the stereo position of the tone will be changed.
	K-ON	The pan of the tone will be changed only when the next note is played. If a pan message is received while a note is sounding, the panning will not change until the next key is pressed.
One Shot Mode	The sound will play back until the end of the waveform (or the end of the envelope, whichever comes first). The result will be the same as when the envelope's Tone Env Mode (p. 14) is set to "NO-SUS." OFF, ON	

WAVE

Parameter	Value/Explanation	
☐ 1– ☐ 4	Specify the on/off status of tones 1–4. If a tone is on, a "✓" mark is shown. OFF, ON	
Wave Group	Select the groups containing the Waves comprising the tone.	
	INTA, B	Waveforms stored in internal
	EXP	Waveforms for expansion sounds
	SAMP	Imported user sample waveforms
	MSAM	Multisamples created by JUNO-DS Tone Manager (PC software)
Wave No. L (Mono) Wave No. R	Selects the Waves comprising the tone. Along with the Wave number, the Wave name appears at the lower part of the display. When in mono, only the left side (L) is specified. When in stereo, the right side (R) is also specified. OFF, 1–2402 (The upper limit will depend on the wave group.)	
Wave Gain	Sets the gain (amplification) of the waveform. The value changes in 6 dB (decibel) steps—an increase of 6 dB doubles the waveform's gain. -6, 0, +6, +12	
Wave Tempo Sync	When you wish to synchronize a Phrase Loop to the clock (tempo), set this to "ON." OFF, ON	
Wave FXM Switch	Sets whether FXM will be used (ON) or not (OFF). OFF, ON	
Wave FXM Color	Specifies how FXM will perform frequency modulation. Higher settings result in a grainier sound, while lower settings result in a more metallic sound. 1–4	
Wave FXM Depth	Specifies the depth of the modulation produced by FXM. 0–16	
Wave Coarse Tune	Adjusts the pitch of the waveform's sound up or down in semitone steps (±4 octaves). -48–+48	
Wave Fine Tune	Adjusts the pitch of the waveform's sound up or down in 1-cent steps (±50 cents). -50–+50	
Wave Level	Sets the volume of the waveform. 0–127	
Wave Pan	Specifies the pan of the waveform. "L64" is far left, "0" is center, and "63R" is far right. L64–0–63R	
Wave Random Pan Sw	Use this setting to cause the waveform's panning to change randomly each time a key is pressed (ON) or not (OFF). * The range of the panning change is set by the Random Pan Depth (p. 16). OFF, ON	
Wave Alter Pan Sw	This setting causes panning of the waveform to be alternated between left and right each time a key is pressed.	
	OFF	Pan does not change.
	ON	The waveform is panned according to the Alternate Pan Depth (p. 16) setting.
	REVS	The waveform is panned in reverse.

WMT

Parameter	Value/Explanation	
WMT Velocity Control	WMT Velocity Control determines whether a different tone is played or not depending on the force with which the key is played (velocity).	
	OFF	Waveforms are not velocity-switched.
	ON	Waveforms are switched according to the keyboard playing velocity.
	RANDOM	The waveform's constituent tones will sound randomly, regardless of the velocity.
Velo Fade Upper, Lower	This determines what will happen to the tone's level when the tone is played at a velocity Upper/lower than its specified velocity range. Higher settings produce a more gradual change in volume. If you want notes played outside the specified key velocity range to not be sounded at all, set this to "0." 0–127	
Velo Range Upper, Lower	This sets the highest/lowest velocity at which the waveform will sound. Make these settings when you want different waveforms to sound in response to notes played at different strengths. * If you attempt to set the Lower velocity limit above the Upper, or the Upper below the Lower, the other value will automatically be adjusted to the same setting. (Upper) LOWER–127, (Lower) 1–UPPER	

Editing the tone name

1. Move the cursor to "Tone Name," and press the [ENTER] button.
The DRUM KIT TONE NAME screen appears.

2. Assign a tone name

Operation	Explanation
[◀] [▶] buttons	Move the cursor.
Value dial, [-] [+] buttons	Select the character.
[▼] [▲] buttons	Switch between uppercase and lowercase.

Inserting/Deleting Characters

1. While entering a name, press the [MENU] button.
The NAME MENU window appears. The window closes if you press the button once again.

2. Move the cursor to "INSERT" or "DELETE," and press the [ENTER] button.

Function	Explanation
INSERT	Press the [ENTER] button to insert a space (blank) at the cursor location.
DELETE	Press the [ENTER] button to delete the character at the cursor location; subsequent characters will be moved forward to fill the gap.

3. When you've specified the name, press the [ENTER] button.


Parameter	Value/Explanation

PITCH

Parameter	Value/Explanation
Tone Coarse Tune	Selects the pitch at which a tone sounds. C- -G9
Tone Fine Tune	Adjusts the pitch of the tone's sound up or down in 1-cent steps (± 50 cents). -50+50
Tone Random Pitch Depth	Specifies the width of random pitch deviation that will occur each time a key is pressed. If you do not want the pitch to change randomly, set this to "0." These values are in units of cents (1/100th of a semitone). 0-1200

PITCH ENV

Parameter	Value/Explanation
Pitch Env Depth	Adjusts the effect of the Pitch Envelope. Higher settings will cause the pitch envelope to produce greater change. Negative (-) settings will invert the shape of the envelope. -12+12
Pitch Env V-Sens	Keyboard playing dynamics can be used to control the depth of the pitch envelope. If you want the pitch envelope to have more effect for strongly played notes, set this parameter to a positive (+) value. If you want the pitch envelope to have less effect for strongly played notes, set this to a negative (-) value. -63+63
Pitch Env T1 V-Sens	This allows keyboard dynamics to affect the Time 1 of the Pitch envelope. If you want Time 1 to be speeded up for strongly played notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63+63
Pitch Env T4 V-Sens	Use this parameter when you want key release speed to affect the Time 4 value of the pitch envelope. If you want Time 4 to be speeded up for quickly released notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63+63
Pitch Env Time 1-4	Specify the pitch envelope times (Time 1-Time 4). Higher settings will result in a longer time until the next pitch is reached. (For example, Time 2 is the time over which the pitch changes from Level 1 to Level 2.) 0-127
Pitch Env Level 0-4	Specify the pitch envelope levels (Level 0-Level 4). It determines how much the pitch changes from the reference pitch (the value set with Coarse Tune or Fine Tune on the Pitch screen) at each point. Positive (+) settings will cause the pitch to be higher than the standard pitch, and negative (-) settings will cause it to be lower. -63+63

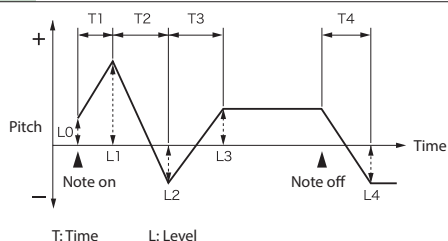


TVF

Parameter	Value/Explanation
	Selects the type of filter. A filter cuts or boosts a specific frequency region to change a sound's brightness, thickness, or other qualities. * If you set "LPF2" or "LPF3," the setting for the Resonance will be ignored (p. 15).
Filter Type	OFF No filter is used. LPF Low Pass Filter. This reduces the volume of all frequencies above the cutoff frequency in order to round off, or un-brighten the sound. This is the most common filter used in synthesizers. BPF Band Pass Filter. This leaves only the frequencies in the region of the cutoff frequency, and cuts the rest. This can be useful when creating distinctive sounds. HPF High Pass Filter. This cuts the frequencies in the region below the cutoff frequency. This is suitable for creating percussive sounds emphasizing their higher tones. PKG Peaking Filter. This emphasizes the frequencies in the region of the cutoff frequency. You can use this to create wah-wah effects by employing an LFO to change the cutoff frequency cyclically. LPF2 Low Pass Filter 2. Although frequency components above the cutoff frequency are cut, the sensitivity of this filter is half that of the LPF. This makes it a comparatively warmer low pass filter. This filter is good for use with simulated instrument sounds such as the acoustic piano. LPF3 Low Pass Filter 3. Although frequency components above the cutoff frequency are cut, the sensitivity of this filter changes according to the cutoff frequency. While this filter is also good for use with simulated acoustic instrument sounds, the nuance it exhibits differs from that of the LPF2, even with the same TVF Envelope settings.
Cutoff Frequency	Selects the frequency at which the filter begins to have an effect on the waveform's frequency components. "LPF/LPF2/LPF3" selected for the Filter Type Lower cutoff frequency settings reduce a tone's upper harmonics for a more rounded, warmer sound. Higher settings make it sound brighter. "BPF" selected for the Filter Type Harmonic components will change depending on the TVF Cutoff Frequency setting. This can be useful when creating distinctive sounds. "HPF" selected for the Filter Type Higher Cutoff Frequency settings will reduce lower harmonics to emphasize just the brighter components of the sound. "PKG" selected for the Filter Type The harmonics to be emphasized will vary depending on Cutoff Frequency setting.
Resonance	Emphasizes the portion of the sound in the region of the cutoff frequency, adding character to the sound. Excessively high settings can produce oscillation, causing the sound to distort.
Cutoff V-Curve	Selects one of the following seven curves that determine how keyboard playing dynamics (velocity) influence the cutoff frequency. Set this to "FIXED" if you don't want the Cutoff frequency to be affected by the keyboard velocity. FIXED, 1-7
Cutoff V-Sens	Use this parameter when changing the cutoff frequency to be applied as a result of changes in playing velocity. If you want strongly played notes to raise the cutoff frequency, set this parameter to positive (+) settings. If you want strongly played notes to lower the cutoff frequency, use negative (-) settings.
Resonance V-Sens	This allows keyboard velocity to modify the amount of Resonance. If you want strongly played notes to have a greater Resonance effect, set this parameter to positive (+) settings. If you want strongly played notes to have less Resonance, use negative (-) settings.

TVF ENV

Parameter	Value/Explanation
TVF Env Depth	Specifies the depth of the TVF envelope. Higher settings will cause the TVF envelope to produce greater change. Negative (-) settings will invert the shape of the envelope. -63+63
TVF Env V-Curve	Selects one of the following 7 curves that will determine how keyboard playing dynamics will affect the TVF envelope. Set this to "FIXED" if you don't want the TVF Envelope to be affected by the keyboard velocity. FIXED, 1-7 
TVF Env V-Sens	Specifies how keyboard playing dynamics will affect the depth of the TVF envelope. Positive (+) settings will cause the TVF envelope to have a greater effect for strongly played notes, and negative (-) settings will cause the effect to be less. -63+63
TVF Env T1 V-Sens	This allows keyboard dynamics to affect the Time 1 of the TVF envelope. If you want Time 1 to be speeded up for strongly played notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63+63
TVF Env T4 V-Sens	The parameter to use when you want key release speed to control the Time 4 value of the TVF envelope. If you want Time 4 to be speeded up for quickly released notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63+63
TVF Env Time 1-4	Specify the TVF envelope times (Time 1–Time 4). Higher settings will lengthen the time until the next cutoff frequency level is reached. (For example, Time 2 is the time over which Level 1 will change to Level 2.) 0-127
TVF Env Level 0-4	Specify the TVF envelope levels (Level 0–Level 4). These settings specify how the cutoff frequency will change at each point, relative to the standard cutoff frequency (the cutoff frequency value specified in the TVF screen). 0-127

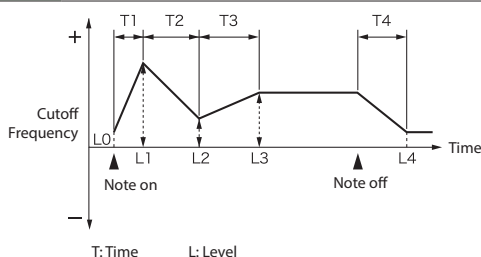


TVA

Parameter	Value/Explanation
Tone Level	Sets the volume of the tone. Use this parameter to adjust the volume balance between tones. 0-127
Level V-Curve	You can select from seven curves that determine how keyboard playing strength will affect the volume. If you do not want the volume of the tone to be affected by the force with which you press the key, select "FIXED." FIXED, 1-7 
Level V-Sens	Set this when you want the volume of the tone to change depending on the force with which you press the keys. Set this to a positive (+) value to have the changes in tone volume increase the more forcefully the keys are played; to make the tone play more softly as you play harder, set this to a negative (-) value. -63+63
Tone Pan	Sets the pan for the tone. "L64" is far left, "0" is center, and "63R" is far right. L64-0-63R
Random Pan Depth	Use this parameter when you want the stereo location to change randomly each time you press a key. Higher settings will produce a greater amount of change. * This will affect only waves whose Wave Random Pan Sw (p. 14) is "ON." 0-63
Alternate Pan Depth	This setting causes panning to be alternated between left and right each time a key is pressed. Higher settings will produce a greater amount of change. "L" or "R" settings will reverse the order in which the pan will alternate between left and right. For example if two tones are set to "L" and "R" respectively, the panning of the two tones will alternate each time they are played. * This will affect only waves whose Wave Alter Pan Sw (p. 14) is "ON" or "REVS." L63-0-63R

Parameter	Value/Explanation
Relative Level	Corrects for the volume of the tone. This parameter is set by the key-based controller system exclusive message. Normally, you should leave it set to 0. * If the Tone Level is set to 127, the volume will not increase beyond that point. -64+63

TVA-ENV

Parameter	Value/Explanation
TVA-Env T1 V-Sens	This allows keyboard dynamics to affect the Time 1 of the TVA envelope. If you want Time 1 to be speeded up for strongly played notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63+63
TVA-Env T4 V-Sens	The parameter to use when you want key release speed to control the Time 4 value of the TVA envelope. If you want Time 4 to be speeded up for quickly released notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63+63
TVA-Env Time 1-4	Specify the TVA envelope times (Time 1–Time 4). Higher settings will lengthen the time until the next volume level is reached. (For example, Time 2 is the time over which Level 1 will change to Level 2.) 0-127
TVA-Env Level 1-3	Specify the TVA envelope levels (Level 1–Level 3). These settings specify how the volume will change at each point, relative to the standard volume (the Tone Level value specified in the TVA screen). 0-127

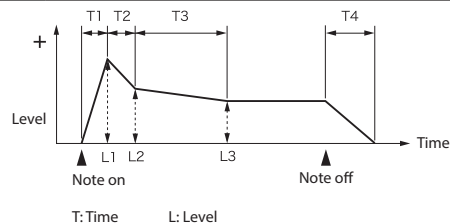


OUTPUT

Parameter	Value/Explanation
Rhythm Output Assign	Specifies for each drum kit how the direct sound will be output.
	MFX Output in stereo through MFX. You can also apply chorus or reverb to the sound that passes through MFX.
	L+R Output to the OUTPUT L (MONO) jack and OUTPUT R jack in stereo without passing through MFX.
	L, R Output to the OUTPUT L (MONO) jack or OUTPUT R jack in mono without passing through MFX.
Tone Output Assign	TONE Outputs according to the settings for each tone.
	Specifies how the direct sound of each tone will be output. * If the Rhythm Output Assign is set to anything other than "TONE," these settings will be ignored. * Chorus and reverb are output in mono at all times.
	MFX Output in stereo through MFX. You can also apply chorus or reverb to the sound that passes through MFX.
	L+R Output to the OUTPUT L (MONO) jack and OUTPUT R jack in stereo without passing through MFX.
Tone Output Level	L, R Output to the OUTPUT L (MONO) jack or OUTPUT R jack in mono without passing through MFX.
	Set the level of the signal that is sent to the output destination specified by Patch Output Assign or Tone Output Assign. 0-127
Tone Chorus Send	Specifies the level of the signal sent to the chorus for each tone. 0-127
Tone Reverb Send	Specifies the level of the signal sent to the reverb for each tone. 0-127

Effects Edit

In Patch mode you can use multi effects (MFX), chorus, and reverb.

Signal Flow

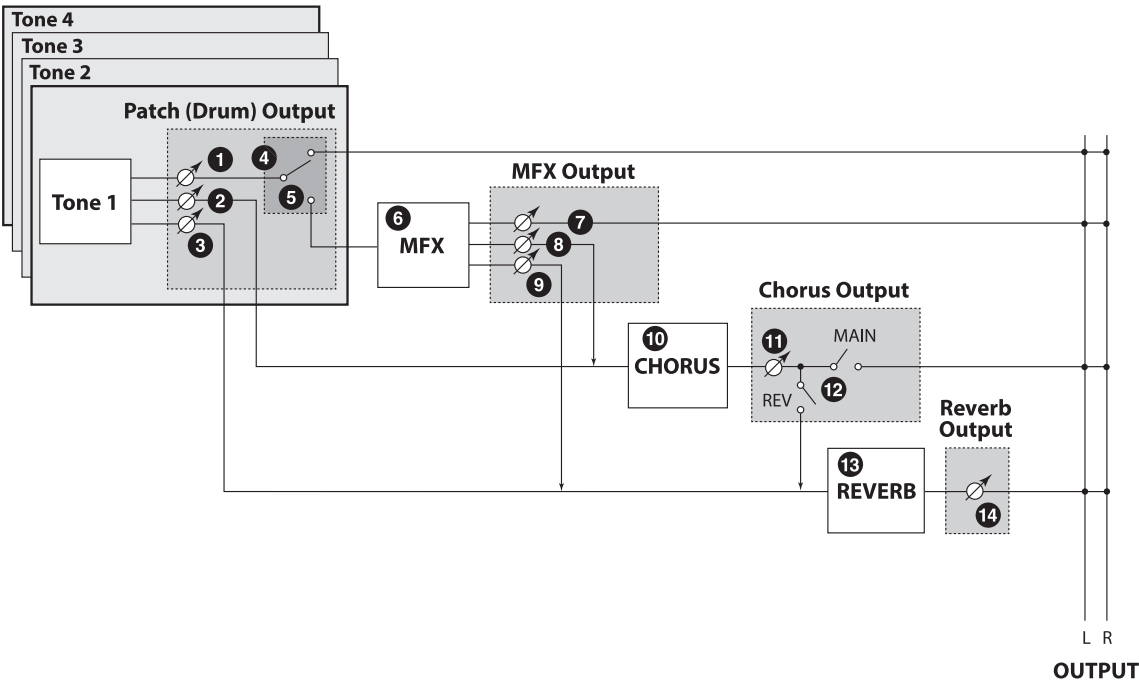

When a patch is selected Make these settings in the "OUTPUT" tab of the PATCH EDIT screen.	1	Tone Output Level	p. 11
	2	Tone Chorus Send	
	3	Tone Reverb Send	
	4	Patch Output Assign	
	5	Tone Output Assign	
When a drum kit is selected Make these settings in the "OUTPUT" tab of the DRUM KIT EDIT screen.	1	Tone Output Level	p. 16
	2	Tone Chorus Send	
	3	Tone Reverb Send	
	4	Rhythm Output Assign	
	5	Tone Output Assign	

Make these settings in the "MFX" tab of the EFFECTS EDIT screen.	6	MFX Type	p. 18
	7	Output Level	
	8	Chorus Send Level	
	9	Reverb Send Level	
Make these settings in the "CHORUS" tab of the EFFECTS EDIT screen.	10	Chorus Type	p. 18
	11	Chorus Level	
	12	Output Select	
Make these settings in the "REVERB" tab of the EFFECTS EDIT screen.	13	Reverb Type	p. 18
	14	Reverb Level	

Procedure

1. Press the [SAMPLE IMPORT] button and [DAW CONTROL] button simultaneously.
The EDIT MENU screen appears.
2. Move the cursor to "EFFECTS EDIT," and press the [ENTER] button.
The EFFECTS EDIT screen appears.
3. Move the cursor to tab, and use the [◀] [▶] buttons to switch the pages.
4. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.
5. To save the edited settings, perform the operation "Saving Your Settings (Write)" (refer to owner's manual).

Effects Parameters

MFX

Parameter	Value/Explanation
MFX Type	Turns MFX on/off, and specifies the type of MFX that is used. If MFX is on, ☐ shows a "✓" mark.
	* For details on MFX, refer to "MFX Parameters (MFX, MFX1-3)" (p. 40).
Parameters for each MFX type	00: THRU-80: BIT CRUSHER
	Edit the parameters of the MFX type you've selected.
Output Level	* Refer to "MFX Parameters (MFX, MFX1-3)" (p. 40).
	Adjusts the volume of the sound that has passed through the MFX. If you're applying a MFX, this specifies the depth of the MFX. If you're not applying a MFX, this specifies the volume of the original sound.
Chorus Send Level	0-127
	Specifies the level of the signal sent to the chorus.
Reverb Send Level	0-127
	Specifies the level of the signal sent to the reverb.

MFX control

If you wanted to change the volume of MFX sounds, the delay time of Delay, and the like, using an external MIDI device, you would need to send System Exclusive messages-MIDI messages designed exclusively for the XPS-30. However, System Exclusive messages tend to be complicated, and the amount of data that needs to be transmitted can get quite large.

For that reason, a number of the more typical of the XPS-30's MFX parameters have been designed so they accept the use of Control Change (or other) MIDI messages for the purpose of making changes in their values. For example, you can use the Pitch Bend lever to change the amount of distortion, or use the keyboard's touch to change the delay time of Delay.

The parameters that can be changed are predetermined for each type of MFX; among the parameters described in "MFX parameters" (p. 40), these are indicated by a "#."

The function that allows you use MIDI messages to make these changes in realtime to the MFX parameters is called the MFX control. Up to four MFX controls can be used in a single patch/drum kit/performance.

When the MFX control is used, you can select the amount of control (Sens) applied, the parameter selected (Destination), and the MIDI message used (Source).

MEMO

By using the Matrix control instead of the MFX control, you can also change the parameters of some popular MFX in realtime (p. 12).

MFX CTRL

Parameter	Value/Explanation
Source 1-4	Sets the MIDI message used to change the MFX parameter with the MFX control.
	OFF MFX control will not be used.
	CC01-31, 33-95 Controller numbers 1-31, 33-95
	PITCH BEND Pitch bend
	AFTERTOUCH Aftertouch
Destination 1-4	SYS CTRL1-4 Use the System Control 1-4 Source setting (p. 34).
	Sets the MFX parameters to be controlled with the Source 1-4. The MFX parameters available for control will depend on the MFX Type.
Sens 1-4	* Refer to "MFX Parameters (MFX, MFX1-3)" (p. 40).
	Specifies the depth of MFX control.
	Specify a positive (+) value if you want to change the value of the assigned destination in a positive direction (larger, toward the right, faster, etc.), or specify a negative value (-) if you want to change the value in a negative direction (smaller, toward the left, slower, etc.).
	Larger values will allow a greater amount of control.
	-63+63

CHORUS

Parameter	Value/Explanation
Chorus Type	Turns Chorus on/off, and specifies the type of chorus that is used. If Chorus is on, ☐ shows a "✓" mark.
	00: OFF Neither chorus or delay is used.
	01: CHORUS Chorus is used.
	02: DELAY Delay is used.
Parameters for each chorus type	03: GM2 CHORUS GM2 chorus
	Set the parameters of the selected chorus type.
Output Select	* Refer to "Chorus Parameters" (p. 58).
	Specifies how the sound routed through chorus will be output.
	MAIN Output to the OUTPUT jacks in stereo.
	REV Output to reverb in mono.
Chorus Level	M+R Output to the OUTPUT jacks in stereo, and to reverb in mono.
	Adjusts the volume of the sound that has passed through chorus.
	0-127

REVERB

Parameter	Value/Explanation
Reverb Type	Turns Reverb on/off, and specifies the type of reverb that is used. If Reverb is on, ☐ shows a "✓" mark.
	00: OFF Reverb is not used.
	01: REVERB Normal reverb
	02: SRV ROOM This reverb simulates typical room acoustic reflections.
	03: SRV HALL This reverb simulates typical concert hall acoustic reflections.
	04: SRV PLATE This reverb simulates a reverb plate, a popular type of artificial reverb unit that derives its sound from the vibration of a metallic plate.
Parameters for each reverb type	05: GM2 REVERB GM2 reverb
	Set the parameters of the selected reverb type.
Reverb Level	* Refer to "Reverb Parameters" (p. 58).
	Adjusts the volume of the sound that has passed through reverb.
	0-127

Performance Mode

Performance Edit

MEMO

PERFORMANCE EDIT and PART EDIT have the same parameters in common.

Procedure

1. Press the [PATCH/PERFORM] button to make it light.
2. Select a performance that you want to edit.
3. Press the [SAMPLE IMPORT] button and [DAW CONTROL] button simultaneously.
The EDIT MENU screen appears.
4. Move the cursor to "PERFORMANCE EDIT," and press the [ENTER] button.
The PERFORM EDIT screen appears.
5. Move the cursor to tab, and use the [◀] [▶] buttons to switch the pages.
6. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.
7. To save the edited settings, perform the operation "Saving Your Settings (Write)" (refer to owner's manual).

MEMO

- In the PERFORM EDIT screen, you can use pads [1]–[8] to select the part that you want to edit. If you hold down the [SHIFT] button and press a pad [1]–[8], a part 9–16 is selected.
- In the PERFORM EDIT screen, press the [MENU] button to open the INIT MENU window. Select "PERFORM" or "PART" and press the [ENTER] button to initialize the selected performance or part.

Performance Parameters

PATCH

Parameter	Value/Explanation
Type	Sets the assignment of a patch (Pat) or drum kit (Drm) to each of the parts. Pat, Drm
Bank	Selects the group to which the desired patch or drum kit belongs. PRST (Preset), GM (GM2 tone), EXP (expansion sounds), USER
Number	Selects the desired patch or drum kit by its number. 0001–
Kbd	Specifies, for each part, whether or not the keyboard controller section will be connected to the internal sound generator. OFF, ON

Parameter	Value/Explanation
Rev	Sets the level of the signal sent to reverb for each part. 0–127
1–3	Turn MFX 1–3 on/off for each part. If turned on, a "✓" mark appears. Off (–), On (✓)
C	Turn Chorus on/off for each part. If turned on, a "✓" mark appears. Off (–), On (✓)
R	Turn Reverb on/off for each part. If turned on, a "✓" mark appears. Off (–), On (✓)

LEVEL/CH

Parameter	Value/Explanation
Solo	Turns on the part that you want to solo. Parts other than the soloed part are not heard. OFF, ON
Mute	Specifies whether each part's performance is temporarily muted (ON) or not muted (OFF). * The Mute parameter does not turn the part off; it mutes the sound by minimizing the volume. Therefore, the part still receives MIDI messages. OFF, ON
Level	Adjust the volume of each part. This setting's main purpose is to adjust the volume balance between parts. 0–127
Pan	Adjust the pan of each part. "L64" is far left, "0" is center, and "63R" is far right. L64–0–63R
RxCh	Specifies the MIDI receive channel for each part. 1–16
RxSw	For each part, specify whether MIDI messages will be received (ON), or not (OFF). If this is "OFF" the part will not respond. Normally, you should leave this "ON," but you can turn it "OFF" when you do not want a specific part to be playing during song playback. OFF, ON


PITCH

Parameter	Value/Explanation
Oct	Adjusts the pitch of the part's sound up or down in units of an octave (±3 octaves). * Note that when a rhythm set is assigned to a part, you cannot modify the Octave Shift. –3→+3
Crs	Adjusts the pitch of the part's sound up or down in semitone steps (±4 octaves). –48→+48
Fine	Adjusts the pitch of the part's sound up or down in 1-cent steps (±50 cents). –50→+50
Mono	Set this parameter to "MONO" when the patch assigned to the part is to be played monophonically, or to "POLY" when the patch is to be played polyphonically. If you want to use the Mono/Poly setting of the patch assigned to the part (p. 5), set this to "PAT." * This setting is ignored for parts to which a drum kit is assigned. MONO, POLY, PAT
Legt	Turn this parameter "ON" when you want to use the Legato feature and "OFF" when you don't. If you want to use the Legato Switch setting of the patch assigned to the part (p. 5), set this to "PAT." * This setting is ignored for parts to which a drum kit is assigned. OFF, ON, PAT
Bend	Specifies the amount of pitch change in semitones (2 octaves) that will occur when the Pitch Bend Lever is moved. The amount of change when the lever is tilted is set to the same value for both left and right sides. If you want to use the Pitch Bend Range setting of the patch assigned to the part (p. 7), set this to "PAT." 0–24, PAT
Port	Turn this parameter "ON" when you want to apply Portamento and "OFF" when you don't. If you want to use the Portamento Switch setting of the patch assigned to the part (p. 5), set this to "PAT." OFF, ON, PAT
Time	When portamento is used, this specifies the time over which the pitch will change. Higher settings will cause the pitch change to the next note to take more time. If you want to use the Portamento Time setting of the patch assigned to the part (p. 5), set this to "PAT." * This setting is ignored for parts to which a drum kit is assigned. 0–127, PAT

OUTPUT

Parameter	Value/Explanation
Out	Specifies for each part how the direct sound will be output. MFX Output in stereo through MFX. You can also apply chorus or reverb to the sound that passes through MFX. L+R Output to the OUTPUT L (MONO) jack and OUTPUT R jack in stereo without passing through MFX. L, R Output to the OUTPUT L (MONO) jack or OUTPUT R jack in mono without passing through MFX. PATCH Outputs according to the settings for patch.
Sel	Of the three types of MFX that can be used simultaneously, specify which MFX will be used. 1–3 (MFX1–MFX3)
Lev	Set the level of the signal that is sent to the output destination specified by Part Output Assign. 0–127
Cho	Sets the level of the signal sent to chorus for each part. 0–127

KBD

Parameter	Value/Explanation
Kbd	Specifies, for each part, whether or not the keyboard controller section will be connected to the internal sound generator and MIDI OUT. Normally you will leave this off; you can turn it on if you want to layer sounds. OFF, ON
RngLo, RngUp	Specifies the lowest/highest note that the tone will sound for each part. * When the Key Range (p. 7) is set for each individual tone in a patch, sounds are produced in the range where the Key Range of each tone and the Key Range for the part overlap. C- -G9 
V-Sens (Velocity Sensitivity Offset)	This changes the volume and cutoff frequency for each part according to the velocity with which the keys are pressed. If you want strongly played notes to raise the volume/cutoff frequency, set this parameter to positive (+) settings. If you want strongly played notes to lower the volume/cutoff frequency, use negative (-) settings. Set Velocity Sensitivity to "0" when you want sounds played at a fixed volume and cutoff frequency, regardless of the force with which the keys are played. * Patches also contain a Velocity Sensitivity Offset setting (p. 5). The ultimate Velocity Sensitivity Offset value is the sum of the part's and the patch's Velocity Sensitivity Offsets. Accordingly, if the patch's Velocity Sensitivity Offset is set to "127" (maximum), there will be no change in the part's Velocity Sensitivity Offset, even when this is set to a positive value. -63--+63
V-Rsv	Specifies the number of voices that will be reserved for each part when more than 128 voices are played simultaneously. * It is not possible for the settings of all parts to total an amount greater than 128. 0-63, FULL
Oct	Adjusts the pitch of the part's sound up or down in units of an octave (± 3 octaves). * Note that when a drum kit is assigned to a part, you cannot modify the Octave Shift. -3--+3

Calculating the number of voices being used

The XPS-30 is able to play up to 128 notes simultaneously. The polyphony, or the number of voices (sounds) does not refer only to the number of sounds actually being played, but changes according to the number of tones used in the patches, and the number of Waves used in the tones. The following method is used to calculate the number of sounds used for one patch being played. (number of sounds being played) x (number of tones used by patches being played) x (number of waves used in the tones) Realtime Stretch requires twice the normal polyphony.

OFFSET

Parameter	Value/Explanation
Cutoff (Cutoff Offset)	Adjusts the cutoff frequency for the patch or drum kit assigned to a part. * Patches also have a Cutoff Offset setting (p. 4). The final cutoff frequency value is the sum of the tone Cutoff Frequency value and the patch and part Cutoff Offset values. If the tone's cutoff frequency is already set to "127" (maximum), there will be no change produced by setting the Cutoff Offset to a positive value. -64--+63
Reso (Resonance Offset)	Adjusts the Resonance for the patch or rhythm set assigned to a part. * Patches also have a Resonance Offset setting (p. 4). The final Resonance value is the sum of the tone Resonance value and the patch and part Resonance Offset values. If the tone's resonance is already set to "127" (maximum), there will be no change produced by setting the resonance offset to a positive value. -64--+63
Attack (Attack Time Offset)	Adjusts the TVA/TVF Envelope Attack Time for the patch or drum kit assigned to a part. * Patches also contain the Attack Time Offset setting (p. 4). The final TVA Envelope attack time value is therefore the sum of the tone's TVA Envelope Time 1 setting, the patch's Attack Time Offset, and the part's Attack Time Offset. If the tone's Time 1 is already set to "127" (maximum), there will be no change produced by setting the Attack Time Offset to a positive value. The same applies to the TVF envelope. -64--+63
Decay	Adjusts the TVA/TVF Envelope Decay Time for the patch or drum kit assigned to a part. -64--+63
Release (Release Time Offset)	Adjusts the TVA/TVF Envelope Release Time for the patch or drum kit assigned to a part. * Patches also contain a Release Time Offset setting (p. 4). The final TVA Envelope release time value is therefore the sum of the tone's TVA Envelope Time 4 setting, the patch's Release Time Offset, and the part's Release Time Offset. If the tone's Time 4 is set to "127" (maximum), there will be no change in the Release Time Offset, even when this is set to a positive value. The same applies to the TVF envelope. -64--+63

VIBRATO

Parameter	Value/Explanation
Rate	For each part, adjust the vibrato speed (the rate at which the pitch is modulated). The pitch will be modulated more rapidly for higher settings, and more slowly with lower settings. -64--+63
Depth	For each part, this adjusts the depth of the vibrato effect (the depth at which the pitch is modulated). The pitch will be modulated more greatly for higher settings, and less with lower settings. -64--+63
Delay	For each part, this adjusts the time delay until the vibrato (pitch modulation) effect begins. Higher settings will produce a longer delay time before vibrato begins, while lower settings produce a shorter time. -64--+63

SCALE

Parameter	Value/Explanation
C-B	Make scale tune settings for each part. -64--+63

Equal Temperament

This tuning divides the octave into 12 equal parts, and is the most widely used method of temperament used in Western music.

Just Temperament (Tonic of C)


Compared with equal temperament, the principle triads sound pure in this tuning. However, this effect is achieved only in one key, and the triads will become ambiguous if you transpose.

Arabian Scale

In this scale, E and B are a quarter note lower and C[♯], F[♯] and G[♯] are a quarter-note higher compared to equal temperament. The intervals between G and B, C and E, F and G[♯], B[♭] and C[♯], and E[♭] and F[♯] have a natural third—the interval between a major third and a minor third. On the XPS-30, you can use Arabian temperament in the three keys of G, C and F.

Note name	Equal temperament	Just Temperament (tonic C)	Arabian Scale
C	0	0	-6
C [♯]	0	-8	+45
D	0	+4	-2
E [♭]	0	+16	-12
E	0	-14	-51
F	0	-2	-8
F [♯]	0	-10	+43
G	0	+2	-4
G [♯]	0	+14	+47
A	0	-16	0
B [♭]	0	+14	-10
B	0	-12	-49

MIDI

Parameter	Value/Explanation
PC-VC	For each MIDI channel, specify whether MIDI messages will be received (ON), or not (OFF). Assigning a check mark (✓) will enable reception.
	PC Program Change
	BS Bank Select
	PB Pitch Bend
	PA Polyphonic Aftertouch
	CA Channel Aftertouch
	MD Modulation
	VO Volume
	PN Pan
	EX Expression
	HD Hold 1
	PL Set PL (phase lock) to "✓" (ON) when you want to suppress discrepancies in timing of parts played on the same MIDI channel. * When the PL (phase lock) is set to "ON," parts on the same MIDI channel are put in a condition in which their timing is matched, enabling them to be played at the same time. Accordingly, a certain amount of time may elapse between reception of the Note messages and playing of the sounds. Turn this setting to "ON" only as needed.
	VC Selects Velocity Curve for each MIDI channel one of the four following Velocity Curve types that best matches the touch of the connected MIDI keyboard. Set this to "—" (OFF) if you are using the MIDI keyboard's own velocity curve. 

Part Edit

MEMO

- PART EDIT and PERFORMANCE EDIT have the same parameters in common.
- If you're using the pattern sequencer, the part edit settings are saved as a "pattern."

Procedure

1. Press the [PATCH/PERFORM] button to make it light.
2. Select a performance that you want to edit.
3. Press the [SAMPLE IMPORT] button and [DAW CONTROL] button simultaneously.
The EDIT MENU screen appears.
4. Move the cursor to "PART EDIT," and press the [ENTER] button.
The PART EDIT screen appears.
5. Move the cursor to tab, and use the [◀] [▶] buttons to switch the pages.
6. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.
7. To save the edited settings, perform the operation "Saving Your Settings (Write)" (refer to owner's manual).

MEMO

- In the PART EDIT screen, you can use pads [1]–[8] to select the part that you want to edit. If you hold down the [SHIFT] button and press a pad [1]–[8], a part 9–16 is selected.

Performance Parameters

PATCH

Parameter	Value/Explanation
TYPE	Sets the assignment of a patch (Patch) or drum kit (Drum) to each of the parts.
	Patch, Drum
BANK	Selects the group to which the desired patch or drum kit belongs. PRST (Preset), GM (GM2 tone), EXP (expansion sounds), USER
Category number	Selects the desired patch or drum kit by its number. 0001–

LEVEL/CH

Parameter	Value/Explanation
Solo Switch	Turns on the part that you want to solo. Parts other than the soloed part are not heard.
	OFF, ON
Mute Switch	Specifies whether each part's performance is temporarily muted (ON) or not muted (OFF). * The Mute parameter does not turn the part off; it mutes the sound by minimizing the volume. Therefore, the part still receives MIDI messages.
	OFF, ON
Level	Adjust the volume of each part. This setting's main purpose is to adjust the volume balance between parts. 0–127
Pan	Adjust the pan of each part. "L64" is far left, "0" is center, and "63R" is far right. L64–0–63R
Rx Switch	For each part, specify whether MIDI messages will be received (ON), or not (OFF). If this is "OFF," the part will not respond. Normally, you should leave this "ON," but you can turn it "OFF" when you do not want a specific part to be playing during song playback.
	OFF, ON
Rx Channel	Specifies the MIDI receive channel for each part. * You can't edit this parameter if the [PATTERN SEQUENCER] button is lit.
	1–16


OUTPUT

Parameter	Value/Explanation
Output Assign	Specifies for each part how the direct sound will be output.
	MFx Output in stereo through MFx. You can also apply chorus or reverb to the sound that passes through MFx.
	L+R Output to the OUTPUT L (MONO) jack and OUTPUT R jack in stereo without passing through MFx.
	L, R Output to the OUTPUT L (MONO) jack or OUTPUT R jack in mono without passing through MFx.
Output MFx Sel	Outputs according to the settings for patch.
	Of the three types of MFx that can be used simultaneously, specify which MFx will be used. 1–3 (MFx1–MFx3)
Output Level	Set the level of the signal that is sent to the output destination specified by Part Output Assign. 0–127
Cho Send Level	Sets the level of the signal sent to chorus for each part. 0–127
Rev Send level	Sets the level of the signal sent to reverb for each part. 0–127

PITCH

Parameter	Value/Explanation
Octave Shift	Adjusts the pitch of the part's sound up or down in units of an octave (± 3 octaves). * Note that when a rhythm set is assigned to a part, you cannot modify the Octave Shift.
	–3–+3
Coarse Tune	Adjusts the pitch of the part's sound up or down in semitone steps (± 4 octaves). –48–+48
Fine Tune	Adjusts the pitch of the part's sound up or down in 1-cent steps (± 50 cents). –50–+50
Mono/Poly	Set this parameter to "MONO" when the patch assigned to the part is to be played monophonically, or to "POLY" when the patch is to be played polyphonically. If you want to use the Mono/Poly setting of the patch assigned to the part (p. 5), set this to "PAT." * This setting is ignored for parts to which a drum kit is assigned.
	MONO, POLY, PAT
Legato Switch	Turn this parameter "ON" when you want to use the Legato feature and "OFF" when you don't. If you want to use the Legato Switch setting of the patch assigned to the part (p. 5), set this to "PAT." * This setting is ignored for parts to which a drum kit is assigned.
	OFF, ON, PAT
Bend Range	Specifies the amount of pitch change in semitones (2 octaves) that will occur when the Pitch Bend Lever is moved. The amount of change when the lever is tilted is set to the same value for both left and right sides. If you want to use the Pitch Bend Range setting of the patch assigned to the part (p. 7), set this to "PAT."
	0–24, PAT
Porta Switch	Turn this parameter "ON" when you want to apply Portamento and "OFF" when you don't. If you want to use the Portamento Switch setting of the patch assigned to the part (p. 5), set this to "PAT."
	OFF, ON, PAT
Porta Time	When portamento is used, this specifies the time over which the pitch will change. Higher settings will cause the pitch change to the next note to take more time. If you want to use the Portamento Time setting of the patch assigned to the part (p. 5), set this to "PAT." * This setting is ignored for parts to which a drum kit is assigned.
	0–127, PAT

KBD

Parameter	Value/Explanation
Kbd Switch	Specifies, for each part, whether or not the keyboard controller section will be connected to the internal sound generator and MIDI OUT. Normally you will leave this off; you can turn it on if you want to layer sounds. OFF, ON
Key Range Lower, Upper	Specifies the lowest/highest note that the tone will sound for each part. * When the Key Range (p. 7) is set for each individual tone in a patch, sounds are produced in the range where the Key Range of each tone and the Key Range for the part overlap. 1–16 
Velo Sens Offset (Velocity Sensitivity Offset)	This changes the volume and cutoff frequency for each part according to the velocity with which the keys are pressed. If you want strongly played notes to raise the volume/cutoff frequency, set this parameter to positive (+) settings. If you want strongly played notes to lower the volume/cutoff frequency, use negative (-) settings. Set Velocity Sensitivity to "0" when you want sounds played at a fixed volume and cutoff frequency, regardless of the force with which the keys are played. * Patches also contain a Velocity Sensitivity Offset setting (p. 5). The ultimate Velocity Sensitivity Offset value is the sum of the part's and the patch's Velocity Sensitivity Offsets. Accordingly, if the patch's Velocity Sensitivity Offset is set to "127" (maximum), there will be no change in the part's Velocity Sensitivity Offset, even when this is set to a positive value. -63→+63
Voice Reserve	Specifies the number of voices that will be reserved for each part when more than 128 voices are played simultaneously. * It is not possible for the settings of all parts to total an amount greater than 128. 0–63, FULL
Octave Shift	Adjusts the pitch of the part's sound up or down in units of an octave (±3 octaves). * Note that when a rhythm set is assigned to a part, you cannot modify the Octave Shift. -3→+3

Calculating the number of voices being used

The XPS-30 is able to play up to 128 notes simultaneously. The polyphony, or the number of voices (sounds) does not refer only to the number of sounds actually being played, but changes according to the number of tones used in the patches, and the number of Waves used in the tones. The following method is used to calculate the number of sounds used for one patch being played.
(number of sounds being Played) x (number of tones used by patches being played)
x (number of waves used in the tones) Realtime Stretch requires twice the normal polyphony.

OFFSET

Parameter	Value/Explanation
Cutoff Offset	Adjusts the cutoff frequency for the patch or rhythm set assigned to a part. * Patches also have a Cutoff Offset setting (p. 4). The final Cutoff frequency value is the sum of the tone Cutoff Frequency value and the patch and part Cutoff Offset values. If the tone's cutoff frequency is already set to "127" (maximum), there will be no change produced by setting the Cutoff Offset to a positive value. -64→+63
Reso Offset (Resonance Offset)	Adjusts the Resonance for the patch or rhythm set assigned to a part. * Patches also have a Resonance Offset setting (p. 4). The final Resonance value is the sum of the tone Resonance value and the patch and part Resonance Offset values. If the tone's resonance is already set to "127" (maximum), there will be no change produced by setting the resonance offset to a positive value. -64→+63
Attack Offset (Attack Time Offset)	Adjusts the TVA/TVF Envelope Attack Time for the patch or drum kit assigned to a part. * Patches also contain the Attack Time Offset setting (p. 4). The final TVA Envelope attack time value is therefore the sum of the tone's TVA Envelope Time 1 setting, the patch's Attack Time Offset, and the part's Attack Time Offset. If the tone's Time 1 is already set to "127" (maximum), there will be no change produced by setting the Attack Time Offset to a positive value. The same applies to the TVF envelope. -64→+63
Decay Offset	Adjusts the TVA/TVF Envelope Decay Time for the patch or drum kit assigned to a part. -64→+63
Release Offset (Release Time Offset)	Adjusts the TVA/TVF Envelope Release Time for the patch or drum kit assigned to a part. * Patches also contain a Release Time Offset setting (p. 4). The final TVA Envelope release time value is therefore the sum of the tone's TVA Envelope Time 4 setting, the patch's Release Time Offset, and the part's Release Time Offset. If the tone's Time 4 is set to "127" (maximum), there will be no change in the Release Time Offset, even when this is set to a positive value. The same applies to the TVF envelope. -64→+63

VIBRATO

Parameter	Value/Explanation
Vibrato Rate	For each part, adjust the vibrato speed (the rate at which the pitch is modulated). The pitch will be modulated more rapidly for higher settings, and more slowly with lower settings. -64→+63
Vibrato Depth	For each part, this adjusts the depth of the vibrato effect (the depth at which the pitch is modulated). The pitch will be modulated more greatly for higher settings, and less with lower settings. -64→+63
Vibrato Delay	For each part, this adjusts the time delay until the vibrato (pitch modulation) effect begins. Higher settings will produce a longer delay time before vibrato begins, while lower settings produce a shorter time. -64→+63

SCALE

Parameter	Value/Explanation
C-B	Make scale tune settings for each part. -64→+63

Equal Temperament

This tuning divides the octave into 12 equal parts, and is the most widely used method of temperament used in Western music.

Just Temperament (Tonic of C)


Compared with equal temperament, the principle triads sound pure in this tuning. However, this effect is achieved only in one key, and the triads will become ambiguous if you transpose.

Arabian Scale

In this scale, E and B are a quarter note lower and C[♯], F[♯] and G[♯] are a quarter-note higher compared to equal temperament. The intervals between G and B, C and E, F and G[♯], B[♭] and C[♯], and E[♭] and F[♯] have a natural third—the interval between a major third and a minor third. On the XPS-30, you can use Arabian temperament in the three keys of G, C and F.

Note name	Equal temperament	Just Temperament (tonic C)	Arabian Scale
C	0	0	-6
C [♯]	0	-8	+45
D	0	+4	-2
E [♭]	0	+16	-12
E	0	-14	-51
F	0	-2	-8
F [♯]	0	-10	+43
G	0	+2	-4
G [♯]	0	+14	+47
A	0	-16	0
B [♭]	0	+14	-10
B	0	-12	-49

MIDI


Parameter	Value/Explanation
PC-HOLD	For each MIDI channel, specify whether MIDI messages will be received (ON), or not (OFF). Assigning a check mark (✓) will enable reception.
	PC Program Change
	BS Bank Select
	BEND Pitch Bend
	PAFT Polyphonic Aftertouch
	CAFT Channel Aftertouch
	MOD Modulation
	VOL Volume
	PAN Pan
VERO CRV	EXP Expression
	HOLD Hold 1
VERO CRV	Selects Velocity Curve for each MIDI channel one of the four following Velocity Curve types that best matches the touch of the connected MIDI keyboard. Set this to "OFF" if you are using the MIDI keyboard's own velocity curve. OFF, 1–4 
PHASELOCK	Set PHASELOCK to "ON" when you want to suppress discrepancies in timing of parts played on the same MIDI channel. * When the PHASELOCK is set to "ON," parts on the same MIDI channel are put in a condition in which their timing is matched, enabling them to be played at the same time. Accordingly, a certain amount of time may elapse between reception of the Note messages and playing of the sounds. Turn this setting to "ON" only as needed.
	OFF, ON

Effects Edit

In Performance mode you can use three multi effects (MFX1–3), one chorus, and one reverb. For each of the three MFX, the chorus, and the reverb, you can specify whether it will operate according to the effect settings of the performance, or according to the effect settings of the patch or drum kit assigned to the part you specify.

The three MFX can be used independently, or you can connect two or three of them in series.

Signal Flow

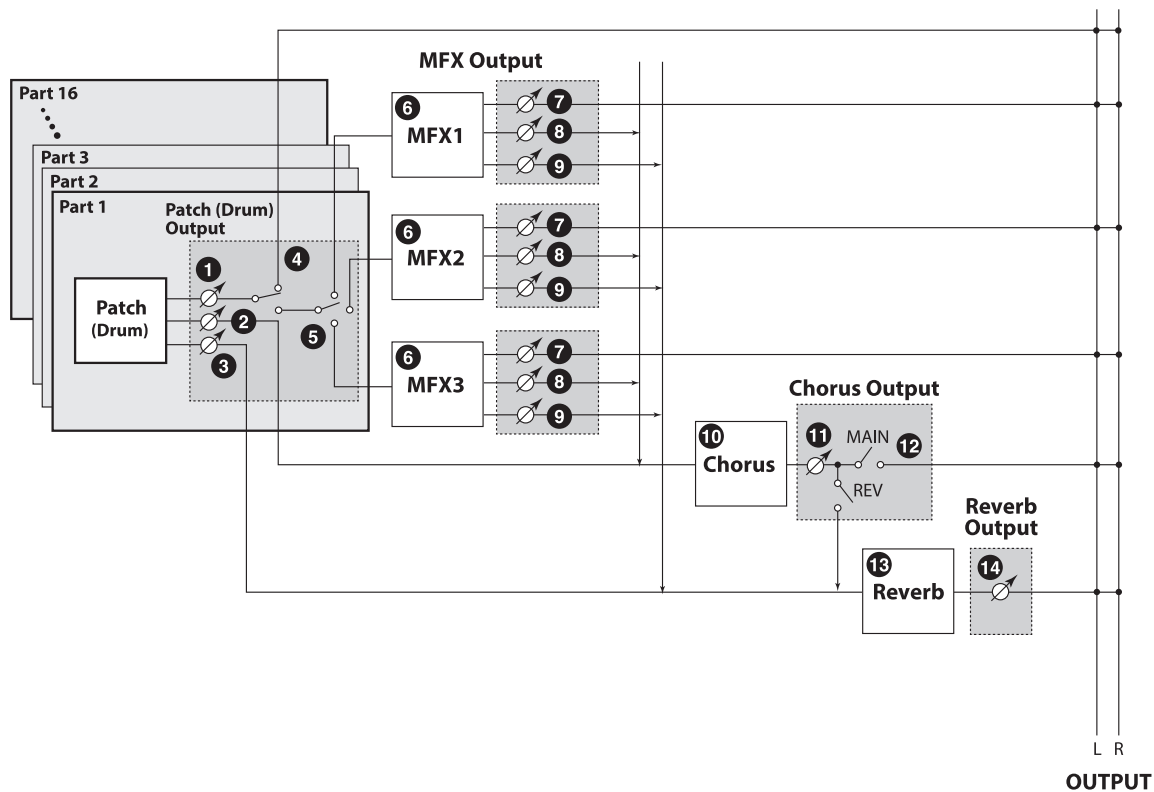

Make these settings in the "OUTPUT" tab of the PART EDIT screen.	1	Output Level	p. 21
	2	Cho Send Level	
	3	Rev Send Send	
	4	Output Assign	
	5	Output MFX Sel	
Make these settings in the "MFX1–3" tab of the EFFECTS EDIT screen.	6	MFX Type	p. 24
	7	Output Level	
	8	Chorus Send Level	
	9	Reverb Send level	














Make these settings in the "CHORUS" tab of the EFFECTS EDIT screen.	10	Chorus Type	p. 24
	11	Chorus Level	
	12	Output Select	
Make these settings in the "REVERB" tab of the EFFECTS EDIT screen.	13	Reverb Type	
	14	Reverb Level	

Procedure

1. Press the [SAMPLE IMPORT] button and [DAW CONTROL] button simultaneously.
The EDIT MENU screen appears.
2. Move the cursor to "EFFECTS EDIT," and press the [ENTER] button.
The EFFECTS EDIT screen appears.
3. Move the cursor to tab, and use the [◀] [▶] buttons to switch the pages.
4. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.
5. To save the edited settings, perform the operation "Saving Your Settings (Write)" (refer to owner's manual).

Effects Parameters

COMMON

Parameter	Value/Explanation
MFX Structure	Specify how MFX1–3 will be connected.
	TYPE01 
	TYPE02 
	TYPE03 
	TYPE04 
	TYPE05 
	TYPE06 
	TYPE07 
	TYPE08 
	TYPE09 
	TYPE10 
	TYPE11 
	TYPE12 
	TYPE13 
	TYPE14 
	TYPE15 
	TYPE16 
MFX1–3 Source	PERFORM Use the MFX settings of the performance.
	UPPER (PART1), LOWER (PART2), PART3–16 Use the MFX settings of the patch or drum kit assigned to the specified part.
Chorus Source	PERFORM Use the chorus settings of the performance.
	UPPER (PART1), LOWER (PART2), PART3–16 Use the chorus settings of the patch or drum kit assigned to the specified part.
Reverb Source	PERFORM Use the reverb settings of the performance.
	UPPER (PART1), LOWER (PART2), PART3–16 Use the reverb settings of the patch or drum kit assigned to the specified part.

MFX1–3

Parameter	Value/Explanation
MFX Type	Turns MFX on/off, and specifies the type of MFX that is used. If MFX is on, ☐ shows a “✓” mark.
	* For details on MFX parameters, refer to “MFX Parameters (MFX, MFX1–3)” (p. 40).
Parameters for each MFX type	00: THRU–80: BIT CRUSHER
Chorus Send Level	Edit the parameters of the MFX type you’ve selected. * Refer to “MFX Parameters (MFX, MFX1–3)” (p. 40).
Reverb Send Level	Specifies the level of the signal sent to the chorus. 0–127
	Specifies the level of the signal sent to the reverb. 0–127

MFX1–3 CTRL

Parameter	Value/Explanation
Source 1–4	Sets the MIDI message used to change the MFX parameter with the MFX control.
	OFF MFX control will not be used.
	CC01–31, 33–95 Controller numbers 1–31, 33–95
	PITCH BEND Pitch bend
	AFTERTOUCH Aftertouch
Destination 1–4	SYS CTRL1–4 Use the System Control 1–4 Source setting (p. 34).
	Sets the MFX parameters to be controlled with the Source1–4. The MFX parameters available for control will depend on the MFX Type. * Refer to “MFX Parameters (MFX, MFX1–3)” (p. 40).
Sens 1–4	Specifies the depth of MFX control. Specify a positive (+) value if you want to change the value of the assigned destination in a positive direction (larger, toward the right, faster, etc.), or specify a negative value (–) if you want to change the value in a negative direction (smaller, toward the left, slower, etc.). Larger values will allow a greater amount of control.
	–63–+63

CHORUS

Parameter	Value/Explanation
Chorus Type	Turns Chorus on/off, and specifies the type of chorus that is used. If Chorus is on, ☐ shows a “✓” mark.
	00: OFF Neither chorus or delay is used.
	01: CHORUS Chorus is used.
	02: DELAY Delay is used.
	03: GM2 CHORUS GM2 chorus
Parameters for each chorus type	Set the parameters of the selected chorus type. The chorus parameters available for control will depend on the Chorus Type. * Refer to “Chorus Parameters” (p. 58).
Output Select	Specifies how the sound routed through chorus will be output.
	MAIN Output to the OUTPUT jacks in stereo.
	REV Output to reverb in mono.
	M+R Output to the OUTPUT jacks in stereo, and to reverb in mono.
Chorus Level	Adjusts the volume of the sound that has passed through chorus. 0–127

REVERB

Parameter	Value/Explanation
Reverb Type	Turns Reverb on/off, and specifies the type of reverb that is used. If Reverb is on, ☐ shows a “✓” mark.
	00: OFF Reverb is not used.
	01: REVERB Normal reverb
	02: SRV ROOM This reverb simulates typical room acoustic reflections.
	03: SRV HALL This reverb simulates typical concert hall acoustic reflections.
	04: SRV PLATE This reverb simulates a reverb plate, a popular type of artificial reverb unit that derives its sound from the vibration of a metallic plate.
Parameters for each reverb type	05: GM2 REVERB GM2 reverb
	Set the parameters of the selected reverb type. The reverb parameters available for control will depend on the Reverb Type. * Refer to “Reverb Parameters” (p. 58).
Reverb Level	Adjusts the volume of the sound that has passed through reverb. 0–127

Sample Edit

Procedure

1. Press the [SAMPLE IMPORT] button.
The SAMPLE MENU screen appears.
2. Move the cursor to "SAMPLE EDIT" and press the [ENTER] button.
The SAMPLE EDIT screen appears.
3. Move the cursor to tab, and use the [◀] [▶] buttons to switch the pages.
4. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.
5. To save the edited settings, perform the operation "Saving Your Settings (Write)" (refer to owner's manual).

Sample Parameters

SAMPLE

NOTE


The following parameters cannot be edited for samples Sp:001–006 in the PRST bank.

Parameter	Value/Explanation
Original Key	Specifies the note number that plays the sample at the pitch at which it was imported. C-1–G9
Loop Switch	Turns loop playback on/off. OFF, ON
Start	Playback start point (Start Point) (*1) This lets you skip an unwanted portion of the waveform at the beginning of the sample so that the sample plays with the desired timing. 0–
Loop	Point at which the repeated portion starts on the second and subsequent plays (Loop Point) (*1) Specify this if you want to loop from a location other than Start After the Sample played back from Start to End, it will then be repeatedly played back in the forward direction, from the Loop to End.
End	Playback end point (End Point) (*1) This lets you omit an unwanted portion of the waveform at the end of the sample. 0–

(*1)



The length of the imported sample is calculated, and the position of each point is shown as a time (units: milliseconds).

The displayed value (time) is the value when the sample is played at the key specified by Original Key. The playback time is shorter than displayed if you play a key that is higher than the Original Key, and longer than displayed if you play a key that is lower.

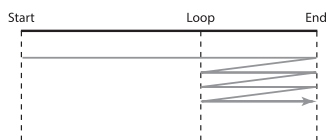



TVF

Parameter	Value/Explanation
Filter Type	Selects the type of filter. A filter cuts or boosts a specific frequency region to change a sound's brightness, thickness, or other qualities. * If you set "LPF2" or "LPF3", the setting for the Resonance will be ignored (p. 25).
	OFF No filter is used.
	LPF Low Pass Filter. This reduces the volume of all frequencies above the cutoff frequency (Cutoff Freq) in order to round off, or un-brighten the sound. This is the most common filter used in synthesizers.
	BPF Band Pass Filter. This leaves only the frequencies in the region of the cutoff frequency (Cutoff Freq), and cuts the rest. This can be useful when creating distinctive sounds.
	HPF High Pass Filter. This cuts the frequencies in the region below the cutoff frequency (Cutoff Freq). This is suitable for creating percussive sounds emphasizing their higher tones.
	PKG Peaking Filter. This emphasizes the frequencies in the region of the cutoff frequency (Cutoff Freq). You can use this to create wah-wah effects by employing an LFO to change the cutoff frequency cyclically.
	LPF2 Low Pass Filter 2. Although frequency components above the Cutoff frequency (Cutoff Freq) are cut, the sensitivity of this filter is half that of the LPF. This makes it a comparatively warmer low pass filter. This filter is good for use with simulated instrument sounds such as the acoustic piano.
	LPF3 Low Pass Filter 3. Although frequency components above the Cutoff frequency (Cutoff Freq) are cut, the sensitivity of this filter changes according to the Cutoff frequency. While this filter is also good for use with simulated acoustic instrument sounds, the nuance it exhibits differs from that of the LPF2, even with the same TVF Envelope settings.
Cutoff Frequency	Selects the frequency at which the filter begins to have an effect on the waveform's frequency components. "LPF/LPF2/LPF3" selected for the Filter Type Lower cutoff frequency settings reduce a tone's upper harmonics for a more rounded, warmer sound. Higher settings make it sound brighter. "BPF" selected for the Filter Type Harmonic components will change depending on the TVF Cutoff Frequency setting. This can be useful when creating distinctive sounds. "HPF" selected for the Filter Type Higher Cutoff Frequency settings will reduce lower harmonics to emphasize just the brighter components of the sound. "PKG" selected for the Filter Type The harmonics to be emphasized will vary depending on Cutoff Frequency setting. 0–127
Resonance	Emphasizes the portion of the sound in the region of the cutoff frequency, adding character to the sound. Excessively high settings can produce oscillation, causing the sound to distort. 0–127

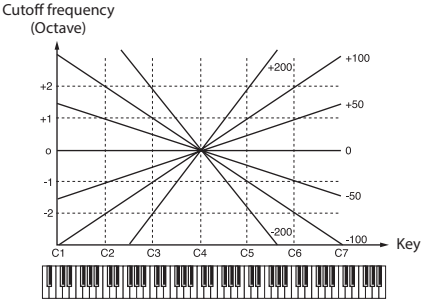
Parameter	Value/Explanation
Cutoff Keyfollow	Use this parameter if you want the cutoff frequency to change according to the key that is pressed. Relative to the cutoff frequency at the C4 key (center C), positive (+) settings will cause the cutoff frequency to rise for notes higher than C4, and negative (-) settings will cause the cutoff frequency to fall for notes higher than C4. Larger settings will produce greater change. -200--+200
	
Cutoff V-Curve	Selects one of the following seven curves that determine how keyboard playing dynamics (velocity) influence the cutoff frequency. Set this to "FIXED" if you don't want the Cutoff frequency to be affected by the keyboard velocity. FIXED, 1-7
	
Cutoff V-Sens	Use this parameter when changing the cutoff frequency to be applied as a result of changes in playing velocity. If you want strongly played notes to raise the cutoff frequency, set this parameter to positive (+) settings. If you want strongly played notes to lower the cutoff frequency, use negative (-) settings. -63--+63
Resonance V-Sens	This allows keyboard velocity to modify the amount of Resonance. If you want strongly played notes to have a greater Resonance effect, set this parameter to positive (+) settings. If you want strongly played notes to have less Resonance, use negative (-) settings. -63--+63

TVF ENV

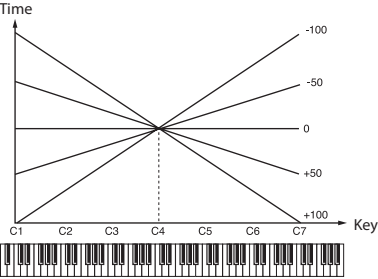Parameter	Value/Explanation
TVF Env Depth	Specifies the depth of the TVF envelope. Higher settings will cause the TVF envelope to produce greater change. Negative (-) settings will invert the shape of the envelope. -63--+63
TVF Env V-Curve	Selects one of the following 7 curves that will determine how keyboard playing dynamics will affect the TVF envelope. Set this to "FIXED" if you don't want the TVF Envelope to be affected by the keyboard velocity. FIXED, 1-7 
TVF Env V-Sens	Specifies how keyboard playing dynamics will affect the depth of the TVF envelope. Positive (+) settings will cause the TVF envelope to have a greater effect for strongly played notes, and negative (-) settings will cause the effect to be less. -63--+63
TVF Env T1 V-Sens	This allows keyboard dynamics to affect the Time 1 of the TVF envelope. If you want Time 1 to be speeded up for strongly played notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63--+63
TVF Env T4 V-Sens	The parameter to use when you want key release speed to control the Time 4 value of the TVF envelope. If you want Time 4 to be speeded up for quickly released notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63--+63
TVF Env Time Keyfollow	Use this setting if you want the TVF envelope times (Time 2-Time 4) to be affected by the keyboard location. Based on the TVF envelope times for the C4 key (center C), positive (+) settings will cause notes higher than C4 to have increasingly shorter times, and negative (-) settings will cause them to have increasingly longer times. Larger settings will produce greater change. -100--+100
	
TVF Env Time 1-4	Specify the TVF envelope times (Time 1-Time 4). Higher settings will lengthen the time until the next cutoff frequency level is reached. (For example, Time 2 is the time over which Level 1 will change to Level 2.) 0-127
TVF Env Level 0-4	Specify the TVF envelope levels (Level 0-Level 4). These settings specify how the cutoff frequency will change at each point, relative to the standard cutoff frequency (the cutoff frequency value specified in the TVF screen). 0-127

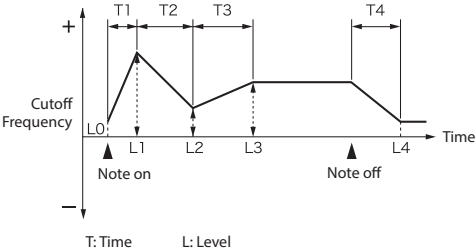



TVA

Parameter	Value/Explanation
Tone Level	Sets the volume of the tone. 0–127
Level V-Curve	You can select from seven curves that determine how keyboard playing strength will affect the volume. If you do not want the volume of the tone to be affected by the force with which you play the key, set this to "FIXED." FIXED, 1–7 
Level V-Sens	Set this when you want the volume of the tone to change depending on the force with which you press the keys. Set this to a positive (+) value to have the changes in tone volume increase the more forcefully the keys are played; to make the tone play more softly as you play harder, set this to a negative (-) value. -63–+63
Bias Level	Adjusts the angle of the volume change that will occur in the selected Bias Direction. Larger settings will produce greater change. Negative (-) values will invert the change direction. -100–+100
Bias Position	Specifies the key relative to which the volume will be modified. C–G9
Bias Direction	Selects the direction in which change will occur starting from the Bias Position.
	LWR The volume will be modified for the keyboard area below the Bias Position.
	UPR The volume will be modified for the keyboard area above the Bias Position.
	L&U The volume will be modified symmetrically toward the left and right of the Bias Position.
	ALL The volume changes linearly with the Bias Position at the center.



Bias

Bias causes the volume to be affected by the keyboard position. This is useful for changing volume through keyboard position (pitch) when playing acoustic instruments.

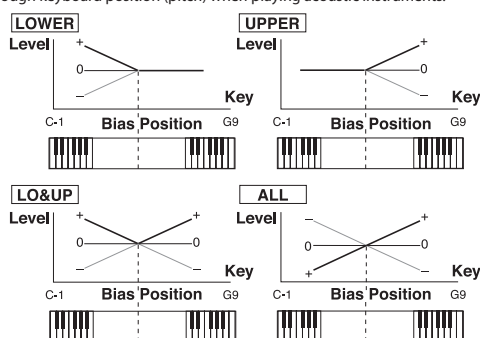

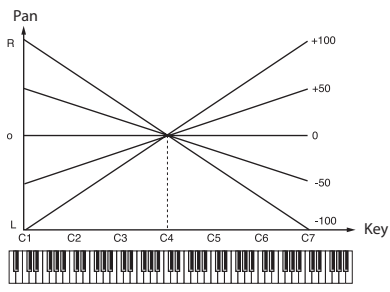
Tone Pan	Sets the pan of the tone. "L64" is far left, "0" is center, and "63R" is far right. L64–0–63R
Pan Keyfollow	Use this parameter if you want key position to affect panning. Positive (+) settings will cause notes higher than C4 key (center C) to be panned increasingly further toward the right, and negative (-) settings will cause notes higher than C4 key (center C) to be panned toward the left. Larger settings will produce greater change. -100–+100 
Random Pan Depth	Use this parameter when you want the stereo location to change randomly each time you press a key. Higher settings will produce a greater amount of change. 0–63
Alternate Pan Depth	This setting causes panning to be alternated between left and right each time a key is pressed. Higher settings will produce a greater amount of change. "L" or "R" settings will reverse the order in which the pan will alternate between left and right. L63–0–63R

TVA ENV

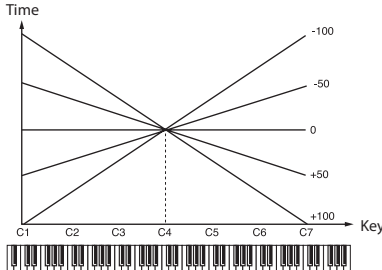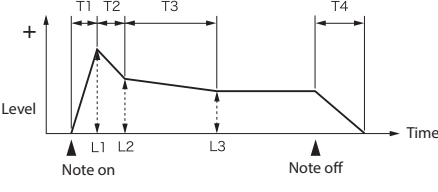Parameter	Value/Explanation
TVA-Env T1 V-Sens	This allows keyboard dynamics to affect the Time 1 of the TVA envelope. If you want Time 1 to be speeded up for strongly played notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63–+63
TVA-Env T4 V-Sens	The parameter to use when you want key release speed to control the Time 4 value of the TVA envelope. If you want Time 4 to be speeded up for quickly released notes, set this parameter to a positive (+) value. If you want it to be slowed down, set this to a negative (-) value. -63–+63
TVA-Env Time KF	Use this setting if you want the TVA envelope times (Time 2–Time 4) to be affected by the keyboard location. Based on the TVA envelope times for the C4 key (center C), positive (+) settings will cause notes higher than C4 to have increasingly shorter times, and negative (-) settings will cause them to have increasingly longer times. Larger settings will produce greater change. -100–+100 
TVA-Env Time 1–4	Specify the TVA envelope times (Time 1–Time 4). Higher settings will lengthen the time until the next volume level is reached. (For example, Time 2 is the time over which Level 1 will change to Level 2.) 0–127
TVA-Env Level 1–3	Specify the TVA envelope levels (Level 1–Level 3). These settings specify how the volume will change at each point, relative to the standard volume (the Tone Level value specified in the TVA screen). 0–127 

LFO1

Parameter	Value/Explanation
Waveform	Selects the waveform of the LFO. * If you set this to "BD-U" or "BD-D" you must turn the Key Trigger parameter to "ON." If this is "OFF," it will have no effect.
	SIN Sine wave
	TRI Triangle wave
	SAWU Sawtooth wave
	SAWD Sawtooth wave (negative polarity)
	SQR Square wave
	RND Random wave
	BD-U Once the attack of the waveform output by the LFO is allowed to develop in standard fashion, the waveform then continues without further change.
	BD-D Once the decay of the waveform output by the LFO is allowed to develop in standard fashion, the waveform then continues without further change.
	TRP Trapezoidal wave
	S&H Sample & Hold wave (one time per cycle, LFO value is changed)
	CHS Chaos wave
	VSIN Modified sine wave. The amplitude of a sine wave is randomly varied once each cycle.
	STEP A waveform generated by the data specified by LFO Step 1–16. This produces stepped change with a fixed pattern similar to a step modulator.
Rate	Adjusts the modulation rate, or speed, of the LFO. * This setting will be ignored if the Waveform is set to "CHS." 0–127, note
Rate Detune	LFO Rate Detune makes subtle changes in the LFO cycle rate (Rate) each time a key is pressed. Higher settings will cause greater change. * This parameter is invalid when Rate is set to "note." 0–127

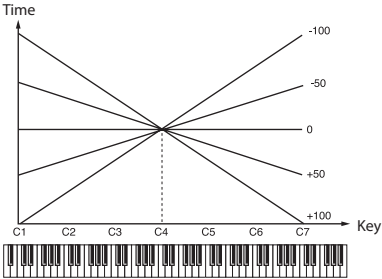
Parameter	Value/Explanation
Offset	Raises or lowers the LFO waveform relative to the central value (pitch or cutoff frequency). Positive (+) settings will move the waveform so that modulation will occur from the central value upward. Negative (-) settings will move the waveform so that modulation will occur from the central value downward.
	-100, -50, 0, +50, +100
Delay Time	Delay Time (LFO Delay Time) specifies the time elapsed before the LFO effect is applied (the effect continues) after the key is pressed (or released).
	* After referring to "How to Apply the LFO" (p. 28), change the setting until the desired effect is achieved. 0–127
Delay Time KF	Adjusts the value for the Delay Time depending on the key position, relative to the C4 key (center C). To decrease the time that elapses before the LFO effect is applied (the effect is continuous) with each higher key that is pressed in the upper registers, select a positive value; to increase the elapsed time, select a negative value. Larger settings will produce greater change. If you do not want the elapsed time before the LFO effect is applied (the effect is continuous) to change according to the key pressed, set this to "0."
	-100–+100 
Fade Mode	Specifies how the LFO will be applied. * After referring to "How to Apply the LFO" (p. 28), change the setting until the desired effect is achieved. ON <, ON >, OFF <, OFF >
Fade Time	Specifies the time over which the LFO amplitude will reach the maximum (minimum). * After referring to "How to Apply the LFO" (p. 28), change the setting until the desired effect is achieved. 0–127
Key Trigger	Specifies whether the LFO cycle will be synchronized to begin when the key is pressed (ON) or not (OFF). OFF, ON
Pitch Depth	Specifies how deeply the LFO will affect pitch. -63–+63
TVF Depth	Specifies how deeply the LFO will affect the cutoff frequency. -63–+63
TVA Depth	Specifies how deeply the LFO will affect the volume. -63–+63
Pan Depth	Specifies how deeply the LFO will affect the pan. -63–+63

STEP LFO

Parameter	Value/Explanation
Step Type	When generating an LFO waveform from the data specified in LFO Step 1–16, specify whether the level will change abruptly at each step (TYPE 1) or will be connected linearly (TYPE 2). TYPE 1, TYPE 2
LFO Step 1–16	Specifies the data for the Step LFO. If the LFO Pitch Depth is +63, each +1 unit of the step data corresponds to a pitch of +50 cents. -36–+36


How to Apply the LFO

Apply the LFO gradually after the key is pressed

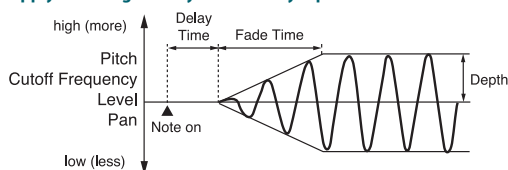


Parameter	Value/Explanation
Fade Mode	ON <
Delay Time	The time from when the keyboard is played until the LFO begins to be applied.
Fade Time	The time over which the LFO amplitude will reach the maximum after the Delay Time has elapsed.

Apply the LFO immediately when the key is pressed, and then gradually begin to decrease the effect

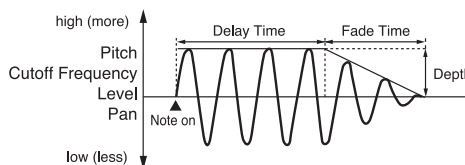


Parameter	Value/Explanation
Fade Mode	ON >
Delay Time	The time that the LFO will continue after the keyboard is played.
Fade Time	The time over which the LFO amplitude will reach the minimum after the Delay Time has elapsed.

Apply the LFO gradually after the key is released

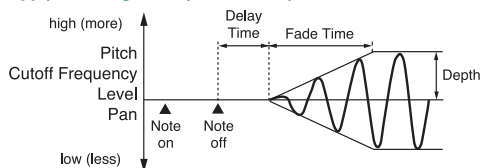

Parameter	Value/Explanation
Fade Mode	OFF <
Delay Time	The time from when the keyboard is released until the LFO begins to be applied.
Fade Time	The time over which the LFO amplitude will reach the maximum after the Delay Time has elapsed.

Apply the LFO from when the key is pressed until it is released, and gradually begin to decrease the effect when the key is released

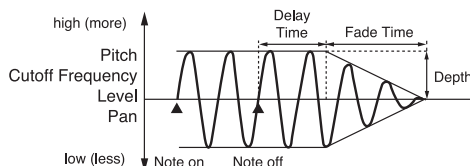

Parameter	Value/Explanation
Fade Mode	OFF >
Delay Time	The time that the LFO will continue after the keyboard is released.
Fade Time	The time over which the LFO amplitude will reach the minimum after the Delay Time has elapsed.

OUTPUT

Parameter	Value/Explanation
Tone Chorus Send	Specifies the level of the signal sent to the chorus. 0–127
Tone Reverb Send	Specifies the level of the signal sent to the reverb. 0–127

Editing Arpeggios

1. Press the [ARPEGGIO] button to make it light.
The ARPEGGIO screen appears.
2. Move the cursor to the item that you want to edit, and use the value dial to edit the setting.
3. Press the [EXIT] button to exit the ARPEGGIO screen.

Parameter	Value/Explanation																		
STYLE	Selects the arpeggio's basic performance style. 001–128																		
Part	In performance mode, this selects the part (only one part) that will be played by the arpeggio. If a drum kit is assigned to a part, you can play a drum kit along with the arpeggios. * This parameter is not shown if the patch mode is selected or the [SUPER LAYER] button is on. Part1 (Upper), Part2 (Lower), Part3–16																		
Arp Hold	You can produce arpeggios even without continuing to press the keyboard. OFF, ON																		
Grid	Sets the particular note division and resolution in a "single grid" used in creating the arpeggio in an Arpeggio Style, and how much of a "shuffle" syncopation is to be applied (none/weak/strong) to it (grid type). * Grid settings are shared with the rhythm pattern. <table> <tr> <td>1/4 (♩)</td><td>Quarter note (one grid section = one beat)</td></tr> <tr> <td>1/8 (♩)</td><td>Eighth note (two grid sections = one beat)</td></tr> <tr> <td>1/8 (♩) L</td><td>Eighth note shuffle Light (two grid sections = one beat, with a light shuffle)</td></tr> <tr> <td>1/8 (♩) H</td><td>Eighth note shuffle Heavy (two grid sections = one beat, with a heavy shuffle)</td></tr> <tr> <td>1/12 (♩)</td><td>Eighth note triplet (three grid sections = one beat)</td></tr> <tr> <td>1/16 (♩)</td><td>Sixteenth note (four grid sections = one beat)</td></tr> <tr> <td>1/16 (♩) L</td><td>Sixteenth note shuffle Light (four grid sections = one beat, with a light shuffle)</td></tr> <tr> <td>1/16 (♩) H</td><td>Sixteenth note shuffle Heavy (four grid sections = one beat, with a heavy shuffle)</td></tr> <tr> <td>1/24 (♩)</td><td>Sixteenth note triplet (six grid sections = one beat)</td></tr> </table>	1/4 (♩)	Quarter note (one grid section = one beat)	1/8 (♩)	Eighth note (two grid sections = one beat)	1/8 (♩) L	Eighth note shuffle Light (two grid sections = one beat, with a light shuffle)	1/8 (♩) H	Eighth note shuffle Heavy (two grid sections = one beat, with a heavy shuffle)	1/12 (♩)	Eighth note triplet (three grid sections = one beat)	1/16 (♩)	Sixteenth note (four grid sections = one beat)	1/16 (♩) L	Sixteenth note shuffle Light (four grid sections = one beat, with a light shuffle)	1/16 (♩) H	Sixteenth note shuffle Heavy (four grid sections = one beat, with a heavy shuffle)	1/24 (♩)	Sixteenth note triplet (six grid sections = one beat)
1/4 (♩)	Quarter note (one grid section = one beat)																		
1/8 (♩)	Eighth note (two grid sections = one beat)																		
1/8 (♩) L	Eighth note shuffle Light (two grid sections = one beat, with a light shuffle)																		
1/8 (♩) H	Eighth note shuffle Heavy (two grid sections = one beat, with a heavy shuffle)																		
1/12 (♩)	Eighth note triplet (three grid sections = one beat)																		
1/16 (♩)	Sixteenth note (four grid sections = one beat)																		
1/16 (♩) L	Sixteenth note shuffle Light (four grid sections = one beat, with a light shuffle)																		
1/16 (♩) H	Sixteenth note shuffle Heavy (four grid sections = one beat, with a heavy shuffle)																		
1/24 (♩)	Sixteenth note triplet (six grid sections = one beat)																		
Duration	This determines whether the sounds are played staccato (short and clipped), or tenuto (fully drawn out). * Duration settings are shared with the rhythm pattern. <table> <tr> <td>30–120%</td><td>For example, when set to "30%," the length of the note in a grid (or when a series of grids is connected with ties, the final grid) is 30% of the full length of the note set in the grid type.</td></tr> <tr> <td>Full</td><td>Even if the linked grid is not connected with a tie, the same note continues to sound until the point at which the next new sound is specified.</td></tr> </table>	30–120%	For example, when set to "30%," the length of the note in a grid (or when a series of grids is connected with ties, the final grid) is 30% of the full length of the note set in the grid type.	Full	Even if the linked grid is not connected with a tie, the same note continues to sound until the point at which the next new sound is specified.														
30–120%	For example, when set to "30%," the length of the note in a grid (or when a series of grids is connected with ties, the final grid) is 30% of the full length of the note set in the grid type.																		
Full	Even if the linked grid is not connected with a tie, the same note continues to sound until the point at which the next new sound is specified.																		
Motif	Refer to "Selecting Ascending/Descending Variations (Motif)" (p. 29).																		
Velocity	Specifies the loudness of the notes that you play. <table> <tr> <td>REAL</td><td>The velocity will change according to how strongly you strike the key.</td></tr> <tr> <td>1–127</td><td>The notes will be sounded with the velocity you specify here, regardless of how strongly you strike the key.</td></tr> </table>	REAL	The velocity will change according to how strongly you strike the key.	1–127	The notes will be sounded with the velocity you specify here, regardless of how strongly you strike the key.														
REAL	The velocity will change according to how strongly you strike the key.																		
1–127	The notes will be sounded with the velocity you specify here, regardless of how strongly you strike the key.																		
Oct Range	Adds an effect that shifts arpeggios one cycle at a time in octave units (octave range). You can set the shift range upwards or downwards (up to three octaves up or down). –3–+3																		
Accent	Adjust the amount ("spread") of this dynamic variation. With a setting of "100," the arpeggiated notes will have the velocities that are programmed by the arpeggio style. With a setting of "0," all arpeggiated notes will be sounded at a fixed velocity. 0–100																		

Selecting Ascending/Descending Variations (Motif)

Selects the method used to play sounds (motif) when you have a greater number of notes than programmed for the Arpeggio Style.

- * When the number of keys played is less than the number of notes in the Style, the highest-pitched of the pressed keys is played by default.

Value	Explanation
Up (L)	Only the lowest of the keys pressed is sounded each time, and the notes play in order from the lowest of the pressed keys.
Up (L&H)	Notes from both the lowest and highest pressed keys are sounded each time, and the notes play in order from the lowest of the pressed keys.
Up ()	The notes play in order from the lowest of the pressed keys. No note is played every time.
Down (L)	Only the lowest of the keys pressed is sounded each time, and the notes play in order from the highest of the pressed keys.
Down (L&H)	Notes from both the lowest and highest pressed keys are sounded each time, and the notes play in order from the highest of the pressed keys.
Down ()	The notes play in order from the highest of the pressed keys. No note is played every time.
U/D (L)	Notes will be sounded from the lowest to the highest key you press and then back down to the lowest key, with only the lowest key sounded each time.
U/D (L&H)	Notes from both the lowest and highest pressed keys are sounded each time, and the notes play in order from the lowest of the pressed keys and then back again in the reverse order.
U/D ()	The notes play in order from the lowest of the pressed keys, and then back again in the reverse order. No note is played every time.
Rand (L)	Notes will be sounded randomly for the keys you press, with only the lowest key sounded each time.
Rand ()	Only the lowest of the keys pressed is sounded each time, the notes you press will be sounded randomly. No note is played every time.
Phrase	Pressing just one key will play a phrase based on the pitch of that key. If you press more than one key, the key you press last will be used.

Editing the Vocoder/Auto Pitch

1. Press the [VOCODER/AUTO PITCH] button to make it light.
The VOCODER/AUTO-PITCH screen appears.



2. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.
3. To save the edited settings, perform the operation "Saving the Vocoder/Auto Pitch Settings (Write)."

Parameter	Value/Explanation
Mode	Selects the vocoder or auto-pitch. Vocoder, Auto-Pitch
Bank, Number	Selects the vocoder or auto-pitch setting. PRST 001-010 Vocoder settings PRST 011-020 Auto-pitch settings USER 501-520 User settings
Mode: Vocoder	
Carrier	Selects the sound that will be the basic waveform of the vocoder sound.
Level	Adjusts the output level of the sound that passes through the vocoder. 0-127
Pan	Adjusts the stereo position of the sound that passes through the vocoder. L64-63R
Mic Sens	Specifies the input sensitivity of the mic. 0-127
Envelope	Selects the character of the sound. SHARP Emphasizes the human voice. SOFT Emphasizes the sound of the instrument. LONG Produces a vintage sound with a long decay.
Synth Level	Specifies the input level of the instrumental sound. 0-127
Mic Mix Level	Specifies the amount of the mic audio passing through the Mic HPF (Mic High Pass Filter) that is added to the output of the vocoder. 0-127
Mic HPF	Specifies the frequency at which the high pass filter (HPF) applied to the mic audio starts to take effect. If this is set to "BYPASS," no filter is applied. BYPASS, 1000-16000Hz
Mode: Auto-Pitch	
Keyboard Part	Selects the sound that is played on the keyboard when using Auto-Pitch. Selects how Auto-Pitch correction is performed.
Type	SOFT Corrects the pitch smoothly. HARD Corrects the pitch quickly. ELECTRIC1 Corrects the pitch in a stepwise manner. ELECTRIC2 Corrects the pitch more strongly than ELECTRIC1. This reproduces the mechanical, step-wise pitch correction used in pop music. ROBOT Corrects the pitch to the specified note.
Level	Adjusts the output level of the sound that passes through the auto-pitch. 0-127
Pan	Adjusts the stereo position of the sound that passes through auto-pitch. L64-63R
Scale	Selects the scale to which Auto-Pitch corrects the pitch. CHROMATIC Corrects the pitch in semitone steps. Maj (Min) Corrects the pitch to the notes of the scale (Key) you specify.
Key	If the Scale parameter is set to "Maj (Min)," specify the key of the song you're singing. For example if the song is in C major, specify "C"; if the song is in A minor, specify "Am." Relationship between the key of the song and the key signature (and) of the score Major keys C F B ^b E ^b A ^b D ^b Minor keys Am Dm Gm Cm Fm Bbm Major keys C G D A E B F# Minor keys Am Em Bm F#m C#m G#m D#m
Octave	Makes the pitch one octave higher/lower. -1, 0, +1
Gender	Settings in the "-" direction give the voice an increasingly masculine character; settings in the "+" direction give the voice an increasingly feminine character. -10-+10
Balance	Specifies the volume balance between the direct sound (D) and the effect sound (W). D100:0W-D0:100W
Note	Fixes the pitch. * Available if Type is set to "Robot." C-B

Saving the Vocoder/Auto Pitch Settings (Write)

1. Press the [WRITE] button to make it light.
The VOCODER/AUTO-PITCH NAME screen appears.
2. Assign a name to the data that you're saving.

Operation	Explanation
[◀] [▶] buttons	Move the cursor.
Value dial, [-] [+] buttons	Select the character.
[▼] [▲] buttons	Switch between uppercase and lowercase.

Inserting/ Deleting Characters

1. While entering a name, press the [MENU] button.
The NAME MENU window appears. The window closes if you press the button once again.
 2. Move the cursor to "INSERT" or "DELETE," and press the [ENTER] button.
- | Function | Explanation |
|----------|---|
| INSERT | Press the [ENTER] button to insert a space (blank) at the cursor location. |
| DELETE | Press the [ENTER] button to delete the character at the cursor location; subsequent characters will be moved forward to fill the gap. |
3. When you've specified the name, press the [ENTER] button.
 4. Use the value dial to specify the save-destination.
 5. Press the [ENTER] button.
A confirmation message appears.
If you decide to cancel, press the [EXIT] button.
 6. Move the cursor to "OK," and press the [ENTER] button.
Saving is complete when the screen indicates "Completed!"

NOTE


Never turn off the power while the screen indicates "Writing...."

Creating an Original Scale (USER SCALE)

You can adjust the pitch of each note from C through B in units of one cent.
The pitch you specify for each note is applied to that note for all octaves.
You can create and save nine different “user scales” for later recall.

Setting a User Scale

1. Press [MENU] button.
The MENU screen appears.
2. Move the cursor to “USER SCALE,” and press the [ENTER] button.
The USER SCALE screen appears.

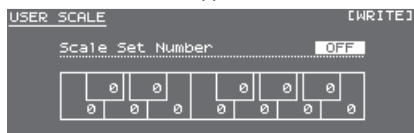

3. Select each of the 12 notes from C to B, and use the value dial to edit their pitch.

* You can also use the keyboard to select a note to edit.

Value	-64--+63
-------	----------

Quarter Tone settings

1. In the USER SCALE screen, hold down the OCTAVE [DOWN] button and play a note on the keyboard.
The pitch of the note you played is flattened by 1/4 semitone (-50 cents).
Once again hold down the OCTAVE [DOWN] button and play the same note to restore it to its original pitch.
 2. In the SCALE EDIT screen, hold down the OCTAVE [UP] button and play a note on the keyboard.
The pitch of the note you played is sharpened by 1/4 semitone (+50 cents).
Once again hold down the OCTAVE [UP] button and play the same note to restore it to its original pitch.
4. When you've finished making settings, press the [WRITE] button.
The USER SCALE WRITE screen appears.
* If you press the [EXIT] button to exit the USER SCALE screen without performing the Write operation, the unsaved settings revert to their previous state.
 5. Select the write destination number (USER 1–9), and press the [ENTER] button.
A confirmation message appears.
If you decide to cancel, press the [EXIT] button.
 6. Move the cursor to “OK,” and press the [ENTER] button.
Writing is complete when the screen indicates “User Scale Write Completed.”

Recalling a User Scale

1. Press [MENU] button.
The MENU screen appears.
2. Move the cursor to “USER SCALE,” and press the [ENTER] button.
The USER SCALE screen appears.
The currently selected user scale number is shown.
When the instrument starts up, this always indicates “OFF.”
3. Press the [1]–[9] button to select a user scale.
To return to the normal state (OFF), press the [0] button.

MEMO

- If a user scale is selected, the user scale does not change even if you switch patches or performances.
- User scale returns to OFF when you turn off the power.
- If no user scale is registered to the button that you press, equal temperament is selected.
- If you use the shortcut ([KEY TOUCH]+[TRANPOSE]) to access the USER SCALE screen, you can press a [0]–[9] button to select a user scale and immediately exit the USER SCALE screen. This is convenient when you want to recall a user scale while performing.

System Settings

Procedure

1. Press the [MENU] button.
The MENU screen appears.
2. Move the cursor to "SYSTEM," and press the [ENTER] button.
3. Move the cursor to tab, and use the [◀] [▶] buttons to switch the pages.
4. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.
5. Press the [EXIT] button to exit the screen.

MEMO

The parameters you edit are saved when you press the [WRITE] button in the SYSTEM screen, or when you exit the SYSTEM screen.

System Parameters

GENERAL

Parameter	Value/Explanation
LCD Contrast	Adjusting the display contrast. 1–20
LCD Brightness	Adjusting the display brightness. 1–20
Auto Off	Specifies whether the unit will turn off automatically after a certain time has elapsed. If you don't want the unit to turn off automatically, choose "OFF" setting. OFF, 30, 240[min]
Power Save Time	Amount of idle time that is to pass before the XPS-30 enters power-save mode. When the XPS-30 enters power-save mode, it will reduce its power consumption by turning off the display backlight and minimizing button illumination. OFF, 1, 3, 5, 10, 15, 20, 30, 60[min]
Illumination	Specifies whether the buttons illuminate when they are waiting for an operation. OFF, ON
World Patch Order	Specifies the patch that is selected first when you press the [WORLD] button immediately after turning the power on. BRAZIL, CHINA, INDIA, INDONESIA, ISRAEL, KOREA, PHILIPPINES, SOUTH AFRICA, THAILAND, TURKEY, VIET NAM, LATIN AMERICA, TAIWAN

PAD COLOR

Parameter	Value/Explanation
Pad Brightness	Adjusts the brightness of pads [1]–[8]. 1–127
COLOR	The illumination color of pads [1]–[8] can be specified for each function.
Back Ground	Specifies the basic illumination color of the pads.
Level Meter	OFF, 1–13 Specifies the illumination color of the level meter that indicates the volume when you play the keyboard.
Part Select	Specifies the pad illumination color that indicates the selected part when you use the pads to select a part.
Track Select	Specifies the pad illumination color that indicates the selected track when you use the pads to select a track.
Track Data	Specifies the pad illumination color that indicates a track already containing performance data.
Track Mute	Specifies the pad illumination color that indicates a muted track.
Rhythm Pattern	1–13 Specifies the pad illumination color when the RHYTHM PATTERN screen is displayed.
Audio Player	Specifies the pad illumination color when the AUDIO PLAYER screen is displayed.
Tone Switch	Specifies the pad illumination color for pads [5]–[8] that indicate tones turned on in the PATCH EDIT screen.
Tone Select	Specifies the pad illumination color for the pad that indicates the selected tone in the PATCH EDIT screen.

PAD NOTE

Parameter	Value/Explanation
Pad Note Switch	Specifies the mode in which MIDI note messages are transmitted.
	OFF Messages are not transmitted.
	PATCH Only in patch mode.
	PERFORM Only in performance mode.
Pad 1–8 Note Number	Specifies the note that is transmitted. C–G9
	Specifies the velocity of the note that is transmitted. OFF, 1–127
Pad 1–8 Channel	Specifies the MIDI channel of the note that is transmitted. 1–16

KEY TOUCH

Parameter	Value/Explanation
Velo Curve	Sets the keyboard's touch. LIGHT, MEDIUM, HEAVY
Curve Offset	Adjusts the Velo Curve. Lower values make the keyboard feel lighter. Higher values make the keyboard feel heavier. -10–+9
Velocity	Specifies the velocity transmitted when a key is played.
	REAL The transmitted velocity value will correspond to the force with which you strike the key. 1–127 The transmitted velocity value will be fixed, regardless of the force with which you strike the key.

SOUND

Parameter	Value/Explanation
Master Tune	Adjusts the overall tuning of the XPS-30. The display shows the frequency of the A4 note (center A). 415.3–466.2[Hz]
Master Key Shift	Shifts the XPS-30's overall pitch range in semitone steps. -24–+24
Master Level	Sets the XPS-30's overall volume. 0–127
Output Gain	Adjusts the output gain from the XPS-30's output. -12–+12[dB]
Audio Level	Specifies the volume when playing audio file from the Audio Player. 0–127

MASTER EQ

Parameter	Value/Explanation
Master EQ Switch	Turn the master EQ (this is an equalizer that is applied to the overall sound of the entire XPS-30) on/off. OFF, ON
EQ Low Freq	Frequency of the low range. 200, 400[Hz]
EQ Low Gain	Gain of the low frequency range. -15–+15[dB]
EQ Mid Freq	Frequency of the middle range. 200–8000[Hz]
EQ Mid Gain	Gain of the middle frequency range. -15–+15[dB]
EQ Mid Q	Width of the middle frequency range. Set a higher value for Q to narrow the range to be affected. 0.5, 1.0, 2.0, 4.0, 8.0
EQ High Freq	Frequency of the high range. 2000, 4000, 8000[Hz]
EQ High Gain	Gain of the high frequency range. -15–+15[dB]
EQ Total Gain	Gain of the overall Master EQ. -15–+15[dB]

MIC IN SETTINGS

Parameter	Value/Explanation
Mic In Level	Adjusts the input level of the MIC INPUT jack. 0–127
Mic In Reverb Switch	Specifies whether reverb is applied (ON) to the mic input or not applied (OFF). OFF, ON
Mic In Reverb Level	Adjust the amount of reverb that is applied to the sound of the microphone. 0–127
Mic In Reverb Type	Select the type of reverb/delay that is applied to the sound of the microphone. ROOM1, ROOM2, STAGE1, STAGE2, HALL1, HALL2, DELAY, PAN-DELAY
Mic In Reverb Time	Adjusts the length of the reverberation (when Reverb Type is ROOM1–HALL2) or the delay time of the delay (when Reverb Type is DELAY or PAN-DELAY). 0–127
Noise Suppressor Switch	Switches the noise suppressor on/off. The noise suppressor is a function that suppresses noise during periods of silence. OFF, ON
Noise Suppressor Threshold	Adjusts the volume at which noise suppression starts to be applied. 0–127
Noise Suppressor Release	Adjusts the time from when noise suppression starts until the volume reaches 0. 0–127
Mic Mode	Specifies the mic input mode. ALL Sound is input from the mic at all times. VOCAL FX Sound is input from the mic only when the [VOCODER/ AUTO PITCH] button is lit, or when the effect type is set to "79: Di VOCODER" (p. 57).

PEDAL

Parameter	Value/Explanation
Control Pedal	
	Specifies the function of the pedal that is connected to the PEDAL CONTROL jack. The number in parentheses () is the controller number of the control change message produced by the pedal when the corresponding function is assigned.
	MODULATION (CC01) Vibrato
	PORTA-TIME (CC05) Portamento time
	VOLUME (CC07) Level
	PAN (CC10) Pan
	EXPRESSION (CC11) Level
	HOLD (CC64) The sound will be sustained for keys that are played or were already held down while holding down the pedal.
	PORTAMENTO (CC65) Portamento switch
	SOSTENUTO (CC66) The sound will be sustained only for keys that were already pressed when you pressed the pedal.
	RESONANCE (CC71) Resonance
	RELEASE-TIME (CC72) Release time
	ATTACK-TIME (CC73) Attack time
	CUTOFF (CC74) Cutoff
	DECAY-TIME (CC75) Decay time
	VIB-RATE (CC76) Vibrato speed
	VIB-DEPTH (CC77) Vibrato depth
	VIB-DELAY (CC78) Vibrato delay time
	CHORUS-SEND (CC93) The amount of the chorus
	REVERB-SEND (CC91) The amount of the reverb
	AFTERTOUCH Channel aftertouch
	* In Patch mode, the effect of the above functions applies to the currently selected sound. In Performance mode, the effect applies to the current part or to parts whose keyboard switch (p. 19, p. 20, p. 22) is on.
	START/STOP Pressing the pedal will start/stop the rhythm pattern, audio player, or pattern sequencer.
	TAP-TEMPO The tempo will be set to the interval at which you press the pedal (Tap Tempo).
	PROG-UP If you're in the patch mode, this selects the next sound. If you're in the performance mode, this selects the next-numbered performance.
	PROG-DOWN If you're in the patch mode, this selects the previous sound. If you're in the performance mode, this selects the previous-numbered performance.
	FAV-UP The favorite of the next number or bank will be selected.
	FAV-DOWN The favorite of the previous number or bank will be selected.
Control Pedal Polarity	Selects the polarity of the pedal connected to the PEDAL CONTROL jack. STANDARD, REVERSE
Hold Pedal	
Continuous Hold Pedal	If this is ON, the PEDAL HOLD jack will support half-pedaling. OFF, ON
Hold Pedal Polarity	Selects the polarity of the pedal connected to the PEDAL HOLD jack. STANDARD, REVERSE

KNOB

Parameter	Value/Explanation
	Specifies the function that is assigned to each knob when the parameter controlled by the control knobs is set to ASSIGN 1–4.
	OFF No function is assigned.
	CC01–31, 32 (OFF), 33–95 Controller number 1–31, 32, 33–95
	Pitch Bend The same effect as moving the pitch bend.
	Aftertouch Aftertouch
Knob 1–4 Assign	* In Patch mode, the effect of the above functions applies to the currently selected sound. In Performance mode, the effect applies to the selected part.
	EQ Low Freq Frequency of the low range.
	EQ Low Gain Gain of the low frequency range.
	EQ Mid Freq Frequency of the middle range.
	EQ Mid Gain Gain of the middle frequency range.
	EQ Mid Q Width of the middle frequency range.
	EQ High Freq Frequency of the high range.
	EQ High Gain Gain of the high frequency range.

SYNC/TEMPO

Parameter	Value/Explanation
	Specifies the synchronization message that the XPS-30 will use for operation.
Sync Mode	MASTER The XPS-30 will be the master. Choose this setting when using the XPS-30 by itself without synchronizing to another device. SLAVE The XPS-30 will be the slave. Choose this setting when you want the XPS-30 to synchronize to MIDI Clock messages received from another MIDI device.
Clock Source	When the Sync Mode is "SLAVE," this setting specifies whether the XPS-30 will synchronize to synchronization messages from the MIDI IN connector or from the USB COMPUTER port. MIDI, USB
Startup Tempo	Specifies the tempo when the XPS-30 starts. 20–250
Tempo Lock	When you switch performances or patterns, this specifies whether the tempo of the newly selected performance/pattern is used, or the current tempo is maintained. OFF, ON (maintain)

METRONOME

Parameter	Value/Explanation
	Specifies how the metronome will be sounded.
	OFF No metronome is sounded.
	PLAY-ONLY The metronome sounds when a pattern is playing.
Metronome Mode	REC-ONLY The metronome sounds when a pattern is being recorded.
	PLAY&REC The metronome sounds when a pattern is playing or being recorded.
	ALWAYS The metronome sounds at all times.
Metronome Level	Adjusts the metronome volume. 0–10
	Selects the metronome sound.
Metronome Sound	TYPE1 Conventional metronome sound (first beat is a bell) TYPE2 Click sound TYPE3 Beep sound TYPE4 Cowbell sound
Metronome Accent Switch	Adds an accent to the metronome sound. OFF, ON

MIDI

Parameter	Value/Explanation
Local Switch	Determines whether the internal sound generator is disconnected (OFF) from the controller section (keyboard, pitch bend/modulation lever, buttons, sliders, pedal, and so on); or not disconnected (ON). Normally you'll leave this "ON." Choose the "OFF" setting if you want operations on the XPS-30 to only control DAW software on your computer. OFF, ON
Patch Rx/Tx Ch	In patch mode, specifies the MIDI message transmit/receive channel for the keyboard part. 1–16
Performance Control Channel	Specifies the MIDI receive channel on which MIDI messages (program change/bank select) from an external MIDI device will be received by the XPS-30 to switch performances. Choose "OFF" setting if you don't want performances to be switched from a connected MIDI device. 1–16, OFF
Transmit Program Change, Bank Select, Active Sensing	Specifies whether program change messages/bank select messages/active sensing messages will be transmitted (ON) or not be transmitted (OFF). OFF, ON
Transmit Edit Data	Specifies whether changes you make in the settings of a patch or performance will be transmitted as system exclusive messages (ON), or will not be transmitted (OFF). OFF, ON
Receive Program Change, Bank Select	Specifies whether program change messages/bank select messages will be received (ON) or not be received (OFF). OFF, ON
Soft Through	If this is "ON," incoming MIDI messages from the MIDI IN connector will be re-transmitted without change from the MIDI OUT connector. OFF, ON
USB Driver	Sets the USB driver. * This setting will take effect when you turn the power off, then on again.
	GENERIC Choose this if you want to use the generic USB driver provided by your computer's operating system.
	VENDOR Choose this if you want to use a USB driver downloaded from the Roland website. (*1)

*1: Download the Driver

In order to use the XPS-30 with the "VENDOR" setting, you must download the driver from the following URL and install it on your computer.
For details on installation, refer to the following URL.

➡ <http://www.roland.com/support/>

CONTROL


Parameter	Value/Explanation
Sys Ctrl 1–4 Source	Specify the MIDI messages that will be used as system controls. System Control settings allow you to specify MIDI messages that will apply in common to the entire XPS-30, and can be used for controlling volume, tone, etc. You can assign up to four MIDI messages for this type of control. * If you want to make assignments for realtime control of the sound and effects for each tone independently, use "Matrix control" (p. 12) or "MFX control" (p. 18).
	OFF No function is assigned.
	CC01–31, 32 (OFF), 33–95 Controller number 1–31, 32, 33–95
	PITCH BEND The same effect as moving the pitch bend.
	AFTERTOUCH Aftertouch

INFORMATION

Parameter	Value/Explanation
Version	View the software version.
Expansion	Displays information about expansion sounds.

Connecting to a Computer via USB

If you use a commercially available USB cable to connect a USB port of your computer to the USB COMPUTER port located on the rear panel of the XPS-30, you can use MIDI-compatible software (DAW software) to play back audio and MIDI data on the XPS-30.

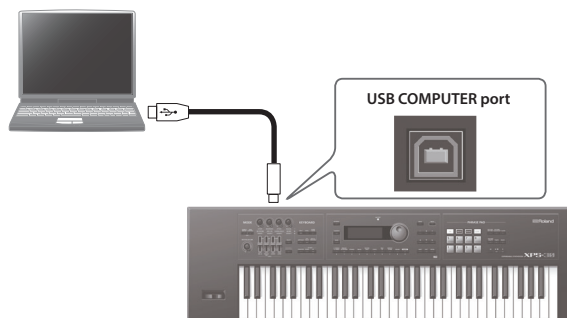

For details on operating requirements, refer to the Roland website.
<http://www.roland.com/support/>

NOTE

- For some types of computer, this might not work correctly. Refer to the Roland website for details on the operating systems that are supported.
- A USB cable is not included. You can purchase one from the dealer where you purchased the XPS-30.
- Use a USB 2.0 cable.
- Your computer's USB port must support USB 2.0 Hi-Speed.
- Turn on the power of the XPS-30 before you start the DAW software on your computer. Don't turn the XPS-30's power on/off while your DAW software is running.

USB audio

XPS-30 → Computer

If the XPS-30 is connected to your computer via a USB cable, the audio output you've chosen in the XPS-30 can be recorded into your computer's DAW software.

Computer → XPS-30

If the XPS-30 is connected to your computer via a USB cable, the sound of your computer can be reproduced from an audio system connected to the XPS-30's jacks.

USB MIDI

If the XPS-30 is connected to your computer via a USB cable, the XPS-30's performance data (MIDI data) can be recorded into your DAW software, and performance data (MIDI data) played back by your DAW software can be sounded by the XPS-30's sound engine.

Installing the USB Driver

The USB driver is software that exchanges data between the XPS-30 and your computer software.
In order to use the XPS-30's dedicated USB driver, you must install the USB driver.

MEMO

For details on downloading and installing the USB driver, refer to the Roland website.

<http://www.roland.com/support/>

Making USB Driver Settings

Here's how to switch between the XPS-30's dedicated USB driver and the generic driver provided by your operating system.

1. Press the [MENU] button.
The MENU screen appears.
2. Move the cursor to "SYSTEM," and press the [ENTER] button.
The SYSTEM screen appears.
3. Move the cursor to "MIDI" tab – "USB Driver," and use the value dial to select the driver.

Driver	Explanation
VENDOR	The dedicated driver provided by Roland specifically for the XPS-30 is used. Both MIDI and audio are available.
GENERIC	The generic driver of the operating system is used. Only MIDI is available.

When you switch the driver, a confirmation screen appears.
If you decide to cancel, press the [EXIT] button.

4. Move the cursor to "WRITE," and press the [ENTER] button.
Setting is complete when the screen indicates "Completed."

MEMO

This system takes effect when the XPS-30 is powered-on.

5. Turn the power off, and then on again.

Using the XPS-30 with DAW Software

Using the XPS-30 as a DAW Controller

You can use the XPS-30 as a controller for your DAW software. The XPS-30 provides various DAW control maps. Simply select the appropriate control map to apply the appropriate settings for the DAW software that you're using.

MEMO

If you want to use the XPS-30 as a controller for your DAW software, set the USB Driver setting to "VENDOR."

Using the XPS-30 to Control DAW Software

1. Use a USB cable to connect the XPS-30 to your computer.
A confirmation message appears.
* This message is not shown if you power-on the XPS-30 with it already connected to the computer.
2. Move the cursor to "YES," and press the [ENTER] button.
DAW Control mode is on, and the DAW CONTROL screen appears.
3. Move the cursor to "Control Map," and use the value dial to select the DAW software that you're using.

Value	Explanation
LOGIC PRO	When controlling Logic Pro.
SONAR	When controlling SONAR.
CUBASE	When controlling Cubase.
USER	Choose "USER" if your system cannot use the Mackie Control control surface. You'll be able to choose the MIDI messages that are transmitted when you press pads [1]–[8].

4. As necessary, move the cursor to "Sync Output" or "Sync Mode," and use the value dial to change the setting.

Parameter	Value/Explanation
Sync Output	Specifies whether clock, start, continue, stop, and song position pointer messages are transmitted to another device (ON) or are not transmitted (OFF). * When the DAW CONTROL screen is not shown, this parameter is forcibly turned OFF.
	OFF, ON
Sync Mode	Specifies the synchronization message that the XPS-30 will use for operation.
	MASTER The XPS-30 will be the master. Choose this setting when using the XPS-30 by itself without synchronizing to another device. SLAVE The XPS-30 will be the slave. Choose this setting when you want the XPS-30 to synchronize to MIDI Clock messages received from another MIDI device.

5. Turn the Local Switch "OFF" in the "Controller" tab (p. 37).
6. In your DAW software, open the project file that you want to control.

MEMO

Before you continue, select "XPS-30" as the MIDI input device and output device. For details on how to do this, refer to the owner's manual of your DAW software.

7. Make the appropriate control surface settings for the DAW software you selected.

Settings in LOGIC PRO

This explanation describes the procedure when using Logic Pro X. The procedure may differ for other versions.

1. From the Logic Pro X menu, choose [Logic Pro X] → [Control Surfaces] → [Setup] to open the setting screen.
2. From the menu, choose [New] → [Install].
3. From the list of Model, choose "Mackie Control" and press "Add."
4. As the input port and the output port, specify "JUNO-DS DAW CTRL."

Settings in SONAR

This explanation describes the procedure when using SONAR X2 Producer. The procedure may differ for other versions.

1. From the SONAR menu, choose [Edit] → [Preferences] → [MIDI Devices] to open the input/ output device selection.
2. To the input devices and output devices, add "JUNO-DS DAW CTRL."
3. In [Preferences], choose [MIDI Control Surfaces].
4. Press "Add new Controller/Surface" to access the control surface settings dialog box.
5. Choose "Mackie Control" as the control surface, choose "JUNO-DS DAW CTRL" as the input port and output port, and then press "OK."

Settings in CUBASE

This explanation describes the procedure when using the Mac OS X version of Cubase 7. The procedure may differ for other versions.


1. From the Cubase [Devices] menu, choose [Device Setup].
2. Press the [+] button located in the upper left of the dialog box, and choose "Mackie Control" from the pull-down menu.
3. As the MIDI input and MIDI output for Mackie Control, specify "JUNO-DS DAW CTRL."
4. In the left side of the dialog box, choose "MIDI Port Setup" to access the setting screen.
5. In "JUNO-DS DAW CTRL," clear the check box from "In 'ALL MIDI Inputs'."

8. Operate the XPS-30 to control your DAW software.

Available controllers	Explanation
[▶/■] button	Playback/Stop
[●] button	Start recording on record-standby tracks.
[◀] button	Return the current position to the beginning.
[SHIFT]+Pad [2]	Rewind
[SHIFT]+Pad [3]	Fast forward
The [▶/■] through [◀] buttons emulate the Mackie Control control surface.	
Pad [1]–[8]	Emulate the Mackie Control control surface Function buttons (F1–F8).
Control knobs	You can control the functions that are assigned (p. 33) to Assign 1–4 (p. 37).
[LEVEL] sliders	You can control the functions that are assigned to the four sliders (p. 37).

Assigning Functions to Knobs and Sliders

You can assign functions to the control knobs (1–4) and the [LEVEL] sliders (1–4).

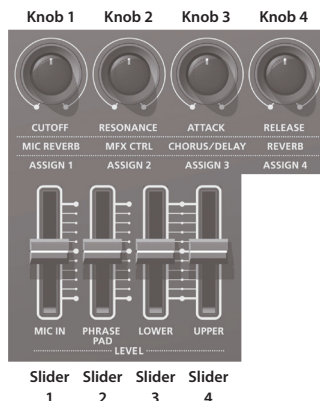

You can store sixteen sets of these assignments, with each set containing the assignments of the control knobs (1–4) and the [LEVEL] sliders (1–4).

1. In the DAW CONTROL screen, select the “Controller” tab.

2. Select the set of assignments that you want to edit.

MEMO

You can press the [ENTER] button and rename the set.

3. Move the cursor to the parameter that you want to edit, and use the value dial to change the value.

Parameter	Explanation
Local Switch	Turns the Local switch on/off when in DAW Control mode. If you're using a DAW software with the XPS-30's keyboard controller section and sound generator section, you should turn the Local Switch “OFF.” Here's why. We need to connect these sections in the following order: the XPS-30's keyboard a DAW software the XPS-30's sound generator. Since the XPS-30's keyboard section and sound generator section are connected internally, such a connection order would normally be impossible. However, if the Local Switch is “OFF,” the XPS-30's keyboard section and its sound generator section will be independent, allowing you to use a DAW software as shown here in the illustration.
Tx Channel	Specifies the MIDI transmit channel used when in DAW Control mode. Set this as desired.
Knob 1–4	Select the MIDI messages that are transmitted when you turn the control knobs (1–4).
Slider 1–4	Select the MIDI messages that are transmitted when you control the [LEVEL] sliders (1–4).

MEMO

If you want your settings to be remembered, save the DAW CONTROL settings (p. 38).

Using the XPS-30 as a MIDI Keyboard

Your playing on the XPS-30's keyboard (MIDI data) can be recorded into your DAW software, or used to play software instruments.

1. Connect the XPS-30 to your computer.
2. Press the [DAW CONTROL] button to make it light.
The DAW CONTROL screen appears.
3. In the DAW CONTROL screen, select the “Controller” tab.
4. Turn the Local Switch “OFF.”

MEMO

Set the MIDI transmit channel as necessary (Tx Channel: p. 37).

Playing the XPS-30's Sound Generator from DAW Software


Performance data (MIDI data) played back by your DAW software can make the XPS-30's sound generator produce sound.

1. Connect the XPS-30 to your computer.
2. Press the [DAW CONTROL] button to make it light.
3. Start your DAW software, and open the project file that you want to play.

MEMO

Before you continue, select “XPS-30” as the MIDI input device and output device.
For details on how to make this setting, refer to the owner's manual of your DAW software.

4. In the DAW CONTROL screen, select the “Part Edit” tab.

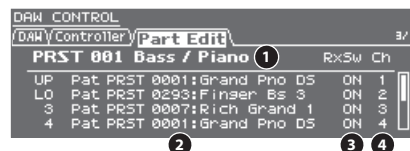

No.	Explanation
1	Performance
2	Patches that are assigned to each part
3	Receive switch for each part If you set to “OFF,” MIDI messages are not received.
4	Receive channel for each part

* Depending on the channel settings of your DAW, messages that switch studio sets may be transmitted on the channel of a part, causing the tone to switch. If this occurs, check the channel settings of your DAW.

5. Change the settings as necessary.

MEMO

It is convenient to turn receive switch on/off if you temporarily want to stop receiving MIDI messages.

6. In your DAW software, set the transmit channels of the tracks that you're playing back to match the receive channel settings of the XPS-30.
For details on how to make this setting, refer to the owner's manual of your DAW software.

7. Play back your DAW software.

You hear the playback sounded by the XPS-30's patches.

Using the XPS-30 as an Audio Interface

The XPS-30's audio output you've specified can be recorded into DAW software on your computer. Sound from your computer can also be reproduced from a device that's connected to the XPS-30's OUTPUT jacks.

1. Connect the XPS-30 to your computer.
2. Start up your DAW software, and choose "XPS-30" as the audio input device and output device.
For details on how to make this setting, refer to the owner's manual of your DAW software.

Saving the DAW CONTROL Settings

The DAW CONTROL settings revert to their previous state when you turn off the power. If you want the DAW CONTROL settings to be remembered even after power-off, save them.

1. In the DAW CONTROL screen (expect in the "Part Edit" tab), press the [WRITE] button.
 - * If you press the [WRITE] button when the "Part Edit" tab is selected, PERFORMANCE WRITE is executed.

A confirmation message appears.
If you decide to cancel, press the [EXIT] button.

2. Move the cursor to "OK," and press the [ENTER] button.
Saving is complete when the screen indicates "Completed!"

NOTE

Never turn off the power while the screen indicates "Writing...."

MEMO

When you save the DAW CONTROL settings, the system settings are also saved.

Error Messages

If an incorrect operation is performed, or if processing could not be performed as you specified, an error message appears. Refer to the explanation for the error message that appears, and take the appropriate action.

Message	Meaning	Action
Battery Low!	The battery has run down.	Replace the batteries, or use an AC adaptor.
Cannot Read!	Failed to load the audio file from the USB flash drive.	Make sure that USB flash drive is correctly connected. Use USB Flash Memory sold by Roland.
Duplicate File Name! Overwrite it?	A file of the same name already exists.	If you want to overwrite it, proceed with the operation. If you don't want to delete the identically-named file, save using a different file name.
Duplicate File Name!	A file of the same name already exists.	Check the name.
Format USB Memory Error!	An error occurred when formatting the USB flash drive.	Use USB Flash Memory sold by Roland. We cannot guarantee operation if other products are used.
Incorrect File!	This is a file that the XPS-30 is unable to play/import.	Do not use this file.
Incorrect File Name!	A "." (period) cannot be used at the beginning of a file name.	Specify a different character.
Int Memory Full!	There is insufficient memory capacity in the internal pattern writing destination.	Delete unneeded pattern.
Memory Damaged!	Failed when reading from the waveform memory file system.	Please execute a Factory Reset. If this does not resolve the problem, contact your dealer or a nearby Roland service center.
Memory Full!	There is insufficient free capacity to store the sample.	Delete unneeded sample.
Memory Full! Optimize?	There is insufficient free capacity to store the sample. Do you want to execute Optimize?	You can obtain free capacity by optimizing the memory area (p. 2).
MIDI Buffer Full!	An unusually large amount of MIDI data was received, and could not be processed.	Reduce the amount of MIDI messages that are being transmitted.
MIDI Offline!	The MIDI IN connection was broken.	Check that there is no problem with the MIDI cable connected to the XPS-30's MIDI IN, and that the MIDI cable was not disconnected.
No more Registered Favorites!	No more favorites have been registered.	Check the currently selected favorite number and the direction ("FAV-UP" or "FAV-DOWN") that's assigned to the pedal (p. 33).
No Room!	The number of stored waveforms has reached the maximum (256).	Delete unneeded sample.
Not Found!	The file was not found on the USB flash drive.	Make sure that the file exists on the USB flash drive.
Now Playing!	Since the XPS-30 is playing, this operation cannot be executed.	Stop playback before you execute the operation.
Now Recording!	Since the XPS-30 is recording, this operation cannot be executed.	Stop recording before you execute the operation.
Pattern Full!	The maximum number of notes that can be recorded in one pattern has been exceeded; the pattern cannot be recorded any further.	Delete unneeded data from the pattern that you're recording.
	This indication may appear if a large amount of data, such as movements of the Control knobs, is being recorded. No further pattern recording is possible.	
Permission Denied!	The operation cannot be performed because the USB flash drive, file, or folder is write-protected.	Disable the write-protect setting of the USB flash drive. Using your computer, disable the write-protect setting of the file or folder.
Read Error!	Failed to load data from USB flash drive.	Make sure that USB flash drive is correctly connected.
	It may be that the file is damaged.	Do not use this file.
	This file cannot be loaded since its format is incorrect.	
Rec Overflow!	Since a large amount of recorded data was input all at once, it could not be processed correctly.	Reduce the amount of recorded data.
Sample Length Too Long!	The audio file cannot be imported because it is too long.	An audio file that exceeds 64 MB stereo or 32 MB mono cannot be imported.
Sample Length Too Short!	The audio file cannot be imported because it is too short.	Extremely short audio files cannot be imported.
Sys Mem Damaged!	It is possible that the contents of system memory have been damaged.	Please execute a Factory Reset. If this does not resolve the problem, contact your dealer or a nearby Roland service center.
USB Mem NotReady!	USB flash drive is not connected.	Connect USB flash drive.
Write Error!	Failed to write data to USB flash drive.	Make sure that USB flash drive is correctly connected.
	Data cannot be written because the USB flash drive has no more free space.	Delete unneeded files from the USB flash drive. Alternatively, use a different USB flash drive device, one that has more free space available.
	The file or the USB flash drive itself is write protected.	Make sure that the file or the USB flash drive is not write protected.

MFX/Chorus/Reverb Parameters

MFX Parameters (MFX, MFX1-3)

The MFX feature 80 different kinds of effects. Some of the effects consist of two or more different effects connected in series.

Type	MFX	Page
Filter	00 THRU	–
	01 EQUALIZER	p. 41
	02 SPECTRUM	
	03 ISOLATOR	
	04 LOW BOOST	p. 42
	05 SUPER FILTER	
	06 STEP FILTER	
	07 ENHANCER	p. 43
	08 AUTO WAH	
	09 HUMANIZER	
Modulation	10 SPEAKER SIMULATOR	p. 44
	11 PHASER	
	12 STEP PHASER	
	13 MLT STAGE PHASER	p. 45
	14 INFINITE PHASER	
	15 RING MODULATOR	
	16 STEP RING MOD	p. 46
	17 TREMOLO	
	18 AUTO PAN	
	19 STEP PAN	p. 47
Chorus	20 SLICER	
	21 ROTARY	
	22 VK ROTARY	p. 48
	23 CHORUS	
	24 FLANGER	
	25 STEP FLANGER	p. 49
	26 HEXA-CHORUS	
	27 TREMOLO CHORUS	
	28 SPACE-D	p. 50
	29 3D CHORUS	
Dynamics	30 3D FLANGER	
	31 3D STEP FLANGER	p. 51
	32 2BAND CHORUS	
	33 2BAND FLANGER	
	34 2BAND STEP FLANGR	p. 52
	35 OVERDRIVE	
	36 DISTORTION	
	37 VS OVERDRIVE	p. 53
	38 VS DISTORTION	
	39 GUITAR AMP SIM	
Delay	40 COMPRESSOR	p. 54
	41 LIMITER	
	42 GATE	
	43 DELAY	p. 55
	44 LONG DELAY	
	45 SERIAL DELAY	
	46 MODULATION DELAY	p. 56
	47 3TAP PAN DELAY	
	48 4TAP PAN DELAY	
	49 MULTITAP DELAY	p. 57
Lo-Fi 1	50 REVERSE DELAY	
	51 SHUFFLE DELAY	
	52 3D DELAY	p. 58
	53 ANALOG DELAY	
	54 ANALOG LONG DELAY	
	55 TAPE ECHO	p. 59
	56 LOFI NOISE	
	57 LOFI COMPRESS	
	58 LOFI RADIO	p. 60
	59 TELEPHONE	
Pitch	60 PHONOGRAPH	
	61 PITCH SHIFTER	p. 61
	62 2VOI PCH SHIFTER	
	63 STEP PCH SHIFTER	
Reverb	64 REVERB	p. 62
	65 GATED REVERB	

Type	MFX	Page
Combination	66 OD → CHORUS	p. 55
	67 OD → FLANGER	
	68 OD → DELAY	
	69 DST → CHORUS	p. 56
	70 DST → FLANGER	
	71 DST → DELAY	
	72 ENH → CHORUS	p. 57
	73 ENH → FLANGER	
	74 ENH → DELAY	
	75 CHORUS → DELAY	p. 58
Piano	76 FLANGER → DELAY	
Vocoder	77 CHORUS → FLANGER	
Lo-Fi 2	78 SYMPATHETIC RESO	p. 59
	79 Di VOCODER	
	80 BIT CRUSHER	

MEMO

- Parameters marked with a ☆ can be controlled using the control knob to which "MFX CTRL" is assigned.
- Parameters marked with a sharp "#" can be controlled using a MFX control (p. 18, p. 24) or Matrix control (p. 12). (Two setting items will change simultaneously for "#1" and "#2").

Note

Some effect parameters (such as Rate or Delay Time) can be set in terms of a note value.

	Sixty-fourth-note triplet		Sixty-fourth note		Thirty-second-note triplet		Thirty-second note
	Sixteenth-note triplet		Dotted thirty-second note		Sixteenth note		Eighth-note triplet
	Dotted sixteenth note		Eighth note		Quarter-note triplet		Dotted eighth note
	Quarter note		Half-note triplet		Dotted quarter note		Half note
	Whole-note triplet		Dotted half note		Whole note		Double-note triplet
	Dotted whole note		Double note				

NOTE


- If you specify the delay time as a note value, slowing down the tempo will not change the delay time beyond a certain length. This is because there is an upper limit for the delay time; if the delay time is specified as a note value and you slow down the tempo until this upper limit is reached, the delay time cannot change any further. This upper limit is the maximum value that can be specified when setting the delay time as a numerical value.
- If you specify a parameter for which a note value is assigned as the MFX control Destination, you can't use MFX control to control that parameter.

When Using 3D Effects

The following 3D effects utilize RSS (Roland Sound Space) technology to create a spaciousness that cannot be produced by delay, reverb, chorus, etc.

- **52: 3D DELAY**
- **29: 3D CHORUS**
- **30: 3D FLANGER**
- **31: 3D STEP FLANGER**

When using these effects, we recommend that you place your speakers as follows. Also, make sure that the speakers are at a sufficient distance from the walls on either side.

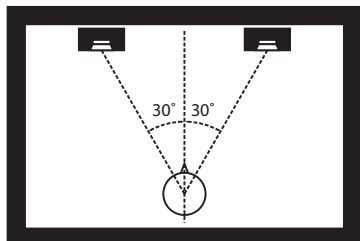

If the left and right speakers are too far apart, or if there is too much reverberation, the full 3D effect may not appear. Each of these effects has an "Output Mode" parameter. If the sound from the OUTPUT jacks is to be heard through speakers, set this parameter to "SPEAKER." If the sound is to be heard through headphones, set it to "PHONES." This will ensure that the optimal 3D effect will be heard. If this parameter is not set correctly, the full 3D effect may not appear.

About the Step Reset function

- **06: STEP FILTER**
- **16: STEP RING MOD**
- **19: STEP PAN**
- **20: SLICER**
- **63: STEP PCH SHIFTER**

The above types contain a sixteen-step sequencer. For these types, you can use a MFX control to reset the sequence to play from the first step. To do this, set the MFX control Destination to "Step Reset."

For example if you are using the modulation lever to control the effect, you would make the following settings.

Parameter	Value
Source	CC01: Modulation
Destination	Step Reset
Sens	+63

With these settings, the sequence will play back from the first step whenever you operate the modulation lever.

Rotary effect

- **21: ROTARY**
- **22: VK ROTARY**

When performing sounds that use these effects, you can change the speed of the rotary effect by moving the modulation lever away from yourself.

01: EQUALIZER

This is a four-band stereo equalizer (low, mid x 2, high).

L in → 4-Band EQ → L out

R in → 4-Band EQ → R out

Parameter	Value	Explanation
Low Freq	200, 400[Hz]	Frequency of the low range
Low Gain #	-15~+15[dB]	Gain of the low range
Mid1 Freq	200~8000[Hz]	Frequency of the middle range 1
Mid1 Gain	-15~+15[dB]	Gain of the middle range 1
Mid1 Q	0.5, 1.0, 2.0, 4.0, 8.0	Width of the middle range 1 Set a higher value for Q to narrow the range to be affected.
Mid2 Freq	200~8000[Hz]	Frequency of the middle range 2
Mid2 Gain	-15~+15[dB]	Gain of the middle range 2
Mid2 Q	0.5, 1.0, 2.0, 4.0, 8.0	Width of the middle range 2 Set a higher value for Q to narrow the range to be affected.
High Freq	2000, 4000, 8000[Hz]	Frequency of the high range
☆ High Gain #	-15~+15[dB]	Gain of the high range
Level #	0~127	Output level

02: SPECTRUM

This is a stereo spectrum. Spectrum is a type of filter which modifies the timbre by boosting or cutting the level at specific frequencies.

L in → Spectrum → L out

R in → Spectrum → R out

Parameter	Value	Explanation
Band1 (250[Hz])	-15~+15[dB]	Gain of each frequency band
Band2 (500[Hz])		
Band3 (1000[Hz])		
Band4 (1250[Hz])		
Band5 (2000[Hz])		
Band6 (3150[Hz])		
Band7 (4000[Hz])		
Band8 (8000[Hz])		
Q	0.5, 1.0, 2.0, 4.0, 8.0	Simultaneously adjusts the width of the adjusted ranges for all the frequency bands.
☆ Level #	0~127	Output level

03: ISOLATOR

This is an equalizer which cuts the volume greatly, allowing you to add a special effect to the sound by cutting the volume in varying ranges.


L in → Isolator → Low Boost → L out

R in → Isolator → Low Boost → R out

Parameter	Value	Explanation
Boost/Cut Low #	-60~+4[dB]	These boost and cut each of the High, Middle, and Low frequency ranges. At -60 dB, the sound becomes inaudible. 0 dB is equivalent to the input level of the sound.
☆ Boost/Cut Mid #		
Boost/Cut High #		
Anti Phase Low Sw	OFF, ON	Turns the Anti-Phase function on and off for the Low frequency ranges. When turned on, the counter-channel of stereo sound is inverted and added to the signal.
Anti Phase Low Level	0~127	Adjusts the level settings for the Low frequency ranges. Adjusting this level for certain frequencies allows you to lend emphasis to specific parts (This is effective only for stereo source.).
Anti Phase Mid Sw	OFF, ON	Settings of the Anti-Phase function for the Middle frequency ranges.
Anti Phase Mid Level	0~127	The parameters are the same as for the Low frequency ranges.
Low Boost Sw	OFF, ON	Turns Low Booster on/off. This emphasizes the bottom to create a heavy bass sound.
Low Boost Level	0~127	Increasing this value gives you a heavier low end. * Depending on the Isolator and filter settings this effect may be hard to distinguish.
Level	0~127	Output level

04: LOW BOOST


Boosts the volume of the lower range, creating powerful lows.



Parameter	Value	Explanation
Boost Frequency #	50–125[Hz]	Center frequency at which the lower range will be boosted
☆ Boost Gain #	0–+12[dB]	Amount by which the lower range will be boosted
Boost Width	WIDE, MID, NARROW	Width of the lower range that will be boosted
Low Gain	-15–+15[dB]	Gain of the low frequency range
High Gain	-15–+15[dB]	Gain of the high frequency range
Level	0–127	Output level

05: SUPER FILTER


This is a filter with an extremely sharp slope. The cutoff frequency can be varied cyclically.



Parameter	Value	Explanation
Filter Type	Filter type	Frequency range that will pass through each filter
	LPF	Frequencies below the cutoff
	BPF	Frequencies in the region of the cutoff
	HPF	Frequencies above the cutoff
	NOTCH	Frequencies other than the region of the cutoff
Filter Slope	Amount of attenuation per octave	
	-12[dB]	Gentle
	-24[dB]	Steep
	-36[dB]	Extremely steep
☆ Filter Cutoff #	0–127	Cutoff frequency of the filter. Increasing this value will raise the cutoff frequency.
Filter Resonance #	0–127	Filter resonance level. Increasing this value will emphasize the region near the cutoff frequency.
Filter Gain	0–+12[dB]	Amount of boost for the filter output
Modulation Sw	OFF, ON	On/off switch for cyclic change
Modulation Wave	How the cutoff frequency will be modulated	
	TRI	Triangle wave
	SQR	Square wave
	SIN	Sine wave
	SAW1	Sawtooth wave (upward)
	SAW2	Sawtooth wave (downward)
		
Rate #	0.05–10.00[Hz], note	Rate of modulation
Depth	0–127	Depth of modulation
Attack #	0–127	Speed at which the cutoff frequency will change. This is effective if Modulation Wave is SQR, SAW1, or SAW2.
Level	0–127	Output level

06: STEP FILTER

This is a filter whose cutoff frequency can be modulated in steps. You can specify the pattern by which the cutoff frequency will change.




Parameter	Value	Explanation
Step 01–16	0–127	Cutoff frequency at each step
☆ Rate #	0.05–10.00[Hz], note	Rate of modulation
Attack #	0–127	Speed at which the cutoff frequency changes between steps
Filter Type	Filter type	Frequency range that will pass through each filter
	LPF	frequencies below the cutoff
	BPF	frequencies in the region of the cutoff
	HPF	frequencies above the cutoff
	NOTCH	frequencies other than the region of the cutoff
Filter Slope	Amount of attenuation per octave	
	-12[dB]	gentle
	-24[dB]	steep
	-36[dB]	extremely steep
Filter Resonance #	0–127	Filter resonance level. Increasing this value will emphasize the region near the cutoff frequency.
Filter Gain	0–+12[dB]	Amount of boost for the filter output
Level	0–127	Output level

MEMO

You can use MFX control to restart the step sequence from the beginning (p. 18, p. 24).

07: ENHANCER

Controls the overtone structure of the high frequencies, adding sparkle and tightness to the sound.

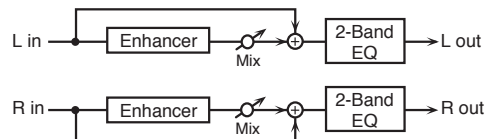

Parameter	Value	Explanation
Sens #	0–127	Sensitivity of the enhancer
☆ Mix #	0–127	Level of the overtones generated by the enhancer
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Level	0–127	Output Level

08: AUTO WAH


Cyclically controls a filter to create cyclic change in timbre.



Parameter	Value	Explanation
Filter Type	Type of filter	
	LPF	The wah effect will be applied over a wide frequency range.
	BPF	The wah effect will be applied over a narrow frequency range.
Manual #	0–127	Adjusts the center frequency at which the effect is applied.
Peak	0–127	Adjusts the amount of the wah effect that will occur in the range of the center frequency. Set a higher value for Q to narrow the range to be affected.
Sens #	0–127	Adjusts the sensitivity with which the filter is controlled.
Polarity	Sets the direction in which the frequency will change when the auto-wah filter is modulated.	
	UP	The filter will change toward a higher frequency.
	DOWN	The filter will change toward a lower frequency.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth #	0–127	Depth of modulation
Phase #	0–180[deg]	Adjusts the degree of phase shift of the left and right sounds when the wah effect is applied.
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Level	0–127	Output level

09: HUMANIZER


Adds a vowel character to the sound, making it similar to a human voice.



Parameter	Value	Explanation
Drive Sw	OFF, ON	Turns Drive on/off.
Drive #	0–127	Degree of distortion Also changes the volume.
Vowel1	a, e, i, o, u	Selects the vowel.
Vowel2	a, e, i, o, u	
Rate #	0.05–10.00[Hz], note	Frequency at which the two vowels switch
Depth #	0–127	Effect depth
Input Sync Sw	OFF, ON	LFO reset on/off Determines whether the LFO for switching the vowels is reset by the input signal (ON) or not (OFF).
Input Sync Threshold	0–127	Volume level at which reset is applied
Manual #	Point at which Vowel 1/2 switch	
	49 or less	Vowel 1 will have a longer duration.
	50	Vowel 1 and 2 will be of equal duration.
	51 or more	Vowel 2 will have a longer duration.
Low Gain	-15→+15[dB]	Gain of the low frequency range
High Gain	-15→+15[dB]	Gain of the high frequency range
Pan #	L64–63R	Stereo location of the output
Level	0–127	Output level

10: SPEAKER SIMULATOR

Simulates the speaker type and microphone settings used to record the speaker sound.



Parameter	Value	Explanation
Speaker Type	(See the following table)	Type of speaker
Mic Setting	1, 2, 3	Adjusts the location of the microphone that is recording the sound of the speaker. This can be adjusted in three steps, with the microphone becoming more distant in the order of 1, 2, and 3.
Mic Level #	0–127	Volume of the microphone
Direct Level #	0–127	Volume of the direct sound
Level #	0–127	Output level


Specifications of each Speaker Type

The speaker column indicates the diameter of each speaker unit (in inches) and the number of units.

Type	Cabinet	Speaker	Microphone
SMALL 1	small open-back enclosure	10	dynamic
SMALL 2	small open-back enclosure	10	dynamic
MIDDLE	open back enclosure	12 x 1	dynamic
JC-120	open back enclosure	12 x 2	dynamic
BUILT-IN 1	open back enclosure	12 x 2	dynamic
BUILT-IN 2	open back enclosure	12 x 2	condenser
BUILT-IN 3	open back enclosure	12 x 2	condenser
BUILT-IN 4	open back enclosure	12 x 2	condenser
BUILT-IN 5	open back enclosure	12 x 2	condenser
BG STACK 1	sealed enclosure	12 x 2	condenser
BG STACK 2	large sealed enclosure	12 x 2	condenser
MS STACK 1	large sealed enclosure	12 x 4	condenser
MS STACK 2	large sealed enclosure	12 x 4	condenser
METAL STACK	large double stack	12 x 4	condenser
2-STACK	large double stack	12 x 4	condenser
3-STACK	large triple stack	12 x 4	condenser

11: PHASER


This is a stereo phaser. A phase-shifted sound is added to the original sound and modulated.

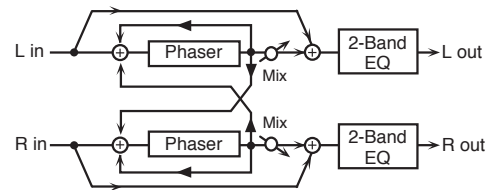

Parameter	Value	Explanation
Mode	4-STAGE, 8-STAGE, 12-STAGE	Number of stages in the phaser
Manual #	0–127	Adjusts the basic frequency from which the sound will be modulated.
Rate	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Polarity	Selects whether the left and right phase of the modulation will be the same or the opposite.	
	INVERSE	The left and right phase will be opposite. When using a mono source, this spreads the sound.
	SYNCHRO	The left and right phase will be the same. Select this when inputting a stereo source.
Resonance #	0–127	Amount of feedback
Cross Feedback	-98→+98[%]	Adjusts the proportion of the phaser sound that is fed back into the effect. Negative (-) settings will invert the phase.
Mix #	0–127	Level of the phase-shifted sound
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Level	0–127	Output level

12: STEP PHASER


This is a stereo phaser. The phaser effect will be varied gradually.

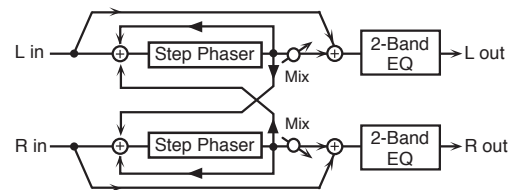

Parameter	Value	Explanation
Mode	4-STAGE, 8-STAGE, 12-STAGE	Number of stages in the phaser
Manual #	0–127	Adjusts the basic frequency from which the sound will be modulated.
Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Polarity	Selects whether the left and right phase of the modulation will be the same or the opposite.	
	INVERSE	The left and right phase will be opposite. When using a mono source, this spreads the sound.
	SYNCHRO	The left and right phase will be the same. Select this when inputting a stereo source.
Resonance #	0–127	Amount of feedback
Cross Feedback	-98→+98[%]	Adjusts the proportion of the phaser sound that is fed back into the effect. Negative (-) settings will invert the phase.
Step Rate #	0.10–20.00[Hz], note	Rate of the step-wise change in the phaser effect
Mix #	0–127	Level of the phase-shifted sound
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Level	0–127	Output level

13: MLT STAGE PHASER


Extremely high settings of the phase difference produce a deep phaser effect.

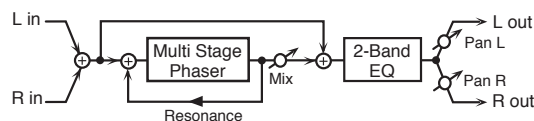

Parameter	Value	Explanation
Mode	4-STAGE, 8-STAGE, 12-STAGE, 16-STAGE, 20-STAGE, 24-STAGE	Number of phaser stages
☆ Manual #	0–127	Adjusts the basic frequency from which the sound will be modulated.
Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Resonance #	0–127	Amount of feedback
Mix #	0–127	Level of the phase-shifted sound
Pan #	L64–63R	Stereo location of the output sound
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Level	0–127	Output level

14: INFINITE PHASER

A phaser that continues raising/lowering the frequency at which the sound is modulated.



Parameter	Value	Explanation
Mode	1–4	Higher values will produce a deeper phaser effect.
☆ Speed #	-100–+100	Speed at which to raise or lower the frequency at which the sound is modulated (+: upward / -: downward)
Resonance #	0–127	Amount of feedback
Mix #	0–127	Volume of the phase-shifted sound
Pan #	L64–63R	Panning of the output sound
Low Gain	-15–+15[dB]	Amount of boost/cut for the low-frequency range
High Gain	-15–+15[dB]	Amount of boost/cut for the high-frequency range
Level	0–127	Output level

15: RING MODULATOR

This is an effect that applies amplitude modulation (AM) to the input signal, producing bell-like sounds. You can also change the modulation frequency in response to changes in the volume of the sound sent into the effect.



Parameter	Value	Explanation
☆ Frequency #	0–127	Adjusts the frequency at which modulation is applied.
Sens #	0–127	Adjusts the amount of frequency modulation applied.
Polarity	Determines whether the frequency modulation moves towards higher frequencies or lower frequencies.	
	UP	Higher frequencies
	DOWN	Lower frequencies
Low Gain	-15–+15[dB]	Gain of the low frequency range
High Gain	-15–+15[dB]	Gain of the high frequency range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

16: STEP RING MOD

This is a ring modulator that uses a 16-step sequence to vary the frequency at which modulation is applied.



Parameter	Value	Explanation
Step 01–16	0–127	Frequency of ring modulation at each step
☆ Rate #	0.05–10.00[Hz], note	Rate at which the 16-step sequence will cycle
Attack #	0–127	Speed at which the modulation frequency changes between steps
Low Gain	-15–+15[dB]	Amount of boost/cut for the low-frequency range
High Gain	-15–+15[dB]	Amount of boost/cut for the high-frequency range
Balance #	D100:0W–D0:100W	Volume balance of the original sound (D) and effect sound (W)
Level	0–127	Output level

MEMO

You can use MFX control to restart the step sequence from the beginning (p. 18, p. 24).

17: TREMOLO

Cyclically modulates the volume to add tremolo effect to the sound.



Parameter	Value	Explanation
Mod Wave	Modulation Wave	
	TRI	Triangle wave
	SQR	Square wave
	SIN	Sine wave
	SAW1, 2	Sawtooth wave
☆ Rate #	0.05–10.00[Hz], note	Frequency of the change
Depth #	0–127	Depth to which the effect is applied
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Level	0–127	Output level

18: AUTO PAN

Cyclically modulates the stereo location of the sound.



Parameter	Value	Explanation
Mod Wave	Modulation Wave	
	TRI	Triangle wave
	SQR	Square wave
	SIN	Sine wave
	SAW1, 2	Sawtooth wave
☆ Rate #	0.05–10.00[Hz], note	Frequency of the change
Depth #	0–127	Depth to which the effect is applied
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Level	0–127	Output level

19: STEP PAN

This uses a 16-step sequence to vary the panning of the sound.

L in → Step Pan → L out

R in → Step Pan → R out

Parameter	Value	Explanation
Step 01–16	L64–63R	Pan at each step
☆ Rate #	0.05–10.00[Hz], note	Rate at which the 16-step sequence will cycle
Attack #	0–127	Speed at which the pan changes between steps
Input Sync Sw	OFF, ON	Specifies whether an input note will cause the sequence to resume from the first step of the sequence (ON) or not (OFF)
Input Sync Threshold	0–127	Volume at which an input note will be detected
Level	0–127	Output level

MEMO

You can use MFX control to restart the step sequence from the beginning (p. 18, p. 24).

20: SLICER

By applying successive cuts to the sound, this effect turns a conventional sound into a sound that appears to be played as a backing phrase. This is especially effective when applied to sustain-type sounds.

L in → Slicer → L out

R in → Slicer → R out


Parameter	Value	Explanation
Step 01–16	0–127	Level at each step
☆ Rate #	0.05–10.00[Hz], note	Rate at which the 16-step sequence will cycle
Attack #	0–127	Speed at which the level changes between steps
Input Sync Sw	OFF, ON	Specifies whether an input note will cause the sequence to resume from the first step of the sequence (ON) or not (OFF)
Input Sync Threshold	0–127	Volume at which an input note will be detected
Mode	LEGATO	Sets the manner in which the volume changes as one step progresses to the next. The change in volume from one step's level to the next remains unaltered. If the level of a following step is the same as the one preceding it, there is no change in volume.
	SLASH	The level is momentarily set to 0 before progressing to the level of the next step. This change in volume occurs even if the level of the following step is the same as the preceding step.
Shuffle #	0–127	Timing of volume changes in levels for even-numbered steps (step 2, step 4, step 6...). The higher the value, the later the beat progresses.
Level	0–127	Output level

MEMO

You can use MFX control to restart the step sequence from the beginning (p. 18, p. 24).

21: ROTARY

The Rotary effect simulates the sound of the rotary speakers often used with the electric organs of the past. Since the movement of the high range and low range rotors can be set independently, the unique type of modulation characteristic of these speakers can be simulated quite closely. This effect is most suitable for electric organ Tones.




Parameter	Value	Explanation
☆ Speed #		Simultaneously switch the rotational speed of the low frequency rotor and high frequency rotor.
	SLOW	Slows down the rotation to the Slow Rate.
	FAST	Speeds up the rotation to the Fast Rate.
Woofer Slow Speed	0.05–10.00[Hz]	Slow speed (SLOW) of the low frequency rotor
Woofer Fast Speed	0.05–10.00[Hz]	Fast speed (FAST) of the low frequency rotor
Woofer Acceleration	0–15	Adjusts the time it takes the low frequency rotor to reach the newly selected speed when switching from fast to slow (or slow to fast) speed.
Woofer Level	0–127	Volume of the low frequency rotor
Tweeter Slow Speed	0.05–10.00[Hz]	Settings of the high frequency rotor The parameters are the same as for the low frequency rotor.
Tweeter Fast Speed	0.05–10.00[Hz]	
Tweeter Acceleration	0–15	
Tweeter Level	0–127	
Separation	0–127	Spatial dispersion of the sound
Level #	0–127	Output level

22: VK ROTARY

This type provides modified response for the rotary speaker, with the low end boosted further.


This effect features the same specifications as the VK-7's built-in rotary speaker.



Parameter	Value	Explanation
Speed #		Rotational speed of the rotating speaker
	SLOW	Slow
	FAST	Fast
☆ Brake #	OFF, ON	Switches the rotation of the rotary speaker. When this is turned on, the rotation will gradually stop. When it is turned off, the rotation will gradually resume.
Woofer Slow Speed	0.05–10.00[Hz]	Low-speed rotation speed of the woofer
Woofer Fast Speed	0.05–10.00[Hz]	High-speed rotation speed of the woofer
Woofer Trans Up	0–127	Adjusts the rate at which the woofer rotation speeds up when the rotation is switched from SLOW to FAST.
Woofer Trans Down	0–127	Adjusts the rate at which the woofer rotation speeds up when the rotation is switched from FAST to SLOW.
Woofer Level	0–127	Volume of the woofer
Tweeter Slow Speed	0.05–10.00[Hz]	Settings of the tweeter The parameters are the same as for the woofer.
Tweeter Fast Speed	0.05–10.00[Hz]	
Tweeter Trans Up	0–127	
Tweeter Trans Down	0–127	
Tweeter Level	0–127	
Spread	0–10	Sets the rotary speaker stereo image.
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Level #	0–127	Output level
Type	STANDARD, STACK, CLEAN	Type of speaker

23: CHORUS


This is a stereo chorus. A filter is provided so that you can adjust the timbre of the chorus sound.

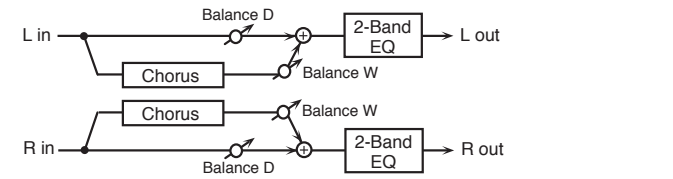

Parameter	Value	Explanation
Filter Type	Type of filter	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff Freq
Cutoff Freq	HPF	Cuts the frequency range below the Cutoff Freq
	200–8000[Hz]	Center frequency when using the filter to cut a specific frequency range
Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Phase	0–180[deg]	Spatial spread of the sound
Low Gain	–15–+15[dB]	Gain of the low range
High Gain	–15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the chorus sound (W)
Level	0–127	Output level

24: FLANGER


This is a stereo flanger (The LFO has the same phase for left and right.). It produces a metallic resonance that rises and falls like a jet airplane taking off or landing. A filter is provided so that you can adjust the timbre of the flanged sound.

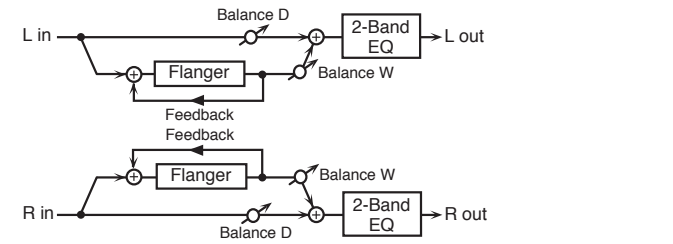

Parameter	Value	Explanation
Filter Type	Type of filter	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff Freq
Cutoff Freq	HPF	Cuts the frequency range below the Cutoff Freq
	200–8000[Hz]	Center frequency when using the filter to cut a specific frequency range
Pre Delay	0.0–100[msec]	Adjusts the delay time from when the direct sound begins until the flanger sound is heard.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Phase	0–180[deg]	Spatial spread of the sound
Feedback #	–98–+98[%]	Adjusts the proportion of the flanger sound that is fed back into the effect. Negative (-) settings will invert the phase.
Low Gain	–15–+15[dB]	Gain of the low range
High Gain	–15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the flanger sound (W)
Level	0–127	Output level

25: STEP FLANGER


This is a flanger in which the flanger pitch changes in steps. The speed at which the pitch changes can also be specified in terms of a note-value of a specified tempo.

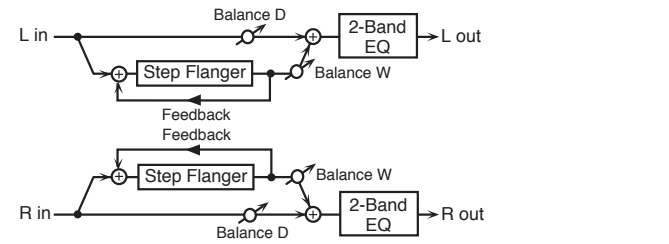

Parameter	Value	Explanation
Filter Type	Type of filter	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff Freq
Cutoff Freq	HPF	Cuts the frequency range below the Cutoff Freq
	200–8000[Hz]	Center frequency when using the filter to cut a specific frequency range
Pre Delay	0.0–100[msec]	Adjusts the delay time from when the direct sound begins until the flanger sound is heard.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Phase	0–180[deg]	Spatial spread of the sound
Feedback #	–98–+98[%]	Adjusts the proportion of the flanger sound that is fed back into the effect. Negative (-) settings will invert the phase.
☆ Step Rate #	0.10–20.00[Hz], note	Rate (period) of pitch change
Low Gain	–15–+15[dB]	Gain of the low range
High Gain	–15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the flanger sound (W)
Level	0–127	Output level

26: HEXA-CHORUS


Uses a six-phase chorus (six layers of chorused sound) to give richness and spatial spread to the sound.

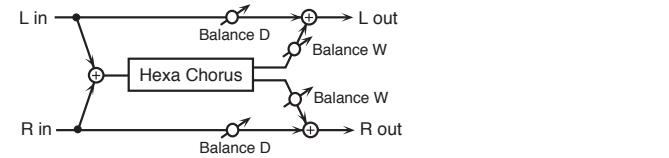

Parameter	Value	Explanation
Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Pre Delay Deviation	0–20	Adjusts the differences in Pre Delay between each chorus sound.
Depth Deviation	–20–+20	Adjusts the difference in modulation depth between each chorus sound.
Pan Deviation	0–20	Adjusts the difference in stereo location between each chorus sound.
	0	All chorus sounds will be in the center.
	20	Each chorus sound will be spaced at 60 degree intervals relative to the center.
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the chorus sound (W)
Level	0–127	Output level

27: TREMOLO CHORUS


This is a chorus effect with added Tremolo (cyclic modulation of volume).

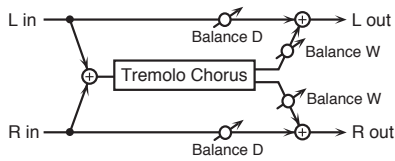

Parameter	Value	Explanation
Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
☆ Chorus Rate #	0.05–10.00[Hz], note	Modulation frequency of the chorus effect
Chorus Depth	0–127	Modulation depth of the chorus effect
Tremolo Rate #	0.05–10.00[Hz], note	Modulation frequency of the tremolo effect
Tremolo Separation	0–127	Spread of the tremolo effect
Tremolo Phase	0–180[deg]	Spread of the tremolo effect
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the tremolo chorus sound (W)
Level	0–127	Output level

28: SPACE-D


This is a multiple chorus that applies two-phase modulation in stereo. It gives no impression of modulation, but produces a transparent chorus effect.

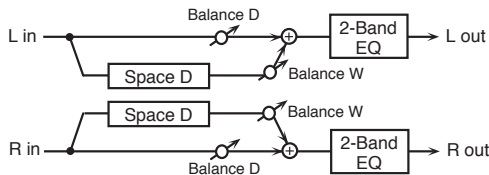

Parameter	Value	Explanation
Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Phase	0–180[deg]	Spatial spread of the sound
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the chorus sound (W)
Level	0–127	Output level

29: 3D CHORUS


This applies a 3D effect to the chorus sound. The chorus sound will be positioned 90 degrees left and 90 degrees right.

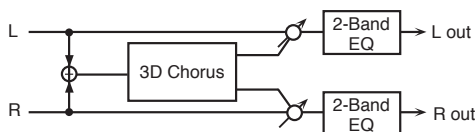

Parameter	Value	Explanation
Filter Type	Type of filter	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff Freq
	HPF	Cuts the frequency range below the Cutoff Freq
Cutoff Freq	200–8000[Hz]	Center frequency when using the filter to cut a specific frequency range
Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Modulation depth of the chorus effect
Phase	0–180[deg]	Spatial spread of the sound
Output Mode	The optimal 3D effect will be achieved.	
	SPEAKER	When using speakers
	PHONES	When using headphones
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the chorus sound (W)
Level	0–127	Output level

30: 3D FLANGER


This applies a 3D effect to the flanger sound. The flanger sound will be positioned 90 degrees left and 90 degrees right.

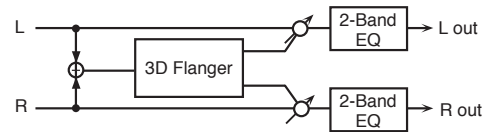

Parameter	Value	Explanation
Filter Type	Type of filter	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff Freq
	HPF	Cuts the frequency range below the Cutoff Freq
Cutoff Freq	200–8000[Hz]	Center frequency when using the filter to cut a specific frequency range
Pre Delay	0.0–100[msec]	Adjusts the delay time from when the direct sound begins until the flanger sound is heard.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Phase	0–180[deg]	Spatial spread of the sound
Feedback #	-98–+98[%]	Adjusts the proportion of the flanger sound that is fed back into the effect. Negative (-) settings will invert the phase.
Output Mode	The optimal 3D effect will be achieved.	
	SPEAKER	When using speakers
	PHONES	When using headphones
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the flanger sound (W)
Level	0–127	Output level

31: 3D STEP FLANGER


This applies a 3D effect to the step flanger sound. The flanger sound will be positioned 90 degrees left and 90 degrees right.

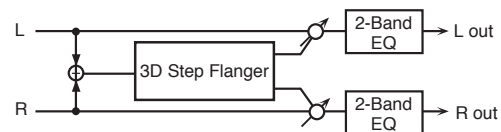

Parameter	Value	Explanation
Filter Type	Type of filter	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff Freq
	HPF	Cuts the frequency range below the Cutoff Freq
Cutoff Freq	200–8000[Hz]	Center frequency when using the filter to cut a specific frequency range
Pre Delay	0.0–100[msec]	Adjusts the delay time from when the direct sound begins until the flanger sound is heard.
Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Phase	0–180[deg]	Spatial spread of the sound
Feedback #	-98–+98[%]	Adjusts the proportion of the flanger sound that is fed back into the effect. Negative (-) settings will invert the phase.
☆ Step Rate #	0.10–20.00[Hz], note	Rate (period) of pitch change
Output Mode	The optimal 3D effect will be achieved.	
	SPEAKER	When using speakers
	PHONES	When using headphones
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the flanger sound (W)
Level	0–127	Output level

32: 2BAND CHORUS


A chorus effect that lets you apply an effect independently to the low-frequency and high-frequency ranges.

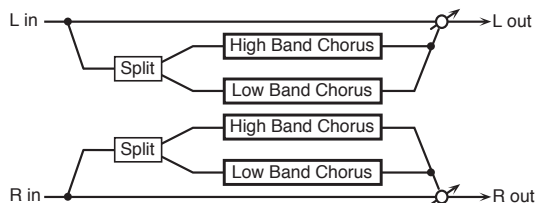

Parameter	Value	Explanation
Split Freq	200–8000[Hz]	Frequency at which the low and high ranges will be divided
Low Pre Delay	0.0–100[msec]	Delay time from when the original sound is heard to when the low-range chorus sound is heard
Low Rate #	0.05–10.00[Hz], note	Rate at which the low-range chorus sound is modulated
Low Depth	0–127	Modulation depth for the low-range chorus sound
Low Phase	0–180[deg]	Spaciousness of the low-range chorus sound
High Pre Delay	0.0–100[msec]	Delay time from when the original sound is heard to when the high-range chorus sound is heard
☆ High Rate #	0.05–10.00[Hz], note	Rate at which the high-range chorus sound is modulated
High Depth	0–127	Modulation depth for the high-range chorus sound
High Phase	0–180[deg]	Spaciousness of the high-range chorus sound
Balance #	D100:0W–D0:100W	Volume balance of the original sound (D) and chorus sound (W)
Level	0–127	Output level

33: 2BAND FLANGER


A flanger that lets you apply an effect independently to the low-frequency and high-frequency ranges.

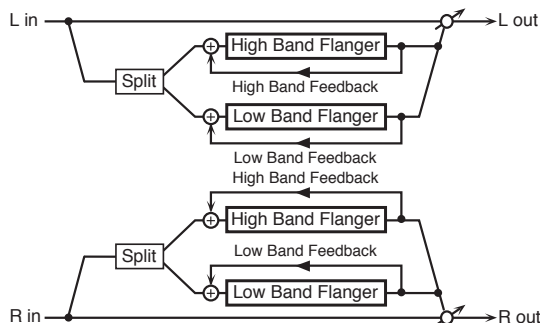

Parameter	Value	Explanation
Split Freq	200–8000[Hz]	Frequency at which the low and high ranges will be divided
Low Pre Delay	0.0–100[msec]	Delay time from when the original sound is heard to when the low-range flanger sound is heard
Low Rate #	0.05–10.00[Hz], note	Rate at which the low-range flanger sound is modulated
Low Depth	0–127	Modulation depth for the low-range flanger sound
Low Phase	0–180[deg]	Spaciousness of the low-range flanger sound
Low Feedback #	–98–+98[%]	Proportion of the low-range flanger sound that is to be returned to the input (negative (-) values invert the phase)
High Pre Delay	0.0–100[msec]	Delay time from when the original sound is heard to when the high-range flanger sound is heard
☆ High Rate #	0.05–10.00[Hz], note	Rate at which the high-range flanger sound is modulated
High Depth	0–127	Modulation depth for the high-range flanger sound
High Phase	0–180[deg]	Spaciousness of the high-range flanger sound
High Feedback #	–98–+98[%]	Proportion of the high-range flanger sound that is to be returned to the input (negative (-) values invert the phase)
Balance #	D100:0W–D0:100W	Volume balance of the original sound (D) and flanger sound (W)
Level	0–127	Output level

34: 2BAND STEP FLNGER


A step flanger that lets you apply an effect independently to the low-frequency and high-frequency ranges.

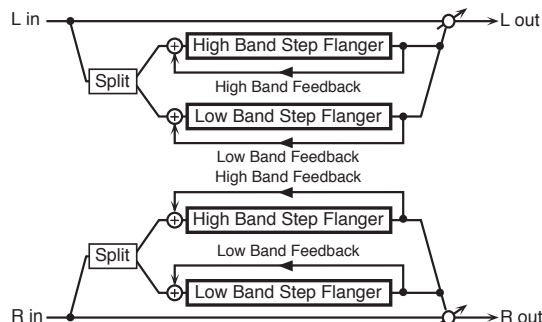

Parameter	Value	Explanation
Split Freq	200–8000[Hz]	Frequency at which the low and high ranges will be divided
Low Pre Delay	0.0–100[msec]	Delay time from when the original sound is heard to when the low-range flanger sound is heard
Low Rate #	0.05–10.00[Hz], note	Rate at which the low-range flanger sound is modulated
Low Depth	0–127	Modulation depth for the low-range flanger sound
Low Phase	0–180[deg]	Spaciousness of the low-range flanger sound
Low Feedback #	–98–+98[%]	Proportion of the low-range flanger sound that is to be returned to the input (negative (-) values invert the phase)
Low Step Rate #	0.10–20.00[Hz], note	Rate at which the steps will cycle for the low-range flanger sound
High Pre Delay	0.0–100[msec]	Delay time from when the original sound is heard to when the high-range flanger sound is heard
High Rate #	0.05–10.00[Hz], note	Rate at which the high-range flanger sound is modulated
High Depth	0–127	Modulation depth for the high-range flanger sound
High Phase	0–180[deg]	Spaciousness of the high-range flanger sound
High Feedback #	–98–+98[%]	Proportion of the high-range flanger sound that is to be returned to the input (negative (-) values invert the phase)
☆ High Step Rate #	0.10–20.00[Hz], note	Rate at which the steps will cycle for the high-range flanger sound
Balance #	D100:0W–D0:100W	Volume balance of the original sound (D) and flanger sound (W)
Level	0–127	Output level

35: OVERDRIVE


Creates a soft distortion similar to that produced by vacuum tube amplifiers.



Parameter	Value	Explanation
☆ Drive #	0–127	Degree of distortion Also changes the volume.
Amp Type	Type of guitar amp	
	SMALL	Small amp
	BUILT-IN	Single-unit type amp
	2-STACK	Large double stack amp
Low Gain	–15–+15[dB]	Gain of the low range
	–15–+15[dB]	Gain of the high range
High Gain	–15–+15[dB]	Gain of the high range
Pan #	L64–63R	Stereo location of the output sound
Level	0–127	Output level


36: DISTORTION

Produces a more intense distortion than Overdrive. The parameters are the same as for “35: OVERDRIVE.”



37: VS OVERDRIVE


This is an overdrive that provides heavy distortion.



Parameter	Value	Explanation
☆ Drive #	0–127	Degree of distortion Also changes the volume.
Tone #	0–127	Sound quality of the Overdrive effect
Amp Sw	OFF, ON	Turns the Amp Simulator on/off.
Amp Type	Type of guitar amp	
	SMALL	Small amp
	BUILT-IN	Single-unit type amp
	2-STACK	Large double stack amp
	3-STACK	Large triple stack amp
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Pan #	L64–63R	Stereo location of the output sound
Level	0–127	Output level


38: VS DISTORTION

This is a distortion effect that provides heavy distortion. The parameters are the same as for “37: VS OVERDRIVE.”



39: GUITAR AMP SIM

This is an effect that simulates the sound of a guitar amplifier.



Parameter	Value	Explanation
Pre Amp Sw	OFF, ON	Turns the amp switch on/off.
Pre Amp Type	Type of guitar amp	
	JC-120, CLEAN TWIN, MATCH DRIVE, BG LEAD, MS1959I, MS1959II, MS1959I+II, SLDN LEAD, METAL 5150, METAL LEAD, OD-1, OD-2 TURBO, DISTORTION, FUZZ	
☆ Pre Amp Volume #	0–127	Volume and amount of distortion of the amp
Pre Amp Master #	0–127	Volume of the entire pre-amp
Pre Amp Gain	LOW, MIDDLE, HIGH	Amount of pre-amp distortion
Pre Amp Bass	0–127	Tone of the bass/mid/treble frequency range
Pre Amp Middle		Middle cannot be set if “MATCH DRIVE” is selected as the Pre Amp Type.
Pre Amp Treble		
Pre Amp Presence	0–127	Tone for the ultra-high frequency range
Pre Amp Bright	OFF, ON	Turning this “On” produces a sharper and brighter sound. This parameter applies to the “JC-120,” “CLEAN TWIN,” and “BG LEAD” Pre Amp Types.
Speaker Sw	OFF, ON	Determines whether the signal passes through the speaker (ON), or not (OFF).
Speaker Type	(See the following table)	Type of speaker
Mic Setting	1–3	Adjusts the location of the microphone that’s capturing the sound of the speaker. This can be adjusted in three steps, from 1 to 3, with the microphone becoming more distant as the value increases.
Mic Level	0–127	Volume of the microphone
Direct Level	0–127	Volume of the direct sound
Pan #	L64–63R	Stereo location of the output sound
Level #	0–127	Output level

Specifications of each Speaker Type

The speaker column indicates the diameter of each speaker unit (in inches) and the number of units.

Type	Cabinet	Speaker	Microphone
SMALL 1	small open-back enclosure	10	dynamic
SMALL 2	small open-back enclosure	10	dynamic
MIDDLE	open back enclosure	12 x 1	dynamic
JC-120	open back enclosure	12 x 2	dynamic
BUILT-IN 1	open back enclosure	12 x 2	dynamic
BUILT-IN 2	open back enclosure	12 x 2	condenser
BUILT-IN 3	open back enclosure	12 x 2	condenser
BUILT-IN 4	open back enclosure	12 x 2	condenser
BUILT-IN 5	open back enclosure	12 x 2	condenser
BG STACK 1	sealed enclosure	12 x 2	condenser
BG STACK 2	large sealed enclosure	12 x 2	condenser
MS STACK 1	large sealed enclosure	12 x 4	condenser
MS STACK 2	large sealed enclosure	12 x 4	condenser
METAL STACK	large double stack	12 x 4	condenser
2-STACK	large double stack	12 x 4	condenser
3-STACK	large triple stack	12 x 4	condenser

40: COMPRESSOR

Flattens out high levels and boosts low levels, smoothing out fluctuations in volume.



Parameter	Value	Explanation
Attack #	0–127	Sets the time from when the input exceeds the Threshold until the volume starts being compressed
☆ Threshold #	0–127	Adjusts the volume at which compression begins
Post Gain	0→+18[dB]	Adjusts the output gain.
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Level #	0–127	Output level

41: LIMITER


Compresses signals that exceed a specified volume level, preventing distortion from occurring.



Parameter	Value	Explanation
Release #	0–127	Adjusts the time after the signal volume falls below the Threshold Level until compression is no longer applied.
☆ Threshold #	0–127	Adjusts the volume at which compression begins
Ratio	1.5:1, 2:1, 4:1, 100:1	Compression ratio
Post Gain	0→+18[dB]	Adjusts the output gain.
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Level #	0–127	Output level

42: GATE


Cuts the reverb's delay according to the volume of the sound sent into the effect. Use this when you want to create an artificial-sounding decrease in the reverb's decay.



Parameter	Value	Explanation
☆ Threshold #	0–127	Volume level at which the gate begins to close
Mode	Type of gate	
	GATE	The gate will close when the volume of the original sound decreases, cutting the original sound.
	DUCK (Duking)	The gate will close when the volume of the original sound increases, cutting the original sound.
Attack	0–127	Adjusts the time it takes for the gate to fully open after being triggered.
Hold	0–127	Adjusts the time it takes for the gate to start closing after the source sound falls beneath the Threshold.
Release	0–127	Adjusts the time it takes the gate to fully close after the hold time.
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

44: LONG DELAY


A delay that provides a long delay time.

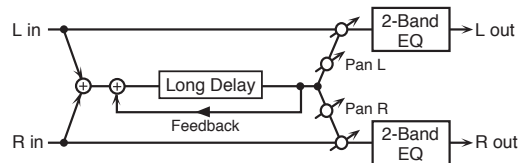

Parameter	Value	Explanation
☆ Delay Time	0–2600[msec], note	Delay time from when the original sound is heard to when the delay sound is heard
Phase	NORMAL, INVERSE	Phase of the delay (NORMAL: non-inverted, INVERT: inverted)
Feedback #	-98–+98[%]	Proportion of the delay sound that is to be returned to the input (negative (-) values invert the phase)
HF Damp	200–8000[Hz], BYPASS	Frequency at which the high-frequency content of the delayed sound will be cut (BYPASS: no cut)
Pan #	L64–63R	Panning of the delay sound
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance of the original sound (D) and delay sound (W)
Level	0–127	Output level

45: SERIAL DELAY

This delay connects two delay units in series. Feedback can be applied independently to each unit, allowing you to produce complex delay sounds.

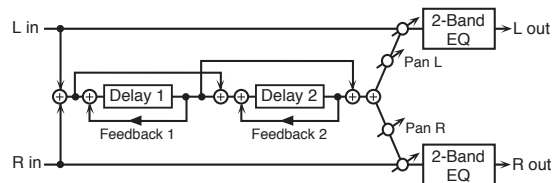


Parameter	Value	Explanation
Delay 1 Time	0–1300[msec], note	Delay time from when sound is input to delay 1 until the delay sound is heard
☆ Delay 1 Feedback #	-98–+98[%]	Proportion of the delay sound that is to be returned to the input of delay 1 (negative (-) values invert the phase)
Delay 1 HF Damp	200–8000[Hz], BYPASS	Frequency at which the high-frequency content of the delayed sound of delay 1 will be cut (BYPASS: no cut)
Delay 2 Time	0–1300[msec], note	Delay time from when sound is input to delay 2 until the delay sound is heard
Delay 2 Feedback #	-98–+98[%]	Proportion of the delay sound that is to be returned to the input of delay 2 (negative (-) values invert the phase)
Delay 2 HF Damp	200–8000[Hz], BYPASS	Frequency at which the high-frequency content of the delayed sound of delay 2 will be cut (BYPASS: no cut)
Pan #	L64–63R	Panning of the delay sound
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance of the original sound (D) and delay sound (W)
Level	0–127	Output level


43: DELAY

This is a stereo delay.

When Feedback Mode is NORMAL:

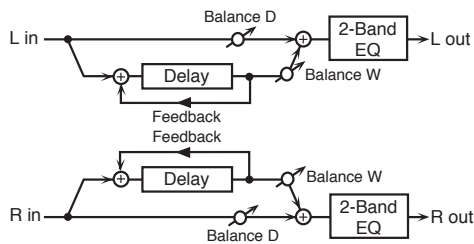

When Feedback Mode is CROSS:

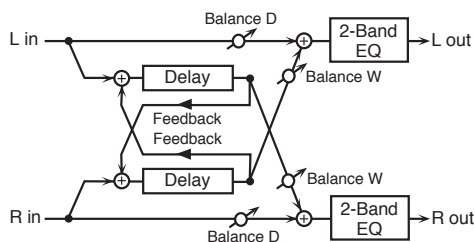


Parameter	Value	Explanation
Delay Left	0–1300[msec], note	Adjusts the time until the delay sound is heard.
Delay Right		
Phase Left	Phase of the left delay sound	
	NORMAL	Non-inverted
Phase Right	Phase of the right delay sound	
	NORMAL	Non-inverted
Feedback Mode	NORMAL, CROSS	Selects the way in which delay sound is fed back into the effect (See the figures.).
☆ Feedback #	-98–+98[%]	Adjusts the amount of the delay sound that's fed back into the effect. Negative (-) settings invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect is filtered out. If you don't want to filter out any high frequencies, set this parameter to BYPASS.
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the delay sound (W)
Level	0–127	Output level


46: MODULATION DELAY

Adds modulation to the delayed sound.

When Feedback Mode is NORMAL:

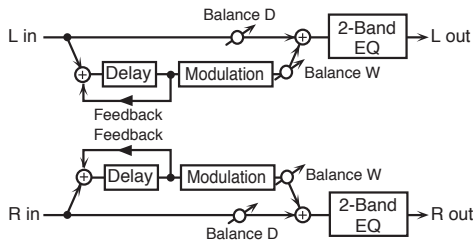


When Feedback Mode is CROSS:

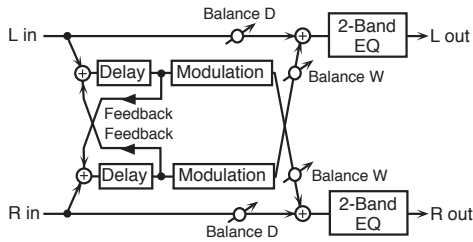

Parameter	Value	Explanation
Delay Left	0–1300[msec], note	Adjusts the time until the delay sound is heard.
Delay Right	0–1300[msec], note	Adjusts the time until the delay sound is heard.
Feedback Mode	NORMAL, CROSS	Selects the way in which delay sound is fed back into the effect (See the figures.)
Feedback #	-98–+98[%]	Adjusts the amount of the delay sound that's fed back into the effect. Negative (-) settings invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect is filtered out. If you don't want to filter out any high frequencies, set this parameter to BYPASS.
☆ Rate #	0.05–10.00[Hz], note	Frequency of modulation
Depth	0–127	Depth of modulation
Phase	0–180[deg]	Spatial spread of the sound
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the delay sound (W)
Level	0–127	Output level

47: 3TAP PAN DELAY



Produces three delay sounds; center, left and right.

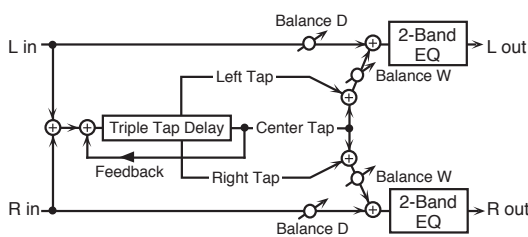

Parameter	Value	Explanation
Delay Left, Right, Center	0–2600[msec], note	Adjusts the time from the original sound until the left, right, and center delayed sounds are heard
☆ Center Feedback #	-98–+98[%]	Adjusts the amount of the delay sound that's fed back into the effect. Negative (-) settings invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect is filtered out. If you do not want to filter out any high frequencies, set this parameter to BYPASS.
Left, Right, Center Level	0–127	Volume of each delay
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the delay sound (W)
Level	0–127	Output level

48: 4TAP PAN DELAY

This effect has four delays.

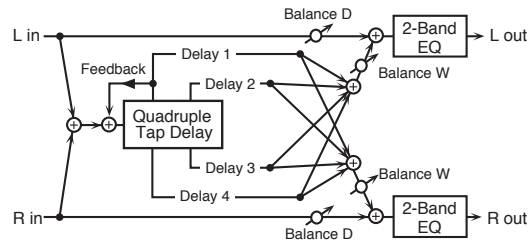


Stereo location of each delay

Parameter	Value	Explanation
Delay 1–4 Time	0–2600[msec], note	Adjusts the time from the original sound until delay sounds 1–4 are heard
☆ Delay 1 Feedback #	-98–+98[%]	Adjusts the amount of the delay sound that's fed back into the effect. Negative (-) settings invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect is filtered out. If you do not want to filter out any high frequencies, set this parameter to BYPASS.
Delay 1–4 Level	0–127	Volume of each delay
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the delay sound (W)
Level	0–127	Output level

49: MULTI TAP DELAY


This effect provides four delays. Each of the Delay Time parameters can be set to a note length based on the selected tempo. You can also set the panning and level of each delay sound.

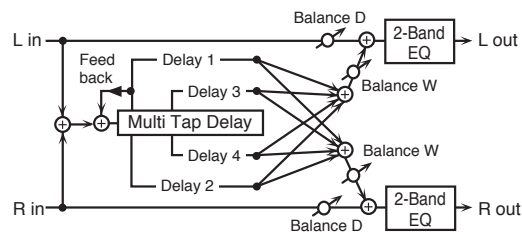

Parameter	Value	Explanation
Delay 1–4 Time	0–2600[msec], note	Adjusts the time until Delays 1–4 are heard.
☆ Delay 1 Feedback #	-98–+98[%]	Adjusts the amount of the delay sound that's fed back into the effect. Negative (-) settings invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect is filtered out. If you do not want to filter out any the high frequencies, set this parameter to BYPASS.
Delay 1–4 Pan	L64–63R	Stereo location of Delays 1–4
Delay 1–4 Level	0–127	Output level of Delays 1–4
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

50: REVERSE DELAY


This is a reverse delay that adds a reversed and delayed sound to the input sound. A tap delay is connected immediately after the reverse delay.

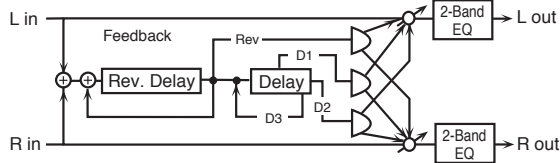

Parameter	Value	Explanation
Threshold	0–127	Volume at which the reverse delay will begin to be applied
Rev Delay Time	0–1300[msec], note	Delay time from when sound is input into the reverse delay until the delay sound is heard
☆ Rev Delay Feedback #	-98→+98[%]	Proportion of the delay sound that is to be returned to the input of the reverse delay (negative (-) values invert the phase)
Rev Delay HF Damp	200–8000[Hz], BYPASS	Frequency at which the high-frequency content of the reverse-delayed sound will be cut (BYPASS: no cut)
Rev Delay Pan	L64–63R	Panning of the reverse delay sound
Rev Delay Level	0–127	Volume of the reverse delay sound
Delay 1–3 Time	0–1300[msec], note	Delay time from when sound is input into the tap delay until the delay sound is heard
Delay 3 Feedback #	-98→+98[%]	Proportion of the delay sound that is to be returned to the input of the tap delay (negative (-) values invert the phase)
Delay HF Damp	200–8000[Hz], BYPASS	Frequency at which the hi-frequency content of the tap delay sound will be cut (BYPASS: no cut)
Delay 1 Pan, Delay 2 Pan	L64–63R	Panning of the tap delay sounds
Delay 1 Level, Delay 2 Level	0–127	Volume of the tap delay sounds
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance of the original sound (D) and delay sound (W)
Level	0–127	Output level

51: SHUFFLE DELAY


Adds a shuffle to the delay sound, giving the sound a bouncy delay effect with a swing feel.

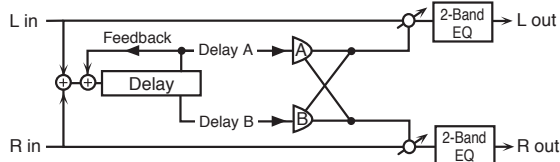

Parameter	Value	Explanation
☆ Delay Time #	0–2600[msec], note	Adjusts the time until the delay sound is heard.
Shuffle Rate #	0–100	Adjusts the ratio (as a percentage) of the time that elapses before Delay B sounds relative to the time that elapses before the Delay A sounds. When set to 100, the delay times are the same.
Acceleration	0–15	Adjusts the speed which the Delay Time changes from the current setting to its specified new setting.
Feedback #	-98→+98[%]	Adjusts the amount of the delay that's feedback into the effect. Negative (-) settings invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect is filtered out. If you don't want to filter out any high frequencies, set this parameter to BYPASS.
Pan A, B	L64–63R	Stereo location of Delay A/B
Level A, B	0–127	Volume of delay A/B
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

52: 3D DELAY


This applies a 3D effect to the delay sound. The delay sound will be positioned 90 degrees left and 90 degrees right.

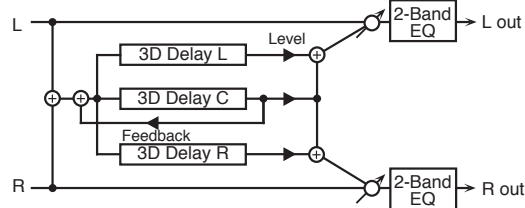

Parameter	Value	Explanation
Delay Left	0–2600[msec], note	Adjusts the delay time from the direct sound until the delay sound is heard.
Delay Right		
Delay Center		
Center Feedback #	-98--+98[%]	Adjusts the proportion of the delay sound that is fed back into the effect. Negative (-) settings will invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect will be cut. If you do not want to cut the high frequencies, set this parameter to BYPASS.
Left Level	0–127	Output level of the delay sound
Right Level		
Center Level		
Output Mode	The optimal 3D effect will be achieved.	
	SPEAKER	When using speakers
	PHONES	When using headphones
Low Gain	-15--+15[dB]	Gain of the low range
High Gain	-15--+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

53: ANALOG DELAY


A stereo delay in which the delay time can be varied smoothly.

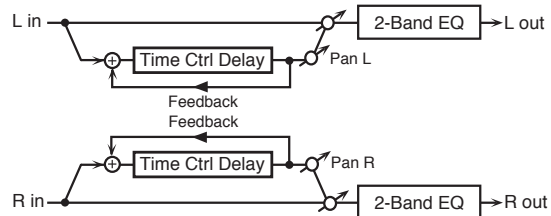

Parameter	Value	Explanation
☆ Delay Time #	0–1300[msec], note	Adjusts the time until the delay is heard.
Acceleration	0–15	Adjusts the speed which the Delay Time changes from the current setting to a specified new setting. The rate of change for the Delay Time directly affects the rate of pitch change.
Feedback #	-98→+98[%]	Adjusts the amount of the delay that's fed back into the effect. Negative (-) settings invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect is filtered out. If you do not want to filter out any high frequencies, set this parameter to BYPASS.
Low Gain	-15→+15[dB]	Gain of the low range
High Gain	-15→+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

54: ANALOG LONG DELAY


A delay in which the delay time can be varied smoothly, and allowing an extended delay to be produced.

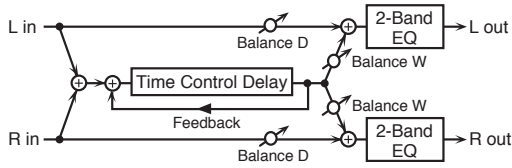

Parameter	Value	Explanation
☆ Delay Time #	0–2600[msec], note	Adjusts the time until the delay is heard.
Acceleration	0–15	Adjusts the speed which the Delay Time changes from the current setting to a specified new setting. The rate of change for the Delay Time directly affects the rate of pitch change.
Feedback #	-98–+98[%]	Adjusts the amount of the delay that's fed back into the effect. Negative (-) settings invert the phase.
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect is filtered out. If you do not want to filter out any high frequencies, set this parameter to BYPASS.
Pan #	L64–63R	Stereo location of the delay
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the delay sound (W)
Level	0–127	Output level

55: TAPE ECHO


A virtual tape echo that produces a realistic tape delay sound. This simulates the tape echo section of a Roland RE-201 Space Echo.

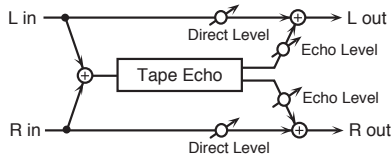

Parameter	Value	Explanation
Mode	S, M, L, S+M, S+L, M+L, S+M+L	Combination of playback heads to use. Select from three different heads with different delay times. S: short, M: middle, L: long
☆ Repeat Rate #	0–127	Tape speed. Increasing this value will shorten the spacing of the delayed sounds.
Intensity #	0–127	Amount of delay repeats
Bass	-15–+15[dB]	Boost/cut for the lower range of the echo sound
Treble	-15–+15[dB]	Boost/cut for the upper range of the echo sound
Head S Pan	L64–63R	Independent panning for the short, middle, and long playback heads
Head M Pan		
Head L Pan		
Tape Distortion	0–5	Amount of tape-dependent distortion to be added. This simulates the slight tonal changes that can be detected by signal-analysis equipment. Increasing this value will increase the distortion.
Wow/Flutter Rate	0–127	Speed of wow/flutter (complex variation in pitch caused by tape wear and rotational irregularity)
Wow/Flutter Depth	0–127	Depth of wow/flutter
Echo Level #	0–127	Volume of the echo sound
Direct Level #	0–127	Volume of the original sound
Level	0–127	Output level

56: LOFI NOISE


In addition to a lo-fi effect, this adds various types of noise such as white noise and disc noise.

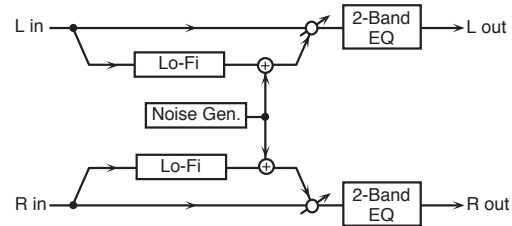

Parameter	Value	Explanation
Lo-Fi Type	1–9	Degrades the sound quality. The sound quality grows poorer as this value is increased.
Post Filter Type	Type of filter that follows the Lo-Fi effect	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff.
Post Filter Cutoff	HPF	Cuts the frequency range below the Cutoff.
	200–8000[Hz]	Center frequency of the filter
W/P Noise Type	WHITE, PINK	Switch between white noise and pink noise.
W/P Noise LPF	200–8000[Hz], BYPASS	Center frequency of the low pass filter applied to the white/pink noise (BYPASS: no cut)
W/P Noise Level #	0–127	Volume of the white/pink noise
Disc Noise Type	LP, EP, SP, RND	Type of record noise. The frequency at which the noise is heard depends on the selected type.
Disc Noise LPF	200–8000[Hz], BYPASS	Adjusts the cutoff frequency of the low pass filter applied to the record noise. If you don't want to filter out any high frequencies, set this parameter to BYPASS.
Disc Noise Level #	0–127	Volume of the record noise
Hum Noise Type	50, 60[Hz]	Frequency of the hum noise
Hum Noise LPF	200–8000[Hz], BYPASS	Center frequency of the low pass filter applied to the hum noise (BYPASS: no cut)
Hum Noise Level #	0–127	Volume of the hum noise
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
☆ Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

57: LOFI COMPRESS


This is an effect that intentionally degrades the sound quality for creative purposes.

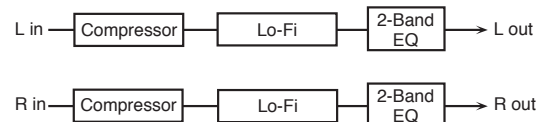

Parameter	Value	Explanation
Pre Filter Type	Selects the type of filter applied to the sound before it passes through the Lo-Fi effect.	
	1	Compressor off
Lo-Fi Type	2–6	Compressor on
	1–9	Degrades the sound quality. The sound quality grows poorer as this value is increased.
Post Filter Type	Type of filter	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff
Post Filter Cutoff	HPF	Cuts the frequency range below the Cutoff
	200–8000[Hz]	Basic frequency of the Post Filter
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
☆ Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level #	0–127	Output level

58: LOFI RADIO


In addition to a Lo-Fi effect, this effect also generates radio noise.

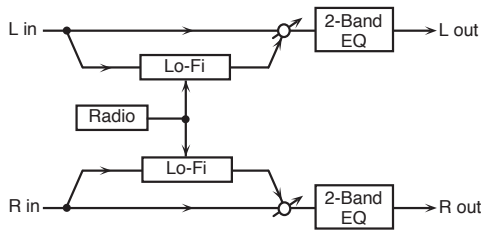

Parameter	Value	Explanation
LoFi Type	1–9	Degrades the sound quality. The sound quality grows poorer as this value is increased.
Post Filter Type	Type of filter	
	OFF	No filter is used
	LPF	Cuts the frequency range above the Cutoff.
Post Filter Cutoff	HPF	Cuts the frequency range below the Cutoff.
	200–8000[Hz]	Basic frequency of the Post Filter
Radio Detune #	0–127	Simulates the tuning noise of a radio. As this value is raised, the tuning drifts further.
Radio Noise Level #	0–127	Volume of the radio noise
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

59: TELEPHONE


This effect produces a muffled sound, like that heard through a telephone.



Parameter	Value	Explanation
Voice Quality #	0–15	Audio quality of the telephone voice
Treble	-15–+15[dB]	Bandwidth of the telephone voice
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

60: PHONOGRAPH


Simulates a sound recorded on an analog record and played back on a record player. This effect also simulates the various types of noise that are typical of a record, and even the rotational irregularities of an old turntable.

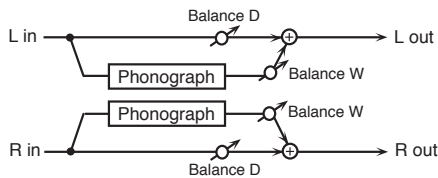

Parameter	Value	Explanation
Signal Distortion	0–127	Depth of distortion
Frequency Range	0–127	Frequency response of the playback system. Decreasing this value will produce the impression of an old system with a poor frequency response.
Disc Type	LP, EP, SP	Rotational speed of the turntable. This will affect the frequency of the scratch noise.
Scratch Noise Level	0–127	Amount of noise due to scratches on the record
Dust Noise Level	0–127	Volume of noise due to dust on the record
Hiss Noise Level	0–127	Volume of continuous "hiss"
Total Noise Level #	0–127	Volume of overall noise
Wow	0–127	Depth of long-cycle rotational irregularity
Flutter	0–127	Depth of short-cycle rotational irregularity
Random	0–127	Depth of indefinite-cycle rotational irregularity
Total Wow/Flutter #	0–127	Depth of overall rotational irregularity
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the effect sound (W)
Level	0–127	Output level

61: PITCH SHIFTER


A stereo pitch shifter.

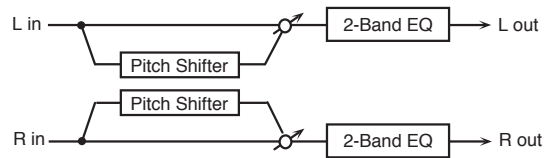

Parameter	Value	Explanation
Coarse #1	-24–+12[semi]	Adjusts the pitch of the pitch shifted sound in semitone steps.
Fine #1	-100–+100[cent]	Adjusts the pitch of the pitch shifted sound in 2-cent steps.
Delay Time	0–1300[msec], note	Adjusts the delay time from the direct sound until the pitch shifted sound is heard.
Feedback #	-98–+98[%]	Adjusts the proportion of the pitch shifted sound that is fed back into the effect. Negative (-) settings will invert the phase.
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the pitch shifted sound (W)
Level	0–127	Output level

62: 2VOI PCH SHIFTER


Shifts the pitch of the original sound. This 2-voice pitch shifter has two pitch shifters, and can add two pitch shifted sounds to the original sound.

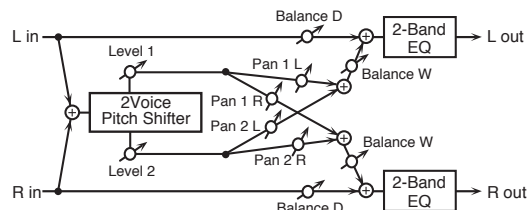

Parameter	Value	Explanation
Pitch1 Coarse #1	-24–+12[semi]	Adjusts the pitch of Pitch Shift 1 in semitone steps.
Pitch1 Fine #1	-100–+100[cent]	Adjusts the pitch of Pitch Shift Pitch 1 in 2-cent steps.
Pitch1 Delay	0–1300[msec], note	Adjusts the delay time from the direct sound until the Pitch Shift 1 sound is heard.
Pitch1 Feedback #	-98–+98[%]	Adjusts the proportion of the pitch shifted sound that is fed back into the effect. Negative (-) settings will invert the phase.
Pitch1 Pan #	L64–63R	Stereo location of the Pitch Shift 1 sound
Pitch1 Level	0–127	Volume of the Pitch Shift1 sound
Pitch2 Coarse #2	-24–+12[semi]	Settings of the Pitch Shift 2 sound. The parameters are the same as for the Pitch Shift 1 sound.
Pitch2 Fine #2	-100–+100[cent]	
Pitch2 Delay	0–1300[msec], note	
Pitch2 Feedback #	-98–+98[%]	
Pitch2 Pan #	L64–63R	
Pitch2 Level	0–127	
Low Gain	-15–+15[dB]	Gain of the low range
High Gain	-15–+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the pitch shifted sound (W)
Level	0–127	Output level

63: STEP PCH SHIFTER

A pitch shifter in which the amount of pitch shift is varied by a 16-step sequence.

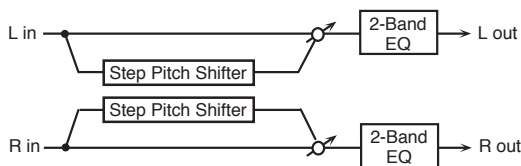


Parameter	Value	Explanation
Step 01–16	-24+12[semi]	Amount of pitch shift at each step (semitone units)
Rate #	0.05–10.0[Hz], note	Rate at which the 16-step sequence will cycle
Attack #	0–127	Speed at which the amount of pitch shift changes between steps
☆ Gate Time #	0–127	Duration of the pitch shifted sound at each step
Fine	-100+100[cent]	Pitch shift adjustment for all steps (2-cent units)
Delay Time	0–1300[msec], note	Delay time from the original sound until the pitch-shifted sound is heard
Feedback #	-98+98[%]	Proportion of the pitch-shifted sound that is to be returned to the input (negative (-) values invert the phase)
Low Gain	-15+15[dB]	Gain of the low range
High Gain	-15+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance of the original sound (D) and pitch-shifted sound (W)
Level	0–127	Output level

MEMO

You can use MFX control to restart the step sequence from the beginning (p. 18, p. 24).

64: REVERB


Adds reverberation to the sound, simulating an acoustic space.

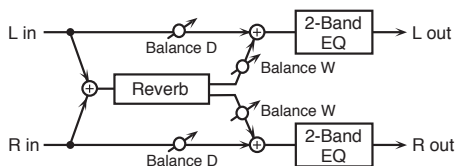

Parameter	Value	Explanation
Type	Type of reverb	
	ROOM1	Dense reverb with short decay
	ROOM2	Sparse reverb with short decay
	STAGE1	Reverb with greater late reverberation
	STAGE2	Reverb with strong early reflections
	HALL1	Reverb with clear reverberance
Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the reverb sound is heard.
	0–127	Time length of reverberation
☆ Time #		
HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which the reverberant sound will be cut. As the frequency is set lower, more of the high frequencies will be cut, resulting in a softer and more muted reverberance. If you do not want to cut the high frequencies, set this parameter to BYPASS.
Low Gain	-15+15[dB]	Gain of the low range
High Gain	-15+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the reverb sound (W)
Level	0–127	Output level


65: GATED REVERB

This is a special type of reverb in which the reverberant sound is cut off before its natural length.

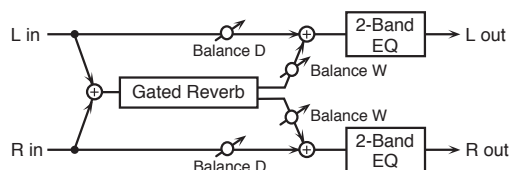


Parameter	Value	Explanation
Type	Type of reverb	
	NORMAL	Conventional gated reverb
	REVERSE	Backwards reverb
	SWEEP1	The reverberant sound moves from right to left
Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the reverb sound is heard.
	0–127	Time length of reverberation
☆ Gate Time #	5–500[msec]	Adjusts the time from when the reverb is heard until it disappears.
Low Gain	-15+15[dB]	Gain of the low range
High Gain	-15+15[dB]	Gain of the high range
Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the reverb sound (W)
Level #	0–127	Output level

66: OD → CHORUS

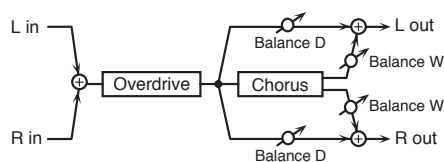


Parameter	Value	Explanation
Overdrive Drive #	0–127	Degree of distortion. Also changes the volume.
Overdrive Pan #	L64–63R	Stereo location of the overdrive sound
Chorus Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
☆ Chorus Rate #	0.05–10.00[Hz], note	Frequency of modulation
Chorus Depth	0–127	Depth of modulation
Chorus Balance #	D100:0W–D0:100W	Adjusts the volume balance between the sound that is sent through the chorus (W) and the sound that is not sent through the chorus (D).
Level	0–127	Output level

67: OD → FLANGER

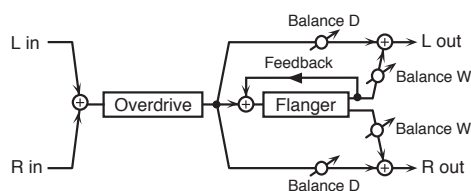

Parameter	Value	Explanation
Overdrive Drive #	0–127	Degree of distortion. Also changes the volume.
Overdrive Pan #	L64–63R	Stereo location of the overdrive sound
Flanger Pre Delay	0.0–100[msec]	Adjusts the delay time from when the direct sound begins until the flanger sound is heard.
☆ Flanger Rate #	0.05–10.00[Hz], note	Frequency of modulation
Flanger Depth	0–127	Depth of modulation
Flanger Feedback #	-98+98[%]	Adjusts the proportion of the flanger sound that is fed back into the effect. Negative (-) settings will invert the phase.
Flanger Balance #	D100:0W–D0:100W	Adjusts the volume balance between the sound that is sent through the flanger (W) and the sound that is not sent through the flanger (D).
Level	0–127	Output level

68: OD → DELAY

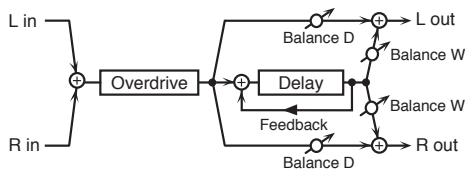


Parameter	Value	Explanation
Overdrive Drive #	0–127	Degree of distortion Also changes the volume.
Overdrive Pan #	L64–63R	Stereo location of the overdrive sound
Delay Time	0–2600[msec], note	Adjusts the delay time from the direct sound until the delay sound is heard.
☆ Delay Feedback #	–98–+98[%]	Adjusts the proportion of the delay sound that is fed back into the effect. Negative (-) settings will invert the phase.
Delay HF Damp	200–8000[Hz], note	Adjusts the frequency above which sound fed back to the effect will be cut. If you do not want to cut the high frequencies, set this parameter to BYPASS.
Delay Balance #	D100:0W–D0:100W	Adjusts the volume balance between the sound that is sent through the delay (W) and the sound that is not sent through the delay (D).
Level	0–127	Output level

69: DST → CHORUS

The parameters are essentially the same as in “66: OD → CHORUS” with the exception of the following two.


Overdrive Drive → Distortion Drive,
Overdrive Pan → Distortion Pan

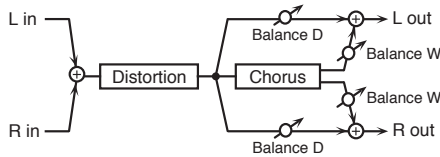

70: DST → FLANGER

The parameters are essentially the same as in “67: OD → FLANGER,” with the exception of the following two.


Overdrive Drive → Distortion Drive,
Overdrive Pan → Distortion Pan

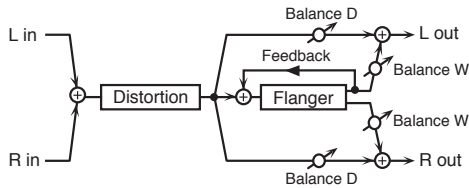


71: DST → DELAY

The parameters are essentially the same as in “68: OD → DELAY,” with the exception of the following two.

Overdrive Drive → Distortion Drive,
Overdrive Pan → Distortion Pan

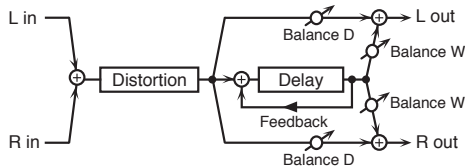


72: ENH → CHORUS

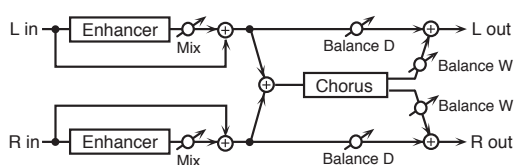


Parameter	Value	Explanation
Enhancer Sens #	0–127	Sensitivity of the enhancer
Enhancer Mix #	0–127	Level of the overtones generated by the enhancer
Chorus Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
☆ Chorus Rate #	0.05–10.00[Hz], note	Frequency of modulation
Chorus Depth	0–127	Depth of modulation
Chorus Balance #	D100:0W–D0:100W	Adjusts the volume balance between the sound that is sent through the chorus (W) and the sound that is not sent through the chorus (D).
Level	0–127	Output level

73: ENH → FLANGER

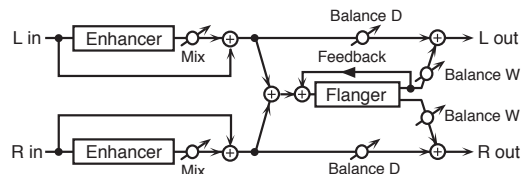


Parameter	Value	Explanation
Enhancer Sens #	0–127	Sensitivity of the enhancer
Enhancer Mix #	0–127	Level of the overtones generated by the enhancer
Flanger Pre Delay	0.0–100[msec]	Adjusts the delay time from when the direct sound begins until the flanger sound is heard.
☆ Flanger Rate #	0.05–10.00[Hz], note	Frequency of modulation
Flanger Depth	0–127	Depth of modulation
Flanger Feedback #	–98–+98[%]	Adjusts the proportion of the flanger sound that is fed back into the effect. Negative (-) settings will invert the phase.
Flanger Balance #	D100:0W–D0:100W	Adjusts the volume balance between the sound that is sent through the flanger (W) and the sound that is not sent through the flanger (D).
Level	0–127	Output level

74: ENH → DELAY

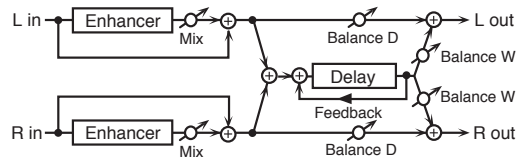

Parameter	Value	Explanation
Enhancer Sens #	0–127	Sensitivity of the enhancer
Enhancer Mix #	0–127	Level of the overtones generated by the enhancer
Delay Time	0–2600[msec], note	Adjusts the delay time from the direct sound until the delay sound is heard.
☆ Delay Feedback #	–98–+98[%]	Adjusts the proportion of the delay sound that is fed back into the effect. Negative (-) settings will invert the phase.
Delay HF Damp	200–8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect will be cut. If you do not want to cut the high frequencies, set this parameter to BYPASS.
Delay Balance #	D100:0W–D0:100W	Adjusts the volume balance between the sound that is sent through the delay (W) and the sound that is not sent through the delay (D).
Level	0–127	Output level


75: CHORUS → DELAY

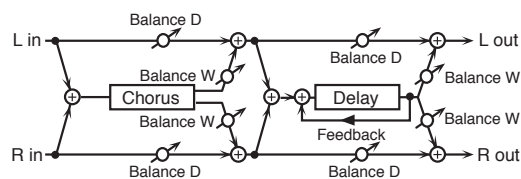

Parameter	Value	Explanation
Chorus Pre Delay	0.0–100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
☆ Chorus Rate #	0.05–10.00[Hz], note	Frequency of modulation
Chorus Depth	0–127	Depth of modulation
Chorus Balance #	D100:0W–D0:100W	Volume balance between the direct sound (D) and the chorus sound (W)
Delay Time	0–2600[msec], note	Adjusts the delay time from the direct sound until the delay sound is heard.


Parameter	Value	Explanation
Delay Feedback #	-98~+98[%]	Adjusts the proportion of the delay sound that is fed back into the effect. Negative (-) settings will invert the phase.
Delay HF Damp	200~8000[Hz], BYPASS	Adjusts the frequency above which sound fed back to the effect will be cut. If you do not want to cut the high frequencies, set this parameter to BYPASS.
Delay Balance #	D100:0W~D0:100W	Adjusts the volume balance between the sound that is sent through the delay (W) and the sound that is not sent through the delay (D).
Level	0~127	Output level

76: FLANGER → DELAY

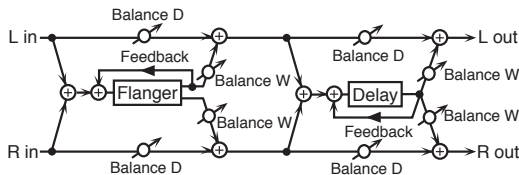

Parameter	Value	Explanation
Flanger Pre Delay	0.0~100[msec]	Adjusts the delay time from when the direct sound begins until the flanger sound is heard.
☆ Flanger Rate #	0.05~10.00[Hz], note	Frequency of modulation
Flanger Depth	0~127	Depth of modulation
Flanger Feedback #	-98~+98[%]	Adjusts the proportion of the flanger sound that is fed back into the effect. Negative (-) settings will invert the phase.
Flanger Balance #	D100:0W~D0:100W	Volume balance between the direct sound (D) and the flanger sound (W)
Delay Time	0~2600[msec], note	Adjusts the delay time from the direct sound until the delay sound is heard.
Delay Feedback #	-98~+98[%]	Adjusts the proportion of the delay sound that is fed back into the effect. Negative (-) settings will invert the phase.
Delay HF Damp	200~8000[Hz], note	Adjusts the frequency above which sound fed back to the effect will be cut. If you do not want to cut the high frequencies, set this parameter to BYPASS.
Delay Balance #	D100:0W~D0:100W	Adjusts the volume balance between the sound that is sent through the delay (W) and the sound that is not sent through the delay (D).
Level	0~127	Output level


77: CHORUS → FLANGER

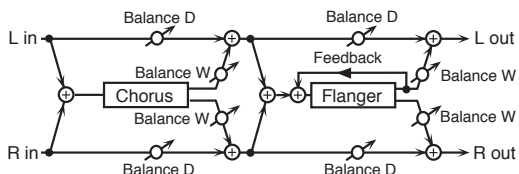

Parameter	Value	Explanation
Chorus Pre Delay	0.0~100[msec]	Adjusts the delay time from the direct sound until the chorus sound is heard.
Chorus Rate #	0.05~10.00[Hz], note	Modulation frequency of the chorus effect
Chorus Depth	0~127	Modulation depth of the chorus effect
☆ Chorus Balance #	D100:0W~D0:100W	Volume balance between the direct sound (D) and the chorus sound (W)
Flanger Pre Delay	0.0~100[msec]	Adjusts the delay time from when the direct sound begins until the flanger sound is heard.
Flanger Rate #	0.05~10.00[Hz], note	Modulation frequency of the flanger effect
Flanger Depth	0~127	Modulation depth of the flanger effect
Flanger Feedback #	-98~+98[%]	Adjusts the proportion of the flanger sound that is fed back into the effect. Negative (-) settings will invert the phase.
Flanger Balance #	D100:0W~D0:100W	Adjusts the volume balance between the sound that is sent through the flanger (W) and the sound that is not sent through the flanger (D).
Level	0~127	Output level


78: SYMPATHETIC RESO

On an acoustic piano, holding down the damper pedal allows other strings to resonate in sympathy with the notes you play, creating rich and spacious resonances. This effect simulates these sympathetic resonances.

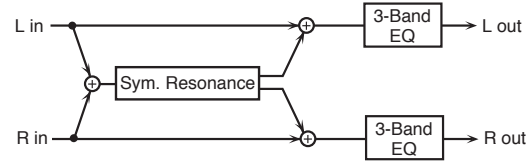

Parameter	Value	Explanation
☆ Depth #	0~127	Depth of the effect
Damper #	0~127	Depth to which the damper pedal is pressed (controls the resonant sound)
Pre LPF	16~15000[Hz], BYPASS	Frequency of the filter that cuts the high-frequency content of the input sound (BYPASS: no cut)
Pre HPF	BYPASS, 16~15000[Hz]	Frequency of the filter that cuts the low-frequency content of the input sound (BYPASS: no cut)
Peaking Freq	200~8000[Hz]	Frequency of the filter that boosts/cuts a specific frequency region of the input sound
Peaking Gain	-15~+15[dB]	Amount of boost/cut produced by the filter at the specified frequency region of the input sound
Peaking Q	0.5, 1.0, 2.0, 4.0, 8.0	Width of the frequency region boosted/cut by the Peaking Gain parameter (larger values make the region narrower)
HF Damp	16~15000[Hz], BYPASS	Frequency at which the high-frequency content of the resonant sound will be cut (BYPASS: no cut)
LF Damp	BYPASS, 16~15000[Hz]	Frequency at which the low-frequency content of the resonant sound will be cut (BYPASS: no cut)
Lid	1~6	This simulates the actual changes in sound that occur when the lid of a grand piano is set at different heights.
EQ Low Freq	200, 400[Hz]	Frequency of the low-range EQ
EQ Low Gain	-15~+15[dB]	Amount of low-range boost/cut
EQ Mid Freq	200~8000[Hz]	Frequency of the midrange EQ
EQ Mid Gain	-15~+15[dB]	Amount of midrange boost/cut
EQ Mid Q	0.5, 1.0, 2.0, 4.0, 8.0	Width of midrange (larger values make the region narrower)
EQ High Freq	2000, 4000, 8000[Hz]	Frequency of the high-range EQ
EQ High Gain	-15~+15[dB]	Amount of high-range boost/cut
Level	0~127	Output level


79: Di VOCODER

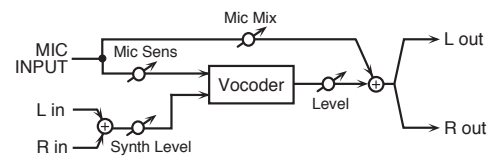

Parameter	Value	Explanation
Mic Sens #	0~127	Input sensitivity of the microphone
Synth Level #	0~127	Input level of the instrument
☆ Mic Mix #	0~127	Amount of microphone audio added to the output of the vocoder
Level	0~127	Volume level after passing through the vocoder

80: BIT CRUSHER

This creates a lo-fi sound.



Parameter	Value	Explanation
☆ Sample Rate #	0~127	Adjusts the sample rate.
Bit Down #	0~20	Adjusts the bit depth.
Filter #	0~127	Adjusts the filter depth.
Level	0~127	Output level

Chorus Parameters

Parameter	Explanation
01: CHORUS	
Filter Type	Type of filter
	OFF No filter is used
	LPF Cuts the frequency range above the Cutoff Freq
	HPF Cuts the frequency range below the Cutoff Freq
Cutoff Freq	Basic frequency of the filter 200–8000[Hz]
Pre Delay	Adjusts the delay time from the direct sound until the chorus sound is heard. 0.0–100.0[msec]
Rate	Frequency of modulation 0.05–10.00Hz, note
Depth	Depth of modulation 0–127
Phase	Spatial spread of the sound 0–180[deg]
Feedback	Adjusts the amount of the chorus sound that is fed back into the effect. 0–127
02: DELAY	
Delay Left, Right, Center	Adjusts the delay time from the direct sound until the delay sound is heard. 0–1000ms, note
Center Feedback	Adjusts the proportion of the delay sound that is fed back into the effect. Negative (-) settings will invert the phase. -98→+98[%]
HF Damp	Adjusts the frequency above which sound fed back to the effect will be cut. If you do not want to cut the high frequencies, set this parameter to BYPASS. 200–8000[Hz], BYPASS
Left, Right, Center Level	Volume of each delay sound 0–127
03: GM2 CHORUS	
Pre-LPF	Cuts the high frequency range of the sound coming into the chorus. 0–7
Level	Volume of the chorus sound 0–127
Feedback	Adjusts the amount of the chorus sound that is fed back into the effect. 0–127
Rate	Frequency of modulation 0–127
Depth	Depth of modulation 0–127
Send Level To Rev	Adjusts the amount of chorus sound that will be sent to the reverb. 0–127

Reverb Parameters

Parameter	Explanation
01: REVERB	
Type	Type of reverb/delay
	ROOM1 Short reverb with high density
	ROOM2 Short reverb with low density
	STAGE1 Reverb with greater late reverberation
	STAGE2 Reverb with strong early reflections
	HALL1 Very clear-sounding reverb
	HALL2 Rich reverb
	DELAY Conventional delay effect
Time	PAN-DELAY Delay effect with echoes that pan left and right
	Time length of reverberation (Type: ROOM1–HALL2) Delay time (Type: DELAY, PAN-DELAY) 0–127
HF Damp	Adjusts the frequency above which the high-frequency content of the reverb sound will be cut, or “damped.” If you do not want to cut the high frequencies, set this parameter to BYPASS. 200–8000[Hz], BYPASS
Delay Feedback	Adjusts the amount of delay feedback when the Type setting is DELAY or PAN-DELAY. Amount of delay sound returned to the input (this setting is valid only if Type is DELAY or PAN-DELAY) 0–127
02: SRV ROOM / 03: SRV HALL / 04: SRV PLATE	
Pre Delay	Adjusts the delay time from the direct sound until the reverb sound is heard. 0.0–100.0[msec]
Time	Time length of reverberation 0–127
Size	Size of the simulated room or hall 1–8
High Cut	Adjusts the frequency above which the high-frequency content of the reverb will be reduced. If you do not want to reduce the high frequencies, set this parameter to BYPASS. 160–12500[Hz], BYPASS
Density	Density of reverb 0–127
Diffusion	Adjusts the change in the density of the reverb over time. The higher the value, the more the density increases with time. (The effect of this setting is most pronounced with long reverb times.) 0–127
LF Damp Freq	Adjusts the frequency below which the low-frequency content of the reverb sound will be reduced, or “damped.” 50–4000[Hz]
LF Damp Gain	Adjusts the amount of damping applied to the frequency range selected with LF Damp. With a setting of “0,” there will be no reduction of the reverb’s low-frequency content. -36–0[dB]
HF Damp Freq	Adjusts the frequency above which the high-frequency content of the reverb sound will be reduced, or “damped.” 4000–12500[Hz]
HF Damp Gain	Adjusts the amount of damping applied to the frequency range selected with HF Damp. With a setting of “0,” there will be no reduction of the reverb’s high-frequency content. -36–0[dB]
05: GM2 REVERB	
Character	Type of reverb
	0–5 Reverb 6, 7 Delay
Pre-LPF	Cuts the high frequency range of the sound coming into the reverb. 0–7
Level	Output level of reverberation 0–127
Time	Time length of reverberation 0–127
Delay Feedback	Adjusts the amount of the delay sound that is fed back into the effect when the Reverb Character setting is 6 or 7. 0–127

Waveform List

* In waveform numbers 0001–0018, 0037–0054, 0073–0081 (INTA), and 0001–0012 (INTB), note numbers 91–108 are set to Damper Free in order to accurately reproduce the characteristics of an acoustic piano.

INTA

No.	Name
0001	Ult.P*mp A L
0002	Ult.P*mp A R
0003	Ult.P*mp A M
0004	Ult.P*mp B L
0005	Ult.P*mp B R
0006	Ult.P*mp B M
0007	Ult.P*mp C L
0008	Ult.P*mp C R
0009	Ult.P*mp C M
0010	Ult.P*ff A L
0011	Ult.P*ff A R
0012	Ult.P*ff A M
0013	Ult.P*ff B L
0014	Ult.P*ff B R
0015	Ult.P*ff B M
0016	Ult.P*ff C L
0017	Ult.P*ff C R
0018	Ult.P*ff C M
0019	Ult.P mp A L
0020	Ult.P mp A R
0021	Ult.P mp A M
0022	Ult.P mp B L
0023	Ult.P mp B R
0024	Ult.P mp B M
0025	Ult.P mp C L
0026	Ult.P mp C R
0027	Ult.P mp C M
0028	Ult.P ff A L
0029	Ult.P ff A R
0030	Ult.P ff A M
0031	Ult.P ff B L
0032	Ult.P ff B R
0033	Ult.P ff B M
0034	Ult.P ff C L
0035	Ult.P ff C R
0036	Ult.P ff C M
0037	XPr.P*mp A L
0038	XPr.P*mp A R
0039	XPr.P*mp A M
0040	XPr.P*mp B L
0041	XPr.P*mp B R
0042	XPr.P*mp B M
0043	XPr.P*mp C L
0044	XPr.P*mp C R
0045	XPr.P*mp C M
0046	XPr.P*ff A L
0047	XPr.P*ff A R
0048	XPr.P*ff A M
0049	XPr.P*ff B L
0050	XPr.P*ff B R
0051	XPr.P*ff B M
0052	XPr.P*ff C L
0053	XPr.P*ff C R
0054	XPr.P*ff C M
0055	XPr.P mp A L
0056	XPr.P mp A R
0057	XPr.P mp A M
0058	XPr.P mp B L
0059	XPr.P mp B R
0060	XPr.P mp B M
0061	XPr.P mp C L
0062	XPr.P mp C R
0063	XPr.P mp C M
0064	XPr.P ff A L
0065	XPr.P ff A R
0066	XPr.P ff A M
0067	XPr.P ff B L
0068	XPr.P ff B R
0069	XPr.P ff B M
0070	XPr.P ff C L
0071	XPr.P ff C R
0072	XPr.P ff C M
0073	HM-Pno* A L
0074	HM-Pno* A R
0075	HM-Pno* A M
0076	HM-Pno* B L
0077	HM-Pno* B R

No.	Name
0078	HM-Pno* B M
0079	HM-Pno* C L
0080	HM-Pno* C R
0081	HM-Pno* C M
0082	HM-Pno A L
0083	HM-Pno A R
0084	HM-Pno A M
0085	HM-Pno B L
0086	HM-Pno B R
0087	HM-Pno B M
0088	HM-Pno C L
0089	HM-Pno C R
0090	HM-Pno C M
0091	HM-Pno L+
0092	HM-Pno R+
0093	JD Piano 1 A
0094	JD Piano 1 B
0095	JD Piano 1 C
0096	Piano Atk Nz
0097	MKS Piano1 A
0098	MKS Piano1 B
0099	MKS Piano1 C
0100	Vint.EP mp A
0101	Vint.EP mp B
0102	Vint.EP mp C
0103	Vint.EP f A
0104	Vint.EP f B
0105	Vint.EP f C
0106	Vint.EP ff A
0107	Vint.EP ff B
0108	Vint.EP ff C
0109	Stage EP p A
0110	Stage EP p B
0111	Stage EP p C
0112	Stage EP f A
0113	Stage EP f B
0114	Stage EP f C
0115	Tine EP p A
0116	Tine EP p B
0117	Tine EP p C
0118	Tine EP mf A
0119	Tine EP mf B
0120	Tine EP mf C
0121	Tine EP ff A
0122	Tine EP ff B
0123	Tine EP ff C
0124	Dyno EP mp A
0125	Dyno EP mp B
0126	Dyno EP mp C
0127	Dyno EP mf A
0128	Dyno EP mf B
0129	Dyno EP mf C
0130	Wurly DI p A
0131	Wurly DI p B
0132	Wurly DI p C
0133	Wurly DI f A
0134	Wurly DI f B
0135	Wurly DI f C
0136	Wurly DI ff A
0137	Wurly DI ff B
0138	Wurly DI ff C
0139	Soft SA EP A
0140	Soft SA EP B
0141	Soft SA EP C
0142	Hard SA EP A
0143	Hard SA EP B
0144	Hard SA EP C
0145	SA E.Piano A
0146	SA E.Piano B
0147	SA E.Piano C
0148	80's E.Pno 1
0149	80's E.Pno 2
0150	80's E.Pno 3
0151	80's E.Pno 4
0152	Hard E.Pno
0153	Celesta
0154	Music Box

No.	Name
0155	ClavDB Brt A
0156	ClavDB Brt B
0157	ClavDB Brt C
0158	Reg.Clav A
0159	Reg.Clav B
0160	Reg.Clav C
0161	Retro Clav A
0162	Retro Clav B
0163	Retro Clav C
0164	Tight Clav A
0165	Tight Clav B
0166	Tight Clav C
0167	Hard Clav A
0168	Hard Clav B
0169	Hard Clav C
0170	ClavMtrls DB
0171	Harpsi A
0172	Harpsi B
0173	Harpsi C
0174	JLOrg Slow L
0175	JLOrg Slow R
0176	JLOrg Fast L
0177	JLOrg Fast R
0178	GT Organ
0179	JD Full Draw
0180	Org Basic 1
0181	Org Basic 2
0182	Ballad Org
0183	3rd Perc Org
0184	Perc Organ
0185	RockOrgan1 A
0186	RockOrgan1 B
0187	RockOrgan1 C
0188	Rtry Org A L
0189	Rtry Org A R
0190	Rtry Org B L
0191	Rtry Org B R
0192	Rtry Org C L
0193	Rtry Org C R
0194	LoFi RtryOrg
0195	Vint.Org 1
0196	Vint.Org 2
0197	Vint.Org 3
0198	Vint.Org 4
0199	Positive '8
0200	Pipe Organ 1
0201	Cathedrl Org
0202	Brtnyl.Gtr A
0203	Brtnyl.Gtr B
0204	Brtnyl.Gtr C
0205	Nylon Gtr1 A
0206	Nylon Gtr1 B
0207	Nylon Gtr1 C
0208	Nylon Gtr2 A
0209	Nylon Gtr2 B
0210	Nylon Gtr2 C
0211	Bright Gtr A
0212	Bright Gtr B
0213	Bright Gtr C
0214	Ac.Guitar1 A
0215	Ac.Guitar1 B
0216	Ac.Guitar1 C
0217	Ac.Gtr Hrm1A
0218	Ac.Gtr Hrm1B
0219	Ac.Gtr Hrm1C
0220	Jazz Gtr A
0221	Jazz Gtr B
0222	Jazz Gtr C
0223	Clean Gtr1 A
0224	Clean Gtr1 B
0225	Clean Gtr1 C
0226	Clr Mt Gtr A
0227	Clr Mt Gtr B
0228	Clr Mt Gtr C
0229	E.Gtr Ld
0230	Brt Strat1 A
0231	Brt Strat1 B

No.	Name
0232	Brt Strat1 C
0233	FstPick70s1A
0234	FstPick70s1B
0235	FstPick70s1C
0236	Funk Gtr A
0237	Funk Gtr B
0238	Funk Gtr C
0239	Funk MtGtr A
0240	Funk MtGtr B
0241	Funk MtGtr C
0242	Nasty Gtr
0243	Overdrive1 A
0244	Overdrive1 C
0245	Distortion1A
0246	Distortion1B
0247	Distortion1C
0248	Dist Chord A
0249	Dist Chord B
0250	Dist Chord C
0251	E.Gtr Harm
0252	Harp A
0253	Harp B
0254	Harp C
0255	Banjo A
0256	Banjo 1 B
0257	Banjo 1 C
0258	Sitar 1 A
0259	Sitar 1 B
0260	Sitar 1 C
0261	Sitar Drn A
0262	Sitar Drn B
0263	Sitar Drn C
0264	E.Sitar A
0265	E.Sitar 1 B
0266	E.Sitar 1 C
0267	Santur 1 A
0268	Santur 1 B
0269	Santur 1 C
0270	Shamisen A
0271	Shamisen B
0272	Shamisen C
0273	Koto A
0274	Koto B
0275	Koto C
0276	FatAcBs p HA
0277	FatAcBs p HB
0278	FatAcBs p HC
0279	FatAcBs p NA
0280	FatAcBs p NB
0281	FatAcBs p NC
0282	FatAcBs f HA
0283	FatAcBs f HB
0284	FatAcBs f HC
0285	FatAcBs f NA
0286	FatAcBs f NB
0287	FatAcBs f NC
0288	Ac.Bass A
0289	Ac.Bass B
0290	Ac.Bass C
0291	Fng.EB1 mf A
0292	Fng.EB1 mf B
0293	Fng.EB1 mf C
0294	Fng.EB1 ff A
0295	Fng.EB1 ff B
0296	Fng.EB1 ff C
0297	Fng.EB 2 A
0298	Fng.EB 2 B
0299	Fng.EB 2 C
0300	Finger Bs A
0301	Finger Bs B
0302	Finger Bs C
0303	P.Bass
0304	Thumb MtBs A
0305	Thumb MtBs B
0306	Thumb MtBs C
0307	Fretlss Bs A
0308	Fretlss Bs B

No.	Name
0309	Fretlss Bs C
0310	Fretlss SftA
0311	Fretlss SftB
0312	Fretlss SftC
0313	Pick EB 1 A
0314	Pick EB 1 B
0315	Pick EB 1 C
0316	Pick EB 2
0317	Slp.E.BassA
0318	Slp.E.BassB
0319	Slp.E.BassC
0320	Pul.E.BassA
0321	Pul.E.BassB
0322	Pul.E.BassC
0323	Jungle Bass
0324	Garage Bass
0325	SH-101 Bs A
0326	SH-101 Bs B
0327	SH-101 Bs C
0328	MG Bass 1 A
0329	MG Bass 1 B
0330	MG Bass 1 C
0331	MG Bass 2
0332	MG Bass 3
0333	MC Bass A
0334	MC Bass B
0335	MC Bass C
0336	Atk Syn Bass
0337	Flute 1 A
0338	Flute 1 B
0339	Flute 1 C
0340	Piccolo A
0341	Piccolo B
0342	Piccolo C
0343	Pan Flute
0344	Shakuhachi 1
0345	JD FI Push
0346	Clarinet A
0347	Clarinet B
0348	Clarinet C
0349	Oboe A
0350	Oboe B
0351	Oboe C
0352	E.Horn A
0353	E.Horn B
0354	E.Horn C
0355	Bassoon A
0356	Bassoon B
0357	Bassoon C
0358	Recorder A
0359	Recorder B
0360	Recorder C
0361	SopranoSax A
0362	SopranoSax B
0363	SopranoSax C
0364	Soft Alto A
0365	Soft Alto B
0366	Soft Alto C
0367	Wide Sax A
0368	Wide Sax B
0369	Wide Sax C
0370	BreathySax A
0371	BreathySax B
0372	BreathySax C
0373	TenorBreathy
0374	Tenor Sax A
0375	Tenor Sax B
0376	Tenor Sax C
0377	Bari.Sax 1 A
0378	Bari.Sax 1 B
0379	Bari.Sax 1 C
0380	Musette
0381	Harmonica A
0382	Harmonica B
0383	Harmonica C
0384	Blues G-harp
0385	Flugel A

Waveform List

No.	Name
0386	Flugel B
0387	Flugel C
0388	Trumpet 1 A
0389	Trumpet 1 B
0390	Trumpet 1 C
0391	Wide Tp A
0392	Wide Tp B
0393	Wide Tp C
0394	Mute Tp A
0395	Mute Tp B
0396	Mute Tp C
0397	Trombone 1 A
0398	Trombone 1 B
0399	Trombone 1 C
0400	Trombone 2 A
0401	Trombone 2 B
0402	Trombone 2 C
0403	Tuba A
0404	Tuba B
0405	Tuba C
0406	Sft F.Horn A
0407	Sft F.Horn B
0408	Sft F.Horn C
0409	French Hrn A
0410	French Hrn C
0411	XP Horn A
0412	XP Horn B
0413	F.HornSect A
0414	F.HornSect B
0415	F.HornSect C
0416	Tp Section A
0417	Tp Section B
0418	Tp Section C
0419	OctBrass A L
0420	OctBrass A R
0421	OctBrass B L
0422	OctBrass B R
0423	OctBrass C L
0424	OctBrass C R
0425	XP Brass
0426	OrchUnis A L
0427	OrchUnis A R
0428	OrchUnis1 BL
0429	OrchUnis1 BR
0430	OrchUnis1 CL
0431	OrchUnis1 CR
0432	Violin 1 A
0433	Violin 1 B
0434	Violin 1 C
0435	Cello 1 A
0436	Cello 1 B
0437	Cello 1 C
0438	Vi Sect. A L
0439	Vi Sect. A R
0440	Vi Sect.1 BL
0441	Vi Sect.1 BR
0442	Vi Sect.1 CL
0443	Vi Sect.1 CR
0444	Vc Sect.1 AL
0445	Vc Sect.1 AR
0446	Vc Sect.1 BL
0447	Vc Sect.1 BR
0448	Vc Sect.1 CL
0449	Vc Sect.1 CR
0450	Full Str A L
0451	Full Str A R
0452	Full Str1 BL
0453	Full Str1 BR
0454	Full Str1 CL
0455	Full Str1 CR
0456	JV Strings L
0457	JV Strings R
0458	JV Strings A
0459	JV Strings C
0460	F.Str A L
0461	F.Str A R
0462	F.Str B L
0463	F.Str B R
0464	F.Str C L
0465	F.Str C R
0466	F.Str LpL
0467	F.Str LpR

No.	Name
0468	F.StrStacA L
0469	F.StrStacA R
0470	F.StrStacB L
0471	F.StrStacB R
0472	F.StrStacC L
0473	F.StrStacC R
0474	ChmbrStrAt1A
0475	ChmbrStrAt1B
0476	ChmbrStrAt1C
0477	ChmbrStrRevA
0478	ChmbrStrRevB
0479	ChmbrStrRevC
0480	Vls Pizz 1 A
0481	Vls Pizz 1 B
0482	Vls Pizz 1 C
0483	VlsPizzRev A
0484	VlsPizzRev B
0485	VlsPizzRev C
0486	Vcs Pizz 1 A
0487	Vcs Pizz 1 B
0488	Vcs Pizz 1 C
0489	UnisonSaw1 A
0490	UnisonSaw1 B
0491	UnisonSaw1 C
0492	Super Saw1 A
0493	Super Saw1 B
0494	Super Saw1 C
0495	TranceSaw1 A
0496	TranceSaw1 B
0497	TranceSaw1 C
0498	Warm Pad A
0499	Warm Pad B
0500	Warm Pad C
0501	OB2 Pad 1 A
0502	OB2 Pad 1 B
0503	OB2 Pad 1 C
0504	OB2 Pad 2 A
0505	OB2 Pad 2 B
0506	OB2 Pad 2 C
0507	D-50 Heavn1A
0508	D-50 Heavn1B
0509	D-50 Heavn1C
0510	SBF Vox A
0511	SBF Vox B
0512	SBF Vox C
0513	Syn Vox 1 A
0514	Syn Vox 1 B
0515	Syn Vox 1 C
0516	Female Ahs A
0517	Female Ahs B
0518	Female Ahs C
0519	Female Oos A
0520	Female Oos B
0521	Female Oos C
0522	Male Aahs A
0523	Male Aahs B
0524	Male Aahs C
0525	Jz Doos 1 A
0526	Jz Doos 1 B
0527	Jz Doos 1 C
0528	JzDoos1 Lp A
0529	JzDoos1 Lp B
0530	JzDoos1 Lp C
0531	Jz Doos 2 A
0532	Jz Doos 2 B
0533	Jz Doos 2 C
0534	Jz Doos 2 lp
0535	JzVoiceDat A
0536	JzVoiceDat B
0537	JzVoiceDat C
0538	Gospel Hum A
0539	Gospel Hum B
0540	Gospel Hum C
0541	Soprano Vox
0542	Kalimba 1
0543	JD Kimba Atk
0544	JD Wood Crak
0545	JD Gamelan 1
0546	JD Gamelan 2
0547	JD Log Drum
0548	JD Xylo
0549	Marimba 1

No.	Name
0550	Vibraphone 1
0551	Glocken
0552	Steel Drums
0553	D50 Bell A
0554	D50 Bell B
0555	D50 Bell C
0556	D50 Bell Lp
0557	Agogo Bell
0558	Finger Bell
0559	Tubular Bell
0560	Church Bell
0561	Mild CanWave
0562	JD Crystal
0563	Bell Organ
0564	Old DigiBell
0565	JD Bell Wave
0566	TinyBellWave
0567	Vib Wave
0568	JD Brt Digi
0569	Bagpipe
0570	Digital Vox
0571	JD WallyWave
0572	JD Brusky Lp
0573	Bright Form
0574	JD Nasty
0575	JD Spark Vox
0576	JD Cutters
0577	SBF Hrd Ld
0578	JD EML 5th
0579	Juno Saw HD
0580	TB303 Saw HD
0581	Custm Saw HD
0582	MG Saw HD
0583	Real MG Saw
0584	DigitalSawHD
0585	P5 Saw HD
0586	Calc.Saw
0587	Calc.Saw inv
0588	Synth Saw 1
0589	JD Syn Saw
0590	JD Fat Saw
0591	JP-8 Saw
0592	OB2 Saw HD
0593	700 Saw A
0594	700 Saw B
0595	700 Saw C
0596	D-50 Saw
0597	LA-Syn 1 C
0598	Air Wave
0599	GR-300 Saw
0600	Juno Sqr HD
0601	P5 Sqr HD
0602	Fat Square
0603	JP-8 Square
0604	SH-2 Square
0605	TB303 Sqr HD
0606	TB Dst Sqr A
0607	TB Dst Sqr B
0608	TB Dst Sqr C
0609	Dist SquareA
0610	Dist SquareB
0611	Dist SquareC
0612	JP8 Pls 10HD
0613	JP8 Pls 15HD
0614	JP8 Pls 25HD
0615	JP8 Pls 30HD
0616	JP8 Pls 40HD
0617	JP8 Pls 45HD
0618	Syn Pulse 1
0619	Syn Pulse 2
0620	700 Triangle
0621	Syn Triangle
0622	JD Triangle
0623	VS-Ramp
0624	Sync Sweep
0625	Sine
0626	JD Fine Wine
0627	Digi Loop
0628	JD MetalWind
0629	Atmosphere
0630	DigiSpectrum
0631	JD Vox Noise

No.	Name
0632	SynVox Noise
0633	Shaku Noise
0634	Digi Breath
0635	Agogo Noise
0636	White Noise
0637	Pink Noise
0638	Aah Formant
0639	Eeh Formant
0640	lih Formant
0641	Ooh Formant
0642	Uuh Formant
0643	Metal Vox W1
0644	Metal Vox W2
0645	Metal Vox L
0646	Metal Vox W3
0647	JD Rattles
0648	Xylo Seq.
0649	JD Anklungs
0650	JD Shami
0651	SynBassClick
0652	JD EP Atk
0653	Key On Click
0654	Org Click 1
0655	Org Click 2
0656	JD Switch
0657	JD Tuba Slap
0658	TVF Trigger
0659	Hi Q 1
0660	Slap 1
0661	Stick 1
0662	Click
0663	Cutting Nz
0664	Ac.Bass Body
0665	Flute Pad Nz
0666	Applause 1
0667	River
0668	Thunder 1
0669	Monsoon
0670	Stream
0671	Bubble
0672	Bird Song
0673	Dog Bark
0674	Gallop
0675	Vint.Phone
0676	Office Phone
0677	Mobile Phone
0678	Door Creak
0679	Door Slam
0680	Car Engine
0681	Car Slip
0682	Car Pass
0683	Crash Seq.
0684	Gun Shot 1
0685	Siren
0686	Train 1
0687	Airplane
0688	Helicopter 1
0689	Space Voyage
0690	Blow Loop
0691	Laugh
0692	Scream
0693	Punch
0694	Heartbeat
0695	Footsteps
0696	Machine Gun1
0697	Laser
0698	Thunder Lp
0699	Ac.Bass Nz
0700	E.Bass Nz 1
0701	E.Bass Nz 2
0702	E.Bass Slide
0703	Fng.EB Sld
0704	DistGtr Nz 1
0705	DistGtr Nz 2
0706	Gtr Fret Nz1
0707	Gtr Fret Nz2
0708	ClassicHseHt
0709	Narrow Hit
0710	Dist Hit
0711	Thin Beef
0712	Smear Hit
0713	LoFi Min Hit

No.	Name
0714	Orch. Hit
0715	Punch Hit
0716	O'Skool Hit
0717	Philly Hit
0718	Scratch 1
0719	Scratch 2
0720	Scratch 3
0721	Scratch 4
0722	Scratch Push
0723	Scratch Pull
0724	MG Zap 1
0725	MG Zap 2
0726	MG Zap 3
0727	MG Attack
0728	Syn Hrd Atk1
0729	Syn Hrd Atk2
0730	Syn Swt Atk1
0731	Syn Swt Atk2
0732	Syn Swt Atk3
0733	Syn Swt Atk4
0734	SF Kick 1 L
0735	SF Kick 1 R
0736	Reg.Kick L
0737	Reg.Kick R
0738	Jazz Kick
0739	Jz Dry Kick
0740	TR909 Kick 1
0741	TR909 Kick 2
0742	AnalogKick 1
0743	TR808 Kick
0744	SH32 Kick
0745	SF Snr L
0746	SF Snr R
0747	SF Rim L
0748	SF Rim R
0749	Reg.Snr L
0750	Reg.Snr R
0751	Reg.SnrGst L
0752	Reg.SnrGst R
0753	Sft Snr Gst
0754	Jz Brsh Slap
0755	Jz Brsh Swsh
0756	Swish&Turn
0757	Concert SD 1
0758	Analog Snr 1
0759	TR909 Snr 1
0760	TR909 Snr 2
0761	TR808 Snr 1
0762	TR808 Snr 2
0763	SF Crs Stk L
0764	SF Crs Stk R
0765	Soft Stick
0766	TR808 Rim
0767	LD L.Tom
0768	LD M.Tom
0769	LD H.Tom
0770	RR F.Tom
0771	SF M.Tom
0772	SF H.Tom
0773	Reg.F.Tom
0774	Reg.M.Tom
0775	Reg.H.Tom
0776	TR808 Tom
0777	Deep Tom
0778	Reg.CHH p
0779	Reg.CHH ff
0780	Reg.PHH mf
0781	Reg.PHH f
0782	Reg.OHH 1 mf
0783	Reg.OHH 1 ff
0784	TR808 CHH 1
0785	Noise CHH
0786	TR808 OHH 1
0787	TR606 OHH
0788	Rock Crash 1
0789	Splash Cym
0790	TR808 Cym
0791	Ride Cymbal
0792	Rock Rd Cup
0793	Rock Rd Edge
0794	China Cym 1
0795	Concert Cym1

No.	Name
0796	Gospel Clap
0797	TR808 Clap 1
0798	TR808 Clap 2
0799	Cowbell 1
0800	TR808Cowbell
0801	Wood Block1H
0802	Wood Block1L
0803	Claves 1
0804	TR808 Claves
0805	Castanet 1
0806	Whistle 1
0807	Bongo High
0808	Bongo Low
0809	Conga1 Hi Mt
0810	Conga1 Slap
0811	Conga1 Hi Op
0812	Conga1 LowOp
0813	TR808 Conga1
0814	TR808 Conga2
0815	Timbale High
0816	Timbale Low
0817	Cabasa Cut 1
0818	Maracas 1
0819	808 Maracas1
0820	R8 Shaker
0821	Guiro Short
0822	Guiro Long
0823	Vibraslap 1
0824	Tambourine 1
0825	Cuica Mute
0826	Cuica Open
0827	Timpani p
0828	Timpani f
0829	Timpani Roll
0830	Timpani Lp
0831	ConcertBD p
0832	ConcertBD f
0833	ConcertBD ff
0834	ConcertBD Lp
0835	Triangle 1
0836	JingleBell 1
0837	Wind Chime 1
0838	Crotale
0839	R8 Click
0840	Metro Bell
0841	Metro Click
0842	DR202 Beep
0843	Low Sine
0844	DC
0845	Reverse Cym1
0846	MC500 Beep 1
0847	MC500 Beep 2
0848	TB Dst Saw A
0849	TB Dst Saw B
0850	TB Dst Saw C
0851	Ac Piano 1 B
0852	Ac Piano 1 C
0853	Ac Piano2 pA
0854	Ac Piano2 pB
0855	Ac Piano2 pC
0856	Ac Piano2 fA
0857	Ac Piano2 fB
0858	Ac Piano2 fC
0859	Piano Up TH
0860	JD Piano 2 B
0861	JD Piano 2 C
0862	MKS Piano2 B
0863	MKS Piano2 C
0864	SA EP 1B
0865	SA EP 1C
0866	SA EP 2B
0867	SA EP 2C
0868	Dyn EP mp A
0869	Dyn EP mp B
0870	Dyn EP mp C
0871	Wurly mp A
0872	Wurly mp B
0873	Wurly mp C
0874	Wurly mf A
0875	Wurly mf B
0876	Wurly mf C
0877	Wurly ff A

No.	Name
0878	Wurly ff B
0879	Wurly ff C
0880	D-50 EP
0881	E.Piano 1 A
0882	E.Piano 1 B
0883	E.Piano 1 C
0884	E.Piano 2 A
0885	E.Piano 2 B
0886	E.Piano 2 C
0887	EP Hard
0888	ClvMtrS DB f
0889	RtryOrg2 A L
0890	RtryOrg2 A R
0891	RtryOrg2 B L
0892	RtryOrg2 B R
0893	RtryOrg2 C L
0894	RtryOrg2 C R
0895	E.Organ Slw
0896	E.Organ Fst
0897	B3 1 FL A
0898	B3 1 FL B
0899	B3 1 FL C
0900	B3 2 FL A
0901	B3 2 FL B
0902	B3 2 FL C
0903	B3 Perc 1 A
0904	B3 Perc 1 B
0905	B3 Perc 1 C
0906	B3 3 A
0907	B3 3 B
0908	B3 3 C
0909	B3 Perc 2 A
0910	B3 Perc 2 B
0911	B3 Perc 3 C
0912	B3 1 Ch A
0913	B3 1 Ch B
0914	B3 1 Ch C
0915	RockOrgan2 B
0916	Power B fstA
0917	Power B fstB
0918	Power B fstC
0919	B3 Click
0920	Org Click 3
0921	Vint.Organ
0922	Pipe Organ 2
0923	Nylon Gtr 3A
0924	Nylon Gtr 3B
0925	Nylon Gtr 3C
0926	RequintGt mf
0927	AcGtr Pick A
0928	AcGtr Pick B
0929	AcGtr Pick C
0930	Ac.Guitar2 A
0931	Ac.Guitar2 B
0932	Ac.Guitar2 C
0933	JC Strat Nz
0934	Strt Gtr
0935	FstPick70s
0936	Clean TC pA
0937	ClnGtr Mt Nz
0938	PdlSteel A
0939	PdlSteel B
0940	PdlSteel C
0941	Oud A
0942	Oud B
0943	Oud C
0944	Oud
0945	Pipa mp 1
0946	Pipa mp 2
0947	Pipa Trem
0948	Pipa Chord
0949	Pi Pa A
0950	Pi Pa B
0951	Pi Pa C
0952	Chung Ruan A
0953	Chung Ruan B
0954	Chung Ruan C
0955	Dumbra mp
0956	Dumbra Strum
0957	UD
0958	UD Body
0959	Baglama L

No.	Name
0960	Baglama H
0961	Elk Baglama
0962	Kanun
0963	Sitar/Drone
0964	Sitar 2 A
0965	Sitar 2 C
0966	Sitar 3 A
0967	Sitar 3 C
0968	Sitar 4 A
0969	Sitar 4 B
0970	Sitar 4 C
0971	XV Sitar A
0972	XV Sitar C
0973	Sitar Gliss
0974	Guzheng f
0975	Guzheng Trem
0976	Gu Zheng A
0977	Gu Zheng B
0978	Gu Zheng C
0979	Santur 2 B
0980	Santur 2 C
0981	Santur 3 A
0982	Santur 3 B
0983	Santur 3 C
0984	Santur 4 A
0985	Santur 4 B
0986	Santur 4 C
0987	Santur Trm A
0988	Santur Trm B
0989	Santur Trm C
0990	HmrDulcimer
0991	Dulcimer A
0992	Dulcimer B
0993	Dulcimer C
0994	Yangqin
0995	Yangqin 1 mf
0996	Yangqin 1 Trem
0997	Oygur f
0998	Oygur Trem
0999	Upright Bs
1000	Fingerd Bs A
1001	Fingerd Bs B
1002	Fingerd Bs C
1003	Fretless
1004	Slap Bass
1005	SlapBs Wave1
1006	SlapBs Wave2
1007	JUNO-60 Bass
1008	JP-4 Bass
1009	SH-101 Bs
1010	KG Poly Bs
1011	Solid Bass
1012	Mini Bs A
1013	Mini Bs B
1014	Mini Bs C
1015	Flute Vib A
1016	Flute Vib B
1017	Flute Vib C
1018	Flute 2 B
1019	Flute 2 C
1020	Atk Flute A
1021	Atk Flute B
1022	Atk Flute C
1023	BlwAltoVibPL
1024	BlwAltoVibPR
1025	BlwAltoVibFL
1026	BlwAltoVibFR
1027	Alto Sax Vib
1028	Alto mp B
1029	Alto mp C
1030	Blow Sax
1031	Blow Sax A
1032	Blow Sax C
1033	Blowed Sax
1034	T.Sax hrd
1035	T.Sax hrd A
1036	T.Sax hrd B
1037	T.Sax hrd C
1038	Blow Pipe
1039	Sicu 1
1040	Sicu 2
1041	BottleBlow

No.	Name
1042	Shakuhachi 2
1043	FolkClaVibFL
1044	FolkClaVibFR
1045	FolkClaMarcL
1046	FolkClaMarcR
1047	Tr Klamet
1048	Qudi mp 1
1049	Qudi Orna 1
1050	Qu Di A
1051	Qu Di B
1052	Qu Di C
1053	QuDi 1 Vib A
1054	QuDi 1 Vib B
1055	QuDi 1 Vib C
1056	QuDi 2 Vib A
1057	QuDi 2 Vib B
1058	QuDi 2 Vib C
1059	Xiao 1 f
1060	Xiao Trill
1061	Bawu f
1062	BawuVibFingr
1063	Bawu Trill
1064	Xun mp
1065	Xun Orna
1066	Hulusi 1 mf
1067	Sheng A
1068	Sheng B
1069	Sheng C
1070	Suona 1 A
1071	Suona 1 B
1072	Suona 1 C
1073	Suona 2 mf
1074	Suona 2 ff
1075	Suona 2 Grwl
1076	Zurna-A
1077	F.AccordionA
1078	F.AccordionB
1079	F.AccordionC
1080	D.AccordionA
1081	D.AccordionB
1082	D.AccordionC
1083	ACD Bltn R8
1084	ACD Bltn R8s
1085	ACD Bltn R16
1086	ACD Bltn R4
1087	ACD Str R8
1088	ACD Str Nz
1089	ACD Str R8s
1090	Accord 4' A
1091	Accord 4' B
1092	Accord 4' C
1093	Accord 8' A
1094	Accord 8' B
1095	Accord 8' C
1096	Accord PadNz
1097	Musette 1 A
1098	Musette 1 B
1099	Musette 1 C
1100	Musette 2 A
1101	Musette 2 B
1102	Musette 2 C
1103	Musette 3 A
1104	Musette 3 B
1105	Musette 3 C
1106	Master A
1107	Master B
1108	Master C
1109	Single A
1110	Single B
1111	Single C
1112	Bandoneon 1A
1113	Bandoneon 1B
1114	Bandoneon 1C
1115	Bandoneon 2A
1116	Bandoneon 2B
1117	Bandoneon 2C
1118	Bs/Musette 1
1119	Bs/Musette 2
1120	Bs/Musette 3
1121	Bs/Master
1122	Bs/Single
1123	Bs/Bandneon1

No.	Name
1124	Bs/Bandneon2
1125	Bandneon RHL
1126	Bandneon RHR
1127	Bandneon Nz
1128	Solo Tpt. A
1129	Solo Tpt. B
1130	Solo Tpt. C
1131	Trumpet 2 B
1132	Trumpet 2 C
1133	Tp_Mari Vb
1134	TpRomntic vb
1135	TrumpetShake
1136	Trombone 3 A
1137	Trombone 3 B
1138	Trombone 3 C
1139	Tbn mf A
1140	Tbn mf B
1141	Tbn mf C
1142	Trombone 4
1143	Tp Section2B
1144	Tp Section2C
1145	Brass ff
1146	R&R Horns A
1147	R&R Horns B
1148	R&R Horns C
1149	PopBrsAtkA L
1150	PopBrsAtkA R
1151	PopBrsAtkB L
1152	PopBrsAtkB R
1153	PopBrsAtkC L
1154	PopBrsAtkC R
1155	PopBrass A L
1156	PopBrass A R
1157	PopBrass B L
1158	PopBrass B R
1159	PopBrass C L
1160	PopBrass C R
1161	OctBrs p A L
1162	OctBrs p A R
1163	OctBrs p B L
1164	OctBrs p B R
1165	OctBrs p C L
1166	OctBrs p C R
1167	Brass Fall L
1168	Brass Fall R
1169	Tps Fall
1170	Brass Fall
1171	Violin 2 A
1172	Violin 2 B
1173	Strings L
1174	Strings R
1175	Marcato A L
1176	Marcato A R
1177	Marcato B L
1178	Marcato B R
1179	Marcato C L
1180	Marcato C R
1181	OrcStrings A
1182	OrcStrings B
1183	OrcStrings C
1184	Erhu 1 Vib
1185	Erhu 1 mp
1186	Erhu 2 mp
1187	Erhu 2 f
1188	Er Hu 3 A
1189	Er Hu 3 B
1190	Er Hu 3 C
1191	Matouqin 1 mp
1192	Matouqin1Vib
1193	Matouqn Harm
1194	MatouqnSldVib
1195	Keman L
1196	Keman R
1197	Blaster A
1198	Blaster B
1199	Blaster C
1200	UnisonSaw2 A
1201	UnisonSaw2 B
1202	UnisonSaw2 C
1203	Super Saw2 A
1204	Super Saw2 B
1205	Super Saw2 C

Waveform List

No.	Name
1206	TranceSaw2 A
1207	TranceSaw2 B
1208	TranceSaw2 C
1209	Fat JP-6
1210	SBF Noise
1211	P5 Sink
1212	Synth Stack
1213	Soft Pad B
1214	Soft Pad C
1215	Syn Str
1216	JP Strings1A
1217	JP Strings1B
1218	JP Strings1C
1219	JP StringsU2
1220	Syn Strings
1221	JP Hollo A
1222	JP Hollo B
1223	JP Hollo C
1224	Hollo Wave
1225	Fantasynth A
1226	Fantasynth B
1227	Fantasynth C
1228	D-50 Heavn2A
1229	D-50 Heavn2B
1230	D-50 Heavn3A
1231	D-50 Heavn3B
1232	D-50 Heavn3C
1233	D50 Fantas 1
1234	D50 Fantas 2
1235	D50FuturePd1
1236	D50FuturePd2
1237	D50 DNDance1
1238	D50 DNDance2
1239	D50 DNDance3
1240	D50 DNDance4
1241	D50Pizzagogo
1242	D50 StacHvn
1243	D50NylnAtms1
1244	D50NylnAtms2
1245	Syn Vox 2
1246	Syn Vox 3 A
1247	Syn Vox 3 B
1248	Syn Vox 3 C
1249	Vox Noise
1250	Syn Vox 4
1251	MMM VOX
1252	Choir Aah A
1253	Choir Aah B
1254	Choir Aah C
1255	Choir Mmh A
1256	Choir Mmh B
1257	Choir Mmh C
1258	Pop Voice
1259	Voice Aahs A
1260	Voice Aahs B
1261	Voice Aahs C
1262	LargeChrF AL
1263	LargeChrF AR
1264	LargeChrF BL
1265	LargeChrF BR
1266	LargeChrF CL
1267	LargeChrF CR
1268	Hey Brazil
1269	Sabor!
1270	Arriba!
1271	Ole!
1272	Uno!
1273	Dos!
1274	Tres!
1275	Quatro!
1276	Grito-Hahaha
1277	Grito-Ahaha!
1278	Grito-Haahai
1279	Grito-Rrrrr!
1280	Tiquitito!
1281	Grito-Oa Oa!
1282	Grito-Eh Eh!
1283	Ama ya ahi!
1284	Fuego!
1285	One
1286	Two
1287	Three

No.	Name
1288	ZaghrutaLoop
1289	ZaghrutaStop
1290	Vibes
1291	Vibraphone 2
1292	Glockenspiel
1293	Marimba Wave
1294	Marimba 2
1295	Kalimba 2
1296	Balaphone 1
1297	Balaphone 2
1298	Angklung
1299	Bonang
1300	Pemade A
1301	Pemade B
1302	Pemade C
1303	DIGI Bell
1304	JP-8 Saw C
1305	JP-6 Saw
1306	P5 Saw 1 A
1307	P5 Saw 2 A
1308	P5 Saw 3 A
1309	P5 Saw 3 B
1310	P5 Saw 3 C
1311	MG Saw
1312	Saw
1313	Synth Saw 2
1314	TB Dst Saw
1315	Juno Saw+Sub
1316	MG Sqr HD
1317	TB303 SqrFHD
1318	TB Dst Sqr
1319	TB Square
1320	260 Sub OSC
1321	VS-Triangle
1322	ARP Sine HD
1323	JP-8 Pulse
1324	MG Pulse A
1325	JP8 Pls 30
1326	PWM Wave A
1327	PWM Wave B
1328	PWM Wave C
1329	PWM Wave
1330	Lead Wave 1
1331	Lead Wave 2
1332	Wire String
1333	Hard 5ths A
1334	Hard 5ths B
1335	Hard 5ths C
1336	Cold Dress
1337	FX Bomb
1338	FX Bell 1 fw
1339	FX Bell 2 fw
1340	Hi Q 2
1341	Slap 2
1342	Stick 2
1343	Applause 2
1344	Applause 3
1345	Applause 4
1346	Sea
1347	Thunder 2
1348	Bird
1349	Horse
1350	Gun Shot 2
1351	Train 2
1352	Helicopter 2
1353	Machine Gun2
1354	Tao Hit
1355	S Push
1356	S Pull
1357	HM-Dummy
1358	PopKickLo
1359	PopKickMd
1360	PopKickHi
1361	Warm Kick p
1362	Warm Kick f
1363	Hush Kick p
1364	Hush Kick f
1365	Jz Kick 1
1366	Jz Kick 2
1367	Fat BD
1368	Room Kick
1369	Techno BD1

No.	Name
1370	909 CompKick
1371	HipHop BD
1372	707 BD
1373	TightSnr p L
1374	TightSnr f L
1375	T.Snr Ghst L
1376	TightSnr fFL
1377	T.Snr RS p L
1378	Br.Snr p L
1379	Br.Snr mf L
1380	Br.Snr ff L
1381	IronSnrFlm L
1382	WoodSnr mf L
1383	WoodSnr ff L
1384	Maple Lo Snr
1385	MapleSoft SN
1386	PopSnr Gst 1
1387	PopSnr Gst 2
1388	PopSnr Gst 3
1389	Jz Snare 1
1390	Jz Snare 2
1391	Jz Snare 3
1392	PopSnr Lo_L
1393	PopSnr Md_L
1394	PopSnr VH_L
1395	PopSnr Lo_R
1396	PopSnr Md_R
1397	PopSnr VH_R
1398	PopSnr Ph
1399	PopSnr ShRl
1400	Fish Snare
1401	Hibrid Snare
1402	Cross Snare
1403	Rim Shot 1
1404	Real Snare
1405	Std Snare
1406	Sol Snare
1407	Id Snare 1
1408	Id Snare 2
1409	Rock Snare
1410	GS Fat SD
1411	Rim Shot 2
1412	Rap Snare
1413	Dance Snare
1414	TR909 Snr 3
1415	IronSnrGst L
1416	Concert SD 2
1417	Snare Roll
1418	Cross Stick
1419	Br.SideStk L
1420	WoodSideStkL
1421	707 Rim
1422	StudioLo Tom
1423	StudioMidTom
1424	StudioHi Tom
1425	Jz Tom Lo
1426	Jz Tom Md 1
1427	Jz Tom Md 2
1428	Jz Tom Hi 1
1429	Jz Tom Hi 2
1430	PopFrTmLoRC
1431	PopFrTmMdRC
1432	PopFrTmHiRC
1433	Stdio T4 sft
1434	Stdio T4 med
1435	Stdio T4 hrd
1436	Stdio T3 sft
1437	Stdio T3 med
1438	Stdio T3 hrd
1439	Stdio T2 sft
1440	Stdio T2 med
1441	Stdio T2 hrd
1442	Stdio T1 sft
1443	Stdio T1 med
1444	Stdio T1 hrd
1445	PopTom1LoRC
1446	PopTom1MdRC
1447	PopTom1HiRC
1448	PopTom2LoRC
1449	PopTom2MdRC
1450	PopTom2HiRC
1451	PopFrTmFILo

No.	Name
1452	PopFrTmFILMd
1453	PopFrTmFLHi
1454	RkTom1Lo_Fl
1455	RkTom1Md_Fl
1456	RkTom1Hi_Fl
1457	RkTom1VH_Fl
1458	RkTom2Lo_Fl
1459	RkTom2Md_Fl
1460	RkTom2Hi_Fl
1461	RkTom2VH_Fl
1462	Reg.CHH 1 p
1463	Reg.CHH 1 mf
1464	Reg.CHH 1 f
1465	Reg.CHH 1 ff
1466	Reg.CHH 2 mf
1467	Reg.CHH 2 f
1468	Reg.CHH 2 ff
1469	Reg.OHH 2 mf
1470	Reg.OHH 2 f
1471	PopHHUPLo
1472	PopHHUPMd
1473	PopHHUPHi
1474	PopHHSideLo
1475	PopHHSideMd
1476	PopHHSideHi
1477	PopHHSideOp
1478	PHHSdOpLg
1479	707 CHH
1480	Dixie HH Pdl
1481	Dixie HH Cls
1482	Dixie HH Hlf
1483	Dixie HH Opn
1484	Crash Cym1 p
1485	Crash Cym1 f
1486	Crash Cym 2
1487	Rock Crash 2
1488	PopCrashLo
1489	PopCrashMd
1490	PopCrashHi
1491	RkCrash1Lo
1492	RkCrash1Md
1493	RkCrash1Hi
1494	RkCrash2Lo
1495	RkCrash2Md
1496	RkCrash2Hi
1497	China Cym 2
1498	RkSplashLo
1499	RkSplashMd
1500	RkSplashHi
1501	Splash
1502	PopRide BILo
1503	PopRide BILMd
1504	PopRide BILHi
1505	PopRideLo
1506	PopRideMd
1507	PopRideHi
1508	RkRide1Lo
1509	RkRide1Hi
1510	Concert Cym2
1511	808 Clps
1512	Hand Clap 1
1513	TR-909 HC
1514	Hand Clap 2
1515	OR Clap 1
1516	OR Clap 2
1517	FingerSnaps1
1518	FingerSnaps2
1519	Cowbell Lng
1520	Cowbell Edg
1521	Cowbell mf
1522	Cowbell f
1523	Cowbell 2
1524	Cowbell 3
1525	Cowbell 4
1526	Cowbell Op 1
1527	Cowbell Mt 1
1528	Cowbell Op 2
1529	Cowbell Mt 2
1530	BongoBell Op
1531	BongoBell Mt
1532	MamboBell Op
1533	MamboBell Mt

No.	Name
1534	Cowbell Low
1535	Cowbell Hi
1536	Cow Bell
1537	808 Cows
1538	Wood Block2H
1539	Wood Block2L
1540	Wood Block 3
1541	Claves 2
1542	Clave!
1543	Claves Lo
1544	Claves 3
1545	Ban Gu 1
1546	Ban Gu 2
1547	Castanet 2
1548	Whistle Long
1549	Whistle Shrt
1550	ApitoHiShort
1551	ApitoLoShort
1552	SambaWhistle
1553	Whistle 2
1554	ID Whistle 1
1555	ID Whistle 2
1556	ID Whistle 3
1557	Shankh
1558	Bongo HM
1559	Bongo LM 1
1560	Bongo LM 2
1561	Bongo Hi Hrd
1562	Bongo HiOp f
1563	BongoHiSlap1
1564	BongoHiSlap2
1565	Bongo 1 Hi
1566	Bongo 2 Hi
1567	Bongo 1 Lo
1568	Bongo 2 Lo
1569	Bongo Lo Hrd
1570	Bongo Lo Sft
1571	Bongo LoOpmf
1572	Bongo LoOp f
1573	Bongo LoSlap
1574	Bongo slide
1575	Conga 2H Op
1576	Conga 2H Mt
1577	Conga 2H Slp
1578	Conga 2L Op
1579	Conga 2L Mt
1580	Conga Mt Lo
1581	Conga Thumb
1582	Conga Link
1583	Conga Roll
1584	Conga HM
1585	Conga 1H Mt
1586	Conga M
1587	Conga 1L Mt
1588	Conga LM
1589	Conga 1 Slap
1590	Conga 1H Op
1591	CongaLoOp f
1592	CongaLoOp mf
1593	Timbales L
1594	Timbales H
1595	Timbale 1
1596	Timbale 2
1597	Timbale 3 Lo
1598	Timbale 3 Hi
1599	Timbale 3 Sd
1600	Timbles LoOp
1601	Timbles LoMt
1602	Timbles HiOp
1603	Timbles HiMt
1604	TimbalesHand
1605	Timbales Rim
1606	TmbSideStick
1607	TimbalesFil1
1608	TimbalesFil2
1609	TimbalesFil3
1610	TimbalesFil4
1611	SambaBateria
1612	Cabasa Down1
1613	Cabasa Down2
1614	Cabasa Up 1
1615	Cabasa Up 2

No.	Name
1616	Real Cabasa1
1617	Real Cabasa2
1618	Cabasa
1619	Cabasa Cut 2
1620	Maracas 2
1621	Maracas 3
1622	Maracas3UpDw
1623	Shaker 1
1624	Shaker 2
1625	Shaker 3
1626	Shaker 4
1627	Shaker Long
1628	Shaker Short
1629	Cabasa Roll
1630	Caxixi
1631	Ganza Soft
1632	Ganza Hard
1633	808 Maracas2
1634	808 Maracas3
1635	Chekere 1
1636	Chekere 2
1637	Chekere 3
1638	Guio 2 Long
1639	Guio 2 Shrt
1640	Quide Long
1641	Quide Short
1642	Guio 3 Long
1643	Guio 3 Shrt
1644	Long Guio
1645	Short Guio
1646	Guio 4 Up
1647	Guio 4 Down
1648	Guio 4 Fast
1649	RecoRecoLng
1650	RecoRecoSht
1651	MtlGuioLNg
1652	MtlGuioSht
1653	Vibraslap 2
1654	Vibraslap 3
1655	Quijada
1656	Rainstick
1657	Tambarin 1
1658	Tambarin 2
1659	Tambarin 3
1660	Tamborine p
1661	Tamborine f
1662	PandeiroCrsh
1663	PandeiroHit
1664	PandeiroMute
1665	PandeiroL Lo
1666	PandeiroL Hi
1667	PandeiroL Sp
1668	PandeiroL Rm
1669	PandeiroS Op
1670	PandeiroS Sp
1671	PandeiroS Rm
1672	PandeiroOpen
1673	PandeiroRim
1674	PandeiroRoll
1675	Tamborim Opn
1676	Tamborim Mut
1677	Tamborim Slp
1678	TamborimOpen
1679	TamborimRim
1680	TamborimMute
1681	TamborimRoll
1682	Tambrin Hit
1683	TambrinShake
1684	Riq Open
1685	Riq Mute
1686	Rek Open
1687	Rek Dom
1688	Rek Tek
1689	Rek BR5
1690	Rek ROL
1691	Rek KNA
1692	Rek KNB
1693	Doira Dun
1694	Doira Tik
1695	Tabla Baya 2
1696	Tabla Baya 3
1697	Tabla Baya Ka

No.	Name
1698	TablaBaya Ge
1699	Tabla Baya 1
1700	TablaBayaSld
1701	Baya Sld
1702	Baya Long
1703	TablaBayaGin
1704	TablaBaya Na
1705	TablaBayaTin
1706	TablaBayaTun
1707	TablaBaya Ti
1708	TablaBaya Te
1709	Tabla Baya 4
1710	Tbl Tak
1711	Tbl Dom
1712	Tabla Fx
1713	Tbl Sak
1714	Tbl Rim
1715	Tbl NurRim
1716	Duff Dish
1717	Duff T
1718	Ceng Ceng 1
1719	Udu Pot1 Hi
1720	Udu Pot1 Lo
1721	Udu Pot2 Lng
1722	Udu Pot2 Sht
1723	Udo Low
1724	Udo Slap
1725	Cajon
1726	Cajon Lo
1727	Cajon Hi
1728	Cajon Rol Hi
1729	Cajon Rol Lo
1730	Cuica 1 Hi
1731	Cuica 1 Low
1732	Cuica 2
1733	Cuica Lo 1
1734	Cuica Lo 2
1735	Cuica Hi 1
1736	Cuica Hi 2
1737	Mute Cuica
1738	Open Cuica
1739	Wadon 1
1740	Wadon 2
1741	Wadon 3
1742	Wadon 4
1743	Wadon 5
1744	Wadon 6
1745	Wadon 7
1746	Madal Da
1747	Madal Dun
1748	Madal Ta
1749	Dhol Beater
1750	Dhol Stick
1751	Dhol Hand
1752	Dhol Body
1753	Dhol 1
1754	Dhol 2
1755	Doholla Dom
1756	Doholla Sak
1757	Doholla Tak
1758	Dla Rim
1759	Dla Sak
1760	Dof 2 Dmo
1761	Dof 1 Rim
1762	Dof 1 Dom
1763	Dof 1 Sak
1764	Hager
1765	Zir
1766	Nakrazn
1767	Dholak 1
1768	Dholak 2
1769	Dholak 3
1770	Dholak 4
1771	Dholak 5
1772	Dholak Ga
1773	Dholak 6
1774	Dholak 7
1775	Dholak 8
1776	Dholak Na
1777	Dholak Tun
1778	Tabel H Dom
1779	Tabel H Sak2

No.	Name
1780	Tabel H Sak1
1781	Tabel H Tac
1782	Tabel L Dom
1783	Tabel L Sak1
1784	Tabel L Sak2
1785	Tabel L Tac
1786	Merjaf Dom
1787	Merjaf Tac
1788	Merjaf Sak
1789	Surdo
1790	Surdo Open L
1791	Surdo Open H
1792	Surdo Mute 1
1793	Surdo Rim 1
1794	Surdo Hard
1795	Surdo Open 1
1796	Surdo Open 2
1797	Surdo Mute 2
1798	Surdo Rim 2
1799	Surdo Soft
1800	Caixa Open1
1801	Caixa Open2
1802	Caixa Roll
1803	Caixa Mute
1804	Caixa Open3
1805	Caixa Mute2
1806	Caixa Roll 2
1807	Caixa Rim
1808	RepiniqueHrd
1809	RepiniqueSft
1810	Repinique1
1811	Repinique2
1812	Repique Open
1813	Repique Rim
1814	Repique Roll
1815	Timpani
1816	Open Triangl
1817	Triangle 2
1818	Triangle 3
1819	Sagat Mid
1820	Sagat Hi
1821	Sagat Sak
1822	Sagat Open 1
1823	Sagat Close1
1824	Twesat 1
1825	Twesat Prc
1826	Twesat 2
1827	Zil Open
1828	Zil Close
1829	Clapstick
1830	Agogo 1
1831	Agogo 2 Lo
1832	Agogo 2 Hi
1833	Agogo 3 Lo
1834	Agogo 3 Hi
1835	Asian Gong 1
1836	GamelanGong1
1837	Wind Bell 1
1838	Kane 1
1839	JingleBell 2
1840	Wind Chime 2
1841	Sarna Bell
1842	Berimbau Opn
1843	Berimbau Up
1844	Berimbau Dn
1845	Berimbau Mut
1846	180:LatinPtn
1847	160:CgMambo
1848	132:TmbI Ptn
1849	104:Shakin'
1850	132:AgogoPtn
1851	118:TablaBy1
1852	118:TablaBy2
1853	92:DholakPh1
1854	92:DholakPh2
1855	120:Dhol Ph
1856	SectChd 13th
1857	SectChd m9
1858	SectChd MJ9
1859	MC500 Beep 3
1860	Boing
1861	G-Accord 1 L

No.	Name
1862	G-Accord 1 R
1863	G-Accord 2 L
1864	G-Accord 2 R
1865	G-Accord 3 L
1866	G-Accord 3 R
1867	C-Accord A1L
1868	C-Accord A1R
1869	C-Accord A2L
1870	C-Accord A2R
1871	C-Accord A3L
1872	C-Accord A3R
1873	C-Accord N1L
1874	C-Accord N1R
1875	C-Accord N2
1876	E-Accord 1
1877	E-Accord 2
1878	BajoSxt mf
1879	BajoSxt f
1880	BajoSxtMute1
1881	BajoSxtMute2
1882	CharangUp mf
1883	CharangUp f
1884	ChrngOctUpmf
1885	ChrngOctUp f
1886	Guitarrn p
1887	Guitarrn mf
1888	MariTp Vb mf
1889	MariTp Vb f
1890	MariTpVbwAtk
1891	MariTp Stc f
1892	Banda Tp Vib
1893	Banda Tp Stc
1894	Banda TbnVib
1895	Banda TbnStc
1896	Banda Tuba
1897	BandaTubaStc
1898	Banda ClaVib
1899	Banda ClaStc
1900	CharangDw mf
1901	CharangDw f
1902	ChrngOctDwmf
1903	ChrngOctDw f
1904	Ac.Pno p A L
1905	Ac.Pno p A R
1906	Ac.Pno p B L
1907	Ac.Pno p B R
1908	Ac.Pno p C L
1909	Ac.Pno p C R
1910	Ac.Pno f A L
1911	Ac.Pno f A R
1912	Ac.Pno f B L
1913	Ac.Pno f B R
1914	Ac.Pno f C L
1915	Ac.Pno f C R
1916	Dyno EP ff A
1917	Dyno EP ff B
1918	Dyno EP ff C
1919	RtryOrg1 A L
1920	RtryOrg1 A R
1921	RtryOrg1 B L
1922	RtryOrg1 B R
1923	RtryOrg1 C L
1924	RtryOrg1 C R
1925	Nylon Gtr3 B
1926	Ac.Gtr ff A
1927	Ac.Gtr ff B
1928	Ac.Gtr ff C
1929	Ac.Gtr Sld A
1930	Ac.Gtr Sld B
1931	Ac.Gtr Sld C
1932	Ac.Gtr Hrm2B
1933	Clean Gtr2 B
1934	Clean Gtr2 C
1935	Brt Strat2 B
1936	Brt Strat2 C
1937	FstPick70s2B
1938	FstPick70s2C
1939	Overdrive2 C
1940	Distortion2B
1941	Distortion2C
1942	Banjo 2 B
1943	Sitar 5 B

No.	Name
1944	Sitar 5 C
1945	E.Sitar 2 B
1946	E.Sitar 2 C
1947	FngrCmp Bs A
1948	FngrCmp Bs B
1949	FngrCmp Bs C
1950	ThumbMtBs pA
1951	ThumbMtBs pB
1952	ThumbMtBs pC
1953	ThumbMtBs fA
1954	ThumbMtBs fB
1955	ThumbMtBs fC
1956	DistTB Sqr
1957	Oboe Mezzo A
1958	Oboe Mezzo B
1959	Oboe Mezzo C
1960	Bari.Sax 2 A
1961	Bari.Sax 2 B
1962	Bari.Sax 2 C
1963	OctBrs f A L
1964	OctBrs f A R
1965	OctBrs f B L
1966	OctBrs f B R
1967	OctBrs f C L
1968	OctBrs f C R
1969	OrchUnis2 BL
1970	OrchUnis2 BR
1971	OrchUnis2 CL
1972	OrchUnis2 CR
1973	Violin Vib A
1974	Violin Vib B
1975	Violin Vib C
1976	Cello Vib A
1977	Cello Vib B
1978	Cello Vib C
1979	Cello 2 A
1980	Cello 2 B
1981	Cello 2 C
1982	VI Sect.2 BL
1983	VI Sect.2 BR
1984	VI Sect.2 CL
1985	VI Sect.2 CR
1986	Vc Sect.2 BL
1987	Vc Sect.2 BR
1988	Vc Sect.2 CL
1989	Vc Sect.2 CR
1990	Full Str2 BL
1991	Full Str2 BR
1992	Full Str2 CL
1993	Full Str2 CR
1994	ChmbrStrAt2B
1995	ChmbrStrAt2C
1996	Vls Pizz 2 B
1997	Vls Pizz 2 C
1998	Vcs Pizz 2 B
1999	Vcs Pizz 2 C
2000	OB2 Pad 3 B
2001	Jazz Doos A
2002	Jazz Doos B
2003	Jazz Doos C
2004	Jz Doos Lp A
2005	Jz Doos Lp B
2006	Jz Doos Lp C
2007	JD Cowbell
2008	Vinyl Noise
2009	Scratch 5
2010	MG Zap 4
2011	MG Zap 5
2012	MG Zap 6
2013	MG Zap 7
2014	MG Zap 8
2015	Syn Hrd Atk3
2016	Syn Mtl Atk1
2017	Syn Mtl Atk2
2018	Syn Swt Atk5
2019	Syn Swt Atk6
2020	Syn Swt Atk7
2021	Reg.Kick p L
2022	Reg.Kick p R
2023	Reg.Kick f L
2024	Reg.Kick f R
2025	Rock Kick p

Waveform List

No.	Name	No.	Name	No.	Name	No.	Name	No.	Name
2026	Rock Kick f	2062	TR909 Snr 4	2098	TR606 CHH	2134	Timbale 4	2170	SF CStk p L
2027	Jazz Kick p	2063	TR909 Snr 5	2099	TR606 DstCHH	2135	Cabasa Up 3	2171	SF CStk p R
2028	Jazz Kick mf	2064	TR909 Snr 6	2100	Dance CHH	2136	Guiro 1	2172	SF L.Tom mf
2029	Jazz Kick f	2065	Urbn Sn Roll	2101	TR909 PHH 1	2137	Tambourine 2	2173	SF L.Tom ff
2030	Dry Kick 1	2066	Hard Stick	2102	TR909 PHH 2	2138	Tambourine 3	2174	SF M.Tom mf
2031	Tight Kick	2067	Dry Stick	2103	TR808 PHH	2139	Tambourine 4	2175	SF M.Tom ff
2032	Old Kick	2068	R8 Comp Rim	2104	TR606 PHH	2140	Cuica 3	2176	SF H.Tom mf
2033	Dry Kick 2	2069	TR909 Rim	2105	Lo-Bit OHH	2141	Triangle 4	2177	SF H.Tom f
2034	Dry Kick 3	2070	Reg.L.Tom p	2106	HipHop OHH	2142	Reverse Cym2	2178	RR FT Flm ff
2035	Power Kick	2071	Reg.L.Tom f	2107	TR909 OHH 1	2143	F.Str mp A L	2179	SF LT Flm ff
2036	R&B Kick L	2072	Reg.M.Tom p	2108	TR909 OHH 2	2144	F.Str mp A R	2180	SF MT Flm f
2037	Rk CmpKick L	2073	Reg.M.Tom f	2109	TR808 OHH 2	2145	Mrcrt A L	2181	SF HT Flm p
2038	Rk CmpKick R	2074	Reg.H.Tom p	2110	TR808 OHH 3	2146	Mrcrt A R	2182	SF HT Flm f
2039	70's Kick	2075	Reg.H.Tom f	2111	Lite OHH	2147	RR F.Tom mp	2183	SF HT Flm ff
2040	Dance Kick	2076	Reg.L.TomFlm	2112	Rock Crash 3	2148	RR F.Tom ff	2184	808 Kick 1 P
2041	HipHop Kick	2077	Reg.M.TomFlm	2113	Jazz Crash	2149	SF Kick 2 L	2185	808 Kick 2 P
2042	Plastic Kick	2078	Reg.H.TomFlm	2114	TR909 Crash	2150	SF Kick 2 R	2186	909 Kick 1 P
2043	AnalogKick 2	2079	Jazz Lo Tom	2115	Ride Bell	2151	SF Snr p L	2187	909 Kick 2 P
2044	TR909 Kick 3	2080	Jazz Mid Tom	2116	Jazz Ride p	2152	SF Snr p R	2188	909 Kick 3 P
2045	TR909 Kick 4	2081	Jazz Hi Tom	2117	Jazz Ride mf	2153	SF Snr f L	2189	JungleKick P
2046	TR707 Kick	2082	Jazz Lo Flm	2118	TR909 Ride	2154	SF Snr f R	2190	808 Snr 1 P
2047	TR909 Kick 5	2083	Jazz Mid Flm	2119	Hand Clap	2155	SF Snr ff L	2191	808 Snr 2 P
2048	Reg.SnrFlm L	2084	Jazz Hi Flm	2120	Bright Clap	2156	SF Snr ff R	2192	909 Snr 1 P
2049	Amb.Snr 1 p	2085	Dry Lo Tom	2121	Disc Clap	2157	SF Rim p L	2193	909 Snr 2 P
2050	Amb.Snr2 p L	2086	TR909 Tom	2122	TR909 Clap 1	2158	SF Rim p R	2194	626 Snr P
2051	Amb.Snr2 p R	2087	TR909 DstTom	2123	TR909 Clap 2	2159	SF Rim mf L	2195	106 Snr
2052	Maple Snr	2088	Rock CHH1 mf	2124	Cheap Clap	2160	SF Rim mf R	2196	Jungle Snr P
2053	Light Snr ff	2089	Rock CHH1 f	2125	Snap	2161	SF Rim f L	2197	Claptail
2054	Snr Roll Lp	2090	Snr CHH2 mf	2126	Cowbell Mute	2162	SF Rim f R	2198	Dist Clap
2055	Soft Jz Roll	2091	Rock CHH2 f	2127	Wood Block 4	2163	SF SnrGst1 L		
2056	BrushRoll Lp	2092	Rock OHH	2128	Bongo Hi Op	2164	SF SnrGst1 R		
2057	Dirty Snr	2093	HipHop CHH	2129	Bongo Lo Op	2165	SF SnrGst2 L		
2058	Lo-Bit Snr	2094	TR909 CHH 1	2130	Conga2 Hi Mt	2166	SF SnrGst2 R		
2059	Jngl pkt Snr	2095	TR909 CHH 2	2131	Conga2 HiSlp	2167	R&B ShrtSnr1		
2060	Flange Snr	2096	TR808 CHH 2	2132	Conga2 Hi Op	2168	Vint Snr		
2061	Analog Snr 2	2097	TR808 CHH 3	2133	Conga2 LowOp	2169	Short Snr		

INTB

No.	Name	No.	Name	No.	Name	No.	Name	No.	Name
0001	GrandP* 1 mp	0040	Qudi 2 mp	0079	Naggra 3 ff	0118	Dap 15	0157	Kopyak Mt
0002	GrandP* 1 f	0041	Qudi 2 f	0080	Naggra 4 p	0119	Dap 16	0158	Kopyak Op
0003	GrandP* 1 ff	0042	Qudi 2 Orna	0081	Naggra 4 mf	0120	Dap Roll 1	0159	Chenchen Opn
0004	GrandP* 2 mp	0043	Xiao 2 f	0082	Naggra 4 f	0121	Dap Roll 2	0160	Chenchen Cls
0005	GrandP* 2 f	0044	Xiao2 Vib f	0083	Naggra 4 ff	0122	Dap Roll 3	0161	Ceng Ceng 2
0006	GrandP* 2 ff	0045	Hulusi 2 mf	0084	Nggr Flam 1	0123	Dap Roll 4	0162	Kwaengwari f
0007	GrandP*mp CL	0046	Hulusi Atk	0085	Nggr Flam 2	0124	Dap Roll 5	0163	KwaengwariMt
0008	GrandP*mp CR	0047	Gu Roll	0086	Nggr Flam 3	0125	Dap Roll 6	0164	Sagat Open 2
0009	GrandP* f CL	0048	Gu Hi	0087	Nggr Flam 4	0126	Dap Roll 7	0165	Sagat Close2
0010	GrandP* f CR	0049	Changgo	0088	Nggr Mute p	0127	Tabla 1	0166	Asian Gong 2
0011	GrandP*ff CL	0050	Tang Gu Mt	0089	Nggr Mute mf	0128	Tabla 2	0167	Shou Luo 1
0012	GrandP*ff CR	0051	Tang Gu Op	0090	Nggr Mute f	0129	Tabla 3	0168	Shou Luo 2
0013	Erhu 4 mp	0052	Shu Gu Rim	0091	Nggr Mute ff	0130	Tabla 4	0169	HuYinLuoH Op
0014	Erhu 4 f	0053	Shu Gu	0092	Nggr Roll 1	0131	Tabla 5	0170	HuYinLuoL Op
0015	Erhu 4 Vib	0054	Shu Ban	0093	Nggr Roll 2	0132	Tabla 6	0171	HuYinLuoH Mt
0016	Erhu 4 Harm	0055	Dholak 9	0094	Nggr Roll 3	0133	Tabla 7	0172	HuYinLuoL Mt
0017	Banhu mf	0056	Dholak 10	0095	Nggr Roll 4	0134	Tabla 8	0173	Big Gong
0018	Banhu Vib	0057	Dhol 3	0096	Nggr Side p	0135	Tabla 9	0174	Kane 2
0019	Banhu Harm	0058	Wadon 8	0097	Nggr Side mf	0136	Tabla 10	0175	Kane Side
0020	Banhu Orna	0059	Wadon 9	0098	Nggr Side f	0137	Tabla 11	0176	Kwaengwari p
0021	Jinghu mf	0060	Wadon 10	0099	Nggr Side ff	0138	TablaRoll 1	0177	GamelanGong2
0022	Jinghu f	0061	Wadon 11	0100	Dap 1 p	0139	TablaRoll 2	0178	Saron
0023	Sihu mp	0062	Wadon 12	0101	Dap 1 f	0140	TablaRoll 3	0179	Wind Bell 2
0024	Sihu mf	0063	Wadon 13	0102	Dap 2 p	0141	TablaRoll 4	0180	Jinghu Menu
0025	Sihu w/Atk	0064	Wadon 14	0103	Dap 2 mf	0142	TablaRoll 5	0181	Sihu Menu
0026	Sihu Harm	0065	Wadaiko	0104	Dap 2 f	0143	TablaRoll 6	0182	Matoqn Menu
0027	Matouqin2 mp	0066	Shimedaiko	0105	Dap 2 ff	0144	TablaRoll 7	0183	118:China Ph
0028	Matouqin2Vib	0067	Wadaiko Rim	0106	Dap 3	0145	TablaRoll 8	0184	132:China Ph
0029	Yangqin 2 mp	0068	Naggra 1 p	0107	Dap 4	0146	TablaRoll 9		
0030	Yangqin 2 mf	0069	Naggra 1 mf	0108	Dap 5	0147	Cga Mute Hi		
0031	Yangqin 2Hrd	0070	Naggra 1 f	0109	Dap 6	0148	Cga Mute Lo		
0032	Yangqin2Trem	0071	Naggra 1 ff	0110	Dap 7	0149	Mokugyo 1		
0033	Zhongruan mp	0072	Naggra 2 p	0111	Dap 8	0150	Mokugyo 2		
0034	Zhongruan mf	0073	Naggra 2 mf	0112	Dap 9	0151	Ban Gu 3		
0035	Zhngruan Hrm	0074	Naggra 2 f	0113	Dap 10	0152	Ban Gu 4		
0036	ZhngruanStrm	0075	Naggra 2 ff	0114	Dap 11	0153	Ban Gu 5		
0037	Guqin mp	0076	Naggra 3 p	0115	Dap 12	0154	Ohkawa		
0038	Guqin mf	0077	Naggra 3 mf	0116	Dap 13	0155	Nao Bo		
0039	Guqin Harm	0078	Naggra 3 f	0117	Dap 14	0156	Xiao Bo		

Patch List

Bank: PRST

No.		Name	Sub-category	MSB	LSB	PC
0001	Pf:001	Grand Pno DS	PNO	087	064	001
0002	Pf:002	88StageGrand	PNO	087	064	002
0003	Pf:003	88StgGrand 2	PNO	087	064	003
0004	Pf:004	88StgGrand 3	PNO	087	064	004
0005	Pf:005	JUNO Piano 1	PNO	087	064	005
0006	Pf:006	JUNO Piano 2	PNO	087	064	006
0007	Pf:007	Rich Grand 1	PNO	087	064	007
0008	Pf:008	Rich Grand 2	PNO	087	064	008
0009	Pf:009	Piano+Str 1	PNO	087	064	009
0010	Pf:010	Fairy Piano	PNO	087	064	010
0011	Pf:011	Pop Piano 1	PNO	087	064	011
0012	Pf:012	Pop Piano 2	PNO	087	064	012
0013	Pf:013	ConcertGrand	PNO	087	064	013
0014	Pf:014	Warm Tune	PNO	087	064	014
0015	Pf:015	Hall Concert	PNO	087	064	015
0016	Pf:016	Mellow Tune	PNO	087	064	016
0017	Pf:017	Mono Piano 1	PNO	087	064	017
0018	Pf:018	Mono Piano 2	PNO	087	064	018
0019	Pf:019	Mono Piano 3	PNO	087	064	019
0020	Pf:020	Piano+Pad 1	PNO	087	064	020
0021	Pf:021	Piano+Pad 2	PNO	087	064	021
0022	Pf:022	Piano+Vox	PNO	087	064	022
0023	Pf:023	Piano+Str 2	PNO	087	064	023
0024	Pf:024	Layers	PNO	087	064	024
0025	Pf:025	Grand Hall	PNO	087	064	025
0026	Pf:026	Cicada Piano	PNO	087	064	026
0027	Pf:027	Rapsody	PNO	087	064	027
0028	Pf:028	Pop Piano 3	PNO	087	064	028
0029	Pf:029	Pop Piano 4	PNO	087	064	029
0030	Pf:030	Radio Piano	PNO	087	064	030
0031	Pf:031	Rokkin' pF	PNO	087	064	031
0032	Pf:032	JD Piano 1	PNO	087	064	032
0033	Pf:033	JD Piano 2	PNO	087	064	033
0034	Pf:034	JD Piano&Str	PNO	087	064	034
0035	Pf:035	SA Dance Pno	PNO	087	064	035
0036	Pf:036	E-Grand	PNO	087	064	036
0037	Pf:037	Back E-Grand	PNO	087	064	037
0038	Pf:038	Dark Grand	PNO	087	064	038
0039	Pf:039	Grand+FM	PNO	087	064	039
0040	Pf:040	Blend Piano	PNO	087	064	040
0041	Pf:041	Piano Oz	PNO	087	064	041
0042	Pf:042	Meditate Pno	PNO	087	064	042
0043	Pf:043	FX Piano	PNO	087	064	043
0044	Pf:044	AmbientPiano	PNO	087	064	044
0045	Pf:045	Pure EP	EP	087	064	045
0046	Pf:046	Pure EP Trem	EP	087	064	046
0047	Pf:047	Stage Phazer	EP	087	064	047
0048	Pf:048	SA EPiano 1	EP	087	064	048
0049	Pf:049	FM EP 1	EP	087	064	049
0050	Pf:050	Pure Wurly 1	EP	087	064	050
0051	Pf:051	Wurly Trem 1	EP	087	064	051
0052	Pf:052	VelSpdWurly	EP	087	064	052
0053	Pf:053	Phase EP 1	EP	087	064	053
0054	Pf:054	Phase Stg EP	EP	087	064	054
0055	Pf:055	Flanger EP	EP	087	064	055
0056	Pf:056	TEL Stage EP	EP	087	064	056
0057	Pf:057	Vintage EP 1	EP	087	064	057
0058	Pf:058	Vintage EP 2	EP	087	064	058
0059	Pf:059	Vintage EP 3	EP	087	064	059
0060	Pf:060	Stage EP 1	EP	087	064	060
0061	Pf:061	Stage EP 2	EP	087	064	061
0062	Pf:062	StageCabinet	EP	087	064	062
0063	Pf:063	StageEP Trem	EP	087	064	063
0064	Pf:064	EP Trem 1	EP	087	064	064
0065	Pf:065	EP Trem 2	EP	087	064	065
0066	Pf:066	EP Trem 3	EP	087	064	066
0067	Pf:067	EP Chorus 1	EP	087	064	067
0068	Pf:068	EP Chorus 2	EP	087	064	068
0069	Pf:069	EP Chorus 3	EP	087	064	069
0070	Pf:070	Phase EP 2	EP	087	064	070
0071	Pf:071	80s EP 1	EP	087	064	071
0072	Pf:072	Dyno EP	EP	087	064	072
0073	Pf:073	E.Piano	EP	087	064	073
0074	Pf:074	Back2the60s	EP	087	064	074
0075	Pf:075	Tine EP	EP	087	064	075
0076	Pf:076	LEO EP	EP	087	064	076
0077	Pf:077	SA EPiano 2	EP	087	064	077
0078	Pf:078	SA EP Trem	EP	087	064	078
0079	Pf:079	FM EP mix	EP	087	064	079

No.		Name	Sub-category	MSB	LSB	PC
0080	Pf:080	FM-777	EP	087	064	080
0081	Pf:081	FM EP 2	EP	087	064	081
0082	Pf:082	FM EP 3	EP	087	064	082
0083	Pf:083	FM EP 4	EP	087	064	083
0084	Pf:084	Pure Wurly 2	EP	087	064	084
0085	Pf:085	Pure Wurly 3	EP	087	064	085
0086	Pf:086	Wurly Trem 2	EP	087	064	086
0087	Pf:087	Wurly Trem 3	EP	087	064	087
0088	Pf:088	EP Layer	EP	087	064	088
0089	Pf:089	80s EP 2	EP	087	064	089
0090	Pf:090	Pop EP	EP	087	064	090
0091	Pf:091	EP Bell 1	EP	087	064	091
0092	Pf:092	EP Bell 2	EP	087	064	092
0093	Pf:093	LonesomeRoad	EP	087	064	093
0094	Pf:094	Age'nTines	EP	087	064	094
0095	Pf:095	Brill TremEP	EP	087	064	095
0096	Pf:096	Crystal EP	EP	087	064	096
0097	Pf:097	Vintage Tine	EP	087	064	097
0098	Pf:098	Mk2 Stg phsr	EP	087	064	098
0099	Pf:099	Celestial EP	EP	087	064	099
0100	Pf:100	Psycho EP 1	EP	087	064	100
0101	Pf:101	Psycho EP 2	EP	087	064	101
0102	Pf:102	TineEP+Pad	EP	087	064	102
0103	Pf:103	Wurly+Pad	EP	087	064	103
0104	Pf:104	Dreaming EP	EP	087	064	104
0105	Pf:105	Balladeer	EP	087	064	105
0106	Pf:106	Remember	EP	087	064	106
0107	Pf:107	Vibe EP	EP	087	064	107
0108	Pf:108	sin(EP)	EP	087	064	108
0109	Pf:109	Fonky Fonky	EP	087	064	109
0110	Pf:110	FM EPad	EP	087	064	110
0111	Pf:111	EP Stack	EP	087	064	111
0112	Ky:001	HardRockORG1	ORG	087	064	112
0113	Ky:002	HardRockORG2	ORG	087	064	113
0114	Ky:003	GT Org Stack	ORG	087	064	114
0115	Ky:004	GT Org Std	ORG	087	064	115
0116	Ky:005	GT Org Clean	ORG	087	064	116
0117	Ky:006	Perc Organ 1	ORG	087	064	117
0118	Ky:007	FullStop Org	ORG	087	064	118
0119	Ky:008	FullDraw Org	ORG	087	064	119
0120	Ky:009	StakDraw Org	ORG	087	064	120
0121	Ky:010	JUNO PercOrg	ORG	087	064	121
0122	Ky:011	VKHold4Speed	ORG	087	064	122
0123	Ky:012	Pop Organ 1	ORG	087	064	123
0124	Ky:013	Pop Organ 2	ORG	087	064	124
0125	Ky:014	Pop Organ 3	ORG	087	064	125
0126	Ky:015	B Org 1	ORG	087	064	126
0127	Ky:016	B Org 2	ORG	087	064	127
0128	Ky:017	B Org 3	ORG	087	064	128
0129	Ky:018	B Org 4	ORG	087	065	001
0130	Ky:019	D.Bar Org 1	ORG	087	065	002
0131	Ky:020	D.Bar Org 2	ORG	087	065	003
0132	Ky:021	D.Bar Org 3	ORG	087	065	004
0133	Ky:022	D.Bar Org 4	ORG	087	065	005
0134	Ky:023	D.Bar Org 5	ORG	087	065	006
0135	Ky:024	D.Bar Org 6	ORG	087	065	007
0136	Ky:025	D.Bar Org 7	ORG	087	065	008
0137	Ky:026	D.Bar Org 8	ORG	087	065	009
0138	Ky:027	Perc Organ 2	ORG	087	065	010
0139	Ky:028	X Perc Organ	ORG	087	065	011
0140	Ky:029	Rhythm'n'B	ORG	087	065	012
0141	Ky:030	Phono Organ	ORG	087	065	013
0142	Ky:031	Rochno Org	ORG	087	065	014
0143	Ky:032	R&B Organ 1	ORG	087	065	015
0144	Ky:033	R&B Organ 2	ORG	087	065	016
0145	Ky:034	SuperDistOrg	ORG	087	065	017
0146	Ky:035	SuperDist Ld	ORG	087	065	018
0147	Ky:036	Dist Bee	ORG	087	065	019
0148	Ky:037	LoFi PercOrg	ORG	087	065	020
0149	Ky:038	60's Org 1	ORG	087	065	021
0150	Ky:039	60's Org 2	ORG	087	065	022
0151	Ky:040	Smoky Organ	ORG	087	065	023
0152	Ky:041	Soap Opera	ORG	087	065	024
0153	Ky:042	Crummy Organ	ORG	087	065	025
0154	Ky:043	Aqua Org/Pno	ORG	087	065	026
0155	Ky:044	Positive Org	ORG	087	065	027
0156	Ky:045	Chapel Organ	ORG	087	065	028
0157	Ky:046	Cathedral	ORG	087	065	029
0158	Ky:047	Grand Pipe	ORG	087	065	030
0159	Ky:048	Pipe Organ 1	ORG	087	065	031
0160	Ky:049	Pipe Organ 2	ORG	087	065	032

Patch List

No.		Name	Sub-category	MSB	LSB	PC
0161	Ky:050	Masked Opera	ORG	087	065	033
0162	Ky:051	Clavi 1	KEY	087	065	034
0163	Ky:052	Clavi 2	KEY	087	065	035
0164	Ky:053	Phase Clavi1	KEY	087	065	036
0165	Ky:054	Phase Clavi2	KEY	087	065	037
0166	Ky:055	AnalogClavi1	KEY	087	065	038
0167	Ky:056	Pulse Clavi	KEY	087	065	039
0168	Ky:057	VintageClavi	KEY	087	065	040
0169	Ky:058	Cutter Clavi	KEY	087	065	041
0170	Ky:059	Over-D6	KEY	087	065	042
0171	Ky:060	Cell Clavi	KEY	087	065	043
0172	Ky:061	Clavi 3	KEY	087	065	044
0173	Ky:062	Clavi 4	KEY	087	065	045
0174	Ky:063	Clavi 5	KEY	087	065	046
0175	Ky:064	Funky D	KEY	087	065	047
0176	Ky:065	Funky Line	KEY	087	065	048
0177	Ky:066	AnalogClavi2	KEY	087	065	049
0178	Ky:067	PWM Clavi	KEY	087	065	050
0179	Ky:068	Biting Clavi	KEY	087	065	051
0180	Ky:069	Reso Clavi	KEY	087	065	052
0181	Ky:070	BPF Clavi Ph	KEY	087	065	053
0182	Ky:071	Snappy Clavi	KEY	087	065	054
0183	Ky:072	Harpsy Clavi	KEY	087	065	055
0184	Ky:073	JUNO Harpsi	KEY	087	065	056
0185	Ky:074	Amadeus	KEY	087	065	057
0186	Ky:075	Music Bells	BEL	087	065	058
0187	Ky:076	D50Fantasia1	BEL	087	065	059
0188	Ky:077	D50Fantasia2	BEL	087	065	060
0189	Ky:078	Friends Bell	BEL	087	065	061
0190	Ky:079	FM Syn Bell	BEL	087	065	062
0191	Ky:080	Dreaming Box	BEL	087	065	063
0192	Ky:081	Himalaya Ice	BEL	087	065	064
0193	Ky:082	Wine Glass	BEL	087	065	065
0194	Ky:083	MuBox Pad	BEL	087	065	066
0195	Ky:084	Pop Bell	BEL	087	065	067
0196	Ky:085	Candy Bell	BEL	087	065	068
0197	Ky:086	FM Heaven	BEL	087	065	069
0198	Ky:087	JUNO Celesta	BEL	087	065	070
0199	Ky:088	Celesta Trem	BEL	087	065	071
0200	Ky:089	Glocken	BEL	087	065	072
0201	Ky:090	Music Box 1	BEL	087	065	073
0202	Ky:091	Music Box 2	BEL	087	065	074
0203	Ky:092	Kalimbells	BEL	087	065	075
0204	Ky:093	JUNO Bell	BEL	087	065	076
0205	Ky:094	Grained Bell	BEL	087	065	077
0206	Ky:095	Chime	BEL	087	065	078
0207	Ky:096	Bell Ring	BEL	087	065	079
0208	Ky:097	Tubular Bell	BEL	087	065	080
0209	Ky:098	5th Key	BEL	087	065	081
0210	Ky:099	Bell Monitor	BEL	087	065	082
0211	Ky:100	TubyRuesday	BEL	087	065	083
0212	Ky:101	Step Ice	BEL	087	065	084
0213	Ky:102	Vibe Trem 1	MLT	087	065	085
0214	Ky:103	Vibe Trem 2	MLT	087	065	086
0215	Ky:104	Pure Vibe	MLT	087	065	087
0216	Ky:105	Ringy Vibes	MLT	087	065	088
0217	Ky:106	Airie Vibez	MLT	087	065	089
0218	Ky:107	JUNO Marimba	MLT	087	065	090
0219	Ky:108	Soft Marimba	MLT	087	065	091
0220	Ky:109	FM Wood	MLT	087	065	092
0221	Ky:110	Xylo	MLT	087	065	093
0222	Ky:111	Ethno Keys	MLT	087	065	094
0223	Ky:112	Synergy MLT	MLT	087	065	095
0224	Ky:113	JUNO SteelDr	MLT	087	065	096
0225	Ky:114	50'SteelDrms	MLT	087	065	097
0226	Ky:115	Xylosizer	MLT	087	065	098
0227	Ky:116	AirPluck	MLT	087	065	099
0228	Ky:117	Toy Box	MLT	087	065	100
0229	Ky:118	Icy Keys	MLT	087	065	101
0230	Ky:119	Squeeze Me!	ACD	087	065	102
0231	Ky:120	Vodkakordion	ACD	087	065	103
0232	Ky:121	Guinguette	ACD	087	065	104
0233	Ky:122	JUNO Harm	HRM	087	065	105
0234	Ky:123	Blues harp	HRM	087	065	106
0235	Ky:124	Green Bullet	HRM	087	065	107
0236	Gt:001	JUNO Nylon	AGT	087	065	108
0237	Gt:002	Comp Stl Gtr	AGT	087	065	109
0238	Gt:003	Pre Mass Hum	AGT	087	065	110
0239	Gt:004	Uncle Martin	AGT	087	065	111
0240	Gt:005	12str Guitar	AGT	087	065	112
0241	Gt:006	Nylon Gtr	AGT	087	065	113

No.		Name	Sub-category	MSB	LSB	PC
0242	Gt:007	SoftNylN Gtr	AGT	087	065	114
0243	Gt:008	Wet NylN Gtr	AGT	087	065	115
0244	Gt:009	Bright Nylon	AGT	087	065	116
0245	Gt:010	Pure Nylon	AGT	087	065	117
0246	Gt:011	Nylon Delay	AGT	087	065	118
0247	Gt:012	Thick Steel	AGT	087	065	119
0248	Gt:013	Wide Ac Gtr	AGT	087	065	120
0249	Gt:014	So good !	AGT	087	065	121
0250	Gt:015	Jazz Guitar1	EGT	087	065	122
0251	Gt:016	Jazz Guitar2	EGT	087	065	123
0252	Gt:017	DynoJazz Gtr	EGT	087	065	124
0253	Gt:018	Clean Gtr 1	EGT	087	065	125
0254	Gt:019	Clean Gtr 2	EGT	087	065	126
0255	Gt:020	Pick Gtr	EGT	087	065	127
0256	Gt:021	Strat Gtr 1	EGT	087	065	128
0257	Gt:022	Strat Gtr 2	EGT	087	066	001
0258	Gt:023	Funk Gtr	EGT	087	066	002
0259	Gt:024	StratSeq'nce	EGT	087	066	003
0260	Gt:025	Plug n' Gig1	EGT	087	066	004
0261	Gt:026	Plug n' Gig2	EGT	087	066	005
0262	Gt:027	Kinda Kurt	EGT	087	066	006
0263	Gt:028	Nice Oct Gtr	EGT	087	066	007
0264	Gt:029	Crimson Gtr	EGT	087	066	008
0265	Gt:030	Plugged!!	DGT	087	066	009
0266	Gt:031	Punker 1	DGT	087	066	010
0267	Gt:032	Rockin' Dly	DGT	087	066	011
0268	Gt:033	Loud Gtr	DGT	087	066	012
0269	Gt:034	Searing Gtr	DGT	087	066	013
0270	Gt:035	Searing COSM	DGT	087	066	014
0271	Gt:036	OctSearingGt	DGT	087	066	015
0272	Gt:037	Dist.Fingerz	DGT	087	066	016
0273	Gt:038	Fuzz Gtr	DGT	087	066	017
0274	Gt:039	Crunch Twin	DGT	087	066	018
0275	Gt:040	Larsen	DGT	087	066	019
0276	Gt:041	Trem-o-Vibe	DGT	087	066	020
0277	Gt:042	Touch Drive	DGT	087	066	021
0278	Gt:043	Chunk Atk	DGT	087	066	022
0279	Gt:044	LP Dist	DGT	087	066	023
0280	Gt:045	Hurtling Gtr	DGT	087	066	024
0281	Gt:046	Power Chord	DGT	087	066	025
0282	Gt:047	Punker 2	DGT	087	066	026
0283	Gt:048	Ac Bass 1	BS	087	066	027
0284	Gt:049	Ac Bass 2	BS	087	066	028
0285	Gt:050	Ac Bass 3	BS	087	066	029
0286	Gt:051	Ulti Ac Bass	BS	087	066	030
0287	Gt:052	Downright Bs	BS	087	066	031
0288	Gt:053	Cmp'd Fng Bs	BS	087	066	032
0289	Gt:054	FingerMaster	BS	087	066	033
0290	Gt:055	Return2Base!	BS	087	066	034
0291	Gt:056	Finger Bs 1	BS	087	066	035
0292	Gt:057	Finger Bs 2	BS	087	066	036
0293	Gt:058	Finger Bs 3	BS	087	066	037
0294	Gt:059	Fretless Bs1	BS	087	066	038
0295	Gt:060	Fretless Bs2	BS	087	066	039
0296	Gt:061	Fretless Bs3	BS	087	066	040
0297	Gt:062	RichFretless	BS	087	066	041
0298	Gt:063	NewAge Frtls	BS	087	066	042
0299	Gt:064	P-Bass	BS	087	066	043
0300	Gt:065	Roomy Bass	BS	087	066	044
0301	Gt:066	All Round Bs	BS	087	066	045
0302	Gt:067	Pick Bass 1	BS	087	066	046
0303	Gt:068	Pick Bass 2	BS	087	066	047
0304	Gt:069	Thumb Up!	BS	087	066	048
0305	Gt:070	Tubby Mute	BS	087	066	049
0306	Gt:071	Chicken Bass	BS	087	066	050
0307	Gt:072	Snug Bass	BS	087	066	051
0308	Gt:073	Chorus Bass	BS	087	066	052
0309	Gt:074	A Big Pick	BS	087	066	053
0310	Gt:075	Slap Bass	BS	087	066	054
0311	Gt:076	Slap w/Fx	BS	087	066	055
0312	Gt:077	Basement	BS	087	066	056
0313	Gt:078	Low Bass	SBS	087	066	057
0314	Gt:079	Foundation	SBS	087	066	058
0315	Gt:080	SH Sawtooth	SBS	087	066	059
0316	Gt:081	Fat RubberBs	SBS	087	066	060
0317	Gt:082	Garage Bass1	SBS	087	066	061
0318	Gt:083	Reso SynBs 1	SBS	087	066	062
0319	Gt:084	TB Dist Bs	SBS	087	066	063
0320	Gt:085	JUNO Acid Bs	SBS	087	066	064
0321	Gt:086	Monster Bass	SBS	087	066	065
0322	Gt:087	Oil Can Bass	SBS	087	066	066

No.		Name	Sub-category	MSB	LSB	PC
0323	Gt:088	Pedal Syn Bs	SBS	087	066	067
0324	Gt:089	Big Mini 1	SBS	087	066	068
0325	Gt:090	Big Mini 2	SBS	087	066	069
0326	Gt:091	SH-2 Bs	SBS	087	066	070
0327	Gt:092	SH-101 Bs 1	SBS	087	066	071
0328	Gt:093	R&B Bass 1	SBS	087	066	072
0329	Gt:094	R&B Bass 2	SBS	087	066	073
0330	Gt:095	R&B Bass 3	SBS	087	066	074
0331	Gt:096	Moogy Bass 1	SBS	087	066	075
0332	Gt:097	Moogy Bass 2	SBS	087	066	076
0333	Gt:098	JUNO Reso	SBS	087	066	077
0334	Gt:099	Alpha SynBs1	SBS	087	066	078
0335	Gt:100	Alpha SynBs2	SBS	087	066	079
0336	Gt:101	SH Square	SBS	087	066	080
0337	Gt:102	Pedal Square	SBS	087	066	081
0338	Gt:103	Doze Bass 1	SBS	087	066	082
0339	Gt:104	VirtualRnBs1	SBS	087	066	083
0340	Gt:105	Saw&MG Bass1	SBS	087	066	084
0341	Gt:106	Square Bass	SBS	087	066	085
0342	Gt:107	Bs MG	SBS	087	066	086
0343	Gt:108	Bs Reso	SBS	087	066	087
0344	Gt:109	Bs SH	SBS	087	066	088
0345	Gt:110	Bs TB	SBS	087	066	089
0346	Gt:111	Bs MC	SBS	087	066	090
0347	Gt:112	Bs Pedal	SBS	087	066	091
0348	Gt:113	Bs Release	SBS	087	066	092
0349	Gt:114	Bs Cheeze	SBS	087	066	093
0350	Gt:115	Mini Like!	SBS	087	066	094
0351	Gt:116	MC-404 Bass	SBS	087	066	095
0352	Gt:117	Soft SynBass	SBS	087	066	096
0353	Gt:118	JUNO-106 Bs	SBS	087	066	097
0354	Gt:119	Smooth Bass	SBS	087	066	098
0355	Gt:120	Flat Bass	SBS	087	066	099
0356	Gt:121	Punch MG 2	SBS	087	066	100
0357	Gt:122	Electro Rubb	SBS	087	066	101
0358	Gt:123	R&B Bass 4	SBS	087	066	102
0359	Gt:124	Enorjizor	SBS	087	066	103
0360	Gt:125	LowFat Bass	SBS	087	066	104
0361	Gt:126	Doze Bass 2	SBS	087	066	105
0362	Gt:127	DCO Bass	SBS	087	066	106
0363	Gt:128	VirtualRnBs2	SBS	087	066	107
0364	Gt:129	Saw&MG Bass2	SBS	087	066	108
0365	Gt:130	MG+SubOsc Bs	SBS	087	066	109
0366	Gt:131	R&B Bass 5	SBS	087	066	110
0367	Gt:132	R&B Bass 6	SBS	087	066	111
0368	Gt:133	Not a Bass	SBS	087	066	112
0369	Gt:134	Reso SynBs 2	SBS	087	066	113
0370	Gt:135	SH-1 Bass	SBS	087	066	114
0371	Gt:136	SH-101 Bs 2	SBS	087	066	115
0372	Gt:137	Punch MG 1	SBS	087	066	116
0373	Gt:138	MKS-50 SynBs	SBS	087	066	117
0374	Gt:139	Gashed Bass	SBS	087	066	118
0375	Gt:140	Q Bass	SBS	087	066	119
0376	Gt:141	Super-G DX	SBS	087	066	120
0377	Gt:142	Kickin' Bass	SBS	087	066	121
0378	Gt:143	OilDrum Bass	SBS	087	066	122
0379	Gt:144	Dust Bass	SBS	087	066	123
0380	Gt:145	Glide-iator	SBS	087	066	124
0381	Gt:146	Acid Punch	SBS	087	066	125
0382	Gt:147	Unison Bass	SBS	087	066	126
0383	Gt:148	Detune Bass	SBS	087	066	127
0384	Gt:149	Lo Bass	SBS	087	066	128
0385	Gt:150	Garage Bass2	SBS	087	067	001
0386	Gt:151	Sub Sonic	SBS	087	067	002
0387	Gt:152	Jungle Bass	SBS	087	067	003
0388	Gt:153	R&B Bass 7	SBS	087	067	004
0389	Gt:154	Simply Basic	SBS	087	067	005
0390	Gt:155	Beepin Bass	SBS	087	067	006
0391	Gt:156	MC-TB Bass	SBS	087	067	007
0392	Gt:157	Acdg Bass	SBS	087	067	008
0393	Gt:158	Loco Voco	SBS	087	067	009
0394	Gt:159	Unplug it!	SBS	087	067	010
0395	Gt:160	S&H Bass	SBS	087	067	011
0396	Gt:161	Destroyed Bs	SBS	087	067	012
0397	Gt:162	Lo-Fi TB	SBS	087	067	013
0398	Gt:163	Drop Bass	SBS	087	067	014
0399	Gt:164	Big Mini 3	SBS	087	067	015
0400	Gt:165	Muffled MG	SBS	087	067	016
0401	Gt:166	Intrusive Bs	SBS	087	067	017
0402	Gt:167	Alpha SynBs3	SBS	087	067	018
0403	Gt:168	TransistorBs	SBS	087	067	019

No.		Name	Sub-category	MSB	LSB	PC
0404	Gt:169	JUNO-60 Bass	SBS	087	067	020
0405	Gt:170	Storm Bass	SBS	087	067	021
0406	Gt:171	Alpha ResoBs	SBS	087	067	022
0407	Gt:172	SH-101 Vibe	SBS	087	067	023
0408	Gt:173	Fazee Bass	SBS	087	067	024
0409	Gt:174	Hi-Energy Bs	SBS	087	067	025
0410	Gt:175	Low Nz Bass	SBS	087	067	026
0411	St:001	String Ens	STR	087	067	027
0412	St:002	JUNO Strings	STR	087	067	028
0413	St:003	Chamber Str1	STR	087	067	029
0414	St:004	Chamber Str2	STR	087	067	030
0415	St:005	Staccato	STR	087	067	031
0416	St:006	Pizzicato	STR	087	067	032
0417	St:007	Pizz/Stacc	STR	087	067	033
0418	St:008	Sahara Str	STR	087	067	034
0419	St:009	Random Mood	STR	087	067	035
0420	St:010	X Hall Str	STR	087	067	036
0421	St:011	DelayQuartet	STR	087	067	037
0422	St:012	Pop Str 1	STR	087	067	038
0423	St:013	Pop Str 2	STR	087	067	039
0424	St:014	Pop Str 3	STR	087	067	040
0425	St:015	WhiteStrings	STR	087	067	041
0426	St:016	JV Strings	STR	087	067	042
0427	St:017	Marcato	STR	087	067	043
0428	St:018	Strings 1	STR	087	067	044
0429	St:019	Strings 2	STR	087	067	045
0430	St:020	Stringz 101	STR	087	067	046
0431	St:021	Crossed Bows	STR	087	067	047
0432	St:022	Small Str	STR	087	067	048
0433	St:023	Warm Strings	STR	087	067	049
0434	St:024	DynaStrSect1	STR	087	067	050
0435	St:025	DynaStrSect2	STR	087	067	051
0436	St:026	Full Strings	STR	087	067	052
0437	St:027	X StrSection	STR	087	067	053
0438	St:028	Oct Strings	STR	087	067	054
0439	St:029	Strings 3	STR	087	067	055
0440	St:030	Monkey Str	STR	087	067	056
0441	St:031	Hybrid Str 1	STR	087	067	057
0442	St:032	Hybrid Str 2	STR	087	067	058
0443	St:033	Biggie Bows	STR	087	067	059
0444	St:034	Str Stacc mp	STR	087	067	060
0445	St:035	So Staccato	STR	087	067	061
0446	St:036	Long/Stacc	STR	087	067	062
0447	St:037	Pizz/Long	STR	087	067	063
0448	St:038	Vis PizzHall	STR	087	067	064
0449	St:039	DelicatePizz	STR	087	067	065
0450	St:040	Orch Pizz	STR	087	067	066
0451	St:041	BrightViolin	STR	087	067	067
0452	St:042	Bright Cello	STR	087	067	068
0453	St:043	Gang Strangs	STR	087	067	069
0454	St:044	Clustered!?!	STR	087	067	070
0455	St:045	Movie Scene	STR	087	067	071
0456	St:046	Mellow Tron	STR	087	067	072
0457	St:047	Tronic Str	STR	087	067	073
0458	St:048	Wind & Str 1	ORC	087	067	074
0459	St:049	Wind & Str 2	ORC	087	067	075
0460	St:050	Farewell	ORC	087	067	076
0461	St:051	Orch & Horns	ORC	087	067	077
0462	St:052	Soft Orch 1	ORC	087	067	078
0463	St:053	Soft Orch 2	ORC	087	067	079
0464	St:054	Henry IX	ORC	087	067	080
0465	St:055	Ending Scene	ORC	087	067	081
0466	St:056	Symphonika	ORC	087	067	082
0467	St:057	Cheezy Movie	HIT	087	067	083
0468	St:058	Philly Hit	HIT	087	067	084
0469	St:059	Smear Hit 1	HIT	087	067	085
0470	St:060	Smear Hit 2	HIT	087	067	086
0471	St:061	Good Old Hit	HIT	087	067	087
0472	St:062	Mix Hit 1	HIT	087	067	088
0473	St:063	Mix Hit 2	HIT	087	067	089
0474	St:064	Lo-Fi Hit	HIT	087	067	090
0475	St:065	2ble Action	HIT	087	067	091
0476	St:066	In da Cave	HIT	087	067	092
0477	St:067	Housechord	HIT	087	067	093
0478	St:068	Mod Chord	HIT	087	067	094
0479	St:069	Dance Steam	HIT	087	067	095
0480	Br:001	Bright Brass	BRS	087	067	096
0481	Br:002	BreakOut Brs	BRS	087	067	097
0482	Br:003	StackTp Sect	BRS	087	067	098
0483	Br:004	Tb Section	BRS	087	067	099
0484	Br:005	TpTb Sect.	BRS	087	067	100

Patch List

No.		Name	Sub-category	MSB	LSB	PC
0485	Br:006	Brass Sect 1	BRS	087	067	101
0486	Br:007	Brass Sect 2	BRS	087	067	102
0487	Br:008	Brass & Sax	BRS	087	067	103
0488	Br:009	Simple Tutti	BRS	087	067	104
0489	Br:010	Tpts & Tmbs	BRS	087	067	105
0490	Br:011	BrassPartOut	BRS	087	067	106
0491	Br:012	Full sForza	BRS	087	067	107
0492	Br:013	Stereo Brass	BRS	087	067	108
0493	Br:014	F.Horns Sect	BRS	087	067	109
0494	Br:015	Solo Tp	BRS	087	067	110
0495	Br:016	Ambi Tp	BRS	087	067	111
0496	Br:017	Horn Chops	BRS	087	067	112
0497	Br:018	Mute Tp	BRS	087	067	113
0498	Br:019	Harmon Mute	BRS	087	067	114
0499	Br:020	Soft Tb	BRS	087	067	115
0500	Br:021	Solo Tb	BRS	087	067	116
0501	Br:022	Solo Bone	BRS	087	067	117
0502	Br:023	Flugel Horn	BRS	087	067	118
0503	Br:024	Spit Flugel	BRS	087	067	119
0504	Br:025	XP Horn	BRS	087	067	120
0505	Br:026	Grande Tuba	BRS	087	067	121
0506	Br:027	JUNO Tuba	BRS	087	067	122
0507	Br:028	80s Brass 1	SBR	087	067	123
0508	Br:029	Wide Syn Brs	SBR	087	067	124
0509	Br:030	Poly Brass	SBR	087	067	125
0510	Br:031	JP8000 Brass	SBR	087	067	126
0511	Br:032	JUNO Brass	SBR	087	067	127
0512	Br:033	DetuneSawBrs	SBR	087	067	128
0513	Br:034	J-Pop Brass	SBR	087	068	001
0514	Br:035	80s Brass 2	SBR	087	068	002
0515	Br:036	80s Brass 3	SBR	087	068	003
0516	Br:037	80s Brass 4	SBR	087	068	004
0517	Br:038	80s Brass 5	SBR	087	068	005
0518	Br:039	Ana Brass	SBR	087	068	006
0519	Br:040	Soft Brass	SBR	087	068	007
0520	Br:041	Ox Brass	SBR	087	068	008
0521	Br:042	Syn Brass 1	SBR	087	068	009
0522	Br:043	Syn Brass 2	SBR	087	068	010
0523	Br:044	Xpand Brass1	SBR	087	068	011
0524	Br:045	Xpand Brass2	SBR	087	068	012
0525	Br:046	Super Saw	SBR	087	068	013
0526	Br:047	SoftSynBrass	SBR	087	068	014
0527	Br:048	Windy Synth	SBR	087	068	015
0528	Br:049	Silky JP	SBR	087	068	016
0529	Br:050	Silk Brs Pad	SBR	087	068	017
0530	Br:051	X-Saw Brass	SBR	087	068	018
0531	Br:052	Cheesy Brass	SBR	087	068	019
0532	Br:053	Dual Saw Brs	SBR	087	068	020
0533	Br:054	JUNO-106 Brs	SBR	087	068	021
0534	Br:055	BreakOut Key	SBR	087	068	022
0535	Br:056	Stacked Brs	SBR	087	068	023
0536	Br:057	Sax Sect. 1	SAX	087	068	024
0537	Br:058	Sax Sect. 2	SAX	087	068	025
0538	Br:059	Horny Sax	SAX	087	068	026
0539	Br:060	JUNO Sop Sax	SAX	087	068	027
0540	Br:061	Solo Sop Sax	SAX	087	068	028
0541	Br:062	JUNO AltoSax	SAX	087	068	029
0542	Br:063	AltoLead Sax	SAX	087	068	030
0543	Br:064	FXM Alto Sax	SAX	087	068	031
0544	Br:065	XP TnrBrethy	SAX	087	068	032
0545	Br:066	JUNO Tnr Sax	SAX	087	068	033
0546	Br:067	Fat TenorSax	SAX	087	068	034
0547	Br:068	JUNO BariSax	SAX	087	068	035
0548	Br:069	JUNO Flute	FLT	087	068	036
0549	Br:070	JUNO Piccolo	FLT	087	068	037
0550	Br:071	Clarence.net	WND	087	068	038
0551	Br:072	JUNO Oboe	WND	087	068	039
0552	Br:073	JUNO E.Horn	WND	087	068	040
0553	Br:074	JUNO Bassoon	WND	087	068	041
0554	Br:075	Good Old Day	WND	087	068	042
0555	Br:076	WindWood	WND	087	068	043
0556	Sy:001	Porta Lead 1	HLD	087	068	044
0557	Sy:002	Porta Lead 2	HLD	087	068	045
0558	Sy:003	Solo Saw Ld	HLD	087	068	046
0559	Sy:004	Wind Syn Ld	HLD	087	068	047
0560	Sy:005	GR Lead 1	HLD	087	068	048
0561	Sy:006	Sync Lead	HLD	087	068	049
0562	Sy:007	JupiterLead1	HLD	087	068	050
0563	Sy:008	Alpha Spit 1	HLD	087	068	051
0564	Sy:009	Pro Fat Ld	HLD	087	068	052
0565	Sy:010	Saw Lead 1	HLD	087	068	053

No.		Name	Sub-category	MSB	LSB	PC
0566	Sy:011	Saw Lead 2	HLD	087	068	054
0567	Sy:012	Saw Lead 3	HLD	087	068	055
0568	Sy:013	Saw Lead 4	HLD	087	068	056
0569	Sy:014	Saw Lead 5	HLD	087	068	057
0570	Sy:015	Saw Lead 6	HLD	087	068	058
0571	Sy:016	JUNO Lead	HLD	087	068	059
0572	Sy:017	Jump Poly	HLD	087	068	060
0573	Sy:018	Octa Juice	HLD	087	068	061
0574	Sy:019	Octa Saw	HLD	087	068	062
0575	Sy:020	Octa Sync 1	HLD	087	068	063
0576	Sy:021	Octa Sync 2	HLD	087	068	064
0577	Sy:022	Hot Sync	HLD	087	068	065
0578	Sy:023	Hot Coffee	HLD	087	068	066
0579	Sy:024	Phase Lead	HLD	087	068	067
0580	Sy:025	Waspy Lead 1	HLD	087	068	068
0581	Sy:026	Follow Me 1	HLD	087	068	069
0582	Sy:027	Follow Me 2	HLD	087	068	070
0583	Sy:028	Classic Ld 1	HLD	087	068	071
0584	Sy:029	Classic Ld 2	HLD	087	068	072
0585	Sy:030	Digi Lead 1	HLD	087	068	073
0586	Sy:031	Digi Lead 2	HLD	087	068	074
0587	Sy:032	DC Triangle	HLD	087	068	075
0588	Sy:033	Sqr-Sequence	HLD	087	068	076
0589	Sy:034	Pure Square	HLD	087	068	077
0590	Sy:035	Griggley	HLD	087	068	078
0591	Sy:036	Legato Saw	HLD	087	068	079
0592	Sy:037	Dual Profs	HLD	087	068	080
0593	Sy:038	Qwyo Press	HLD	087	068	081
0594	Sy:039	Q DualSaws	HLD	087	068	082
0595	Sy:040	Mogulator Ld	HLD	087	068	083
0596	Sy:041	DirtyVoltage	HLD	087	068	084
0597	Sy:042	Clean?	HLD	087	068	085
0598	Sy:043	Distortion	HLD	087	068	086
0599	Sy:044	Syn Lead 1	HLD	087	068	087
0600	Sy:045	Syn Lead 2	HLD	087	068	088
0601	Sy:046	X-Sink Delay	HLD	087	068	089
0602	Sy:047	Destroyed Ld	HLD	087	068	090
0603	Sy:048	Synchro Lead	HLD	087	068	091
0604	Sy:049	Sync Tank	HLD	087	068	092
0605	Sy:050	Sync Ld Mono	HLD	087	068	093
0606	Sy:051	SyncModulate	HLD	087	068	094
0607	Sy:052	2krazy Brite	HLD	087	068	095
0608	Sy:053	Distorted MG	HLD	087	068	096
0609	Sy:054	Dist Lead	HLD	087	068	097
0610	Sy:055	Ringmod Lead	HLD	087	068	098
0611	Sy:056	BodyElectric	HLD	087	068	099
0612	Sy:057	SonicVampire	HLD	087	068	100
0613	Sy:058	Stimulation	HLD	087	068	101
0614	Sy:059	Wire Sync	HLD	087	068	102
0615	Sy:060	Epic Lead	HLD	087	068	103
0616	Sy:061	Bag Lead	HLD	087	068	104
0617	Sy:062	Wezcoast	HLD	087	068	105
0618	Sy:063	HyperJupiter	HLD	087	068	106
0619	Sy:064	Vintagolizer	HLD	087	068	107
0620	Sy:065	C64 Lead	HLD	087	068	108
0621	Sy:066	303 NRG	HLD	087	068	109
0622	Sy:067	Feat Lead	HLD	087	068	110
0623	Sy:068	Cell SquLead	SLD	087	068	111
0624	Sy:069	Theramax 1	SLD	087	068	112
0625	Sy:070	Pulse Lead 1	SLD	087	068	113
0626	Sy:071	Pulse Lead 2	SLD	087	068	114
0627	Sy:072	Mid Saw Ld	SLD	087	068	115
0628	Sy:073	On Air	SLD	087	068	116
0629	Sy:074	Tri Lead 1	SLD	087	068	117
0630	Sy:075	Tri Lead 2	SLD	087	068	118
0631	Sy:076	Sine Lead 1	SLD	087	068	119
0632	Sy:077	Sine Lead 2	SLD	087	068	120
0633	Sy:078	Sqr Lead 1	SLD	087	068	121
0634	Sy:079	Sqr Lead 2	SLD	087	068	122
0635	Sy:080	SH Sqr Lead	SLD	087	068	123
0636	Sy:081	Sinetific	SLD	087	068	124
0637	Sy:082	JUNO Soft Ld	SLD	087	068	125
0638	Sy:083	Spooky Lead	SLD	087	068	126
0639	Sy:084	PeakArpSine	SLD	087	068	127
0640	Sy:085	Howards Lead	SLD	087	068	128
0641	Sy:086	SoloNzPeaker	SLD	087	069	001
0642	Sy:087	R&B Tri Ld 1	SLD	087	069	002
0643	Sy:088	R&B Tri Ld 2	SLD	087	069	003
0644	Sy:089	JupiterLead2	SLD	087	069	004
0645	Sy:090	JupiterLead3	SLD	087	069	005
0646	Sy:091	Dig-n-Duke	SLD	087	069	006

No.	Name	Sub-category	MSB	LSB	PC
0647	Sy:092 Sqr Diamond	SLD	087	069	007
0648	Sy:093 Soft Lead	SLD	087	069	008
0649	Sy:094 Soft Saw Ld	SLD	087	069	009
0650	Sy:095 X-Pulse Lead	SLD	087	069	010
0651	Sy:096 Mild 2-SawLd	SLD	087	069	011
0652	Sy:097 Mew Lead	SLD	087	069	012
0653	Sy:098 Shy Soloist	SLD	087	069	013
0654	Sy:099 Theramax 2	SLD	087	069	014
0655	Sy:100 Therasqu	SLD	087	069	015
0656	Sy:101 GR Lead 2	SLD	087	069	016
0657	Sy:102 SH-2 Lead	SLD	087	069	017
0658	Sy:103 Jucy Saw	SLD	087	069	018
0659	Sy:104 Reso Lead	SLD	087	069	019
0660	Sy:105 Modulated Ld	SLD	087	069	020
0661	Sy:106 Synthi Fizz	SLD	087	069	021
0662	Sy:107 Waspy Lead 2	SLD	087	069	022
0663	Sy:108 Pulstar Ld	SLD	087	069	023
0664	Sy:109 Naked Lead	SLD	087	069	024
0665	Sy:110 Alpha Spit 2	SLD	087	069	025
0666	Sy:111 JP Saw Lead	SLD	087	069	026
0667	Sy:112 Violin Lead	SLD	087	069	027
0668	Sy:113 Mod Lead	SLD	087	069	028
0669	Sy:114 Tristar	SLD	087	069	029
0670	Sy:115 Chubby Lead	SLD	087	069	030
0671	Sy:116 Sneaky Leady	SLD	087	069	031
0672	Sy:117 Shaku Lead	SLD	087	069	032
0673	Sy:118 Legato Tkno	SLD	087	069	033
0674	Sy:119 Reso Saw Ld	SLD	087	069	034
0675	Sy:120 SliCed Lead	SLD	087	069	035
0676	Sy:121 Mini Growl	SLD	087	069	036
0677	Sy:122 Evangelized	SLD	087	069	037
0678	Sy:123 Air Lead	SLD	087	069	038
0679	Sy:124 Stacc Heaven	SYN	087	069	039
0680	Sy:125 Sugar Synth	SYN	087	069	040
0681	Sy:126 Synth Key	SYN	087	069	041
0682	Sy:127 Frontier Syn	SYN	087	069	042
0683	Sy:128 Summer Str	SYN	087	069	043
0684	Sy:129 JUNO Poly	SYN	087	069	044
0685	Sy:130 SuperSawSlow	SYN	087	069	045
0686	Sy:131 Cue Tip	SYN	087	069	046
0687	Sy:132 Waspy Synth	SYN	087	069	047
0688	Sy:133 Europe Xpres	SYN	087	069	048
0689	Sy:134 Squeepy	SYN	087	069	049
0690	Sy:135 DOC Stack	SYN	087	069	050
0691	Sy:136 Sweep Lead	SYN	087	069	051
0692	Sy:137 80s Saws 1	SYN	087	069	052
0693	Sy:138 80s Saws 2	SYN	087	069	053
0694	Sy:139 80s Saws 3	SYN	087	069	054
0695	Sy:140 Digitaless	SYN	087	069	055
0696	Sy:141 Flip Pad	SYN	087	069	056
0697	Sy:142 Short Detune	SYN	087	069	057
0698	Sy:143 forSequence	SYN	087	069	058
0699	Sy:144 Memory Pluck	SYN	087	069	059
0700	Sy:145 Metalic Bass	SYN	087	069	060
0701	Sy:146 Aqua	SYN	087	069	061
0702	Sy:147 Round SQR	SYN	087	069	062
0703	Sy:148 Big Planet	SYN	087	069	063
0704	Sy:149 Wet Atax	SYN	087	069	064
0705	Sy:150 Houze Clavi	SYN	087	069	065
0706	Sy:151 Saw Stack	SYN	087	069	066
0707	Sy:152 Frgile Saws	SYN	087	069	067
0708	Sy:153 Steamed Sawz	SYN	087	069	068
0709	Sy:154 RAVtune	SYN	087	069	069
0710	Sy:155 Bustranza	SYN	087	069	070
0711	Sy:156 Digi Saw Syn	SYN	087	069	071
0712	Sy:157 JP OctAttack	SYN	087	069	072
0713	Sy:158 Oct Unison	SYN	087	069	073
0714	Sy:159 Xtatic	SYN	087	069	074
0715	Sy:160 Dirty Combo	SYN	087	069	075
0716	Sy:161 FM's Attack	SYN	087	069	076
0717	Sy:162 Digi-vox Syn	SYN	087	069	077
0718	Sy:163 Fairy Factor	SYN	087	069	078
0719	Sy:164 Tempest	SYN	087	069	079
0720	Sy:165 X-Racer	SYN	087	069	080
0721	Sy:166 TB Booster	SYN	087	069	081
0722	Sy:167 Syn-Orch/Mod	SYN	087	069	082
0723	Sy:168 Pressyn	SYN	087	069	083
0724	Sy:169 High Five	SYN	087	069	084
0725	Sy:170 Magnetic 5th	SYN	087	069	085
0726	Sy:171 DigimaX	SYN	087	069	086
0727	Sy:172 Exhale	SYN	087	069	087

No.	Name	Sub-category	MSB	LSB	PC
0728	Sy:173 X-panda	SYN	087	069	088
0729	Sy:174 Saw Keystep	SYN	087	069	089
0730	Sy:175 Blue Meanie	SYN	087	069	090
0731	Sy:176 4mant Cycle	SYN	087	069	091
0732	Sy:177 Modular	SYN	087	069	092
0733	Sy:178 Analog Dream	SYN	087	069	093
0734	Sy:179 DCO Bell Pad	SYN	087	069	094
0735	Sy:180 Cell Fanta	SYN	087	069	095
0736	Sy:181 JUNO 5th	SYN	087	069	096
0737	Sy:182 DoubleBubble	SYN	087	069	097
0738	Sy:183 JUNO-D Maj7	TEK	087	069	098
0739	Sy:184 Sweet House	TEK	087	069	099
0740	Sy:185 Periscope	TEK	087	069	100
0741	Sy:186 5th Voice	TEK	087	069	101
0742	Sy:187 HPF Sweep	TEK	087	069	102
0743	Sy:188 BPF Saw	TEK	087	069	103
0744	Sy:189 Moon Synth	TEK	087	069	104
0745	Sy:190 DelyResoSaws	TEK	087	069	105
0746	Sy:191 JUNO Trance 1	TEK	087	069	106
0747	Sy:192 Trancy Synth	TEK	087	069	107
0748	Sy:193 Cell Trance	TEK	087	069	108
0749	Sy:194 Trancy X	TEK	087	069	109
0750	Sy:195 JUNO Trance2	TEK	087	069	110
0751	Sy:196 R-Trance	TEK	087	069	111
0752	Sy:197 Braatz...	TEK	087	069	112
0753	Sy:198 AllinOneRiff	TEK	087	069	113
0754	Sy:199 YZ Again	TEK	087	069	114
0755	Sy:200 Flazzy Lead	TEK	087	069	115
0756	Sy:201 Coffee Bee	TEK	087	069	116
0757	Sy:202 TB-Sequence	TEK	087	069	117
0758	Sy:203 SC-303	TEK	087	069	118
0759	Sy:204 Dance Saws	TEK	087	069	119
0760	Sy:205 AluminmWires	TEK	087	069	120
0761	Sy:206 Fred&Barney	TEK	087	069	121
0762	Sy:207 Electrostars	TEK	087	069	122
0763	Sy:208 LoFiSequence	TEK	087	069	123
0764	Sy:209 MelodicDrums	TEK	087	069	124
0765	Sy:210 Monkey Arpg	TEK	087	069	125
0766	Sy:211 TB Wah	TEK	087	069	126
0767	Sy:212 Waving TB303	TEK	087	069	127
0768	Sy:213 Digi Seq	TEK	087	069	128
0769	Sy:214 Seq Saw	TEK	087	070	001
0770	Sy:215 Reso Seq Saw	TEK	087	070	002
0771	Sy:216 DetuneSeqSaw	TEK	087	070	003
0772	Sy:217 Technotribe	TEK	087	070	004
0773	Sy:218 Teethy Grit	TEK	087	070	005
0774	Sy:219 Repetition	TEK	087	070	006
0775	Sy:220 Killerbeez	TEK	087	070	007
0776	Sy:221 Acid Lead	TEK	087	070	008
0777	Sy:222 Tranceformer	TEK	087	070	009
0778	Sy:223 Anadroid	TEK	087	070	010
0779	Sy:224 Shroomy	TEK	087	070	011
0780	Sy:225 Noize R us	TEK	087	070	012
0781	Sy:226 Beep Melodie	TEK	087	070	013
0782	Sy:227 Morpher	TEK	087	070	014
0783	Sy:228 Power Synth	TEK	087	070	015
0784	Sy:229 Hoover Again	TEK	087	070	016
0785	Sy:230 Alpha Said..	TEK	087	070	017
0786	Sy:231 Ravers Awake	TEK	087	070	018
0787	Sy:232 Tekno Gargle	TEK	087	070	019
0788	Sy:233 Tranceiver	TEK	087	070	020
0789	Sy:234 Techno Dream	TEK	087	070	021
0790	Sy:235 Techno Pizz	TEK	087	070	022
0791	Sy:236 VirtualHuman	PLS	087	070	023
0792	Sy:237 Strobot	PLS	087	070	024
0793	Sy:238 Strobe	PLS	087	070	025
0794	Sy:239 Strobe X	PLS	087	070	026
0795	Sy:240 Mr. Fourier	PLS	087	070	027
0796	Sy:241 Rhythmic 5th	PLS	087	070	028
0797	Sy:242 Sorry4theDLY	PLS	087	070	029
0798	Sy:243 Cell Pad	PLS	087	070	030
0799	Sy:244 Shape of X	PLS	087	070	031
0800	Sy:245 ShapeURMusic	PLS	087	070	032
0801	Sy:246 Synth Force	PLS	087	070	033
0802	Sy:247 Trance Split	PLS	087	070	034
0803	Sy:248 Step Trance	PLS	087	070	035
0804	Sy:249 Chop Synth	PLS	087	070	036
0805	Sy:250 Euro Teuro	PLS	087	070	037
0806	Sy:251 Auto Trance1	PLS	087	070	038
0807	Sy:252 Eureggae	PLS	087	070	039
0808	Sy:253 Beat Pad	PLS	087	070	040

Patch List

No.		Name	Sub-category	MSB	LSB	PC
0809	Sy:254	TMT Seq Pad	PLS	087	070	041
0810	Sy:255	ForYourBreak	PLS	087	070	042
0811	Sy:256	HPF Slicer	PLS	087	070	043
0812	Sy:257	Sliced Choir	PLS	087	070	044
0813	Sy:258	Digi-Doo	PLS	087	070	045
0814	Sy:259	PanningFrmnt	PLS	087	070	046
0815	Sy:260	Dirty Beat	PLS	087	070	047
0816	Sy:261	Electrons	PLS	087	070	048
0817	Sy:262	Protons	PLS	087	070	049
0818	Sy:263	Brisk Vortex	PLS	087	070	050
0819	Sy:264	ThrobulaX	PLS	087	070	051
0820	Sy:265	Lonizer	PLS	087	070	052
0821	Sy:266	diGital Pad	PLS	087	070	053
0822	Sy:267	StepPitShift	PLS	087	070	054
0823	Sy:268	Pad Pulses	PLS	087	070	055
0824	Sy:269	Seq-Pad 1	PLS	087	070	056
0825	Sy:270	DSP Chaos	PLS	087	070	057
0826	Sy:271	Dance floor	PLS	087	070	058
0827	Sy:272	Minor Thirds	PLS	087	070	059
0828	Sy:273	FX World	PLS	087	070	060
0829	Sy:274	Nu Trance X	PLS	087	070	061
0830	Sy:275	Auto 5thSaws	PLS	087	070	062
0831	Sy:276	Cross Talk	PLS	087	070	063
0832	Sy:277	Reanimation	PLS	087	070	064
0833	Sy:278	VoX Chopper	PLS	087	070	065
0834	Sy:279	Trevor's Pad	PLS	087	070	066
0835	Sy:280	Fantomas Pad	PLS	087	070	067
0836	Sy:281	Jazzy Arps	PLS	087	070	068
0837	Sy:282	Keep Running	PLS	087	070	069
0838	Sy:283	Step In	PLS	087	070	070
0839	Sy:284	Echo Echo	PLS	087	070	071
0840	Sy:285	Keep going	PLS	087	070	072
0841	Sy:286	Arposphere	PLS	087	070	073
0842	Sy:287	Voco Riff	PLS	087	070	074
0843	Sy:288	Pulsator	PLS	087	070	075
0844	Sy:289	Motion Bass	PLS	087	070	076
0845	Sy:290	Sine Magic	PLS	087	070	077
0846	Sy:291	JUNO-D Slice	PLS	087	070	078
0847	Sy:292	Pulsatron	PLS	087	070	079
0848	Sy:293	Mega Sync	PLS	087	070	080
0849	Sy:294	Passing by	FX	087	070	081
0850	Sy:295	Lazer Points	FX	087	070	082
0851	Sy:296	Retro Sci-Fi	FX	087	070	083
0852	Sy:297	Magic Chime	FX	087	070	084
0853	Sy:298	Try This!	FX	087	070	085
0854	Sy:299	New Planetz	FX	087	070	086
0855	Sy:300	Jet Noise	FX	087	070	087
0856	Sy:301	Chaos 2003	FX	087	070	088
0857	Sy:302	Control Room	FX	087	070	089
0858	Sy:303	OutOf sortz	FX	087	070	090
0859	Sy:304	Scatter	FX	087	070	091
0860	Sy:305	Low Beat-S	FX	087	070	092
0861	Sy:306	WaitnOutside	FX	087	070	093
0862	Sy:307	Breath Echo	FX	087	070	094
0863	Sy:308	SoundStrange	FX	087	070	095
0864	Sy:309	Cosmic Pulse	FX	087	070	096
0865	Sy:310	Faked Piano	FX	087	070	097
0866	Sy:311	JUNO Crystal	FX	087	070	098
0867	Sy:312	ResoSweep Dn	FX	087	070	099
0868	Sy:313	Zap B3 & C4	FX	087	070	100
0869	Sy:314	PolySweep Nz	FX	087	070	101
0870	Sy:315	Strange Land	FX	087	070	102
0871	Sy:316	S&H Voc	FX	087	070	103
0872	Sy:317	12th Planet	FX	087	070	104
0873	Sy:318	Scare	FX	087	070	105
0874	Sy:319	Hillside	FX	087	070	106
0875	Sy:320	Mod Scanner	FX	087	070	107
0876	Sy:321	SoundOnSound	FX	087	070	108
0877	Sy:322	Gasp	FX	087	070	109
0878	Sy:323	ResoSweep Up	FX	087	070	110
0879	Sy:324	Magic Wave	FX	087	070	111
0880	Sy:325	Shangri-La	FX	087	070	112
0881	Sy:326	Cerealkiller	FX	087	070	113
0882	Sy:327	Cosmic Drops	FX	087	070	114
0883	Sy:328	Space Echo	FX	087	070	115
0884	Sy:329	Robot Sci-Fi	FX	087	070	116
0885	Sy:330	Jazz Scat	VOX	087	070	117
0886	Sy:331	Jazz Doos	VOX	087	070	118
0887	Sy:332	Choir Aahs 1	VOX	087	070	119
0888	Sy:333	Choir Aahs 2	VOX	087	070	120
0889	Sy:334	Choir Oohs	VOX	087	070	121

No.		Name	Sub-category	MSB	LSB	PC
0890	Sy:335	AngelsChoir1	VOX	087	070	122
0891	Sy:336	AngelsChoir2	VOX	087	070	123
0892	Sy:337	Syn Opera	VOX	087	070	124
0893	Sy:338	Angelique	VOX	087	070	125
0894	Sy:339	Vox Pad 1	VOX	087	070	126
0895	Sy:340	Vox Pad 2	VOX	087	070	127
0896	Sy:341	Gospel Oohs	VOX	087	070	128
0897	Sy:342	Choir&Str	VOX	087	071	001
0898	Sy:343	SynVox 1	VOX	087	071	002
0899	Sy:344	SynVox 2	VOX	087	071	003
0900	Sy:345	Aah Vox	VOX	087	071	004
0901	Sy:346	Sweet Keys	VOX	087	071	005
0902	Sy:347	JUNO Synvox	VOX	087	071	006
0903	Sy:348	Uhhmm	VOX	087	071	007
0904	Sy:349	Morning Star	VOX	087	071	008
0905	Sy:350	BeautifulOne	VOX	087	071	009
0906	Sy:351	Ooze	VOX	087	071	010
0907	Sy:352	Aerial Choir	VOX	087	071	011
0908	Sy:353	3D Vox	VOX	087	071	012
0909	Sy:354	Sample Opera	VOX	087	071	013
0910	Sy:355	Film Cue	VOX	087	071	014
0911	Sy:356	Paradise	VOX	087	071	015
0912	Sy:357	Sad ceremony	VOX	087	071	016
0913	Sy:358	Lost Voices	VOX	087	071	017
0914	Sy:359	Beat Vox	VOX	087	071	018
0915	Sy:360	Talk 2 Me	VOX	087	071	019
0916	Sy:361	FM Vox	VOX	087	071	020
0917	Sy:362	Let's Talk!	VOX	087	071	021
0918	Sy:363	Voc:Di Robt	VOX	087	071	022
0919	Sy:364	Voc:Di Chr	VOX	087	071	023
0920	Sy:365	Voc:Di Ens	VOX	087	071	024
0921	Sy:366	Voc:Ensemble	VOX	087	071	025
0922	Sy:367	Voc:5thStack	VOX	087	071	026
0923	Sy:368	Voc:Robot	VOX	087	071	027
0924	Sy:369	Voc:Saw	VOX	087	071	028
0925	Sy:370	Voc:Sqr	VOX	087	071	029
0926	Sy:371	Voc:Rise Up	VOX	087	071	030
0927	Sy:372	Voc:Auto Vib	VOX	087	071	031
0928	Sy:373	Voc:PitchEnv	VOX	087	071	032
0929	Sy:374	Voc:Choir	VOX	087	071	033
0930	Sy:375	Voc:Noise	VOX	087	071	034
0931	Pd:001	Cosmic Rays	BPD	087	071	035
0932	Pd:002	Phaser Pad 1	BPD	087	071	036
0933	Pd:003	PhaseStrings	BPD	087	071	037
0934	Pd:004	Super SynStr	BPD	087	071	038
0935	Pd:005	80s Str 1	BPD	087	071	039
0936	Pd:006	80s Str 2	BPD	087	071	040
0937	Pd:007	BreakOut Str	BPD	087	071	041
0938	Pd:008	Frends Syn	BPD	087	071	042
0939	Pd:009	Comb	BPD	087	071	043
0940	Pd:010	Voyager	BPD	087	071	044
0941	Pd:011	Stringship	BPD	087	071	045
0942	Pd:012	DarknessSide	BPD	087	071	046
0943	Pd:013	Fat Stacks	BPD	087	071	047
0944	Pd:014	Strings R Us	BPD	087	071	048
0945	Pd:015	Electric Pad	BPD	087	071	049
0946	Pd:016	Neo RS-202	BPD	087	071	050
0947	Pd:017	OB Rezo Pad	BPD	087	071	051
0948	Pd:018	Synthi Ens	BPD	087	071	052
0949	Pd:019	Giant Sweep	BPD	087	071	053
0950	Pd:020	Mod Dare	BPD	087	071	054
0951	Pd:021	Cell Space	BPD	087	071	055
0952	Pd:022	Digi-Swell	BPD	087	071	056
0953	Pd:023	New Year Day	BPD	087	071	057
0954	Pd:024	Polar Morn	BPD	087	071	058
0955	Pd:025	Distant Sun	BPD	087	071	059
0956	Pd:026	PG Chimes	BPD	087	071	060
0957	Pd:027	Saturn Rings	BPD	087	071	061
0958	Pd:028	Brusky	BPD	087	071	062
0959	Pd:029	2.2 Pad 1	BPD	087	071	063
0960	Pd:030	2.2 Pad 2	BPD	087	071	064
0961	Pd:031	2.2 Pad 3	BPD	087	071	065
0962	Pd:032	SaturnHolid	BPD	087	071	066
0963	Pd:033	Neuro-Drone	BPD	087	071	067
0964	Pd:034	In The Pass	BPD	087	071	068
0965	Pd:035	Polar Night	BPD	087	071	069
0966	Pd:036	Cell 5th	BPD	087	071	070
0967	Pd:037	MistOver5ths	BPD	087	071	071
0968	Pd:038	Gritty Pad	BPD	087	071	072
0969	Pd:039	India Garden	BPD	087	071	073
0970	Pd:040	BillionStars	BPD	087	071	074

No.		Name	Sub-category	MSB	LSB	PC
0971	Pd:041	Sand Pad	BPD	087	071	075
0972	Pd:042	ReverseSweep	BPD	087	071	076
0973	Pd:043	HugeSoundMod	BPD	087	071	077
0974	Pd:044	Metal Swell	BPD	087	071	078
0975	Pd:045	NuSoundtrack	BPD	087	071	079
0976	Pd:046	Phat Strings	BPD	087	071	080
0977	Pd:047	Hollow	SPD	087	071	081
0978	Pd:048	Heaven Pad	SPD	087	071	082
0979	Pd:049	Soft OB Pad	SPD	087	071	083
0980	Pd:050	Reso Pad	SPD	087	071	084
0981	Pd:051	Slow Saw Str	SPD	087	071	085
0982	Pd:052	Terra Nostra	SPD	087	071	086
0983	Pd:053	Summer Pad	SPD	087	071	087
0984	Pd:054	Friends Pad	SPD	087	071	088
0985	Pd:055	Pop Pad	SPD	087	071	089
0986	Pd:056	Sqr Pad	SPD	087	071	090
0987	Pd:057	Silk Pad	SPD	087	071	091
0988	Pd:058	WarmReso Pad	SPD	087	071	092
0989	Pd:059	Soft Pad	SPD	087	071	093
0990	Pd:060	Air Pad	SPD	087	071	094
0991	Pd:061	Soft Breeze	SPD	087	071	095
0992	Pd:062	JP Strings 1	SPD	087	071	096
0993	Pd:063	JP Strings 2	SPD	087	071	097
0994	Pd:064	DelayStrings	SPD	087	071	098
0995	Pd:065	NorthStrings	SPD	087	071	099
0996	Pd:066	Syn Strings1	SPD	087	071	100
0997	Pd:067	Syn Strings2	SPD	087	071	101
0998	Pd:068	OB Strings 1	SPD	087	071	102
0999	Pd:069	OB Strings 2	SPD	087	071	103
1000	Pd:070	Strings Pad	SPD	087	071	104
1001	Pd:071	R&B SoftPad	SPD	087	071	105
1002	Pd:072	Phat Pad	SPD	087	071	106
1003	Pd:073	Phaser Pad 2	SPD	087	071	107
1004	Pd:074	Mystic Str	SPD	087	071	108
1005	Pd:075	Glass Organ	SPD	087	071	109
1006	Pd:076	Wind Pad	SPD	087	071	110
1007	Pd:077	Combination	SPD	087	071	111
1008	Pd:078	HumanKindnes	SPD	087	071	112
1009	Pd:079	Beauty Pad	SPD	087	071	113
1010	Pd:080	Atmospherics	SPD	087	071	114
1011	Pd:081	OB Aaahs	SPD	087	071	115
1012	Pd:082	Vulcano Pad	SPD	087	071	116
1013	Pd:083	Cloud #9	SPD	087	071	117
1014	Pd:084	Organic Pad	SPD	087	071	118
1015	Pd:085	Hum Pad	SPD	087	071	119
1016	Pd:086	Vox Pad	SPD	087	071	120
1017	Pd:087	Digital Aahs	SPD	087	071	121
1018	Pd:088	Tri 5th Pad	SPD	087	071	122
1019	Pd:089	Movin Pad	SPD	087	071	123
1020	Pd:090	Seq-Pad 2	SPD	087	071	124
1021	Pd:091	Follow	SPD	087	071	125
1022	Pd:092	Consolament	SPD	087	071	126
1023	Pd:093	Spacious Pad	SPD	087	071	127
1024	Pd:094	JD Pop Pad	SPD	087	071	128
1025	Pd:095	JP-8 Phase	SPD	087	072	001
1026	Pd:096	Nu Epic Pad	SPD	087	072	002
1027	Pd:097	Flange Dream	SPD	087	072	003
1028	Pd:098	Evolution X	SPD	087	072	004
1029	Pd:099	Angelis Pad	SPD	087	072	005
1030	Pd:100	JUNO-106 Str	SPD	087	072	006
1031	Pd:101	JupiterMoves	SPD	087	072	007
1032	Pd:102	Oceanic Pad	SPD	087	072	008
1033	Pd:103	Fairy's Song	SPD	087	072	009
1034	Pd:104	Borealis	SPD	087	072	010
1035	Pd:105	JX Warm Pad	SPD	087	072	011
1036	Pd:106	Analog Bgrnd	SPD	087	072	012

BRAZIL						
1037	Wr:001	Nice Piano	ETH	087	072	013
1038	Wr:002	MIDled Grand	ETH	087	072	014
1039	Wr:003	West Coast	ETH	087	072	015
1040	Wr:004	JV EP+	ETH	087	072	016
1041	Wr:005	80's FM	ETH	087	072	017
1042	Wr:006	AllSkate!SRX	ETH	087	072	018
1043	Wr:007	Blues Perc	ETH	087	072	019
1044	Wr:008	Perky Twin B	ETH	087	072	020
1045	Wr:009	Rotary Organ	ETH	087	072	021
1046	Wr:010	ParisRomance	ETH	087	072	022
1047	Wr:011	Acc.Master	ETH	087	072	023
1048	Wr:012	Bandoneon 2	ETH	087	072	024
1049	Wr:013	Ac.Gtrs SRX	ETH	087	072	025

No.		Name	Sub-category	MSB	LSB	PC
1050	Wr:014	X Brs Sect 1	ETH	087	072	026
1051	Wr:015	J-Pop Brs GW	ETH	087	072	027
1052	Wr:016	DC Tri GW	ETH	087	072	028
1053	Wr:017	2600 Sine GW	ETH	087	072	029
1054	Wr:018	P5 Sync Lead	ETH	087	072	030
1055	Wr:019	SuperSaws	ETH	087	072	031
1056	Wr:020	Attack! Pad	ETH	087	072	032

CHINA						
1057	Wr:021	Erhu/Vib	ETH	087	072	033
1058	Wr:022	Erhu /4 1	ETH	087	072	034
1059	Wr:023	Pipa/Trem	ETH	087	072	035
1060	Wr:024	Guzhng/Trm	ETH	087	072	036
1061	Wr:025	Guguin/HrmDly	ETH	087	072	037
1062	Wr:026	Yangqin /4	ETH	087	072	038
1063	Wr:027	Jinghu/Vib	ETH	087	072	039
1064	Wr:028	Jinghu/4 1	ETH	087	072	040
1065	Wr:029	Sihu/Vib	ETH	087	072	041
1066	Wr:030	Sihu/4 1	ETH	087	072	042
1067	Wr:031	Banhu/4 2	ETH	087	072	043
1068	Wr:032	Qudi/Orn	ETH	087	072	044
1069	Wr:033	Qudi /3	ETH	087	072	045
1070	Wr:034	Xiao/Orn	ETH	087	072	046
1071	Wr:035	Xiao2/Vib	ETH	087	072	047
1072	Wr:036	Xun/Orn	ETH	087	072	048
1073	Wr:037	Hulusi	ETH	087	072	049
1074	Wr:038	Suona /3	ETH	087	072	050
1075	Wr:039	Bawu/3 2	ETH	087	072	051
1076	Wr:040	Matouqin/4 3	ETH	087	072	052
1077	Wr:041	Matouqin/Vib	ETH	087	072	053
1078	Wr:042	Zhnguan/Hrm	ETH	087	072	054
1079	Wr:043	Dumbra/Strum	ETH	087	072	055

INDIA						
1080	Wr:044	Harmonium 1	ETH	087	072	056
1081	Wr:045	Harmonium 2	ETH	087	072	057
1082	Wr:046	Harmonium 3	ETH	087	072	058
1083	Wr:047	Harmonium LS	ETH	087	072	059
1084	Wr:048	D.Accordion	ETH	087	072	060
1085	Wr:049	Acc.de Paris	ETH	087	072	061
1086	Wr:050	Eastern Trio	ETH	087	072	062
1087	Wr:051	New Delhi	ETH	087	072	063
1088	Wr:052	Sorgo Field	ETH	087	072	064
1089	Wr:053	Sitar XV	ETH	087	072	065
1090	Wr:054	Sitar GW	ETH	087	072	066
1091	Wr:055	Drone Sitar	ETH	087	072	067
1092	Wr:056	SitarGlisSRX	ETH	087	072	068
1093	Wr:057	Go2India /C2	ETH	087	072	069
1094	Wr:058	Sarod	ETH	087	072	070
1095	Wr:059	ChoChungRuan	ETH	087	072	071
1096	Wr:060	HamrDulcimer	ETH	087	072	072
1097	Wr:061	Dulcimer	ETH	087	072	073
1098	Wr:062	Santur LS	ETH	087	072	074
1099	Wr:063	Santur 2	ETH	087	072	075
1100	Wr:064	Santur+trm	ETH	087	072	076
1101	Wr:065	Oygur/Trem	ETH	087	072	077
1102	Wr:066	Warm VibesLS	ETH	087	072	078
1103	Wr:067	Strings LS	ETH	087	072	079
1104	Wr:068	Stage Str LS	ETH	087	072	080
1105	Wr:069	Str+Choir 1	ETH	087	072	081
1106	Wr:070	Doos	ETH	087	072	082
1107	Wr:071	Mmmms	ETH	087	072	083
1108	Wr:072	Chorus LS	ETH	087	072	084
1109	Wr:073	Qu Di&Flute	ETH	087	072	085
1110	Wr:074	Qu Di Vibro	ETH	087	072	086
1111	Wr:075	Flute+1octLS	ETH	087	072	087
1112	Wr:076	Alto mp	ETH	087	072	088
1113	Wr:077	Alto Sax GW	ETH	087	072	089
1114	Wr:078	Alto Sax LS	ETH	087	072	090
1115	Wr:079	Suona	ETH	087	072	091
1116	Wr:080	D-50 Stack	ETH	087	072	092
1117	Wr:081	Fantasia JV	ETH	087	072	093
1118	Wr:082	Heavenals	ETH	087	072	094
1119	Wr:083	Wave Bells	ETH	087	072	095
1120	Wr:084	Pretty Bells	ETH	087	072	096
1121	Wr:085	Morning Lite	ETH	087	072	097
1122	Wr:086	Prefab Chime	ETH	087	072	098
1123	Wr:087	Stacc.Heaven	ETH	087	072	099
1124	Wr:088	WindBellPad	ETH	087	072	100
1125	Wr:089	Vintage Call	ETH	087	072	101
1126	Wr:090	260 & JUNO	ETH	087	072	102

Patch List

No.		Name	Sub-category	MSB	LSB	PC
1127	Wr:091	Wire Pad GW	ETH	087	072	103
1128	Wr:092	Wire Pad XP	ETH	087	072	104
1129	Wr:093	Far East XP	ETH	087	072	105
1130	Wr:094	Been LS	ETH	087	072	106
1131	Wr:095	RajasthanILS	ETH	087	072	107
1132	Wr:096	Sheng Lead	ETH	087	072	108
1133	Wr:097	Suona Lead	ETH	087	072	109
1134	Wr:098	ErHu SynLead	ETH	087	072	110
1135	Wr:099	RhythmicSaw	ETH	087	072	111
1136	Wr:100	Blade Racer	ETH	087	072	112
1137	Wr:101	Aero Insect	ETH	087	072	113
1138	Wr:102	Helium Queen	ETH	087	072	114
1139	Wr:103	Sci-Fi FX x4	ETH	087	072	115
1140	Wr:104	Acid Copter	ETH	087	072	116
1141	Wr:105	Plutonium	ETH	087	072	117
1142	Wr:106	Creation	ETH	087	072	118
1143	Wr:107	118:TablaByP	ETH	087	072	119
1144	Wr:108	92:DholakPh	ETH	087	072	120
1145	Wr:109	120:Dhol Ph	ETH	087	072	121
1146	Wr:110	Fat Analog	ETH	087	072	122

INDONESIA						
1147	Wr:111	Tech Bass	ETH	087	072	123
1148	Wr:112	BigOrchestra	ETH	087	072	124
1149	Wr:113	Analog Lead	ETH	087	072	125
1150	Wr:114	Tech Rave	ETH	087	072	126
1151	Wr:115	Basichord	ETH	087	072	127
1152	Wr:116	Bs/Pno+Brs	ETH	087	072	128
1153	Wr:117	Psycho EP	ETH	087	073	001
1154	Wr:118	D50 NyAtmos	ETH	087	073	002
1155	Wr:119	D50 Pizagogo	ETH	087	073	003
1156	Wr:120	D50 Stack	ETH	087	073	004
1157	Wr:121	D50 Fantasia	ETH	087	073	005
1158	Wr:122	D50 Stac_Hvn	ETH	087	073	006
1159	Wr:123	D50 FuturePd	ETH	087	073	007
1160	Wr:124	D50 DigiNDnc	ETH	087	073	008
1161	Wr:125	Film Octaves	ETH	087	073	009
1162	Wr:126	JP8.Strings	ETH	087	073	010
1163	Wr:127	ORBit Pad	ETH	087	073	011
1164	Wr:128	SynthBrs2 GS	ETH	087	073	012
1165	Wr:129	BlowAltoVib	ETH	087	073	013
1166	Wr:130	Edye Boost	ETH	087	073	014

EAST MED						
1167	Wr:131	Musette tun	ETH	087	073	015
1168	Wr:132	Musette det1	ETH	087	073	016
1169	Wr:133	Musette det2	ETH	087	073	017
1170	Wr:134	Master1	ETH	087	073	018
1171	Wr:135	Master2	ETH	087	073	019
1172	Wr:136	Jazz Accord	ETH	087	073	020
1173	Wr:137	Bandoneon1	ETH	087	073	021
1174	Wr:138	Bandoneon2	ETH	087	073	022
1175	Wr:139	Bs/Musettun	ETH	087	073	023
1176	Wr:140	Bs/Musetdet1	ETH	087	073	024
1177	Wr:141	Bs/Musetdet2	ETH	087	073	025
1178	Wr:142	Bs/Master1	ETH	087	073	026
1179	Wr:143	Bs/Master2	ETH	087	073	027
1180	Wr:144	Bs/JazzAccrd	ETH	087	073	028
1181	Wr:145	Bs/Bandneon1	ETH	087	073	029
1182	Wr:146	Bs/Bandneon2	ETH	087	073	030

KOREA						
1183	Wr:147	Hit EP	ETH	087	073	031
1184	Wr:148	70's E.Org 1	ETH	087	073	032
1185	Wr:149	Rock Organ 5	ETH	087	073	033
1186	Wr:150	Finger Slap	ETH	087	073	034
1187	Wr:151	Fingered Bs	ETH	087	073	035
1188	Wr:152	Synth Bass 2	ETH	087	073	036
1189	Wr:153	SH Bass	ETH	087	073	037
1190	Wr:154	Strings	ETH	087	073	038
1191	Wr:155	GX Strings	ETH	087	073	039
1192	Wr:156	Mood Strings	ETH	087	073	040
1193	Wr:157	DecayStrings	ETH	087	073	041
1194	Wr:158	Slow Strings	ETH	087	073	042
1195	Wr:159	Strings 5	ETH	087	073	043
1196	Wr:160	StringsStacc	ETH	087	073	044
1197	Wr:161	Brass 1	ETH	087	073	045
1198	Wr:162	Alto Sax	ETH	087	073	046
1199	Wr:163	Tenor Sax	ETH	087	073	047
1200	Wr:164	GX Choir	ETH	087	073	048
1201	Wr:165	Choir Aahs	ETH	087	073	049

No.		Name	Sub-category	MSB	LSB	PC
1202	Wr:166	Aerial Choir	ETH	087	073	050
1203	Wr:167	CalmChoirPad	ETH	087	073	051
1204	Wr:168	Dcy ChoirPad	ETH	087	073	052
1205	Wr:169	Soft Pad 1	ETH	087	073	053
1206	Wr:170	Soft Pad 2	ETH	087	073	054
1207	Wr:171	Soft Pad 3	ETH	087	073	055
1208	Wr:172	Soft Pad 5	ETH	087	073	056
1209	Wr:173	Piano+Str 1	ETH	087	073	057
1210	Wr:174	EP Bell 1	ETH	087	073	058
1211	Wr:175	Player's EP	ETH	087	073	059
1212	Wr:176	St.Strings	ETH	087	073	060
1213	Wr:177	Soft Strings	ETH	087	073	061
1214	Wr:178	Slow Str XP	ETH	087	073	062
1215	Wr:179	JUNO Strings	ETH	087	073	063
1216	Wr:180	Organ 1 XP	ETH	087	073	064
1217	Wr:181	ChurchOrg XP	ETH	087	073	065
1218	Wr:182	Chapel Organ	ETH	087	073	066
1219	Wr:183	Positive Org	ETH	087	073	067
1220	Wr:184	Pipe Organ 1	ETH	087	073	068
1221	Wr:185	Trumpet RD	ETH	087	073	069
1222	Wr:186	Trumpet 2	ETH	087	073	070
1223	Wr:187	Alto Sax RD	ETH	087	073	071
1224	Wr:188	Tenor Sax RD	ETH	087	073	072
1225	Wr:189	Brass 1 RD	ETH	087	073	073
1226	Wr:190	R&R Brass	ETH	087	073	074
1227	Wr:191	SessionBrass	ETH	087	073	075
1228	Wr:192	Tb Section	ETH	087	073	076
1229	Wr:193	BrassPartOut	ETH	087	073	077

PHILIPPINES						
1230	Wr:194	88StgGrandJU	ETH	087	073	078
1231	Wr:195	SA EPiano JU	ETH	087	073	079
1232	Wr:196	Pure EP JU	ETH	087	073	080
1233	Wr:197	Full Str JU	ETH	087	073	081
1234	Wr:198	Full Strings	ETH	087	073	082
1235	Wr:199	WarmVoxPiano	ETH	087	073	083
1236	Wr:200	Echo Piano	ETH	087	073	084
1237	Wr:201	Power Octs	ETH	087	073	085
1238	Wr:202	EP Mix	ETH	087	073	086
1239	Wr:203	Klubb Organ	ETH	087	073	087
1240	Wr:204	Jazz Scat JU	ETH	087	073	088

SOUTH AFRICA						
1241	Wr:205	South Africa	ETH	087	073	089
1242	Wr:206	FM-777 JU	ETH	087	073	090
1243	Wr:207	SC Marimba	ETH	087	073	091
1244	Wr:208	Ethno KeysFS	ETH	087	073	092
1245	Wr:209	N.Kalimba JU	ETH	087	073	093
1246	Wr:210	Smoky Org JU	ETH	087	073	094
1247	Wr:211	Perc OrganJU	ETH	087	073	095
1248	Wr:212	Atk Flute	ETH	087	073	096
1249	Wr:213	FS Flute	ETH	087	073	097
1250	Wr:214	HimalayaP FS	ETH	087	073	098
1251	Wr:215	Alto Sax FS	ETH	087	073	099
1252	Wr:216	JP8000 BrsFS	ETH	087	073	100
1253	Wr:217	Jump BrassFG	ETH	087	073	101

THAILAND						
1254	Wr:218	D-50 Organ	ETH	087	073	102
1255	Wr:219	NewD-50 Org	ETH	087	073	103
1256	Wr:220	E-sarnOrgan1	ETH	087	073	104
1257	Wr:221	E-sarnOrgan2	ETH	087	073	105
1258	Wr:222	E-sarnOrgan3	ETH	087	073	106
1259	Wr:223	E-sarnOrgan4	ETH	087	073	107
1260	Wr:224	E-sarnOrgan5	ETH	087	073	108
1261	Wr:225	E-sarnPercOr	ETH	087	073	109
1262	Wr:226	Accordion 1	ETH	087	073	110
1263	Wr:227	Accordion 2	ETH	087	073	111
1264	Wr:228	Blow Tenor	ETH	087	073	112
1265	Wr:229	Solo Tenor	ETH	087	073	113
1266	Wr:230	Soft Sax	ETH	087	073	114
1267	Wr:231	Sweet Flute	ETH	087	073	115
1268	Wr:232	Trumpet Solo	ETH	087	073	116
1269	Wr:233	Brass Sax 1	ETH	087	073	117
1270	Wr:234	Brass Sax 2	ETH	087	073	118
1271	Wr:235	Synth Solo	ETH	087	073	119
1272	Wr:236	Guitar Rock	ETH	087	073	120
1273	Wr:237	Sor 1	ETH	087	073	121
1274	Wr:238	Sor 2	ETH	087	073	122
1275	Wr:239	Sor 3	ETH	087	073	123
1276	Wr:240	Pin 1	ETH	087	073	124

No.		Name	Sub-category	MSB	LSB	PC
1277	Wr:241	Pin 2	ETH	087	073	125
1278	Wr:242	Pin 3	ETH	087	073	126
1279	Wr:243	Pin 4	ETH	087	073	127
1280	Wr:244	Vode 1	ETH	087	073	128
1281	Wr:245	Vode 2	ETH	087	074	001
1282	Wr:246	Sweet Vode	ETH	087	074	002
1283	Wr:247	Klui 1	ETH	087	074	003
1284	Wr:248	Klui 2	ETH	087	074	004
1285	Wr:249	Khaen 1	ETH	087	074	005
1286	Wr:250	Khaen 2	ETH	087	074	006
1287	Wr:251	Ponglang 1	ETH	087	074	007
1288	Wr:252	Ponglang 2	ETH	087	074	008
1289	Wr:253	Ranad 1	ETH	087	074	009
1290	Wr:254	Ranad 2	ETH	087	074	010
1291	Wr:255	Angklung 1	ETH	087	074	011
1292	Wr:256	Angklung 2	ETH	087	074	012
1293	Wr:257	Khim 1	ETH	087	074	013
1294	Wr:258	Khim 2	ETH	087	074	014

TURKEY						
1295	Wr:259	SA Dnc PnoJU	ETH	087	074	015
1296	Wr:260	Stage EP	ETH	087	074	016
1297	Wr:261	Super Wurly	ETH	087	074	017
1298	Wr:262	Tine EP JU	ETH	087	074	018
1299	Wr:263	R&B Organ JU	ETH	087	074	019
1300	Wr:264	Perc Organ	ETH	087	074	020
1301	Wr:265	Elk-Baglrama	ETH	087	074	021
1302	Wr:266	Aks-Baglrama	ETH	087	074	022
1303	Wr:267	UD	ETH	087	074	023
1304	Wr:268	Kanun	ETH	087	074	024
1305	Wr:269	JP StringsJU	ETH	087	074	025
1306	Wr:270	JP Strings 2	ETH	087	074	026
1307	Wr:271	JupiterMv JU	ETH	087	074	027
1308	Wr:272	G.Keman	ETH	087	074	028
1309	Wr:273	Vib-Zurna-A	ETH	087	074	029
1310	Wr:274	Flugel HrnJU	ETH	087	074	030
1311	Wr:275	Soft Tb JU	ETH	087	074	031
1312	Wr:276	Solo Bone JU	ETH	087	074	032
1313	Wr:277	TR-Klarnet	ETH	087	074	033
1314	Wr:278	FolkClarinet	ETH	087	074	034
1315	Wr:279	StackTp S.JU	ETH	087	074	035
1316	Wr:280	Follow Me	ETH	087	074	036
1317	Wr:281	Clean? JU	ETH	087	074	037
1318	Wr:282	Pure SinLD 1	ETH	087	074	038
1319	Wr:283	Theramax	ETH	087	074	039
1320	Wr:284	Tristar FG	ETH	087	074	040
1321	Wr:285	Solid Pluck	ETH	087	074	041
1322	Wr:286	WaspySynthJU	ETH	087	074	042
1323	Wr:287	DigitalessJU	ETH	087	074	043
1324	Wr:288	Bustranza JU	ETH	087	074	044
1325	Wr:289	GAIA A-7Poly	ETH	087	074	045
1326	Wr:290	GAIA F-3Trns	ETH	087	074	046
1327	Wr:291	Packfan	ETH	087	074	047
1328	Wr:292	80s Poly	ETH	087	074	048
1329	Wr:293	Cue Tip FG	ETH	087	074	049
1330	Wr:294	WiredSynthFG	ETH	087	074	050
1331	Wr:295	GAIA A-1 Bs	ETH	087	074	051

VIET NAM						
1332	Wr:296	JP8 PulseLd1	ETH	087	074	052
1333	Wr:297	Dist TB 2	ETH	087	074	053
1334	Wr:298	Short Bs 1	ETH	087	074	054
1335	Wr:299	Short Bs 2	ETH	087	074	055
1336	Wr:300	Short Bs 3	ETH	087	074	056
1337	Wr:301	Monster Bs 1	ETH	087	074	057
1338	Wr:302	Monster Bs 7	ETH	087	074	058
1339	Wr:303	SuperSawBs10	ETH	087	074	059
1340	Wr:304	Slap Bass JP	ETH	087	074	060
1341	Wr:305	Dist.Fing JU	ETH	087	074	061

LATIN AMERICA						
1342	Wr:306	FullDraw GW	ETH	087	074	062
1343	Wr:307	Steierische	ETH	087	074	063
1344	Wr:308	G-Accord 1	ETH	087	074	064
1345	Wr:309	G-Accord 2	ETH	087	074	065
1346	Wr:310	G-Accord 3	ETH	087	074	066
1347	Wr:311	C-Accord A1	ETH	087	074	067
1348	Wr:312	C-Accord A2	ETH	087	074	068
1349	Wr:313	C-Accord A3	ETH	087	074	069
1350	Wr:314	C-Accord N1	ETH	087	074	070
1351	Wr:315	C-Accord N2	ETH	087	074	071

No.		Name	Sub-category	MSB	LSB	PC
1352	Wr:316	E-Accord 1	ETH	087	074	072
1353	Wr:317	E-Accord 2	ETH	087	074	073
1354	Wr:318	BajoSxt /2	ETH	087	074	074
1355	Wr:319	BajoSxt /3	ETH	087	074	075
1356	Wr:320	BajoSxt Mt	ETH	087	074	076
1357	Wr:321	Charango Dn	ETH	087	074	077
1358	Wr:322	Charango Up	ETH	087	074	078
1359	Wr:323	Chrng Oct Dn	ETH	087	074	079
1360	Wr:324	Chrng Oct Up	ETH	087	074	080
1361	Wr:325	Charango /C	ETH	087	074	081
1362	Wr:326	Chrng Oct /C	ETH	087	074	082
1363	Wr:327	Charango D&U	ETH	087	074	083
1364	Wr:328	ChrngOct D&U	ETH	087	074	084
1365	Wr:329	Guitarron	ETH	087	074	085
1366	Wr:330	Guitarn Oct	ETH	087	074	086
1367	Wr:331	Banda ClaVib	ETH	087	074	087
1368	Wr:332	Banda ClaStc	ETH	087	074	088
1369	Wr:333	MariTp Vb /2	ETH	087	074	089
1370	Wr:334	MariTp Vb /3	ETH	087	074	090
1371	Wr:335	MariTp Stac	ETH	087	074	091
1372	Wr:336	CmbiTp Vb /4	ETH	087	074	092
1373	Wr:337	Banda Tp Vib	ETH	087	074	093
1374	Wr:338	Banda Tp Stc	ETH	087	074	094
1375	Wr:339	Banda TbnVib	ETH	087	074	095
1376	Wr:340	Banda TbnStc	ETH	087	074	096
1377	Wr:341	Banda Tuba	ETH	087	074	097
1378	Wr:342	BandaTubaStc	ETH	087	074	098
1379	Wr:343	Switch Fall	ETH	087	074	099
1380	Wr:344	Mariachi Tp1	ETH	087	074	100
1381	Wr:345	Latin Trumpt	ETH	087	074	101
1382	Wr:346	Romantic Tp.	ETH	087	074	102
1383	Wr:347	Snake Eyes	ETH	087	074	103
1384	Wr:348	Shake Tp.	ETH	087	074	104
1385	Wr:349	Tp. Rom/Mar	ETH	087	074	105
1386	Wr:350	Tp. Mar/Shk	ETH	087	074	106
1387	Wr:351	SuperTnr SRX	ETH	087	074	107
1388	Wr:352	RS Alto Sax	ETH	087	074	108
1389	Wr:353	Sugar Keys	ETH	087	074	109
1390	Wr:354	SL Fantasia	ETH	087	074	110
1391	Wr:355	SL LivingCal	ETH	087	074	111
1392	Wr:356	SL D50Synth	ETH	087	074	112
1393	Wr:357	SL D50Brass	ETH	087	074	113
1394	Wr:358	SLSoundTrack	ETH	087	074	114

TAIWAN						
1395	Wr:359	Erhu/Vib	ETH	087	074	115
1396	Wr:360	Pipa/Trem	ETH	087	074	116
1397	Wr:361	Guzhng/Trm	ETH	087	074	117
1398	Wr:362	Zhngruan/Hrm	ETH	087	074	118
1399	Wr:363	Yanqin/Trm	ETH	087	074	119
1400	Wr:364	Suona /3	ETH	087	074	120
1401	Wr:365	Xiao/Orn	ETH	087	074	121
1402	Wr:366	Xun/Orn	ETH	087	074	122
1403	Wr:367	Qudi/Orn	ETH	087	074	123
1404	Wr:368	Matouqin/4 3	ETH	087	074	124
1405	Wr:369	Dumbra/Strum	ETH	087	074	125
1406	Wr:370	Bawu/3 2	ETH	087	074	126

1407	Wr:371	Gamelan	ETH	087	074	127
1408	Wr:372	Anklung	ETH	087	074	128
1409	Wr:373	Gambus	ETH	087	075	001
1410	Wr:374	Sitar on C	PLK	087	075	002
1411	Wr:375	JUNO Sitar 1	PLK	087	075	003
1412	Wr:376	JUNO Sitar 2	PLK	087	075	004
1413	Wr:377	Sitar Baby	PLK	087	075	005
1414	Wr:378	Neo Sitar	PLK	087	075	006
1415	Wr:379	SaraswatiRvr	PLK	087	075	007
1416	Wr:380	Teky Drop	PLK	087	075	008
1417	Wr:381	TroubadorEns	PLK	087	075	009
1418	Wr:382	Elec Sitar	PLK	087	075	010
1419	Wr:383	Pat is away	PLK	087	075	011
1420	Wr:384	Nice Kalimba	PLK	087	075	012
1421	Wr:385	Quiet River	PLK	087	075	013
1422	Wr:386	Aerial Harp	PLK	087	075	014
1423	Wr:387	Harpiness	PLK	087	075	015
1424	Wr:388	Skydiver	PLK	087	075	016
1425	Wr:389	Jamisen	PLK	087	075	017
1426	Wr:390	JUNO Koto	PLK	087	075	018
1427	Wr:391	Monsoon	PLK	087	075	019
1428	Wr:392	Bend Koto	PLK	087	075	020
1429	Wr:393	JUNO Banjo	FRT	087	075	021

No.		Name	Sub-category	MSB	LSB	PC
1430	Wr:394	Pan Pipes	ETH	087	075	022
1431	Wr:395	Andes Mood	ETH	087	075	023
1432	Wr:396	LongDistance	ETH	087	075	024
1433	Wr:397	Ambi Shaku	ETH	087	075	025
1434	Wr:398	HimalayaPipe	ETH	087	075	026
1435	Wr:399	Ethnic Lead	ETH	087	075	027
1436	Wr:400	Lochscape	ETH	087	075	028
1437	Wr:401	PipeDream	ETH	087	075	029
1438	Wr:402	Angel Pipes	ETH	087	075	030
1439	Wr:403	Far East	ETH	087	075	031
1440	Wr:404	Wired Synth	ETH	087	075	032
1441	Wr:405	4DaCommonMan	ETH	087	075	033
1442	Wr:406	Orgaenia	ETH	087	075	034
1443	Wr:407	Sleeper	ETH	087	075	035
1444	Wr:408	Ice Palace	ETH	087	075	036
1445	Wr:409	Story Harp	ETH	087	075	037
1446	Wr:410	LostParadise	ETH	087	075	038
1447	Pd:107	Timpani+Low	PRC	087	075	039
1448	Pd:108	Timpani Roll	PRC	087	075	040
1449	Pd:109	Bass Drum	PRC	087	075	041
1450	Pd:110	Ambidextrous	SFX	087	075	042
1451	Pd:111	En-co-re	SFX	087	075	043
1452	Pd:112	Mobile Phone	SFX	087	075	044
1453	Pd:113	ElectroDisco	BTS	087	075	045
1454	Pd:114	Groove 007	BTS	087	075	046
1455	Pd:115	In Da Groove	BTS	087	075	047
1456	Pd:116	Sweet 80s	BTS	087	075	048
1457	Pd:117	Auto Trance2	BTS	087	075	049
1458	Pd:118	JUNO Pop	BTS	087	075	050
1459	Pd:119	Compusonic 1	BTS	087	075	051
1460	Pd:120	Compusonic 2	BTS	087	075	052
1461	Pd:121	Mix Drum 1	DRM	087	075	053
1462	Pd:122	Mix Drum 2	DRM	087	075	054
1463	Wr:411	Lounge Kit	CMB	087	075	055
1464	Wr:412	80s Combo	CMB	087	075	056
1465	Wr:413	Analog Days	CMB	087	075	057
1466	Wr:414	Techno Craft	CMB	087	075	058
1467	Sp:001	NylonGtr E4	SMP	087	075	059
1468	Sp:002	Pemade C5	SMP	087	075	060
1469	Sp:003	Shankh G#4	SMP	087	075	061
1470	Sp:004	RSS SpinnrC4	SMP	087	075	062
1471	Sp:005	Come On! C4	SMP	087	075	063
1472	Sp:006	102:PhraseC4	SMP	087	075	064

Bank: GM

No.		Name	Sub-category	MSB	LSB	PC
0001	Pf:111	Piano 1	PNO	121	0	1
0002	Pf:112	Piano 1w	PNO	121	1	
0003	Pf:113	European Pf	PNO	121	2	
0004	Pf:114	Piano 2	PNO	121	0	2
0005	Pf:115	Piano 2w	PNO	121	1	
0006	Pf:116	Piano 3	EP	121	0	3
0007	Pf:117	Piano 3w	EP	121	1	
0008	Pf:118	Honky-tonk	PNO	121	0	4
0009	Pf:119	Honky-tonk 2	PNO	121	1	
0010	Pf:120	E.Piano 1	EP	121	0	5
0011	Pf:121	St.Soft EP	EP	121	1	
0012	Pf:122	FM+SA EP	EP	121	2	
0013	Pf:123	Wurly	EP	121	3	
0014	Pf:124	E.Piano 2	EP	121	0	6
0015	Pf:125	Detuned EP 2	EP	121	1	
0016	Pf:126	St.FM EP	EP	121	2	
0017	Pf:127	EP Legend	EP	121	3	
0018	Pf:128	EP Phase	EP	121	4	
0019	Ky:125	Harpsichord	KEY	121	0	7
0020	Ky:126	Coupled Hps.	KEY	121	1	
0021	Ky:127	Harpsi.w	KEY	121	2	
0022	Ky:128	Harpsi.o	KEY	121	3	
0023	Ky:129	Clav.	KEY	121	0	8
0024	Ky:130	Pulse Clav	KEY	121	1	
0025	Ky:131	Celesta	KEY	121	0	9
0026	Ky:132	Glockenspiel	BEL	121	0	10
0027	Ky:133	Music Box	BEL	121	0	11
0028	Ky:134	Vibraphone	MLT	121	0	12
0029	Ky:135	Vibraphone w	MLT	121	1	
0030	Ky:136	Marimba	MLT	121	0	13
0031	Ky:137	Marimba w	MLT	121	1	
0032	Ky:138	Xylophone	MLT	121	0	14
0033	Ky:139	Tubular-bell	BEL	121	0	15
0034	Ky:140	Church Bell	BEL	121	1	
0035	Ky:141	Carillon	BEL	121	2	
0036	Wr:058	Santur	PLK	121	0	16
0037	Ky:142	Organ 1	ORG	121	0	17
0038	Ky:143	Trem. Organ	ORG	121	1	
0039	Ky:144	60's Organ 1	ORG	121	2	
0040	Ky:145	70's E.Organ	ORG	121	3	
0041	Ky:146	Organ 2	ORG	121	0	18
0042	Ky:147	Chorus Or.2	ORG	121	1	
0043	Ky:148	Perc. Organ	ORG	121	2	
0044	Ky:149	Organ 3	ORG	121	0	19
0045	Ky:150	Church Org.1	ORG	121	0	20
0046	Ky:151	Church Org.2	ORG	121	1	
0047	Ky:152	Church Org.3	ORG	121	2	
0048	Ky:153	Reed Organ	ORG	121	0	21
0049	Ky:154	Puff Organ	ORG	121	1	
0050	Ky:155	Accordion Fr	ACD	121	0	22
0051	Ky:156	Accordion It	ACD	121	1	
0052	Ky:157	Harmonica	HRM	121	0	23
0053	Ky:158	Bandoneon	ACD	121	0	24
0054	Gt:176	Nylon-str.Gt	AGT	121	0	25
0055	Gt:177	Ukulele	AGT	121	1	
0056	Gt:178	Nylon Gt.o	AGT	121	2	
0057	Gt:179	Nylon Gt.2	AGT	121	3	
0058	Gt:180	Steel-str.Gt	AGT	121	0	26
0059	Gt:181	12-str.Gt	AGT	121	1	
0060	Gt:182	Mandolin	AGT	121	2	
0061	Gt:183	Steel + Body	AGT	121	3	
0062	Gt:184	Jazz Gt.	EGT	121	0	27
0063	Gt:185	Pedal Steel	EGT	121	1	
0064	Gt:186	Clean Gt.	EGT	121	0	28
0065	Gt:187	Chorus Gt.	EGT	121	1	
0066	Gt:188	Mid Tone GTR	EGT	121	2	
0067	Gt:189	Muted Gt.	EGT	121	0	29
0068	Gt:190	Funk Pop	EGT	121	1	
0069	Gt:191	Funk Gt.2	EGT	121	2	
0070	Gt:192	Jazz Man	EGT	121	3	
0071	Gt:193	Overdrive Gt	DGT	121	0	30
0072	Gt:194	Guitar Pinch	DGT	121	1	
0073	Gt:195	DistortionGt	DGT	121	0	31
0074	Gt:196	Feedback Gt.	DGT	121	1	
0075	Gt:197	Dist Rtm GTR	DGT	121	2	
0076	Gt:198	Gt.Harmonics	EGT	121	0	32
0077	Gt:199	Gt. Feedback	EGT	121	1	
0078	Gt:200	Acoustic Bs.	BS	121	0	33
0079	Gt:201	Fingered Bs.	BS	121	0	34

No.		Name	Sub-category	MSB	LSB	PC
0080	Gt:202	Finger Slap	BS	121	1	
0081	Gt:203	Picked Bass	BS	121	0	35
0082	Gt:204	Fretless Bs.	BS	121	0	36
0083	Gt:205	Slap Bass 1	BS	121	0	37
0084	Gt:206	Slap Bass 2	BS	121	0	38
0085	Gt:207	Synth Bass 1	SBS	121	0	39
0086	Gt:208	SynthBass101	SBS	121	1	
0087	Gt:209	Acid Bass	SBS	121	2	
0088	Gt:210	Clavi Bass	SBS	121	3	
0089	Gt:211	Hammer	SBS	121	4	
0090	Gt:212	Synth Bass 2	SBS	121	0	40
0091	Gt:213	Beef FM Bass	SBS	121	1	
0092	Gt:214	RubberBass 2	SBS	121	2	
0093	Gt:215	Attack Pulse	SBS	121	3	
0094	Oc:070	Violin	STR	121	0	41
0095	Oc:071	Slow Violin	STR	121	1	
0096	Oc:072	Viola	STR	121	0	42
0097	Oc:073	Cello	STR	121	0	43
0098	Oc:074	Contrabass	STR	121	0	44
0099	Oc:075	Tremolo Str	STR	121	0	45
0100	Oc:076	PizzicatoStr	STR	121	0	46
0101	Wr:059	Harp	PLK	121	0	47
0102	Wr:060	Yang Qin	PLK	121	1	
0103	Wr:061	Timpani	PRC	121	0	48
0104	Oc:077	Strings	STR	121	0	49
0105	Oc:078	Orchestra	ORC	121	1	
0106	Oc:079	60s Strings	STR	121	2	
0107	Oc:080	Slow Strings	STR	121	0	50
0108	Oc:081	Syn.Strings1	STR	121	0	51
0109	Oc:082	Syn.Strings3	STR	121	1	
0110	Vo:143	Syn.Strings2	SPD	121	0	52
0111	Vo:144	Choir Aahs	VOX	121	0	53
0112	Vo:145	Chorus Aahs	VOX	121	1	
0113	Vo:146	Voice Oohs	VOX	121	0	54
0114	Vo:147	Humming	VOX	121	1	
0115	Vo:148	SynVox	VOX	121	0	55
0116	Vo:149	Analog Voice	VOX	121	1	
0117	Oc:083	OrchestraHit	HIT	121	0	56
0118	Oc:084	Bass Hit	HIT	121	1	
0119	Oc:085	6th Hit	HIT	121	2	
0120	Oc:086	Euro Hit	HIT	121	3	
0121	Br:077	Trumpet	BRS	121	0	57
0122	Br:078	Dark Trumpet	BRS	121	1	
0123	Br:079	Trombone	BRS	121	0	58
0124	Br:080	Trombone 2	BRS	121	1	
0125	Br:081	Bright Tb	BRS	121	2	
0126	Br:082	Tuba	BRS	121	0	59
0127	Br:083	MutedTrumpet	BRS	121	0	60
0128	Br:084	MuteTrumpet2	BRS	121	1	
0129	Br:085	French Horns	BRS	121	0	61
0130	Br:086	Fr.Horn 2	BRS	121	1	
0131	Br:087	Brass 1	BRS	121	0	62
0132	Br:088	Brass 2	BRS	121	1	
0133	Br:089	Synth Brass1	SBR	121	0	63
0134	Br:090	Pro Brass	SBR	121	1	
0135	Br:091	Oct SynBrass	SBR	121	2	
0136	Br:092	Jump Brass	SBR	121	3	
0137	Br:093	Synth Brass2	SBR	121	0	64
0138	Br:094	SynBrass sfz	SBR	121	1	
0139	Br:095	Velo Brass 1	SBR	121	2	
0140	Br:096	Soprano Sax	SAX	121	0	65
0141	Br:097	Alto Sax	SAX	121	0	66
0142	Br:098	Tenor Sax	SAX	121	0	67
0143	Br:099	Baritone Sax	SAX	121	0	68
0144	Br:100	Oboe	WND	121	0	69
0145	Br:101	English Horn	WND	121	0	70
0146	Br:102	Bassoon	WND	121	0	71
0147	Br:103	Clarinet	WND	121	0	72
0148	Br:104	Piccolo	FLT	121	0	73
0149	Br:105	Flute	FLT	121	0	74
0150	Br:106	Recorder	FLT	121	0	75
0151	Br:107	Pan Flute	FLT	121	0	76
0152	Br:108	Bottle Blow	FLT	121	0	77
0153	Wr:062	Shakuhachi	ETH	121	0	78
0154	Br:109	Whistle	FLT	121	0	79
0155	Br:110	Ocarina	FLT	121	0	80
0156	Sy:330	Square Wave	HLD	121	0	81
0157	Sy:331	MG Square	HLD	121	1	
0158	Sy:332	2600 Sine	HLD	121	2	
0159	Sy:333	Saw Wave	HLD	121	0	82
0160	Sy:334	OB2 Saw	HLD	121	1	

No.		Name	Sub-category	MSB	LSB	PC
0161	Sy:335	Doctor Solo	HLD	121	2	
0162	Sy:336	Natural Lead	HLD	121	3	
0163	Sy:337	SequencedSaw	HLD	121	4	
0164	Sy:338	Syn.Calliope	SLD	121	0	83
0165	Sy:339	Chiffer Lead	SLD	121	0	84
0166	Sy:340	Charang	HLD	121	0	85
0167	Sy:341	Wire Lead	HLD	121	1	
0168	Sy:342	Solo Vox	SLD	121	0	86
0169	Sy:343	5th Saw Wave	HLD	121	0	87
0170	Sy:344	Bass & Lead	HLD	121	0	88
0171	Sy:345	Delayed Lead	HLD	121	1	
0172	Sy:346	Fantasia	SYN	121	0	89
0173	Vo:150	Warm Pad	SPD	121	0	90
0174	Vo:151	Sine Pad	SPD	121	1	
0175	Sy:347	Polysynth	SYN	121	0	91
0176	Vo:152	Space Voice	VOX	121	0	92
0177	Vo:153	Itopia	VOX	121	1	
0178	Vo:154	Bowed Glass	SPD	121	0	93
0179	Vo:155	Metal Pad	BPD	121	0	94
0180	Vo:156	Halo Pad	BPD	121	0	95
0181	Vo:157	Sweep Pad	SPD	121	0	96
0182	Sy:348	Ice Rain	SYN	121	0	97
0183	Vo:158	Soundtrack	SPD	121	0	98
0184	Ky:159	Crystal	BEL	121	0	99
0185	Ky:160	Syn Mallet	BEL	121	1	
0186	Gt:216	Atmosphere	AGT	121	0	100
0187	Sy:349	Brightness	SYN	121	0	101
0188	Sy:350	Goblin	PLS	121	0	102
0189	Vo:159	Echo Drops	BPD	121	0	103
0190	Vo:160	Echo Bell	BPD	121	1	
0191	Vo:161	Echo Pan	BPD	121	2	
0192	Vo:162	Star Theme	BPD	121	0	104
0193	Wr:063	Sitar	PLK	121	0	105
0194	Wr:064	Sitar 2	PLK	121	1	
0195	Wr:065	Banjo	FRT	121	0	106
0196	Wr:066	Shamisen	PLK	121	0	107
0197	Wr:067	Koto	PLK	121	0	108
0198	Wr:068	Taisho Koto	PLK	121	1	
0199	Wr:069	Kalimba	PLK	121	0	109
0200	Wr:070	Bagpipe	ETH	121	0	110
0201	Oc:087	Fiddle	STR	121	0	111
0202	Wr:071	Shanai	ETH	121	0	112
0203	Ky:161	Tinkle Bell	BEL	121	0	113
0204	Wr:072	Agogo	PRC	121	0	114
0205	Ky:162	Steel Drums	MLT	121	0	115
0206	Wr:073	Woodblock	PRC	121	0	116
0207	Wr:074	Castanets	PRC	121	1	
0208	Wr:075	Taiko	PRC	121	0	117
0209	Wr:076	Concert BD	PRC	121	1	
0210	Wr:077	Melo. Tom 1	PRC	121	0	118
0211	Wr:078	Melo. Tom 2	PRC	121	1	
0212	Wr:079	Synth Drum	PRC	121	0	119
0213	Wr:080	808 Tom	PRC	121	1	
0214	Wr:081	Elec Perc	PRC	121	2	
0215	Wr:082	Reverse Cym.	PRC	121	0	120
0216	Gt:217	Gt.FretNoise	AGT	121	0	121
0217	Gt:218	Gt.Cut Noise	AGT	121	1	
0218	Gt:219	String Slap	AGT	121	2	
0219	Sy:351	Breath Noise	FX	121	0	122
0220	Sy:352	Fl.Key Click	FX	121	1	
0221	Wr:083	Seashore	SFX	121	0	123
0222	Wr:084	Rain	SFX	121	1	
0223	Wr:085	Thunder	SFX	121	2	
0224	Wr:086	Wind	SFX	121	3	
0225	Wr:087	Stream	SFX	121	4	
0226	Wr:088	Bubble	SFX	121	5	
0227	Wr:089	Bird	SFX	121	0	124
0228	Wr:090	Dog	SFX	121	1	
0229	Wr:091	Horse-Gallop	SFX	121	2	
0230	Wr:092	Bird 2	SFX	121	3	
0231	Wr:093	Telephone 1	SFX	121	0	125
0232	Wr:094	Telephone 2	SFX	121	1	
0233	Wr:095	DoorCreaking	SFX	121	2	
0234	Wr:096	Door	SFX	121	3	
0235	Wr:097	Scratch	SFX	121	4	
0236	Wr:098	Wind Chimes	SFX	121	5	
0237	Wr:099	Helicopter	SFX	121	0	126
0238	Wr:100	Car-Engine	SFX	121	1	
0239	Wr:101	Car-Stop	SFX	121	2	
0240	Wr:102	Car-Pass	SFX	121	3	
0241	Wr:103	Car-Crash	SFX	121	4	

Patch List

No.		Name	Sub-category	MSB	LSB	PC
0242	Wr:104	Siren	SFX	121	5	
0243	Wr:105	Train	SFX	121	6	
0244	Wr:106	Jetplane	SFX	121	7	
0245	Wr:107	Starship	SFX	121	8	
0246	Wr:108	Burst Noise	SFX	121	9	
0247	Wr:109	Applause	SFX	121	0	127
0248	Wr:110	Laughing	SFX	121	1	
0249	Wr:111	Screaming	SFX	121	2	
0250	Wr:112	Punch	SFX	121	3	
0251	Wr:113	Heart Beat	SFX	121	4	
0252	Wr:114	Footsteps	SFX	121	5	
0253	Wr:115	Gun Shot	SFX	121	0	128
0254	Wr:116	Machine Gun	SFX	121	1	
0255	Wr:117	Lasergun	SFX	121	2	
0256	Wr:118	Explosion	SFX	121	3	

Bank: USER

No.		Name	Sub-category	MSB	LSB	PC
0501	Pf:501	Grand Pno DS	PNO	087	000	001
0502	Wr:502	Erhu /4 1	ETH	087	000	002
0503	Wr:503	Guqin/HrmDly	ETH	087	000	003
0504	Wr:504	Yangqin /4	ETH	087	000	004
0505	Wr:505	Jinghu/Vib	ETH	087	000	005
0506	Wr:506	Jinghu/4 1	ETH	087	000	006
0507	Wr:507	Sihu/Vib	ETH	087	000	007
0508	Wr:508	Sihu/4 1	ETH	087	000	008
0509	Wr:509	Banhu/4 2	ETH	087	000	009
0510	Wr:510	Qudi /3	ETH	087	000	010
0511	Wr:511	Xiao2/Vib	ETH	087	000	011
0512	Wr:512	Hulusi	ETH	087	000	012
0513	Wr:513	Matouqin/Vib	ETH	087	000	013
0514	Wr:514	Zhngruan/Hrm	ETH	087	000	014
0515	Wr:515	Yanqin/Trm	ETH	087	000	015
0516	Wr:516	Hit EP	ETH	087	000	016
0517	Wr:517	70's E.Org 1	ETH	087	000	017
0518	Wr:518	Rock Organ 5	ETH	087	000	018
0519	Wr:519	Finger Slap	ETH	087	000	019
0520	Wr:520	Fingered Bs	ETH	087	000	020
0521	Wr:521	Synth Bass 2	ETH	087	000	021
0522	Wr:522	SH Bass	ETH	087	000	022
0523	Wr:523	Strings	ETH	087	000	023
0524	Wr:524	GX Strings	ETH	087	000	024
0525	Wr:525	Mood Strings	ETH	087	000	025
0526	Wr:526	DecayStrings	ETH	087	000	026
0527	Wr:527	Slow Strings	ETH	087	000	027
0528	Wr:528	Strings 5	ETH	087	000	028
0529	Wr:529	StringsStacc	ETH	087	000	029
0530	Wr:530	Brass 1	ETH	087	000	030
0531	Wr:531	Alto Sax	ETH	087	000	031
0532	Wr:532	Tenor Sax	ETH	087	000	032
0533	Wr:533	GX Choir	ETH	087	000	033
0534	Wr:534	Choir Aahs	ETH	087	000	034
0535	Wr:535	Aerial Choir	ETH	087	000	035
0536	Wr:536	CalmChoirPad	ETH	087	000	036
0537	Wr:537	Dcy ChoirPad	ETH	087	000	037
0538	Wr:538	Soft Pad 1	ETH	087	000	038
0539	Wr:539	Soft Pad 2	ETH	087	000	039
0540	Wr:540	Soft Pad 3	ETH	087	000	040
0541	Wr:541	Soft Pad 5	ETH	087	000	041
0542	Wr:542	Full Strings	ETH	087	000	042
0543	Wr:543	WarmVoxPiano	ETH	087	000	043
0544	Wr:544	Echo Piano	ETH	087	000	044
0545	Wr:545	Power Octs	ETH	087	000	045
0546	Wr:546	EP Mix	ETH	087	000	046
0547	Wr:547	Klubb Organ	ETH	087	000	047
0548	Wr:548	NewD-50 Org	ETH	087	000	048
0549	Wr:549	E-sarnOrgan1	ETH	087	000	049
0550	Wr:550	E-sarnOrgan2	ETH	087	000	050
0551	Wr:551	E-sarnOrgan3	ETH	087	000	051
0552	Wr:552	E-sarnOrgan4	ETH	087	000	052
0553	Wr:553	E-sarnOrgan5	ETH	087	000	053
0554	Wr:554	E-sarnPercOr	ETH	087	000	054
0555	Wr:555	Accordion 1	ETH	087	000	055
0556	Wr:556	Accordion 2	ETH	087	000	056
0557	Wr:557	Solo Tenor	ETH	087	000	057
0558	Wr:558	Soft Sax	ETH	087	000	058
0559	Wr:559	Sweet Flute	ETH	087	000	059
0560	Wr:560	Trumpet Solo	ETH	087	000	060
0561	Wr:561	Brass Sax 1	ETH	087	000	061
0562	Wr:562	Brass Sax 2	ETH	087	000	062
0563	Wr:563	Synth Solo	ETH	087	000	063
0564	Wr:564	Guitar Rock	ETH	087	000	064
0565	Wr:565	Sor 2	ETH	087	000	065
0566	Wr:566	Sor 3	ETH	087	000	066
0567	Wr:567	Pin 4	ETH	087	000	067
0568	Wr:568	Vode 2	ETH	087	000	068
0569	Wr:569	Sweet Vode	ETH	087	000	069
0570	Wr:570	Klui 2	ETH	087	000	070
0571	Wr:571	Khaen 2	ETH	087	000	071
0572	Wr:572	Ponglang 2	ETH	087	000	072
0573	Wr:573	Ranad 2	ETH	087	000	073
0574	Wr:574	Angklung 2	ETH	087	000	074
0575	Wr:575	Khim 2	ETH	087	000	075

Performance List

No.	Name
0001	Bass / Piano
0002	Piano & Str
0003	GrandStrings
0004	3-Split Perf
0005	Real D-50
0006	SatelliteGtr
0007	SynStr/SawLd
0008	FolkClarinet
0009	Blues Perc
0010	Air Garden

No.	Name
0011	Notre-Dame
0012	Big & Proud
0013	Whale Pad
0014	GM2 Template
0015	Seq:Template
0016	Init Perform
0017	ConcertGrand
0018	ConcertG+Str
0019	BrightCncert
0020	Tine E.Piano

No.	Name
0021	SA E.Piano
0022	SA E.P + Pad
0023	Strings 1
0024	Strings 2
0025	Slow Strings
0026	70's Organ
0027	E.Organ
0028	Trumpet&Sax
0029	MltSmpl Temp

Drum Kit List

Bank: PRST

No.		Name	MSB	LSB	PC
0001	Dr:001	Pop Kit 1	086	064	001
0002	Dr:002	Rock Kit	086	064	002
0003	Dr:003	Brush Jz Kit	086	064	003
0004	Dr:004	HipHop Kit	086	064	004
0005	Dr:005	R&B Kit	086	064	005
0006	Dr:006	Dance Kit 1	086	064	006
0007	Dr:007	Dance Kit 2	086	064	007
0008	Dr:008	Dance Kit 3	086	064	008
0009	Dr:009	Pop Kit 2	086	064	009
0010	Dr:010	Dance Kit 4	086	064	010
0011	Dr:011	Ambi Pop 1	086	064	011
0012	Dr:012	Ambi Rock	086	064	012
0013	Dr:013	Ambi BrushJz	086	064	013
0014	Dr:014	Ambi HipHop	086	064	014
0015	Dr:015	Ambi R&B	086	064	015
0016	Dr:016	Ambi Dance 1	086	064	016
0017	Dr:017	Ambi Dance 2	086	064	017
0018	Dr:018	Ambi Dance 3	086	064	018
0019	Dr:019	Ambi Pop 2	086	064	019
0020	Dr:020	Ambi Dance 4	086	064	020
0021	Dr:021	DanceMixKit	086	064	021
0022	Dr:022	Nu India Kit	086	064	022
0023	Dr:023	Indomix Kit	086	064	023
0024	Dr:024	StudioKt1 DS	086	064	024
0025	Dr:025	StudioKt2 DS	086	064	025
0026	Dr:026	LatinDrmKit	086	064	026
0027	Dr:027	Latin Menu1	086	064	027
0028	Dr:028	Latin Menu2	086	064	028
0029	Dr:029	Latin Menu3	086	064	029
0030	Dr:030	LatinPerc'06	086	064	030
0031	Dr:031	China Perc	086	064	031
0032	Dr:032	Orch China	086	064	032
0033	Dr:033	R&B China	086	064	033
0034	Dr:034	SonicCell XJ	086	064	034
0035	Dr:035	Nu Tech XJ	086	064	035

Bank: GM

No.		Name	MSB	LSB	PC
0001	Dr:036	GM2 STANDARD	120	0	001
0002	Dr:037	GM2 ROOM	120	0	009
0003	Dr:038	GM2 POWER	120	0	017
0004	Dr:039	GM2 ELECTRIC	120	0	025
0005	Dr:040	GM2 ANALOG	120	0	026
0006	Dr:041	GM2 JAZZ	120	0	033
0007	Dr:042	GM2 BRUSH	120	0	041
0008	Dr:043	GM2 ORCHSTRA	120	0	049
0009	Dr:044	GM2 SFX	120	0	057

Drum Kit Assign List

	PRST: 0001. Pop Kit 1	PRST: 0002. Rock Kit	PRST: 0003. Brush Jz Kit	PRST: 0004. HipHop Kit	PRST: 0005. R&B Kit
21	----	----	----	----	----
22	----	----	----	----	----
23	----	----	----	----	----
C1					
24	----	----	----	----	----
25	----	----	----	----	----
26	----	----	----	----	----
27	----	----	----	----	----
28	----	----	----	----	----
29	----	----	----	----	----
30	----	----	----	----	----
31	Kick1	Kick1	Kick1	Analog Kick1	Mix Kick1
32	Snare Ghost1	Snare Ghost1	Snare Ghost	Analog Kick2	Mix Kick2
33	Kick2	Kick2	Kick2	Mix Kick1	Mix Kick3
34	Pedal Hihat	Pedal Hihat	Pedal Hi-hat	Mix Kick2	Mix Kick4
35	Kick3 [M1]	Power Kick1 [M1]	Jazz Kick 1 [M1]	Analog Kick3	Mix Kick5
C2					
36	Kick4	Power Kick2	Jazz Kick 2	Mix Kick3	Mix Kick6
37	Side Stick	Side Stick	Side Stick	TR808 Rim1	Soft Stick
38	Snare1	Power Snare1	Brush Slap1	Mix Snare1	Short Snare1
39	Snare Ghost2	Snare Ghost2	Jz Brsh Swsh	Mix Clap1	Mix Stick
40	Snare2	Power Snare2	Brush Slap2	Mix Snare2	Short Snare2
41	Low Tom1	Low Tom1	BrushLowTom	Mix Snare3	Short Snare3
42	CI Hihat1 [M1]	CI Hihat1 [M1]	Brush CIHH1 [M1]	TR808 CIHH [M1]	CI Hihat1 [M1]
43	Low Tom2	Low Tom2	BrushMidTom1	Mix Snare4	Short Snare4
44	CI Hihat2 [M1]	CI Hihat2 [M1]	Brush CIHH2 [M1]	Noise CIHH [M1]	CI Hihat2 [M1]
45	Mid Tom1	Mid Tom1	BrushMidTom2	Mix Snare5	Mix Snare1
46	Op Hihat [M1]	Op Hihat [M1]	Brush OpHH [M1]	TR808 OpHH [M1]	Op Hihat [M1]
47	Mid Tom2	Mid Tom2	BrushMidTom2	Mix Snare6	Mix Snare2
C3					
48	High Tom1	High Tom1	Brush HiTom	Syn Swt Atk1	Mix Snare3
49	CrashCymbal1	CrashCymbal1	CrashCymbal1	TR808 Cym1	TR808 Cym1
50	High Tom2	High Tom2	Brush HiTom	MG Attack	Mix Snare4
51	Ride Cymbal1	Ride Cymbal1	Ride Cymbal1	TR808 Cym2	TR808 Cym2
52	China Cymbal	China Cymbal	China Cymbal	China Cymbal	China Cymbal
	Ride Cymbal2	Ride Cymbal2	Ride Cymbal2	Rock Rd Edge	Rock Rd Edge
53	Tambourine	Tambourine	Tambourine	Tambourine1	Tambourine1
54	SplashCymbal	SplashCymbal	SplashCymbal	Mix Crash1	Mix Crash1
55	Cowbell	Cowbell	Cowbell	Mix Hat	Mix Hat
56	CrashCymbal2	CrashCymbal2	CrashCymbal2	Mix Crash2	Mix Crash2
57	Vibraslap	Vibraslap	Vibraslap	Syn Swt Atk2	Syn Swt Atk
58	Ride Cymbal3	Ride Cymbal3	Ride Cymbal3	TR808 Kick1	TR808 Kick1
C4					
60	High Bongo1	High Bongo1	High Bongo	TR808 Kick2	TR808 Kick2
61	Low Bongo1	Low Bongo1	Low Bongo	TR808 Rim2	TR808 Rim
62	Conga Slap	Conga Slap	MtHigh Conga	TR808 Snare1	TR808 Snare1
63	OpenHi Conga	OpenHi Conga	OpHigh Conga	TR808 Clap1	TR808 Clap1
64	Low Conga1	Low Conga1	Low Conga	TR808 Snare2	TR808 Snare2
	High Timbale	High Timbale	High Timbale	TR808 Tom1	TR808 Tom1
65	Low Timbale	Low Timbale	Low Timbale	TR808 CIHH [M1]	TR808 CIHH [M1]
66	High Agogo	High Agogo	High Agogo	TR808 Tom2	TR808 Tom2
67	Low Agogo	Low Agogo	Low Agogo	Noise CIHH [M1]	Noise CIHH [M1]
68	Cabasa	Cabasa	Cabasa	TR808 Tom3	TR808 Tom3
69	Maracas	Maracas	Maracas	TR808 OpHH [M1]	TR808 OpHH [M1]
70	ShortWhistle [M2]	ShortWhistle [M2]	Jazz Kick 1	TR808 Tom4	TR808 Tom4
C5					
72	Long Whistle [M2]	Long Whistle [M2]	Jazz Kick 2	TR808 Tom5	TR808 Tom5
73	Short Guiro [M3]	Short Guiro [M3]	Side Stick	Scratch1	Scratch1
74	Long Guiro [M3]	Long Guiro [M3]	Jazz Snare1	TR808 Tom6	TR808 Tom6
75	Claves	Claves	Sft Snr Gst	Scratch2	Scratch2
76	Hi WoodBlock	Hi WoodBlock	Jazz Snare2	Hand Clap1	Hand Clap1
	LowWoodBlock	LowWoodBlock	Low Tom	Hand Clap2	Hand Clap2
77	Mute Cuica [M4]	Mute Cuica [M4]	CI Hihat1 [M1]	TR808 Clap2	TR808 Clap2
78	Open Cuica [M4]	Open Cuica [M4]	Mid Tom1	Cabasa	Cabasa
79	MuteTriangle [M5]	MuteTriangle [M5]	CI Hihat2 [M1]	Shaker1	Shaker1
80	OpenTriangle [M5]	OpenTriangle [M5]	Mid Tom2	Tambourine2	Tambourine2
81	Shaker	Shaker	Op Hihat [M1]	Shaker2	Shaker2
82	Castanet	Castanet	Mid Tom2	Castanet	Castanet
C6					
84	High Bongo2	High Bongo2	High Tom	High Bongo	High Bongo
85	MtHigh Conga	MtHigh Conga	CrashCymbal1	MtHigh Conga	MtHigh Conga
86	Low Bongo2	Low Bongo2	High Tom	Low Bongo1	Low Bongo1
87	Low Bongo3	Low Bongo3	Ride Cymbal1	Low Bongo2	Low Bongo2
88	Low Conga2	Low Conga2	China Cymbal	Op Low Conga	Op Low Conga
	Low Tom3	Low Tom3	Low Tom3	Low Tom1	Low Tom1
89	Low Tom4	Low Tom4	Low Tom4	Low Tom2	Low Tom2
90	Mix Kick1	Mix Kick1	Claves	Mix Kick4	Mix Kick7
91	Mix Kick2	Mix Kick2	Hi WoodBlock	Mix Kick5	Mix Kick8
92	Mix Kick3	Mix Kick3	LowWoodBlock	TR909 Snare	Stream
93	Mix Kick4	Mix Kick4	MuteTriangle [M5]	Syn Burst Nz	Bubble
94	Mix Nz1	Mix Nz1	OpenTriangle [M5]	Digi Breath	Train
C7					
96	Mix Nz2	Mix Nz2	Shaker	Mix Breath	Wind Chime
97	Mix Nz3	Mix Nz3	Castanet	Wide Shaker	Syn Back Nz1
	Wind Chime	Wind Chime	Wind Chime	JD Tuba Slap	Syn Back Nz2
98	Hand Clap1	Hand Clap1	Hand Clap 1	Hand Clap3	Hand Clap3
99	Hand Clap2	Hand Clap2	Hand Clap 2	Hand Clap4	Hand Clap4
100	----	----	----	Door Creak	----
101	----	----	----	Vint.Phone	----
102	----	----	----	Polish Kick	----
103	----	----	----	----	----
104	----	----	----	----	----
105	----	----	----	----	----
106	----	----	----	----	----
107	----	----	----	----	----
C8					
108	----	----	----	----	----

---- : no sound

[M] : will not sound simultaneously with other percussion instruments of the same number

	PRST: 0006. Dance Kit 1	PRST: 0007. Dance Kit 2	PRST: 0008. Dance Kit 3	PRST: 0009. Pop Kit 2	PRST: 0010. Dance Kit 4
21	----	----	----	----	----
22	----	----	----	----	----
23	----	----	----	----	----
C1 24	----	----	----	----	----
25	----	----	----	----	----
26	----	----	----	----	----
27	----	----	----	----	----
28	TR808 Kick	SH32 Kick1	TR909 Kick1	----	TR808 Kick
	Mix Kick1	TR909 Kick1	SH32 Kick1	----	Mix Kick1
29	Mix Snare1	AnalogSnare1	Snare Ghost1	----	Mix Snare1
	Mix Kick2	Analog Kick1	Analog Kick	Kick1	Mix Kick2
30	Mix Snare2	TR808 Snare	TR909 Snare1	Snare Ghost1	Mix Snare2
31	Mix Kick3	SH32 Kick2	SH32 Kick2	Kick2	Mix Kick3
32	Thin CIHH	Pedal Hihat	Pedal Hihat	Pedal Hihat	Thin CIHH
33	Mix Kick4	TR909 Kick2	TR909 Kick2	Kick3	Mix Kick4
34		[M1]	[M1]	[M1]	
C2 36	Mix Kick5	Analog Kick2	TR909 Kick3	Kick4	Mix Kick5
37	Mix Rim1	Synth Rim	TR808 Rim1	Side Stick	Mix Rim1
38	Analog Snare	TR909 Snare	TR909 Snare2	Snare1	Mix Snare3
39	TR808 Clap	TR808 Clap1	TR808 Clap	Snare Ghost2	TR808 Clap
40	Mix Snare3	DistNz Snare	TR909 Snare3	Snare2	Mix Snare4
	Mix Tom1	Deep Tom1	TR808 Tom1	Low Tom1	Mix Tom1
41	Mix CIHH1	TR808 CIHH	CI Hihat1	CI Hihat1	Mix CIHH1
42	Mix Tom2	Deep Tom1	TR808 Tom2	Low Tom2	Mix Tom2
43	Mix CIHH2	TR606 OpHH	CI Hihat2	CI Hihat2	Mix CIHH2
44	Mix Tom3	Deep Tom2	TR808 Tom3	Mid Tom1	Mix Tom3
45	Op Hihat	TR808 Cym1	Op Hihat1	Op Hihat	Op Hihat
46	Mix Tom3	Deep Tom2	TR808 Tom4	Mid Tom2	Mix Tom3
47		[M1]	[M1]	[M1]	
C3 48	Mix Tom4	Deep Tom3	TR808 Tom5	High Tom1	Mix Tom4
49	Crash Cymbal	TR808 OpHH	CrashCymbal1	CrashCymbal1	Crash Cymbal
50	Mix Tom4	Deep Tom3	TR808 Tom6	High Tom2	Mix Tom4
51	Rock Rd Edge	Wide Syn Cym	Ride Cymbal1	Ride Cymbal1	Rock Rd Edge
52	China Cymbal	TR808 Cym2	Rock Chash	China Cymbal	China Cymbal
	Ride Cymbal	China Cym1	Ride Cup	Ride Cymbal2	Ride Cymbal
53	Tambourine	Castanet	Tambourine1	Tambourine	Tambourine
54	Rock Crash	TR808 Cym3	Syn Swt Atk1	SplashCymbal	Rock Crash
55	Cowbell	Syn Cowbell	Agogo Noise	Cowbell	Cowbell
56	Concert Cym	China Cym2	MG Zap1	CrashCymbal2	Concert Cym
57	Vibraslap	Syn Swt Atk1	Syn Swt Atk2	Vibraslap	Vibraslap
58	TR808 Cym	TR909 Kick3	TR909 Kick4	Ride Cymbal3	TR808 Cym
59					
C4 60	Bongo1	Analog Kick3	SH32 Kick3	High Bongo1	Bongo1
61	Bongo2	Syn Stick	TR808 Rim2	Low Bongo1	Bongo2
62	Bongo&Conga1	AnalogSnare2	TR808 Snare1	Conga Slap	Bongo&Conga1
63	Conga	TR808 Clap2	TR808 Clap1	OpenHi Conga	Conga
64	Bongo&Conga2	AnalogSnare3	Analog Snare	Low Conga1	Bongo&Conga2
	TR808 Conga	Shaker1	Mid Tom1	High Timbale	TR808 Conga
65	Maracas	Syn CIHH1	Noise CIHH	Low Timbale	Maracas
66	Shaker	Shaker2	Mid Tom2	High Agogo	Shaker
67	Triangle1	Syn CIHH2	CI Hihat3	Low Agogo	Triangle1
68	Cabasa	Atmosphere1	Mid Tom3	Cabasa	Cabasa
69	Guero	Syn OpHH	Op Hihat2	Maracas	Guero 1
70	Street OpHH	Atmosphere2	Mid Tom4	ShortWhistle	Street OpHH
71				[M2]	
C5 72	Scratch	Atmosphere3	Mid Tom5	Long Whistle	Scratch
73	Mix Atk1	TR808 Cym4	Rock Crash2	Short Guero	Mix Atk1
74	MG Zap	Atmosphere4	Mid Tom6	Long Guero	MG Zap
75	Syn Swt Atk1	Mix Ride	SplashCymbal	Claves	Syn Swt Atk1
76	Syn Swt Atk2	China Cym3	Rock Crash3	Hi WoodBlock	Syn Swt Atk2
	Cuica Low	Rock Rd Edge	Rock Rd Edge	LowWoodBlock	Cuica Low
77	Triangle2	Syn Slap	Tambourine2	Mute Cuica	Triangle2
78	Triangle3	MG Zap1	Syn Swt Atk3	Open Cuica	Triangle3
79	Triangle4	SynVox Noise	Cowbell1	MuteTriangle	Triangle4
80	Mix Hit1	MG Zap2	Syn Swt Atk4	OpenTriangle	Guero 2
81	Mix Hit2	Syn Swt Atk2	Cowbell2	Shaker	Mix Hit2
82	Mix Hit3	MG Zap3	MG Zap2	Castanet	Mix Hit3
83					
C6 84	Wind Chime	808 Maracas	Low Bongo	High Bongo2	Wind Chime
85	Timpani Roll	TR808 Claves	MtHigh Conga	MtHigh Conga	Timpani Roll
86	Crotale	MuteTriangle	Conga Slap	Low Bongo2	Crotale
87	R8 Click	OpenTriangle	OpHigh Conga	Low Bongo3	R8 Click
88	Metro Bell	Mix Hit	Op Low Conga	Low Conga2	Metro Bell
	DR202 Beep 1	Scratch	High Timbale	Low Tom3	MC500 Beep 1
89	DR202 Beep 2	Easy Gtr	Low Timbale	Low Tom4	MC500 Beep 2
90	Sweep Down1	Syn Bel Atk	High Agogo	Mix Kick1	Sweep Down1
91	Sweep Up	MG Attack	Low Agogo	Mix Kick2	Sweep Up
92	Sweep Down2	SynSnareRoll	Cabasa	Mix Kick3	Sweep Down2
93	Light Wood	Syn Burst Nz	Maracas	Mix Kick4	Light Wood
94	Laser	White Noise	Short Guero	Mix Nz1	Laser
95			[M2]		
C7 96	Low Atk	Polishing Nz	Long Guero	Mix Nz2	Low Atk
97	Analog Kick	Long Guero	Claves	Mix Nz3	Analog Kick
98	Old Kick	Light Wood	LowWoodBlock	Wind Chime	Old Kick
99	Mix Kick6	Light Box	Hi WoodBlock	Hand Clap1	Mix Kick6
100	TR909 Snare	Syn Swt Atk3	MuteTriangle	Hand Clap2	TR909 Snare
	TR808 Snare	Laugh	OpenTriangle	----	TR808 Snare
101	Mix Snare4	Office Phone	Castanet	----	Mix Snare5
102	Mix Snare5	Polish Kick	Whistle	----	Mix Snare6
103				----	
104				----	
105				----	
106				----	
107				----	
C8 108					

----: no sound

[M]: will not sound simultaneously with other percussion instruments of the same number

Drum Kit Assign List

	PRST: 0011. Ambi Pop 1	PRST: 0012. Ambi Rock	PRST: 0013. Ambi BrushJz	PRST: 0014. Ambi HipHop	PRST: 0015. Ambi R&B
21	----	----	----	----	----
22	----	----	----	----	----
23	----	----	----	----	----
C1	----	----	----	----	----
24	----	----	----	----	----
25	----	----	----	----	----
26	----	----	----	----	----
27	----	----	----	----	----
28	----	----	----	----	----
29	----	----	----	----	----
30	----	----	----	----	----
31	Kick1	Kick1	Kick1	Analog Kick1	Mix Kick1
32	Snare Ghost1	Snare Ghost1	Snare Ghost	Analog Kick2	Mix Kick2
33	Kick2	Kick2	Kick2	Mix Kick1	Mix Kick3
34	Pedal Hihat	Pedal Hihat	Pedal Hi-hat	Mix Kick2	Mix Kick4
35	Kick3 [M1]	Power Kick1 [M1]	Jazz Kick 1 [M1]	Analog Kick3	Mix Kick5
C2	----	----	----	----	----
36	Kick4	Power Kick2	Jazz Kick 2	Mix Kick3	Mix Kick6
37	Side Stick	Side Stick	Side Stick	TR808 Rim1	Soft Stick
38	Snare1	Power Snare1	Brush Slap1	Mix Snare1	Short Snare1
39	Snare Ghost2	Snare Ghost2	Jz Brsh Swsh	Mix Clap1	Mix Stick
40	Snare2	Power Snare2	Brush Slap2	Mix Snare2	Short Snare2
41	Low Tom1	Low Tom1	BrushLowTom	Mix Snare3	Short Snare3
42	CI Hihat1 [M1]	CI Hihat1 [M1]	Brush CIHH1 [M1]	TR808 CIHH [M1]	CI Hihat1 [M1]
43	Low Tom2	Low Tom2	BrushMidTom1	Mix Snare4	Short Snare4
44	CI Hihat2 [M1]	CI Hihat2 [M1]	Brush CIHH2 [M1]	Noise CIHH [M1]	CI Hihat2 [M1]
45	Mid Tom1	Mid Tom1	BrushMidTom2	Mix Snare5	Mix Snare1
46	Op Hihat [M1]	Op Hihat [M1]	Brush OpHH [M1]	TR808 OpHH [M1]	Op Hihat [M1]
47	Mid Tom2	Mid Tom2	BrushMidTom2	Mix Snare6	Mix Snare2
C3	----	----	----	----	----
48	High Tom1	High Tom1	Brush HiTom	Syn Swt Atk1	Mix Snare3
49	CrashCymbal1	CrashCymbal1	CrashCymbal1	TR808 Cym1	TR808 Cym1
50	High Tom2	High Tom2	Brush HiTom	MG Attack	Mix Snare4
51	Ride Cymbal1	Ride Cymbal1	Ride Cymbal1	TR808 Cym2	TR808 Cym2
52	China Cymbal	China Cymbal	China Cymbal	China Cymbal	China Cymbal
53	Ride Cymbal2	Ride Cymbal2	Ride Cymbal2	Rock Rd Edge	Rock Rd Edge
54	Tambourine	Tambourine	Tambourine	Tambourine1	Tambourine1
55	SplashCymbal	SplashCymbal	SplashCymbal	Mix Crash1	Mix Crash1
56	Cowbell	Cowbell	Cowbell	Mix Hat	Mix Hat
57	CrashCymbal2	CrashCymbal2	CrashCymbal2	Mix Crash2	Mix Crash2
58	Vibraslap	Vibraslap	Vibraslap	Syn Swt Atk2	Syn Swt Atk
59	Ride Cymbal3	Ride Cymbal3	Ride Cymbal3	TR808 Kick1	TR808 Kick1
C4	----	----	----	----	----
60	High Bongo1	High Bongo1	High Bongo	TR808 Kick2	TR808 Kick2
61	Low Bongo1	Low Bongo1	Low Bongo	TR808 Rim2	TR808 Rim
62	Conga Slap	Conga Slap	MtHigh Conga	TR808 Snare1	TR808 Snare1
63	OpenHi Conga	OpenHi Conga	OpHigh Conga	TR808 Clap1	TR808 Clap1
64	Low Conga1	Low Conga1	Low Conga	TR808 Snare2	TR808 Snare2
65	High Timbale	High Timbale	High Timbale	TR808 Tom1	TR808 Tom1
66	Low Timbale	Low Timbale	Low Timbale	TR808 CIHH [M1]	TR808 CIHH [M1]
67	High Agogo	High Agogo	High Agogo	TR808 Tom2	TR808 Tom2
68	Low Agogo	Low Agogo	Low Agogo	Noise CIHH [M1]	Noise CIHH [M1]
69	Cabasa	Cabasa	Cabasa	TR808 Tom3	TR808 Tom3
70	Maracas	Maracas	Maracas	TR808 OpHH [M1]	TR808 OpHH [M1]
71	ShortWhistle [M2]	ShortWhistle [M2]	Jazz Kick 1	TR808 Tom4	TR808 Tom4
C5	----	----	----	----	----
72	Long Whistle [M2]	Long Whistle [M2]	Jazz Kick 2	TR808 Tom5	TR808 Tom5
73	Short Guiro [M3]	Short Guiro [M3]	Side Stick	Scratch1	Scratch1
74	Long Guiro [M3]	Long Guiro [M3]	Jazz Snare1	TR808 Tom6	TR808 Tom6
75	Claves	Claves	Sft Snr Gst	Scratch2	Scratch2
76	Hi WoodBlock	Hi WoodBlock	Jazz Snare2	Hand Clap1	Hand Clap1
77	LowWoodBlock	LowWoodBlock	Low Tom	Hand Clap2	Hand Clap2
78	Mute Cuica [M4]	Mute Cuica [M4]	CI Hihat1 [M1]	TR808 Clap2	TR808 Clap2
79	Open Cuica [M4]	Open Cuica [M4]	Mid Tom1	Cabasa	Cabasa
80	MuteTriangle [M5]	MuteTriangle [M5]	CI Hihat2 [M1]	Shaker1	Shaker1
81	OpenTriangle [M5]	OpenTriangle [M5]	Mid Tom2	Tambourine2	Tambourine2
82	Shaker	Shaker	Op Hihat [M1]	Shaker2	Shaker2
83	Castanet	Castanet	Mid Tom2	Castanet	Castanet
C6	----	----	----	----	----
84	High Bongo2	High Bongo2	High Tom	High Bongo	High Bongo
85	MtHigh Conga	MtHigh Conga	CrashCymbal1	MtHigh Conga	MtHigh Conga
86	Low Bongo2	Low Bongo2	High Tom	Low Bongo1	Low Bongo1
87	Low Bongo3	Low Bongo3	Ride Cymbal1	Low Bongo2	Low Bongo2
88	Low Conga2	Low Conga2	China Cymbal	Op Low Conga	Op Low Conga
89	Low Tom3	Low Tom3	Low Tom3	Low Tom1	Low Tom1
90	Low Tom4	Low Tom4	Low Tom4	Low Tom2	Low Tom2
91	Mix Kick1	Mix Kick1	Claves	Mix Kick4	Mix Kick7
92	Mix Kick2	Mix Kick2	Hi WoodBlock	Mix Kick5	Mix Kick8
93	Mix Kick3	Mix Kick3	LowWoodBlock	TR909 Snare	Stream
94	Mix Kick4	Mix Kick4	MuteTriangle [M5]	Syn Burst Nz	Bubble
95	Mix Nz1	Mix Nz1	OpenTriangle [M5]	Digi Breath	Train
C7	----	----	----	----	----
96	Mix Nz2	Mix Nz2	Shaker	Mix Breath	Wind Chime
97	Mix Nz3	Mix Nz3	Castanet	Wide Shaker	Syn Back Nz1
98	Wind Chime	Wind Chime	Wind Chime	JD Tuba Slap	Syn Back Nz2
99	Hand Clap1	Hand Clap1	Hand Clap 1	Hand Clap3	Hand Clap3
100	Hand Clap2	Hand Clap2	Hand Clap 2	Hand Clap4	Hand Clap4
101	----	----	----	Door Creak	----
102	----	----	----	Vint.Phone	----
103	----	----	----	Polish Kick	----
104	----	----	----	----	----
105	----	----	----	----	----
106	----	----	----	----	----
107	----	----	----	----	----
C8	----	----	----	----	----
108	----	----	----	----	----

---- : no sound

[M] : will not sound simultaneously with other percussion instruments of the same number

	PRST: 0016. Ambi Dance 1	PRST: 0017. Ambi Dance 2	PRST: 0018. Ambi Dance 3	PRST: 0019. Ambi Pop 2	PRST: 0020. Ambi Dance 4
21	----	----	----	----	----
22	----	----	----	----	----
23	----	----	----	----	----
C1 24	----	----	----	----	----
25	----	----	----	----	----
26	----	----	----	----	----
27	----	----	----	----	----
28	TR808 Kick	SH32 Kick1	TR909 Kick1	----	TR808 Kick
	Mix Kick1	TR909 Kick1	SH32 Kick1	----	Mix Kick1
29	Mix Snare1	AnalogSnare1	Snare Ghost1	----	Mix Snare1
	Mix Kick2	Analog Kick1	Analog Kick	Kick1	Mix Kick2
30	Mix Snare2	TR808 Snare	TR909 Snare1	Snare Ghost1	Mix Snare2
31	Mix Kick3	SH32 Kick2	SH32 Kick2	Kick2	Mix Kick3
32	Thin CIHH	Pedal Hihat	Pedal Hihat	Pedal Hihat	Thin CIHH
33	Mix Kick4	TR909 Kick2	TR909 Kick2	Kick3	Mix Kick4
34		[M1]	[M1]	[M1]	
C2 36	Mix Kick5	Analog Kick2	TR909 Kick3	Kick4	Mix Kick5
37	Mix Rim1	Synth Rim	TR808 Rim1	Side Stick	Mix Rim1
38	Analog Snare	TR909 Snare	TR909 Snare2	Snare1	Mix Snare3
39	TR808 Clap	TR808 Clap1	TR808 Clap	Snare Ghost2	TR808 Clap
40	Mix Snare3	DistNz Snare	TR909 Snare3	Snare2	Mix Snare4
	Mix Tom1	Deep Tom1	TR808 Tom1	Low Tom1	Mix Tom1
41	Mix CIHH1	TR808 CIHH	CI Hihat1	CI Hihat1	Mix CIHH1
42	Mix Tom2	Deep Tom1	TR808 Tom2	Low Tom2	Mix Tom2
43	Mix CIHH2	TR606 OpHH	CI Hihat2	CI Hihat2	Mix CIHH2
44	Mix Tom3	Deep Tom2	TR808 Tom3	Mid Tom1	Mix Tom3
45	Op Hihat	TR808 Cym1	Op Hihat1	Op Hihat	Op Hihat
46	Mix Tom3	Deep Tom2	TR808 Tom4	Mid Tom2	Mix Tom3
47		[M1]	[M1]	[M1]	
C3 48	Mix Tom4	Deep Tom3	TR808 Tom5	High Tom1	Mix Tom4
49	Crash Cymbal	TR808 OpHH	CrashCymbal1	CrashCymbal1	Crash Cymbal
50	Mix Tom4	Deep Tom3	TR808 Tom6	High Tom2	Mix Tom4
51	Rock Rd Edge	Wide Syn Cym	Ride Cymbal1	Ride Cymbal1	Rock Rd Edge
52	China Cymbal	TR808 Cym2	Rock Chash	China Cymbal	China Cymbal
	Ride Cymbal	China Cym1	Ride Cup	Ride Cymbal2	Ride Cymbal
53	Tambourine	Castanet	Tambourine1	Tambourine	Tambourine
54	Rock Crash	TR808 Cym3	Syn Swt Atk1	SplashCymbal	Rock Crash
55	Cowbell	Syn Cowbell	Agogo Noise	Cowbell	Cowbell
56	Concert Cym	China Cym2	MG Zap1	CrashCymbal2	Concert Cym
57	Vibraslap	Syn Swt Atk1	Syn Swt Atk2	Vibraslap	Vibraslap
58	TR808 Cym	TR909 Kick3	TR909 Kick4	Ride Cymbal3	TR808 Cym
59					
C4 60	Bongo1	Analog Kick3	SH32 Kick3	High Bongo1	Bongo1
61	Bongo2	Syn Stick	TR808 Rim2	Low Bongo1	Bongo2
62	Bongo&Conga1	AnalogSnare2	TR808 Snare1	Conga Slap	Bongo&Conga1
63	Conga	TR808 Clap2	TR808 Clap1	OpenHi Conga	Conga
64	Bongo&Conga2	AnalogSnare3	Analog Snare	Low Conga1	Bongo&Conga2
	TR808 Conga	Shaker1	Mid Tom1	High Timbale	TR808 Conga
65	Maracas	Syn CIHH1	Noise CIHH	Low Timbale	Maracas
66	Shaker	Shaker2	Mid Tom2	High Agogo	Shaker
67	Triangle1	Syn CIHH2	CI Hihat3	Low Agogo	Triangle1
68	Cabasa	Atmosphere1	Mid Tom3	Cabasa	Cabasa
69	Guero	Syn OpHH	Op Hihat2	Maracas	Guero 1
70	Street OpHH	Atmosphere2	Mid Tom4	ShortWhistle	Street OpHH
71				[M2]	
C5 72	Scratch	Atmosphere3	Mid Tom5	Long Whistle	Scratch
73	Mix Atk1	TR808 Cym4	Rock Crash2	Short Guero	Mix Atk1
74	MG Zap	Atmosphere4	Mid Tom6	Long Guero	MG Zap
75	Syn Swt Atk1	Mix Ride	SplashCymbal	Claves	Syn Swt Atk1
76	Syn Swt Atk2	China Cym3	Rock Crash3	Hi WoodBlock	Syn Swt Atk2
	Cuica Low	Rock Rd Edge	Rock Rd Edge	LowWoodBlock	Cuica Low
77	Triangle2	Syn Slap	Tambourine2	Mute Cuica	Triangle2
78	Triangle3	MG Zap1	Syn Swt Atk3	Open Cuica	Triangle3
79	Triangle4	SynVox Noise	Cowbell1	MuteTriangle	Triangle4
80	Mix Hit1	MG Zap2	Syn Swt Atk4	OpenTriangle	Guero 2
81	Mix Hit2	Syn Swt Atk2	Cowbell2	Shaker	Mix Hit2
82	Mix Hit3	MG Zap3	MG Zap2	Castanet	Mix Hit3
83					
C6 84	Wind Chime	808 Maracas	Low Bongo	High Bongo2	Wind Chime
85	Timpani Roll	TR808 Claves	MtHigh Conga	MtHigh Conga	Timpani Roll
86	Crotale	MuteTriangle	Conga Slap	Low Bongo2	Crotale
87	R8 Click	OpenTriangle	OpHigh Conga	Low Bongo3	R8 Click
88	Metro Bell	Mix Hit	Op Low Conga	Low Conga2	Metro Bell
	DR202 Beep 1	Scratch	High Timbale	Low Tom3	MC500 Beep 1
89	DR202 Beep 2	Easy Gtr	Low Timbale	Low Tom4	MC500 Beep 2
90	Sweep Down1	Syn Bel Atk	High Agogo	Mix Kick1	Sweep Down1
91	Sweep Up	MG Attack	Low Agogo	Mix Kick2	Sweep Up
92	Sweep Down2	SynSnareRoll	Cabasa	Mix Kick3	Sweep Down2
93	Light Wood	Syn Burst Nz	Maracas	Mix Kick4	Light Wood
94	Laser	White Noise	Short Guero	Mix Nz1	Laser
95			[M2]		
C7 96	Low Atk	Polishing Nz	Long Guero	Mix Nz2	Low Atk
97	Analog Kick	Long Guero	Claves	Mix Nz3	Analog Kick
98	Old Kick	Light Wood	LowWoodBlock	Wind Chime	Old Kick
99	Mix Kick6	Light Box	Hi WoodBlock	Hand Clap1	Mix Kick6
100	TR909 Snare	Syn Swt Atk3	MuteTriangle	Hand Clap2	TR909 Snare
	TR808 Snare	Laugh	OpenTriangle	----	TR808 Snare
101	Mix Snare4	Office Phone	Castanet	----	Mix Snare5
102	Mix Snare5	Polish Kick	Whistle	----	Mix Snare6
103				----	
104				----	
105				----	
106				----	
107				----	
C8 108					

----: no sound

[M]: will not sound simultaneously with other percussion instruments of the same number

Drum Kit Assign List

	PRST: 0021. DanceMixKit	PRST: 0022. Nu India Kit	PRST: 0023. Indomix Kit	PRST: 0024. StudioKt DS1	PRST: 0025. StudioKt DS2
21	909 Kick	-----	Kane	-----	-----
22	FingerSnaps	-----	Gamelan Gong	MC-500 Beep1	MC-500 Beep1
23	Id Snare	-----	HipHop BD1	MC-500 Beep2	MC-500 Beep2
C1	Fat Kick	-----	HipHop BD2	Concert SD	Concert SD
24	Gospel Clap	Pandeiro 1	IPopGst39mn	Snare Roll 1	Snare Roll 1
26	HipHop Kick	Pandeiro 2	Rap Snare	Finger Snap2	Finger Snap2
27	Uno!	Pandeiro 3	Dance Snare2	High Q	High Q
28	Dos!	Wadon 7	TR-909 Snare	Slap	Slap
29	Tres!	Wadon 3	707CHH	Scratch Push	Scratch Push
30	Quatro!	Wadon 5	NewJzKik	Scratch Pull	Scratch Pull
31	Hey Brazil	Wadon 2	NewJzSn1	Sticks	Sticks
32	Reg.CHH	Wadon 4	NewJzTomLo	Reg.PHH	Reg.PHH
33	Sol Snare	Wadon 6	NewRkTomMid	Hand Clap	Hand Clap
34	Gospel Clap	Wadon 1	NewJzTomHi	Snare Roll 2	Snare Roll 2
35	Id Snare	Baya Ka	PopKick_PL	Warm Kick	Warm Kick
C2	Plastic Kick	Baya Ge	[M10] TR-707 BD	Hush Kick	Hush Kick
36	808 Rim	Baya Ka 2	[M10] TR-707 Rim	WoodSideStk	Br.SideStk
38	626 Snare	Baya Short	[M10] PopSnareL	TitanSnr	Br.Snr 1
39	Hand Clap	Baya Up	[M10] PopSnrGhst	T.Snr Ghst	IronSnrGst
40	Gospel Clap	Baya Long	[M10] PopSnareR	T.Snr RS	Br.Snr 2
41	Gospel Clap	Baya Gin	[M10] PopFlrTmFl	StudioT4	StudioT4
42	808 CHH	Tabla Na	[M11] PopHiHat_U	Reg.CHH 1	Reg.CHH 1
43	808 Low Tom	Tabla Tin	[M11] PopFloorTm	StudioT3	StudioT3
44	808 PHH	Tabla Tun	[M11] PopHiHat_S	Reg.CHH 2	Reg.CHH 2
45	808 Mid Tom	Tabla Ti	[M11] RockTom2FI	StudioT3	StudioT3
46	909 OHH	Tabla Ti 2	[M11] PopHHatOpen1	Reg.OHH	Reg.OHH
47	808 Mid Tom	Tabla Te	[M11] PopTom2	StudioT2	StudioT2
C3	808 Hi Tom	Baya Ka	[M10] RockTom1FI	StudioT2	StudioT2
48	909 CrashCym	Tabla Side	[M11] PopCrash	Crash Cym	Crash Cym
50	808 Hi Tom	TablaBay-Dha	[M11] PopTom1	StudioT1	StudioT1
51	Ride Cymbal	TablaBayDhin	[M11] PopRide	Rock Ride	Rock Ride
52	China Cymbal	TablaBay-Dhi	[M11] RockCrash1	Chinese Cym	Chinese Cym
53	909 Ride Cym	Dholak 1	[M14] PopRideBl	Rock Ride	Rock Ride
54	Tambourine	Dholak 2	[M14] Tambourine	Tambourine	Tambourine
55	SplashCymbal	Dholak 8	[M13] RockSplash	Splash Cym	Splash Cym
56	808 Cowbell	Dholak 9	[M13] CowBell	Cowbell	Cowbell
57	Crash Cymbal	Dholak Na	[M13] RockCrash2	Crash Cym	Crash Cym
58	Vibraslap	Madal Da	[M12] Vibraslap	Vibra-slap	Vibra-slap
59	Ride Cymbal	Madal Dun	[M12] RockRide1	Rock Ride	Rock Ride
C4	High Bongo1	Madal Ta	[M12] Conga Hi Mt	StudioT4	High Bongo
60	Low Bongo1	Manjira Open	[M15] Conga Lo Mt	Low Bongo	Low Bongo
62	808 LowConga	ManjiraClose	[M15] Conga Slap	Mute HiConga	Mute HiConga
63	808 MidConga	Kanjira Open	[M16] Conga Hi Op	Open HiConga	Open HiConga
64	808 Hi Conga	Kanjira Slap	[M16] CongaLoOp f	Open LoConga	Open LoConga
65	High Timbale	Daffi Dun	CongaLoOp mf	High Timbale	High Timbale
66	Low Timbale	Daffi Rim	Bongo 1 Hi	Low Timbale	Low Timbale
67	High Agogo	Duff Open	[M18] BongoLoOp f	High Agogo	High Agogo
68	Low Agogo	Duff Slap	[M18] 808cowbell	Low Agogo	Low Agogo
69	Cabasa	Duff Tik	[M18] NewShaker2	Cabasa	Cabasa
70	808 Maracas	Duff dish	[M17] 808Maracas	Maracas	Maracas
71	ShortWhistle	Duff tak	[M17] Cabasa	ShortWhistle	ShortWhistle
C5	Long Whistle	Dhol 1 Open	[M19] Dhol 2	Long Whistle	Long Whistle
72	Short Guiro	Dhol 1 Stick	[M19] Dholak 1	Short Guiro	Short Guiro
73	Long Guiro	Dhol 1 Slap	[M19] Dholak 2	Long Guiro	Long Guiro
74	808 Claves	Dhol 1 Body	[M19] Dholak 3	Claves	Claves
76	Hi WoodBlock	Dhol 1	[M19] Dholak 4	Hi Wood Blck	Hi Wood Blck
77	LowWoodBlock	Dhol2 Open	[M20] Dholak 5	Lo Wood Blck	Lo Wood Blck
78	Mute Cuica	Dhol2 Slap	[M20] Dholak 7	Mute Cuica	Mute Cuica
79	Open Cuica	Dhol2 Rim	[M20] Dholak 8	Open Cuica	Open Cuica
80	MuteTriangle	Dandia Short	[M3] Dholak 9	MuteTriangle	MuteTriangle
81	OpenTriangle	Dandia Long	[M3] Dholak Ga	OpenTriangle	OpenTriangle
82	Shaker	Chtki	Shaker	Shaker	Shaker
83	Castanet	Chipri	Dholak Tun	Jingle Bell	Jingle Bell
C6	High Bongo	Udo Long	[M21] Tabla Baya 4	Wind Chime	Wind Chime
84	MtHigh Conga	Udo Short	[M21] Tabla Baya 5	Castanets	Castanets
86	Low Bongo	Udo Slap	[M21] Tabla BayaNa	Mute Surdo	Mute Surdo
87	Low Bongo	Whistle 1	[M22] Tabla BayaTi	Open Surdo	Open Surdo
88	Low Conga	Whistle 2	[M22] TablaBayaTun	Applause 2	Applause 2
89	Fuego!	Whistle 3	[M22] Udu Pot1 Hi	-----	-----
90	Tiquitito!	Shankh	Udu Pot1 Lo	-----	-----
91	Grito-Oa Oa!	909Clap	Udu Pot2 Lng	-----	-----
92	Mix Kick	Hand clap2	Udu Pot2 Sht	-----	-----
93	MG Zap	Thavil 1 dom	TablaBayaSld	-----	-----
94	808 Snare	Thavil 1 sak	118:TablaByP	-----	-----
95	Reverse Cym	Thavil 1 tak	92:DholakPh	-----	-----
C7	Mix Noise	Thavil 2 dom	Dholak Na	-----	-----
96	909 Crash	Thavil 2 sak	OpenTriangle	Std.1 Snare1	Std.1 Snare1
97	ReverseClap	Thavil 2 tak	Hand Clap 21	Std.1 Snare2	Std.1 Snare2
98	Reg.Kick	Dholak 1Opne	[M23] Hand Clap 1	Std 2 Snare1	Std 2 Snare1
100	909 Ride	Dholak 1Mute	[M23] Dholla1 Rim2	Std 2 Snare2	Std 2 Snare2
101	Deep Tom	Dholak 9	[M23] Dholla 1 Sak	Snare Drum 2	Snare Drum 2
102	Id Snare	Dholki Open	[M24] Doff 2 Dom 1	Std 1 Snare1	Std 1 Snare1
103	Deep Tom	Dholki Mute	[M24] Doff 1 Rim 1	Std 1 Snare2	Std 1 Snare2
104	808 Kick	Dholki Open2	Doff 1 Dom	Std Snare 3	Std Snare 3
105	808 CHH	Khol Open	Doff 1 Sak	Jazz Snare 1	Jazz Snare 1
106	Analog Snr	Khol Slide	Tabla1 Tak 1	Jazz Snare 2	Jazz Snare 2
107	808 OHH	Khol Mute	Tabla1 Dom 1	Room Snare 1	Room Snare 1
C8	Deep Tom	Duff2 Dom	Tabla Fx	Room Snare 2	Room Snare 2

----- : no sound

[M] : will not sound simultaneously with other percussion instruments of the same number

	PRST: 0026. LatinDrmKit	PRST: 0027. Latin Menu1	PRST: 0028. Latin Menu2	PRST: 0029. Latin Menu3	PRST: 0030. LatinPerc'06
21	TimbalesHand	----	----	----	----
22	Timbles HiMt	----	----	----	----
23	Timbles HiOp	----	----	----	----
C1 24	Timbles LoMt	----	----	----	----
25	Timbles LoOp	----	----	----	----
26	TmbSideStick	----	----	----	----
27	TimblesPaila	----	----	----	----
28	SectChd m9	----	----	----	----
29	SectChd Mj9	----	----	----	----
30	TimbalesFil4	----	----	----	----
31	TimbalesFil3	----	----	----	----
32	TimbalesFil2	----	----	----	----
33	TimbalesFil1	----	----	----	----
34	Dixie HH Hlf	----	----	----	----
35	Fat BD	----	----	----	----
C2 36	Room Kick 2	Agogo 2 Hi	Cuica 3	Surdo Hard	----
37	Cross Stick2	Agogo 2 Lo	Cuica Hi 1	Surdo Mute	----
38	Maple Lo Snr	Agogo 3 Hi	Cuica Hi 2	Surdo Mute2	----
39	Hand Clap 2	Agogo 3 Lo	Cuica Lo 1	Surdo Open H	----
40	MapleSoft SN	ApitoHiShort	Cuica Lo 2	Surdo Open L	----
41	Studio Tom 4	ApitoLoShort	Ganza Hard	Surdo Open1	----
42	Dixie HH Cls	Berimbau Dn	Ganza Soft	Surdo Open2	----
43	Studio Tom 3	Berimbau Mut	Guiro Long	Surdo Rim	----
44	Dixie HH Pdl	Berimbau Opn	Guiro Long2	Surdo Rim 2	----
45	Studio Tom 2	Berimbau Up	Guiro Short	Surdo Soft	----
46	Dixie HH Opn	Bongo 1 Hi	Guiro Short2	Tamborim Mut	----
47	Studio Tom 2	Bongo 1 Lo	Hand Clap 2	Tamborim Opn	----
C3 48	Studio Tom 1	Bongo 2 Hi	MamboBell Mt	Tamborim Slp	----
49	Crash Cymbal	Bongo 2 Lo	MamboBell Op	TamborimMute	----
50	Studio Tom 1	Bongo Hi Hrd	Maracas 2	TamborimOpen	----
51	Rock RdCym1	Bongo HiOp f	MaracasUpDwn	TamborimRim	----
52	Crash 1	Bongo Lo Hrd	MtGuiroLng	TamborimRoll	----
53	Bongo 1 Hi	Bongo Lo Sft	MtGuiroSht	Tambrin Hit	----
54	Tambrin Hit	Bongo LoOp f	PandeiroCrsh	TambrinShake	----
55	Bongo 1 Lo	Bongo LoOpmf	PandeiroHit	Timbale Hi	----
56	Cowbell Op 1	Bongo LoSlap	PandeioL Hi	Timbale Lo	----
57	BongoHiSlap1	BongoBell Mt	PandeioL Lo	Timbale Side	----
58	Cowbell 3	BongoBell Op	PandeioL Rm	Timbales Rim	----
59	Bongo LoSlap	BongoHiSlap1	PandeioL Sp	TimbalesFil1	----
C4 60	Conga Hi Mt	BongoHiSlap2	PandeiroMute	TimbalesFil2	Cowbell2 Lng
61	Conga Lo Mt	Cabasa Roll	PandeiroOpen	TimbalesFil3	Cowbell2 Edg
62	Conga Slap	Caixa Mute	PandeioRim	TimbalesFil4	Cowbell3 mf
63	Conga Hi Op	Caixa Mute2	PandeioRoll	TimbalesHand	Cowbell3 f
64	CongaLoOp f	Caixa Open1	PandeioS Op	Timbles HiMt	Wood Block2H
65	Timbles HiMt	Caixa Open2	PandeioS Rm	Timbles HiOp	Wood Block2L
66	Timbles LoOp	Caixa Open3	PandeioS Sp	Timbles LoMt	Claves 2
67	Agogo 2 Hi	Caixa Rim	Quide Long	Timbles LoOp	Whistle Long
68	Agogo 2 Lo	Caixa Roll	Quide Short	TmbSideStick	Whistle Shrt
69	Real Cabasa2	Caixa Roll2	Quijada	SectChd 13th	Conga 2H Op
70	Maracas 2	Cajon Hi	Rainstick	SectChd m9	Conga 2H Mt
71	ApitoHiShort	Cajon Lo	Real Cabasa1	SectChd Mj9	Conga 2H Slp
C5 72	ApitoLoShort	Cajon Rol Hi	Real Cabasa2	Sabor!	Conga 2L Op
73	Guiro Short2	Cajon Rol Lo	RecoRecoLng	Arriba!	Conga 2L Mt
74	Guiro Long2	Caxixi	RecoRecoSht	Ole!	Timbale 3
75	Claves Lo 2	Chekere 1	Repinique1	Uno!	Timbale 4
76	Berimbau Up	Chekere 2	Repinique2	Dos!	Cabasa 2
77	Berimbau Dn	Chekere 3	RepiniqueHrd	Tres!	Cabasa 2 Cut
78	Cuica Hi 1	Clave!	RepiniqueSft	Quatro!	Shaker 1
79	Cuica Lo 2	Claves Lo 2	Repique Open	Grito-Hahaha	Guiro 2 Up
80	Caixa Mute	Conga Hi Mt	Repique Rim	Grito-Ahaha!	Guiro 2 Down
81	Caixa Open2	Conga Hi Op	Repique Roll	Grito-Haahai	Guiro 2 Fast
82	Caixa Rim	Conga Link	SambaBateria	Grito-Rrrrr!	Tamborine4 p
83	Caixa Roll2	Conga Lo Mt	SambaWhistle	Tiquitito!	Tamborine4 f
C6 84	Cajon Rol Hi	Conga Roll	Shaker 1	Grito-Oa Oa!	Cajon 4
85	Cajon Rol Lo	Conga Slap	Shaker 2	Grito-Eh Eh!	Cuica 2 Hi
86	Surdo Mute2	Conga Thumb	Shaker Long	Ama ya ah!	Cuica 2 Low
87	Surdo Open2	CongaLoOp f	Shaker Short	Fuego!	----
88	PandeioL Hi	CongaLoOp mf	----	Hey Brazil	----
89	PandeioL Lo	Cowbell 1	----	----	----
90	PandeioOpen	Cowbell 2	----	----	----
91	PandeioMute	Cowbell 3	----	----	----
92	PandeioL Rm	Cowbell Mt 1	----	----	----
93	PandeioL Sp	Cowbell Mt 2	----	----	----
94	Quijada	Cowbell Op 1	----	----	----
95	Rainstick	Cowbell Op 2	----	----	----
C7 96	Metronome 2	----	----	----	----
97	R8 Click	----	----	----	----
98	Metronome 1	----	----	----	----
99	180:LatinPt2	----	----	----	----
100	160:CgMambo	----	----	----	----
101	132:TmbLPtn1	----	----	----	----
102	132:AgogoPtn	----	----	----	----
103	104:Shakin'	----	----	----	----
104	----	----	----	----	----
105	----	----	----	----	----
106	----	----	----	----	----
107	----	----	----	----	----
C8 108	----	----	----	----	----

----: no sound

[M]: will not sound simultaneously with other percussion instruments of the same number

Drum Kit Assign List

	PRST: 0031. China Perc	PRST: 0032. Orch China	PRST: 0033. R&B China	PRST: 0034. SonicCell XJ	PRST: 0035. Nu Tech XJ
21	----	----	----	----	----
22	----	----	----	----	----
23	----	----	----	----	----
C1	----	----	----	----	----
24	----	----	----	----	----
25	----	----	----	----	----
26	----	----	----	----	----
27	----	----	----	----	----
28	----	----	----	----	----
29	Gu Roll [M2]	Timpani Roll	70's Kick	Dance Kick	SH32 Kick
30	Gu Hi [M2]	Concert BD	AnalogKick 2	Dry Kick 1	JD EML 5th
31	HuYinLuoL Op	R8 Shaker [M6]	Urbn Sn Roll	Snr Roll	AnalogKick 2
32	Changgo	Jngl pkt Snr	HipHop Kick	Power Kick	TR909 Kick 4
33	Asian Gong 2	Reverse Cym2	R&B ShrtSnr1	Amb.Snr 2	Plastic Kick
34	Tang Gu Mt	Snr Roll	Old Kick	Power Kick	R&B Kick
35		Jazz Ride	HipHop CHH	Reg.PHH	TR707 Kick
		Timpani Roll	DistHit Kick [M1]	Reg.Kick [M1]	Plastic Kick
C2					
36	Tang Gu Op	Concert BD	TR909 Kick 1	SF Kick 1	SH32 Kick
37	Shu Gu Rim	Hard Stick	Dry Stick	SF Cstk	TR909 Snr 2
38	Shu Gu	Amb.Snr 2	Dirty Snr	SF Snr	Syn Mtl Atk2
39	Shu Ban	Gospel Clap	Maple Snr	SF Snr Gst	Flange Snr
40	Ban Gu 3	Concert SD	Short Snr	SF Rim	TR909 Snr 5
41	Tang Gu Op	Timpani F	TR808 Tom	RR F.Tom	Dance CHH [M1]
42	Nao Bo [M1]	Timpani F#	TR606 CHH [M1]	Reg.CHH 1 [M1]	TR606DstCHH [M2]
43	Tang Gu Mt	Timpani G	RR F.Tom ff	SF L.Tom	TR909 PHH 2 [M1]
44	Xiao Bo [M1]	Timpani G#	TR909 CHH 2 [M1]	Reg.CHH 2 [M1]	TR606 PHH [M2]
45	Tang Gu Op	Timpani A	TR808 Tom	SF M.Tom	TR909 OHH 1 [M1]
46	HuYinLuoH Op [M1]	Timpani A#	Lo-Bit OHH [M1]	Reg.OHH [M1]	Lite OHH [M2]
47	Tang Gu Mt	Timpani B	Reg.M.Tom	SF MT Flm	Rock Rd Cup
C3					
48	Tang Gu Op	Timpani C	TR808 Tom	SF H.Tom	Syn Hrd Atk3
49	HuYinLuoH Op	Timpani C#	Rock Crash 1	Crash Cym 1	MG Zap 2
50	Tang Gu Mt	Timpani D	Reg.H.Tom	SF HT Flm	MG Zap 7
51	Shou Luo 1	Timpani D#	Splash Cym	Rock Ride	MG Zap 6
52	HuYinLuoL Mt	Timpani E	Rock Rd Edge	China Cymbal	MG Zap 6
53	Shou Luo 2	Timpani F	Concert Cym1	Splash Cym	HipHop CHH [M3]
54	Xiao Bo	Tamborine 4	Cheap Clap	Tamborine	Syn Swt Atk2 [M4]
55	Ban Gu 3	Concert Cym	Snap	Rock Crash 1	Reg.PHH [M3]
56	Nao Bo	Cowbell Mute	Lo-Bit Snr	Cowbell	Syn Swt Atk7 [M4]
57	HuYinLuoH Op	Concert Cym2	Wood Block 4	Crash Cym 1	HipHop OHH [M3]
58	HuYinLuoH Mt	Ride Cymbal	Shaku Noise	Cowbell Lng	TR909 OHH 2
59	HuYinLuoL Mt	Crash Cym 1	Syn Hrd Atk1	Rock Ride	TR909 R.Crsh
C4					
60	Cga Mute Hi	Tang Gu Op	Tang Gu Op	Naggra D	Naggra D
61	Cga Mute Lo	Shu Gu Rim	Shu Gu Rim	Naggra B	Naggra B
62	Dholak 9	Shu Gu	Shu Gu	Naggra C	Naggra C
63	Dholak 10	Shu Ban	Shu Ban	Naggra A	Naggra A
64	Dhol 3	Ban Gu 3	Ban Gu 3	Nggr Mute	Nggr Mute
65	Wadon 8	Tang Gu Op	Tang Gu Op	Nggr Side [M10]	Nggr Side [M10]
66	Wadon 9	Nao Bo [M7]	Nao Bo [M7]	Nggr Flam 1 [M10]	Nggr Flam 1 [M10]
67	Wadon 10	Tang Gu Mt	Tang Gu Mt	Nggr Flam 3 [M10]	Nggr Flam 3 [M10]
68	Wadon 11	Xiao Bo [M7]	Xiao Bo [M7]	Nggr Flam 4 [M10]	Nggr Flam 4 [M10]
69	Wadon 12	Tang Gu Op	Tang Gu Op	Nggr Roll 1 [M10]	Nggr Roll 1 [M10]
70	Wadon 13	HuYinLuoH Op [M7]	HuYinLuoH Op [M7]	Nggr Roll 2 [M10]	Nggr Roll 2 [M10]
71	Wadon 14	Tang Gu Mt	Tang Gu Mt	Nggr Roll 3 [M10]	Nggr Roll 3 [M10]
C5					
72	Wadaiko	Tang Gu Op	Tang Gu Op	Nggr Roll 4 [M10]	Nggr Roll 4 [M10]
73	Ohkawa	HuYinLuoH Op	HuYinLuoH Op	Dap 1	Dap 1
74	Shimedaiko	Tang Gu Mt	Tang Gu Mt	Dap 2	Dap 2
75	Shimedaiko	Shou Luo 1	Shou Luo 1	Dap 3	Dap 3
76	Mokugyo 1	HuYinLuoL Mt	HuYinLuoL Mt	Dap 4	Dap 4
77	Mokugyo 2	Shou Luo 2	Shou Luo 2	Dap 5	Dap 5
78	Kane Side	Xiao Bo	Xiao Bo	Dap 7	Dap 7
79	Wadaiko Rim	Ban Gu 3	Ban Gu 3	Dap 9	Dap 9
80	Kwaengwari p	Nao Bo	Nao Bo	Dap 10 [M11]	Dap 10 [M11]
81	Shu Gu Rim	HuYinLuoH Op	HuYinLuoH Op	Dap Roll 1 [M11]	Dap Roll 1 [M11]
82	Kane 2	HuYinLuoH Mt	HuYinLuoH Mt	Dap Roll 3 [M11]	Dap Roll 3 [M11]
83	Ban Gu 3	HuYinLuoL Mt	HuYinLuoL Mt	Dap Roll 4 [M11]	Dap Roll 4 [M11]
C6					
84	GamelanGong2	Gu Roll [M8]	Gu Roll [M8]	Dap Roll 5 [M11]	Dap Roll 5 [M11]
85	Saron	Gu Hi [M8]	Gu Hi [M8]	Dap Roll 6 [M11]	Dap Roll 6 [M11]
86	Wind Bell 2	Kane Side	Kane Side	Dap Roll 7 [M11]	Dap Roll 7 [M11]
87	Kopyak Mt	Kopyak Mt	Kopyak Mt	Tabla 1	Tabla 1
88	Kopyak Op	Kopyak Op	Kopyak Op	Tabla 6	Tabla 6
89	Chenchen Opn	Chenchen Opn	Chenchen Opn	Tabla 4	Tabla 4
90	Chenchen Cls	Chenchen Cls	Chenchen Cls	Tabla 5	Tabla 5
91	Ceng Ceng 2	Ceng Ceng 2	Ceng Ceng 2	Tabla 8	Tabla 8
92	Kwaengwari p	Kwaengwari p	Kwaengwari p	Tabla 10 [M12]	Tabla 10 [M12]
93	Kwaengwari f	Kwaengwari f	Kwaengwari f	Tabla Roll 7 [M12]	Tabla Roll 7 [M12]
94	KwaengwariMt	KwaengwariMt	KwaengwariMt	Tabla Roll 2 [M12]	Tabla Roll 2 [M12]
95	118:China Ph	118:China Ph	118:China Ph	Tabla Roll 5 [M12]	Tabla Roll 5 [M12]
C7					
96	132:China Ph	132:China Ph	132:China Ph	Tabla Roll 4 [M12]	Tabla Roll 4 [M12]
97	Sagat Open 2	Sagat Open 2	Sagat Open 2	Tabla Roll 3 [M12]	Tabla Roll 3 [M12]
98	Sagat Close2	Sagat Close2	Sagat Close2	Tabla Roll 1 [M12]	Tabla Roll 1 [M12]
99	Ban Gu 5	Ban Gu 5	Ban Gu 5	Tabla Roll 8 [M12]	Tabla Roll 8 [M12]
100	Ban Gu 4	Ban Gu 4	Ban Gu 4	Tabla Roll 9 [M12]	Tabla Roll 9 [M12]
101	Big Gong	Big Gong	Big Gong	Kane Side	Kane Side
102	----	----	----	Kane 2	Kane 2
103	----	----	----	Wind Bell 2	Wind Bell 2
104	----	----	----	Chenchen Opn	Chenchen Opn
105	----	----	----	Chenchen Cls	Chenchen Cls
106	----	----	----	Ceng Ceng 2	Ceng Ceng 2
107	----	----	----	Sagat Open 2	Sagat Open 2
C8					
108	----	----	----	Sagat Close2	Sagat Close2

---- : no sound

[M] : will not sound simultaneously with other percussion instruments of the same number

	GM: 0001. GM2 STANDARD	GM: 0002. GM2 ROOM	GM: 0003. GM2 POWER	GM: 0004. GM2 ELECTRIC	GM: 0005. GM2 ANALOG
21	----	----	----	----	----
22	----	----	----	----	----
23	----	----	----	----	----
C1 24	----	----	----	----	----
25	----	----	----	----	----
26	----	----	----	----	----
27	High Q	High Q	High Q	High Q	High Q
28	Slap	Slap	Slap	Slap	Slap
29	Scratch Push [M7]	Scratch Push [M7]	Scratch Push [M7]	Scratch Push [M7]	Scratch Push [M7]
30	Scratch Pull [M7]	Scratch Pull [M7]	Scratch Pull [M7]	Scratch Pull [M7]	Scratch Pull [M7]
31	Sticks	Sticks	Sticks	Sticks	Sticks
32	Square Click	Square Click	Square Click	Square Click	Square Click
33	Metron Click	Metron Click	Metron Click	Metron Click	Metron Click
34	Metron Bell	Metron Bell	Metron Bell	Metron Bell	Metron Bell
35	Kick Drum 2	Kick Drum 2	Power Kick 2	Kick Drum 2	Kick Drum 2
C2 36	Kick Drum 1	Kick Drum 1	Power Kick 1	Elec.Kick 1	Ana.Kick 1
37	Side Stick	Side Stick	Side Stick	Side Stick	Ana.Rim Sho
38	Aco.Snare	Aco.Snare	PowerSnareDr	E.SnareDrum1	Ana.Snare 1
39	Hand Clap	Hand Clap	Hand Clap	Hand Clap	Hand Clap
40	Elec.Snare	Elec.Snare	Elec.Snare	E.SnareDrum2	Elec.Snare
41	Room LowTom2	Room LowTom2	PowerLowTom2	E.Low Tom 2	Ana.Low Tom2
42	ClosedHi-hat [M1]	ClosedHi-hat [M1]	ClosedHi-hat [M1]	ClosedHi-hat [M1]	Ana.ClosedHH [M1]
43	Low Tom 1	Room LowTom1	PowerLowTom1	E.Low Tom 1	Ana.Low Tom1
44	Pedal Hi-hat [M1]	Pedal Hi-hat [M1]	Pedal Hi-hat [M1]	Pedal Hi-hat [M1]	Ana.ClosedHH [M1]
45	Mid Tom 2	Room MidTom2	PowerMidTom2	E.Mid Tom 2	Ana.Mid Tom2
46	Open Hi-hat [M1]	Open Hi-hat [M1]	Open Hi-hat [M1]	Open Hi-hat [M1]	Ana.Open HH [M1]
47	Mid Tom 1	Room MidTom1	PowerMidTom1	E.Mid Tom 1	Ana.Mid Tom1
C3 48	High Tom 2	Room Hi Tom2	Power HiTom2	E.Hi Tom 2	Ana.Hi Tom2
49	CrashCymbal1	CrashCymbal1	CrashCymbal1	CrashCymbal1	Ana.Cymbal
50	High Tom 1	Room Hi Tom1	Power HiTom1	E.Hi Tom 1	Ana.Hi Tom1
51	Ride Cymbal1	Ride Cymbal1	Ride Cymbal1	Ride Cymbal1	Ride Cymbal1
52	China Cymbal	China Cymbal	China Cymbal	Reverse Cym.	China Cymbal
53	Ride Bell	Ride Bell	Ride Bell	Ride Bell	Ride Bell
54	Tambourine	Tambourine	Tambourine	Tambourine	Tambourine
55	SplashCymbal	SplashCymbal	SplashCymbal	SplashCymbal	SplashCymbal
56	Cowbell	Cowbell	Cowbell	Cowbell	Ana.Cowbell
57	CrashCymbal2	CrashCymbal2	CrashCymbal2	CrashCymbal2	CrashCymbal2
58	Vibra-slap	Vibra-slap	Vibra-slap	Vibra-slap	Vibra-slap
59	Ride Cymbal2	Ride Cymbal2	Ride Cymbal2	Ride Cymbal2	Ride Cymbal2
C4 60	High Bongo	High Bongo	High Bongo	High Bongo	High Bongo
61	Low Bongo	Low Bongo	Low Bongo	Low Bongo	Low Bongo
62	MuteHi Conga	MuteHi Conga	MuteHi Conga	MuteHi Conga	Ana.Hi Conga
63	OpenHi Conga	OpenHi Conga	OpenHi Conga	OpenHi Conga	Ana.MidConga
64	Low Conga	Low Conga	Low Conga	Low Conga	Ana.LowConga
65	High Timbale	High Timbale	High Timbale	High Timbale	High Timbale
66	Low Timbale	Low Timbale	Low Timbale	Low Timbale	Low Timbale
67	High Agogo	High Agogo	High Agogo	High Agogo	High Agogo
68	Low Agogo	Low Agogo	Low Agogo	Low Agogo	Low Agogo
69	Cabasa	Cabasa	Cabasa	Cabasa	Cabasa
70	Maracas	Maracas	Maracas	Maracas	Ana.Maracas
71	ShortWhistle [M2]	ShortWhistle [M2]	ShortWhistle [M2]	ShortWhistle [M2]	ShortWhistle [M2]
C5 72	Long Whistle [M2]	Long Whistle [M2]	Long Whistle [M2]	Long Whistle [M2]	Long Whistle [M2]
73	Short Guiro [M3]	Short Guiro [M3]	Short Guiro [M3]	Short Guiro [M3]	Short Guiro [M3]
74	Long Guiro [M3]	Long Guiro [M3]	Long Guiro [M3]	Long Guiro [M3]	Long Guiro [M3]
75	Claves	Claves	Claves	Claves	Ana.Claves
76	Hi WoodBlock	Hi WoodBlock	Hi WoodBlock	Hi WoodBlock	Hi WoodBlock
77	LowWoodBlock	LowWoodBlock	LowWoodBlock	LowWoodBlock	LowWoodBlock
78	Mute Cuica [M4]	Mute Cuica [M4]	Mute Cuica [M4]	Mute Cuica [M4]	Mute Cuica [M4]
79	Open Cuica [M4]	Open Cuica [M4]	Open Cuica [M4]	Open Cuica [M4]	Open Cuica [M4]
80	MuteTriangle [M5]	MuteTriangle [M5]	MuteTriangle [M5]	MuteTriangle [M5]	MuteTriangle [M5]
81	OpenTriangle [M5]	OpenTriangle [M5]	OpenTriangle [M5]	OpenTriangle [M5]	OpenTriangle [M5]
82	Shaker	Shaker	Shaker	Shaker	Shaker
83	Jingle Bell	Jingle Bell	Jingle Bell	Jingle Bell	Jingle Bell
C6 84	Bell Tree	Bell Tree	Bell Tree	Bell Tree	Bell Tree
85	Castanets	Castanets	Castanets	Castanets	Castanets
86	Mute Surdo [M6]	Mute Surdo [M6]	Mute Surdo [M6]	Mute Surdo [M6]	Mute Surdo [M6]
87	Open Surdo [M6]	Open Surdo [M6]	Open Surdo [M6]	Open Surdo [M6]	Open Surdo [M6]
88	----	----	----	----	----
89	----	----	----	----	----
90	----	----	----	----	----
91	----	----	----	----	----
92	----	----	----	----	----
93	----	----	----	----	----
94	----	----	----	----	----
95	----	----	----	----	----
C7 96	----	----	----	----	----
97	----	----	----	----	----
98	----	----	----	----	----
99	----	----	----	----	----
100	----	----	----	----	----
101	----	----	----	----	----
102	----	----	----	----	----
103	----	----	----	----	----
104	----	----	----	----	----
105	----	----	----	----	----
106	----	----	----	----	----
107	----	----	----	----	----
C8 108	----	----	----	----	----

---- : no sound

[M] : will not sound simultaneously with other percussion instruments of the same number

Drum Kit Assign List

	GM: 0006. GM2 JAZZ	GM: 0007. GM2 BRUSH	GM: 0008. GM2 ORCHSTRA	GM: 0009. GM2 SFX
21	----	----	----	----
22	----	----	----	----
23	----	----	----	----
C1				
24	----	----	----	----
25	----	----	----	----
26	----	----	----	----
27	High Q	High Q	ClosedHi-hat [M1]	----
28	Slap	Slap	Pedal Hi-hat [M1]	----
29	Scratch Push [M7]	Scratch Push [M7]	Open Hi-hat [M1]	----
30	Scratch Pull [M7]	Scratch Pull [M7]	Ride Cymbal1	----
31	Sticks	Sticks	Sticks	----
32	Square Click	Square Click	Square Click	----
33	Metron Click	Metron Click	Metron Click	----
34	Metron Bell	Metron Bell	Metron Bell	----
35	Jazz Kick 2	Jazz Kick 2	Concert BD 2	----
C2				
36	Jazz Kick 1	Jazz Kick 1	Concert BD 1	----
37	Side Stick	Side Stick	Side Stick	----
38	Aco.Snare	Brush Tap	Concert SD	----
39	Hand Clap	Brush Slap	Castanets	High Q
40	Elec.Snare	Brush Swirl	Concert SD	Slap
41	Low Tom 2	BrushLowTom2	Timpani F	Scratch Push [M7]
42	ClosedHi-hat [M1]	ClosedHi-hat [M1]	Timpani F#	Scratch Pull [M7]
43	Low Tom 1	BrushLowTom1	Timpani G	Sticks
44	Pedal Hi-hat [M1]	Pedal Hi-hat [M1]	Timpani G#	Square Click
45	Mid Tom 2	BrushMidTom2	Timpani A	Metron Click
46	Open Hi-hat [M1]	Open Hi-hat [M1]	Timpani A#	Metron Bell
47	Mid Tom 1	BrushMidTom1	Timpani B	GtFret Noise
C3				
48	High Tom 2	Brush HiTom2	Timpani c	Cut Noise Up
49	CrashCymbal1	CrashCymbal1	Timpani c#	Cut Noise Dw
50	High Tom 1	Brush HiTom1	Timpani d	Slap_St.Bass
51	Ride Cymbal1	Ride Cymbal1	Timpani d#	Fl.Key Click
52	China Cymbal	China Cymbal	Timpani e	Laughing
53	Ride Bell	Ride Bell	Timpani f	Scream
54	Tambourine	Tambourine	Tambourine	Punch
55	SplashCymbal	SplashCymbal	SplashCymbal	Heart Beat
56	Cowbell	Cowbell	Cowbell	Footsteps 1
57	CrashCymbal2	CrashCymbal2	Concert Cym2	Footsteps 2
58	Vibra-slap	Vibra-slap	Vibra-slap	Applause
59	Ride Cymbal2	Ride Cymbal2	Concert Cym1	Door Creak
C4				
60	High Bongo	High Bongo	High Bongo	Door
61	Low Bongo	Low Bongo	Low Bongo	Scratch
62	MuteHi Conga	MuteHi Conga	MuteHi Conga	Wind Chimes
63	OpenHi Conga	OpenHi Conga	OpenHi Conga	Car-Engine
64	Low Conga	Low Conga	Low Conga	Car-Stop
65	High Timbale	High Timbale	High Timbale	Car-Pass
66	Low Timbale	Low Timbale	Low Timbale	Car-Crash
67	High Agogo	High Agogo	High Agogo	Siren
68	Low Agogo	Low Agogo	Low Agogo	Train
69	Cabasa	Cabasa	Cabasa	Jetplane
70	Maracas	Maracas	Maracas	Helicopter
71	ShortWhistle [M2]	ShortWhistle [M2]	ShortWhistle [M2]	Starship
C5				
72	Long Whistle [M2]	Long Whistle [M2]	Long Whistle [M2]	Gun Shot
73	Short Guiro [M3]	Short Guiro [M3]	Short Guiro [M3]	Machine Gun
74	Long Guiro [M3]	Long Guiro [M3]	Long Guiro [M3]	LaserGun
75	Claves	Claves	Claves	Explosion
76	Hi WoodBlock	Hi WoodBlock	Hi WoodBlock	Dog
77	LowWoodBlock	LowWoodBlock	LowWoodBlock	Horse-Gallop
78	Mute Cuica [M4]	Mute Cuica [M4]	Mute Cuica [M4]	Birds
79	Open Cuica [M4]	Open Cuica [M4]	Open Cuica [M4]	Rain
80	MuteTriangle [M5]	MuteTriangle [M5]	MuteTriangle [M5]	Thunder
81	OpenTriangle [M5]	OpenTriangle [M5]	OpenTriangle [M5]	Wind
82	Shaker	Shaker	Shaker	Seashore
83	Jingle Bell	Jingle Bell	Jingle Bell	Stream
C6				
84	Bell Tree	Bell Tree	Bell Tree	Bubble
85	Castanets	Castanets	Castanets	----
86	Mute Surdo [M6]	Mute Surdo [M6]	Mute Surdo [M6]	----
87	Open Surdo [M6]	Open Surdo [M6]	Open Surdo [M6]	----
88	----	----	Applause	----
89	----	----	----	----
90	----	----	----	----
91	----	----	----	----
92	----	----	----	----
93	----	----	----	----
94	----	----	----	----
95	----	----	----	----
C7				
96	----	----	----	----
97	----	----	----	----
98	----	----	----	----
99	----	----	----	----
100	----	----	----	----
101	----	----	----	----
102	----	----	----	----
103	----	----	----	----
104	----	----	----	----
105	----	----	----	----
106	----	----	----	----
107	----	----	----	----
C8				
108	----	----	----	----

---- : no sound

[M] : will not sound simultaneously with other percussion instruments of the same number

Rhythm Pattern List

No.	Group	Pattern
001	Pop 1	1-a (120)
		1-b (120)
		1-c (120)
		1-d (120)
		1-e (120)
		1-f (120)
		1-g (120)
		1-h (120)
002	Pop 2	2-a (120)
		2-b (120)
		2-c (120)
		2-d (120)
		2-e (120)
		2-f (120)
		2-g (120)
		2-h (120)
003	Pop 3	3-a (150)
		3-b (150)
		3-c (150)
		3-d (150)
		3-e (150)
		3-f (150)
		3-g (150)
		3-h (150)
004	Pop 4	4-a (120)
		4-b (120)
		4-c (120)
		4-d (120)
		4-e (120)
		4-f (120)
		4-g (120)
		4-h (120)
005	Pop 5	5-a (103)
		5-b (103)
		5-c (103)
		5-d (103)
		5-e (103)
		5-f (103)
		5-g (103)
		5-h (103)
006	Pop 6	6-a (96)
		6-b (96)
		6-c (96)
		6-d (96)
		6-e (96)
		6-f (96)
		6-g (96)
		6-h (96)
007	Pop 7	7-a (104)
		7-b (104)
		7-c (104)
		7-d (104)
		7-e (104)
		7-f (104)
		7-g (104)
		7-h (104)
008	6/8 Pop 1	8-a (110)
		8-b (110)
		8-c (110)
		8-d (110)
		8-e (110)
		8-f (110)
		8-g (110)
		8-h (110)

No.	Group	Pattern
009	Pop 8	9-a (125)
		9-b (125)
		9-c (125)
		9-d (125)
		9-e (125)
		9-f (125)
		9-g (125)
		9-h (125)
010	Rock 1	1-a (120)
		1-b (120)
		1-c (120)
		1-d (120)
		1-e (120)
		1-f (120)
		1-g (120)
		1-h (120)
011	Rock 2	2-a (114)
		2-b (114)
		2-c (114)
		2-d (114)
		2-e (114)
		2-f (114)
		2-g (114)
		2-h (114)
012	Funk	1 (115)
		2 (115)
		3 (115)
		4 (115)
		5 (115)
		6 (115)
		7 (115)
		8 (115)
013	Fusion	1 (100)
		2 (100)
		3 (100)
		4 (100)
		5 (100)
		6 (100)
		7 (100)
		8 (100)
014	6/8 Jazz	1 (136)
		2 (136)
		3 (136)
		4 (136)
		5 (136)
		6 (136)
		7 (136)
		8 (136)
015	Bossa	1 (160)
		2 (160)
		3 (160)
		4 (160)
		5 (160)
		6 (160)
		7 (160)
		8 (160)
016	Hip Hop	1 (95)
		2 (95)
		3 (95)
		4 (95)
		5 (95)
		6 (95)
		7 (95)
		8 (95)

No.	Group	Pattern
017	R&B	1 (140)
		2 (140)
		3 (140)
		4 (140)
		5 (140)
		6 (140)
		7 (140)
		8 (140)
018	Reggae	1 (105)
		2 (94)
		3 (94)
		4 (90)
		5 (89)
		6 (105)
		7 (105)
		8 (100)
019	Trance 1	1 (140)
		2 (138)
		3 (142)
		4 (142)
		5 (142)
		6 (142)
		7 (138)
		8 (138)
020	Trance 2	1 (143)
		2 (142)
		3 (135)
		4 (140)
		5 (130)
		6 (154)
		7 (140)
		8 (138)
021	House 1	1 (126)
		2 (126)
		3 (124)
		4 (128)
		5 (125)
		6 (128)
		7 (126)
		8 (126)
022	House 2	1 (125)
		2 (130)
		3 (134)
		4 (127)
		5 (128)
		6 (128)
		7 (128)
		8 (128)
023	Drum'n Bs	1 (170)
		2 (160)
		3 (180)
		4 (160)
		5 (170)
		6 (170)
		7 (170)
		8 (170)
024	Disco	1 (125)
		2 (125)
		3 (125)
		4 (120)
		5 (130)
		6 (124)
		7 (125)
		8 (125)

No.	Group	Pattern
025	6/8 SlwJazzWaltz	1-a (80)
		1-b (80)
		1-c (80)
		1-d (80)
		2-a (80)
		2-b (80)
		2-c (80)
		2-d (80)
026	6/8 Shuffle	1-a (90)
		1-b (90)
		1-c (90)
		1-d (90)
		2-a (90)
		2-b (90)
		2-c (90)
		2-d (90)
027	6/8 Pop 2	1-a (64)
		1-b (64)
		1-c (64)
		1-d (64)
		2-a (64)
		2-b (64)
		2-c (64)
		2-d (64)
028	Machine Beat 1	1 (100)
		2 (100)
		3 (140)
		4 (140)
		5 (160)
		6 (160)
		7 (136)
		8 (160)
029	Machine Beat 2	1 (130)
		2 (130)
		3 (130)
		4 (140)
		5 (140)
		6 (140)
		7 (175)
		8 (160)
030	Machine Beat 3	1 (130)
		2 (130)
		3 (130)
		4 (130)
		5 (130)
		6 (130)
		7 (130)
		8 (130)

(): Recommended tempo

Pattern List

No.	Name
0001	Pop EDM 1
0002	Pop EDM 2
0003	Pop EDM 3
0004	Pop EDM 4
0005	Pop EDM 5
0006	Pop EDM 6

No.	Name
0007	Pop EDM 7
0008	Pop EDM 8
0009	Electro 1
0010	Electro 2
0011	Electro 3

Arpeggio Style List

No.	Name
001	Basic 1 (a)
002	Basic 2 (a)
003	Basic 3 (a)
004	Basic 4 (a)
005	Basic 5 (a)
006	Basic 6 (a)
007	Seq Ptn 1 (2)
008	Seq Ptn 2 (2)
009	Seq Ptn 3 (2)
010	Seq Ptn 4 (2)
011	Seq Ptn 5 (2)
012	Seq Ptn 6 (3)
013	Seq Ptn 7 (3)
014	Seq Ptn 8 (3)
015	Seq Ptn 9 (3)
016	Seq Ptn 10 (3)
017	Seq Ptn 11 (3)
018	Seq Ptn 12 (3)
019	Seq Ptn 13 (3)
020	Seq Ptn 14 (3)
021	Seq Ptn 15 (3)
022	Seq Ptn 16 (3)
023	Seq Ptn 17 (3)
024	Seq Ptn 18 (4)
025	Seq Ptn 19 (4)
026	Seq Ptn 20 (4)

No.	Name
027	Seq Ptn 21 (4)
028	Seq Ptn 22 (4)
029	Seq Ptn 23 (4)
030	Seq Ptn 24 (4)
031	Seq Ptn 25 (4)
032	Seq Ptn 26 (4)
033	Seq Ptn 27 (4)
034	Seq Ptn 28 (4)
035	Seq Ptn 29 (4)
036	Seq Ptn 30 (5)
037	Seq Ptn 31 (5)
038	Seq Ptn 32 (6)
039	Seq Ptn 33 (p)
040	Seq Ptn 34 (p)
041	Seq Ptn 35 (p)
042	Seq Ptn 36 (p)
043	Seq Ptn 37 (p)
044	Seq Ptn 38 (p)
045	Seq Ptn 39 (p)
046	Seq Ptn 40 (p)
047	Seq Ptn 41 (p)
048	Seq Ptn 42 (p)
049	Seq Ptn 43 (p)
050	Seq Ptn 44 (p)
051	Seq Ptn 45 (p)
052	Seq Ptn 46 (p)

No.	Name
053	Seq Ptn 47 (p)
054	Seq Ptn 48 (p)
055	Seq Ptn 49 (p)
056	Seq Ptn 50 (p)
057	Seq Ptn 51 (p)
058	Seq Ptn 52 (p)
059	Seq Ptn 53 (p)
060	Seq Ptn 54 (p)
061	Seq Ptn 55 (p)
062	Seq Ptn 56 (p)
063	Seq Ptn 57 (p)
064	Seq Ptn 58 (p)
065	Seq Ptn 59 (p)
066	Seq Ptn 60 (p)
067	Bassline 1 (1)
068	Bassline 2 (1)
069	Bassline 3 (1)
070	Bassline 4 (1)
071	Bassline 5 (1)
072	Bassline 6 (1)
073	Bassline 7 (1)
074	Bassline 8 (1)
075	Bassline 9 (1)
076	Bassline 10 (2)
077	Bassline 11 (2)
078	Bassline 12 (2)

No.	Name
079	Bassline 13 (2)
080	Bassline 14 (2)
081	Bassline 15 (2)
082	Bassline 16 (3)
083	Bassline 17 (3)
084	Bassline 18 (3)
085	Bassline 19 (3)
086	Bassline 20 (3)
087	Bassline 21 (3)
088	Bassline 22 (p)
089	Bassline 23 (p)
090	Bassline 24 (p)
091	Bassline 25 (p)
092	Bassline 26 (p)
093	Bassline 27 (p)
094	Bassline 28 (p)
095	Bassline 29 (p)
096	Bassline 30 (p)
097	Bassline 31 (p)
098	Bassline 32 (p)
099	Bassline 33 (p)
100	Bassline 34 (p)
101	Bassline 35 (p)
102	Bassline 36 (p)
103	Bassline 37 (p)
104	Bassline 38 (p)

No.	Name
105	Bassline 39 (p)
106	Bassline 40 (p)
107	Bassline 41 (p)
108	Sliced 1 (a)
109	Sliced 2 (a)
110	Sliced 3 (a)
111	Sliced 4 (a)
112	Sliced 5 (a)
113	Sliced 6 (a)
114	Sliced 7 (a)
115	Sliced 8 (a)
116	Sliced 9 (a)
117	Sliced 10 (a)
118	Gtr Arp 1 (4)
119	Gtr Arp 2 (5)
120	Gtr Arp 3 (6)
121	Gtr Backing 1(a)
122	Gtr Backing 2(a)
123	Key Bckng1 (a)
124	Key Bckng2 (a)
125	Key Bckng3 (1-3)
126	1/1 Note Trg (1)
127	1/2 Note Trg (1)
128	1/4 Note Trg (1)

Recommended number of notes to press

- (1)–(6) : One to six notes
- (1-3) : One bass note + three-note chord
- (a) : As desired
- (p) : One note, with Motif (p. 29) set to “Phrase”

Vocoder/Auto Pitch List

No.	Name
Mode: Vocoder	
001	Voc:Ensmble
002	Voc:5thStack
003	Voc:Robot
004	Voc:Saw
005	Voc:Sqr
006	Voc:RiseUp
007	Voc:AutoVib
008	Voc:PitchEnv
009	Voc:Choir
010	Voc:Noise

No.	Name
Mode: Auto-Pitch	
011	AP:Elct Pch1
012	AP:Elct Pch2
013	AP:Hard Pch
014	AP:Soft Pch1
015	AP:Formant +
016	AP:Formant -
017	AP:Octave +
018	AP:Octave -
019	AP:toSoprano
020	AP:to Bass

Placing This Unit on a Stand

Be careful not to pinch your fingers when setting up the stand.


If you want to place the XPS-30 on a stand, please use the KS-12 or KS-18Z stands manufactured by Roland.

* When using the KS-18Z, ensure that the height of the unit is one meter or lower.

KS-12




Adjust the width of the stand so that the rubber feet on the keyboard side of the bottom of the keyboard fit into the rubber feet receptacles




Top view

KS-18Z

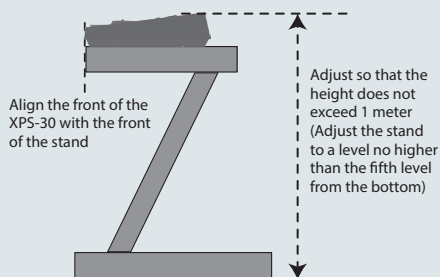

Align the front of the XPS-30 with the front of the stand

Adjust so that the height does not exceed 1 meter
(Adjust the stand to a level no higher than the fifth level from the bottom)

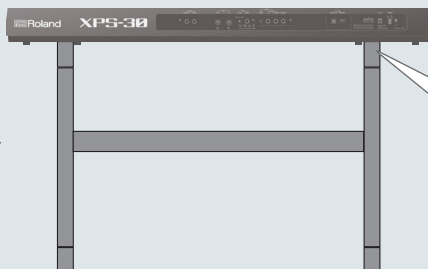

Adjust the width of the stand so that the rubber feet of the XPS-30 straddle the stand



Top view