Dell Events and Alerts for PowerMaxOS 10.2 and HYPERMAX OS

User Guide

10.2.0

December 2024
Rev. 02

DELL Technologies

Notes, cautions, and warnings

NOTE: A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2024 Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

Tables **6**

Preface 14
Revision history 18
What is new 18

Chapter 1: SYMAPI Server Daemon Messages **19**
Message format 19
storsrvd log files 20
Numbered messages issued by storsrvd 20
Messages 20
ANR0000I 20
ANR0001I 21
ANR0002I 21
ANR0003I 21
ANR0004I 21
ANR0005E 21
ANR0006E 22
ANR0008I 22
ANR0009E 22
ANR0010I 22
ANR0011W 23
ANR0012I 23
ANR0013I 23
ANR0014W 23
ANR0015E 23
ANR0016I 24
ANR0017I 24
ANR0018E 24
ANR0019E 24
ANR0020I 25
ANR0021I 25
ANR0022I 25
ANR0023I 25
ANR0024I 25
ANR0025E 26
ANR0026E 26
ANR0027E 26
ANR0030E 26
ANR0031E 27
ANR0032E 27
ANR0033E 27
ANR0034I 27
ANR0104E 28
ANR0105E 28
ANR0106I 28

ANR0107E..... 28
ANR0108E..... 28
ANR0110E..... 28
ANR0111I..... 29
ANR0112I..... 29
ANR0113I..... 29
ANR0114I..... 29
ANR0115I..... 29
ANR0116I..... 29
ANR0120I..... 30
ANR0121I..... 30
ANR0122I..... 30
ANR0123I..... 30
ANR0124I..... 30
ANR0140E..... 31
ANR0141E..... 31
ANR0142E..... 31
ANR0143E..... 31
ANR0144E..... 32
ANR0145E..... 32
ANR0146I..... 32
ANR0147I..... 32
ANR0148E..... 32
ANR0149D..... 33
ANR0150E..... 33
ANR0151E..... 33
ANR0152E..... 33
ANR0153E..... 34
ANR0154E..... 34
ANR0155E..... 34
ANR0156E..... 34
ANR0200E..... 35
ANR0201E..... 35
ANR0202E..... 35
ANR0204E..... 35
ANR0205E..... 35
ANR0207S..... 36
ANR0208E..... 36
ANR0209I..... 36
ANR0210E..... 36
ANR0211E..... 37
ANR0212E..... 37
ANR0220I..... 37
ANR0221E..... 38
ANR0222E..... 38
ANR0223E..... 38
ANR0224S..... 38
ANR0225E..... 39
ANR0300E..... 39
ANR0301I..... 39

ANR0302I....39
ANR0303I....39
ANR0304I....39
ANR0305E....40
ANR0306E....40
ANR0307E....40

Chapter 2: Asynchronous Events....41
Unisphere for PowerMax alert monitoring recommendations....41
Configuring event logging....42
Specify logging targets....42
Configure an event target....42
Specifying events to log....51
Array events....51
Non-array events....53
Array event codes....54
Classes of Events....55
Severity Calculation for status/state events....55
Event daemon events: Event IDs 0-199....55
Array Events: Event IDs 1050 - 1199....56
Array Events: Event IDs 1200-1999....92
Event daemon events: Event IDs 5000-5200....133
Unisphere policy name - Alert ID mapping....133

Chapter 3: SYMCLI Return Codes....137
SYMCLI Return Codes for OpenVMS....137
SYMCLI Return Codes for Windows and Unix....143

Index....152

Tables

1 Typographical conventions used in this content....17
2 Revision history....18
3 Message format....19
4 Message severity to job step return codes....20
5 Event daemon severity level/SNMP severity level mappings....45
6 Object details....45
7 Event log file configuration options....47
8 Syslog configuration options....49
9 Event log file configuration options....50
10 Array event components....54
11 Array event details....54
12 Event severity....55
13 SYMAPI_AEVENT2_UID_EVT_RESTARTED....55
14 SYMAPI_AEVENT2_UID_EVT_EVENTS_LOST....56
15 Unisphere policy....56
16 SYMAPI_AEVENT2_UID_EVT_EVENTS_OVERFLOW....56
17 Unisphere policy....56
18 SYMAPI_AEVENT2_UID_MOD_DIAG_TRACE_TRIG....57
19 SYMAPI_AEVENT2_UID_MOD_DIAG_TRACE_TRIG_REM....57
20 SYMAPI_AEVENT2_UID_MOD_ADAPT_CPY_WRT_PEND....57
21 SYMAPI_AEVENT2_UID_MOD_DIR_MEM_ERR....58
22 SYMAPI_AEVENT2_UID_MOD_DISKDRV_SPARE_INVK....58
23 Unisphere policy....58
24 SYMAPI_AEVENT2_UID_MOD_M2_RESYNC_M1....58
25 SYMAPI_AEVENT2_UID_MOD_M1_RESYNC_M2....59
26 SYMAPI_AEVENT2_UID_MOD_DSKSPS_NOT_RESP....59
27 SYMAPI_AEVENT2_UID_MOD_RESYNC_STARTED....59
28 SYMAPI_AEVENT2_UID_MOD_RDF_HOTSPARE_INVK....59
29 Unisphere policy....60
30 SYMAPI_AEVENT2_UID_MOD_RDF_SIM_MSG....60
31 Unisphere policy....60
32 SYMAPI_AEVENT2_UID_MOD_RDF_ERR....60
33 Unisphere policy....61
34 SYMAPI_AEVENT2_UID_MOD_FCPORT_FAIL....61
35 Unisphere policy....61
36 SYMAPI_AEVENT2_UID_MOD_RDF_LINKS_DOWN....61
37 Unisphere policy....61
38 SYMAPI_AEVENT2_UID_MOD_RDF_LINKS_UP....62
39 Unisphere policy....62
40 SYMAPI_AEVENT2_UID_MOD_BUS_ARBITER_ERR....62

41 SYMAPI_AEVENT2_UID_MOD_TEMP_OUT_OF_LIMIT 62
42 Unisphere policy 62
43 SYMAPI_AEVENT2_UID_MOD_ALARM_SIGNAL_ERR 63
44 SYMAPI_AEVENT2_UID_MOD_PWR_ALARM_SIGNAL 63
45 SYMAPI_AEVENT2_UID_MOD_DEV_MIR_NR 63
46 SYMAPI_AEVENT2_UID_MOD_DEV_MIR_WD 63
47 SYMAPI_AEVENT2_UID_MOD_DEV_RDF_MIR_NR 64
48 SYMAPI_AEVENT2_UID_MOD_SP_NOT_RESP 64
49 SYMAPI_AEVENT2_UID_MOD_PHONEHOME_FAIL 64
50 SYMAPI_AEVENT2_UID_MOD_SENSOR_12V_ON 65
51 SYMAPI_AEVENT2_UID_MOD_PWR_CABLE_MISSING 65
52 SYMAPI_AEVENT2_UID_MOD_COOL_AC_LINE_ERR 65
53 SYMAPI_AEVENT2_UID_MOD_BATT_STATUS 65
54 SYMAPI_AEVENT2_UID_MOD_PWR_LATCHED_ALARM 65
55 SYMAPI_AEVENT2_UID_MOD_RDF_1LINK_DOWN 66
56 Unisphere policy 66
57 SYMAPI_AEVENT2_UID_MOD_RDF_1LINK_UP 66
58 Unisphere policy 66
59 SYMAPI_AEVENT2_UID_MOD_PHONEHOME_SUCCESS 67
60 SYMAPI_AEVENT2_UID_MOD_SP_SET_REG_ERR 67
61 SYMAPI_AEVENT2_UID_MOD_MEM_DISABLED 67
62 SYMAPI_AEVENT2_UID_MOD_DIAG_BIT_VLDTY_ERR 67
63 SYMAPI_AEVENT2_UID_MOD_ENABLE_DIAG_ENV_TEST 67
64 SYMAPI_AEVENT2_UID_MOD_SP_COMM_BRD_MISMATCH 68
65 SYMAPI_AEVENT2_UID_MOD_DIR_BRD_MISMATCH 68
66 SYMAPI_AEVENT2_UID_MOD_THRMLDET_TEST_FAIL 68
67 SYMAPI_AEVENT2_UID_ALRM_PWR_TIME_TEST_FAIL 68
68 SYMAPI_AEVENT2_UID_MOD_SP_CONNECT_TIME_NOT_FOUND 69
69 SYMAPI_AEVENT2_UID_MOD_SP_COMM_VIA_SERIAL 69
70 SYMAPI_AEVENT2_UID_MOD_REMMGMT_CONNECT 69
71 SYMAPI_AEVENT2_UID_MOD_REMMGMT_REJECT 69
72 SYMAPI_AEVENT2_UID_MOD_REMMGMT_DISCONNECT 69
73 SYMAPI_AEVENT2_UID_ALRM_MEMERR_SP_MEM_ABOVE_LIMIT 70
74 SYMAPI_AEVENT2_UID_MOD_BATT_TST_FAIL 70
75 SYMAPI_AEVENT2_UID_MOD_SP_DIR_COMM_ERR 70
76 SYMAPI_AEVENT2_UID_MOD_SP_DIR_QRY_ERR 70
77 SYMAPI_AEVENT2_UID_MOD_SP_COMM_VIA_DIR 71
78 SYMAPI_AEVENT2_UID_MOD_SENSOR_READ_ERR 71
79 SYMAPI_AEVENT2_UID_MOD_SP_CARD_ERR 71
80 SYMAPI_AEVENT2_UID_MOD_ENV_READING_ABOVE_LIMIT 71
81 SYMAPI_AEVENT2_UID_MOD_SP_DISK_FULL 72
82 SYMAPI_AEVENT2_UID_MOD_SMOKE_DET_MALF 72
83 SYMAPI_AEVENT2_UID_MOD_ALARM_SMOKE_DETECTED 72

84 SYMAPI_AEVENT2_UID_MOD_PHONEHOME_TRIG....72
85 SYMAPI_AEVENT2_UID_MOD_DEV_CHKSUM....73
86 SYMAPI_AEVENT2_UID_MOD_RDF_CG_TRIG....73
87 SYMAPI_AEVENT2_UID_MOD_SP_REBOOTED....73
88 SYMAPI_AEVENT2_UID_MOD_SAVEDEVS_FULL....73
89 SYMAPI_AEVENT2_UID_MOD_RDFA_INACTIVE....74
90 Unisphere policy name....74
91 SYMAPI_AEVENT2_UID_MOD_RDFA_ACTIVE....74
92 Unisphere policy name....74
93 SYMAPI_AEVENT2_UID_MOD_DEV_NR....74
94 SYMAPI_AEVENT2_UID_MOD_SAVEDEVS_NEAR_FULL....75
95 SYMAPI_AEVENT2_UID_MOD_DEV_SAVEDEV_NR....75
96 SYMAPI_AEVENT2_UID_MOD_DIR_NOT_RESP....75
97 SYMAPI_AEVENT2_UID_MOD_TIMEOUT_R2_WP_LIMIT....76
98 SYMAPI_AEVENT2_UID_MOD_SESS_DROP_WPL_DSBL....76
99 SYMAPI_AEVENT2_UID_MOD_SESS_DROP_WPL_ENBL....76
100 SYMAPI_AEVENT2_UID_MOD_SESS_DROP_DEV_NR_OFF....76
101 SYMAPI_AEVENT2_UID_MOD_SESS_DROP_DEV_NR_CG....77
102 SYMAPI_AEVENT2_UID_MOD_SESS_DROP_NO_RDF_LNK....77
103 Unisphere policy name....77
104 SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_MSC....77
105 SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_HA....77
106 SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_RA....78
107 SYMAPI_AEVENT2_UID_MOD_GEN_CHKSUM....78
108 SYMAPI_AEVENT2_UID_MOD_POW_ZONE_COUNTDOWN_STARTED....78
109 SYMAPI_AEVENT2_UID_MOD_POW_ZONE_5HOURS_TOGO....78
110 SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_FROM_HOST....79
111 Unisphere policy name....79
112 SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND_FROM_HOST....79
113 Unisphere policy name....79
114 SYMAPI_AEVENT2_UID_MOD_SRDFA_DEACTIV_FROM_HOST....79
115 Unisphere policy name....79
116 SYMAPI_AEVENT2_UID_MOD_SRDFA_CONS_DEACTIV_FROM_HOST....80
117 Unisphere policy name....80
118 SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP....80
119 Unisphere policy name....80
120 SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND....80
121 Unisphere policy name....81
122 SYMAPI_AEVENT2_UID_MOD_SRDFA_DEACTIV....81
123 SYMAPI_AEVENT2_UID_MOD_SRDFA_CONS_DEACTIV....81
124 SYMAPI_AEVENT2_UID_MOD_SRDFA_SE_TRANS_IDLE,....81
125 Unisphere policy name....81
126 SYMAPI_AEVENT2_UID_MOD_SRDFA_SR_TRANS_IDLE,....82

127 Unisphere policy name....82
128 SYMAPI_AEVENT2_UID_MOD_SRDFA_TO_TRANS_IDLE....82
129 Unisphere policy name....82
130 SYMAPI_AEVENT2_UID_MOD_SRDFA_SD_NO_ONL_RA....82
131 SYMAPI_AEVENT2_UID_MOD_PSA_M_FAN_FAULT....82
132 SYMAPI_AEVENT2_UID_MOD_PSA_S_FAN_FAULT....83
133 SYMAPI_AEVENT2_UID_MOD_PSA_FAULTED....83
134 SYMAPI_AEVENT2_UID_MOD_PSA_SHUTDOWN....83
135 SYMAPI_AEVENT2_UID_MOD_PSB_M_FAN_FAULT....83
136 SYMAPI_AEVENT2_UID_MOD_PSB_S_FAN_FAULT....83
137 SYMAPI_AEVENT2_UID_MOD_PSB_FAULTED....84
138 SYMAPI_AEVENT2_UID_MOD_PSB_SHUTDOWN....84
139 SYMAPI_AEVENT2_UID_MOD_LCC_A_TEMP_HIGH....84
140 Unisphere policy name....84
141 SYMAPI_AEVENT2_UID_MOD_LCC_B_TEMP_HIGH....85
142 Unisphere policy name....85
143 SYMAPI_AEVENT2_UID_MOD_SPS_INTRN_FAULT....85
144 SYMAPI_AEVENT2_UID_MOD_SPS_BAT_ENDLINE....85
145 SYMAPI_AEVENT2_UID_MOD_SPS_LOW_VOLTAGE....85
146 SYMAPI_AEVENT2_UID_MOD_AUDIT_HIGH_ACTIVITY....86
147 SYMAPI_AEVENT2_UID_MOD_AUDIT_SFS_MIRR_OFF....86
148 SYMAPI_AEVENT2_UID_MOD_AUDIT_LOG_WRAPPED....86
149 SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_WPL_CP....86
150 Unisphere policy name....86
151 SYMAPI_AEVENT2_UID_ALERT_SRDFA_NO_CYCLE_SWITCH....87
152 Unisphere policy name....87
153 SYMAPI_AEVENT2_UID_ALERT_SRDF_JFC_STATE_CHANGE,....87
154 Unisphere policy name....87
155 SYMAPI_AEVENT2_UID_ALERT_SRP_SNAP_CAP_EXCEEDED....87
156 SYMAPI_AEVENT2_UID_ALERT_EDISK_FULL....88
157 Unisphere policy name....88
158 SYMAPI_AEVENT2_UID_MOD_RDF_1PATH_DOWN....88
159 Unisphere policy name....88
160 SYMAPI_AEVENT2_UID_MOD_DIR_PSA_OVER_TEMP....88
161 SYMAPI_AEVENT2_UID_MOD_DIR_PSB_OVER_TEMP....89
162 SYMAPI_AEVENT2_UID_MOD_DIR_OVER_TEMP....89
163 SYMAPI_AEVENT2_UID_MOD_RDF_1PATH_UP....89
164 Unisphere policy name....89
165 SYMAPI_AEVENT2_UID_MOD_RDF_METRO_SESS_SUSPEND....89
166 SYMAPI_AEVENT2_UID_ALERT_REDUCIBILITY_ANOMALY....90
167 SYMAPI_AEVENT2_UID_ALERT_WR_AFTER_RD_ANOMALY....90
168 SYMAPI_AEVENT2_UID_ALERT_SINGLE_DEV_ANOMALY....90
169 SYMAPI_AEVENT2_UID_ALERT_MULTI_DEV_ANOMALY....90

170 SYMAPI_AEVENT2_UID_MOD_FPIN_NOTIFY 91
171 SYMAPI_AEVENT2_UID_MOD_SRDFA_AUTO_RESTART 91
172 SYMAPI_AEVENT2_UID_MOD_SRDFA_CONSISTENT 91
173 SYMAPI_AEVENT2_UID_MOD_INPUT_AC_FAILURE 92
174 SYMAPI_AEVENT2_UID_MOD_INPUT_AC_RESTORE 92
175 SYMAPI_AEVENT2_UID_ALERT_DEV_STATUS 92
176 Unisphere policy name 92
177 SYMAPI_AEVENT2_UID_ALERT_ARRAY_STATUS 93
178 SYMAPI_AEVENT2_UID_ALERT_DIRECTOR_STATUS 93
179 Unisphere policy name 94
180 SYMAPI_AEVENT2_UID_ALERT_PORT_STATUS 94
181 Unisphere policy name 94
182 SYMAPI_AEVENT2_UID_ALERT_DISK_STATUS 94
183 Unisphere policy name 95
184 SYMAPI_AEVENT2_UID_ALERT_DEV_CONFIG_CHANGE 95
185 Unisphere policy name 96
186 SYMAPI_AEVENT2_UID_ALERT_SEL_CHANGE 96
187 SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE 96
188 Unisphere policy name 97
189 SYMAPI_AEVENT2_UID_ALERT_NUM_HOTSPARES_T 97
190 SYMAPI_AEVENT2_UID_THRESH_TDEV_ALLOCATED 98
191 Unisphere policy name 98
192 SYMAPI_AEVENT2_UID_THRESH_TDEV_USED 98
193 Unisphere policy name 99
194 SYMAPI_AEVENT2_UID_ALERT_DIRECTOR_CONFIG_CHANGE 99
195 SYMAPI_AEVENT2_UID_ALERT_PORT_CONFIG_CHANGE 99
196 SYMAPI_AEVENT2_UID_DFR_SVC_STATE 100
197 Unisphere policy name 100
198 SYMAPI_AEVENT2_UID_DEV_CFG_CHKSUM 100
199 SYMAPI_AEVENT2_UID_ALERT_SPINDLE_STATUS 101
200 SYMAPI_AEVENT2_UID_ALERT_LREP_CACHEUSE_PCT_CHG 101
201 Unisphere policy name 101
202 SYMAPI_AEVENT2_UID_ALERT_SYS_METADATAUSE_PCT_CHG 101
203 Unisphere policy name 102
204 SYMAPI_AEVENT2_UID_ALERT_FE_METADATAUSE_PCT_CHG 102
205 Unisphere policy name 102
206 SYMAPI_AEVENT2_UID_ALERT_BE_METADATAUSE_PCT_CHG 102
207 Unisphere policy name 102
208 SYMAPI_AEVENT2_UID_ALERT_ARRAY_CONFIG_CHANGE 103
209 SYMAPI_AEVENT2_UID_ALERT_MASKING_CHANGE 103
210 SYMAPI_AEVENT2_UID_ALERT_ACCESS_CONTROL_CHANGE 103
211 SYMAPI_AEVENT2_UID_ALERT_DYNAMIC_RDF_CONFIG 104
212 SYMAPI_AEVENT2_UID_ALERT_SNAP_CLONE_CONFIG 104

213 SYMAPI_AEVENT2_UID_ALERT_BCV_CONTROL_CONFIG ... 104
214 SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_HP_ID_CONFIG ... 105
215 SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_CONFIG ... 105
216 SYMAPI_AEVENT2_UID_ALERT_DEV_NICE_NAME_CONFIG ... 105
217 SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_VMS_ID_CONFIG ... 106
218 SYMAPI_AEVENT2_UID_SRDFA_CYCLE_TIME_T ... 106
219 Event value example ... 106
220 SYMAPI_AEVENT2_UID_SRDFA_WP_CACHEUSE_T ... 107
221 SYMAPI_AEVENT2_UID_WP_CACHEUSE_T ... 107
222 SYMAPI_AEVENT2_UID_ALERT_ARR_COMP_STATUS ... 108
223 Unisphere policy name ... 108
224 Components ... 108
225 Types of subcomponents ... 109
226 SYMAPI_AEVENT2_UID_DSE_SPILL_TIME_T ... 109
227 SYMAPI_AEVENT2_UID_ALERT_DISK_GRP_CHG ... 110
228 SYMAPI_AEVENT2_UID_ALERT_DISK_SPARE_CVG ... 110
229 Unisphere policy name ... 110
230 SYMAPI_AEVENT2_UID_ALERT_DISK_SPARE_PCT_CHNG ... 111
231 SYMAPI_AEVENT2_UID_ALERT_SPINDLE_SPARE_CVG ... 111
232 SYMAPI_AEVENT2_UID_BASED_THRESH_GK_UTIL_AVG ... 111
233 Unisphere policy name ... 112
234 SYMAPI_AEVENT2_UID_BASED_GK_TIMEOUT ... 112
235 Unisphere policy name ... 112
236 SYMAPI_AEVENT2_UID_ALERT_VASA_RDF_CHANGE ... 112
237 SYMAPI_AEVENT2_UID_ALERT_VASA_DEVNAME_CHANGE ... 112
238 SYMAPI_AEVENT2_UID_ALERT_VASA_SC_CHANGE ... 113
239 SYMAPI_AEVENT2_UID_ALERT_VASA_MV_CHANGE ... 113
240 SYMAPI_AEVENT2_UID_ALERT_CACHE_PART_CHANGE ... 113
241 SYMAPI_AEVENT2_UID_ALERT_DYNAMIC_MAPPING_CHANGE ... 114
242 SYMAPI_AEVENT2_UID_ALERT_INITIATOR_GRP_CHANGE ... 114
243 SYMAPI_AEVENT2_UID_ALERT_STORAGE_GRP_CHANGE ... 114
244 SYMAPI_AEVENT2_UID_ALERT_DIR_PORT_GRP_CHANGE ... 115
245 SYMAPI_AEVENT2_UID_ALERT_MASKING_VIEW_CHANGE ... 115
246 SYMAPI_AEVENT2_UID_ALERT_FEAT_REG_CHANGE ... 115
247 SYMAPI_AEVENT2_UID_ALERT_APP_REG_CHANGE ... 116
248 SYMAPI_AEVENT2_UID_ALERT_SG_CONFIG_CHANGE ... 116
249 SYMAPI_AEVENT2_UID_ALERT_IG_CONFIG_CHANGE ... 116
250 SYMAPI_AEVENT2_UID_ALERT_PG_CONFIG_CHANGE ... 117
251 SYMAPI_AEVENT2_UID_ALERT_MV_CONFIG_CHANGE ... 117
252 SYMAPI_AEVENT2_UID_ALERT_SG_SCOPE_CHANGE ... 117
253 SYMAPI_AEVENT2_UID_ALERT_IG_SCOPE_CHANGE ... 118
254 SYMAPI_AEVENT2_UID_ALERT_MV_SCOPE_CHANGE ... 118
255 SYMAPI_AEVENT2_UID_ALERT_DEV_CAPACITY_CHANGE ... 119

256 SYMAPI_AEVENT2_UID_ALERT_SNAPSL_CONFIG_CHANGE ... 119
257 SYMAPI_AEVENT2_UID_ALERT_LICENSE_CHANGE ... 119
258 SYMAPI_AEVENT2_UID_ALERT_MF_SPLIT_CHANGE ... 120
259 SYMAPI_AEVENT2_UID_ALERT_CU_IMAGE_CHANGE ... 120
260 SYMAPI_AEVENT2_UID_ALERT_RDF_STATUS_CHANGE ... 120
261 SYMAPI_AEVENT2_UID_ALERT_VWITNESS_STATUS_CHANGE ... 121
262 SYMAPI_AEVENT2_UID_ALERT_SNAPSL_SG_STATUS_CHANGE ... 121
263 SYMAPI_AEVENT2_UID_ALERT_SNAPSL_EE_PROCESS_STATUS ... 121
264 SYMAPI_AEVENT2_UID_AUTHZ_RULES_CHANGED ... 122
265 SYMAPI_AEVENT2_UID_AUDIT_LOG_SIZE_T ... 122
266 SYMAPI_AEVENT2_UID_ALERT_SEC_AUDIT ... 123
267 SYMAPI_AEVENT2_UID_ALERT_SEC_FAIL_AUDIT ... 123
268 SYMAPI_AEVENT2_UID_ALERT_ALL_AUDIT ... 123
269 SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_ALLOC_CHANGE ... 124
270 Unisphere policy name ... 124
271 SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FREE_CAP_CHANGE ... 124
272 SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_CONFIG_CHANGE ... 125
273 SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_MAX_CAP_CHANGE ... 125
274 SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FBA_ALLOC_CHANGE ... 125
275 Unisphere policy ... 126
276 SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_CKD_ALLOC_CHANGE ... 126
277 Unisphere policy ... 126
278 SYMAPI_AEVENT2_UID_ALERT_FAST_SLO_NAME_CHANGE ... 126
279 SYMAPI_AEVENT2_UID_ALERT_SG_SNAP_CAP_CHANGE ... 126
280 Wildcard rules ... 127
281 SYMAPI_AEVENT2_UID_ALERT_STOR_CONT_CONFIG_CHANGE ... 127
282 SYMAPI_AEVENT2_UID_ALERT_STOR_CONT_SUBSCR_CAP_CHANGE ... 127
283 SYMAPI_AEVENT2_UID_ALERT_ISCSI_IP_IF_CHANGE ... 128
284 SYMAPI_AEVENT2_UID_ALERT_ISCSI_IP_ROUTE_CHANGE ... 128
285 SYMAPI_AEVENT2_UID_ALERT_ISCSI_TGT_CHANGE ... 128
286 SYMAPI_AEVENT2_UID_ALERT_ENDPOINT_CHANGE ... 128
287 SYMAPI_AEVENT2_UID_ALERT_SYS_PROF_CHANGE ... 129
288 SYMAPI_AEVENT2_UID_ALERT_CCW_CONFIG_CHANGE ... 129
289 SYMAPI_AEVENT2_UID_ALERT_SRP_RELIABILITY_STATE_CHANGE ... 129
290 SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_OP_USAGE_PCT_CHG ... 130
291 SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_OP_USAGE_PCT_CHG ... 130
292 SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_PHYSICAL_CAP_CHG ... 130
293 SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_PHYSICAL_CAP_CHG ... 130
294 SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_EFF_RES_PCT_CHG ... 131
295 SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_EFF_RES_PCT_CHG ... 131
296 SYMAPI_AEVENT2_UID_GROUP_CONFIG ... 131
297 SYMAPI_AEVENT2_UID_THRESH_GNS_SPACE ... 132
298 SYMAPI_AEVENT2_UID_THRESH_GNS_RECS ... 132

299 SYMAPI_AEVENT2_UID_POLL_CYCLE_COMPLETE....132
300 SMC event....133
301 SPA event....133
302 Unisphere policy name - Alert ID mapping....133
303 Return code handling for OpenVMS....137
304 Return code handling for Windows and UNIX....143

Preface

As part of an effort to improve its product lines, Dell Technologies periodically releases revisions of its software and hardware. Functions that are described in this document may not be supported by all versions of the software or hardware. The product release notes provide the most up-to-date information about product features.

Contact your Dell Technologies representative if a product does not function properly or does not function as described in this document.

NOTE: This document was accurate at publication time. New versions of this document might be released on Dell Technologies Online Support (https://www.dell.com/support/home). Check to ensure that you are using the latest version of this document.

Purpose

This manual lists the alerts and events generated by SYMAPI server daemon, the event daemon, and symcli commands.

Related documentation

The following documents provide information about Solutions Enabler:

What is new in Dell Solutions Enabler 10.2.0 Array Management, SRDF, and TimeFinder CLI	Describes new features and changes in array management, SRDF and TimeFinder CLI in detail.
Dell Solutions Enabler 10.2.0 Release Notes	Describes new features and any known limitations.
Dell Solutions Enabler 10.2.0 Installation and Configuration Guide	Provides host-specific installation instructions.
Dell Solutions Enabler Online CLI Reference Guide	Go to the Dell developer portal for the Online reference guide.
Dell Solutions Enabler 10.1.0 Array Controls and Management CLI User Guide	Describes how to configure array control, management, and migration operations using SYMCLI commands for arrays running HYPERMAX OS and PowerMaxOS.
Dell Solutions Enabler 10.0.0 SRDF Family CLI User Guide	Describes how to configure and manage SRDF environments using SYMCLI commands.
Dell Solutions Enabler 10.0.0 SRDF Family State Tables Guide	Describes the applicable pair states for various SRDF operations.

SRDF Interfamily Connectivity Information	Defines the versions of PowerMaxOS, HYPERMAX OS and Enginuity that can make up valid SRDF replication and SRDF/Metro configurations, and can participate in Non-Disruptive Migration (NDM).
Dell SRDF Introduction	Provides an overview of SRDF, its uses, configurations, and terminology.
Dell Solutions Enabler 10.0.0 TimeFinder SnapVX CLI User Guide	Describes how to configure and manage TimeFinder SnapVX environments using SYMCLI commands.
Dell Solutions Enabler 10.0.0 TimeFinder Clone CLI User Guide	Describes how to configure and manage TimeFinder Clone environments for HYPERMAX OS and PowerMaxOS using SYMCLI commands.
Dell SRDF/ Metro vWitness Configuration Guide	Describes how to install, configure, and manage SRDF/Metro using vWitness.
Dell Solutions Enabler 10.2 Events and Alerts for PowerMax and HYPERMAX User Guide	Documents the SYMAPI daemon messages, asynchronous errors and message events, SYMCLI return codes, and how to configure event logging.
Dell SRDF/ Cluster Enabler Plug-in Product Guide	Provides product information regarding the SRDF/Cluster Enabler Plug-in.
Dell SRDF/ TimeFinder Manager for IBM i Product Guide	Provides product information regarding the SRDF/TimeFinder Manager for IBM i.

The following documents provide information about Unisphere:

Dell Unisphere for PowerMax Release Notes	Describes new features and any known limitations for Unisphere for PowerMax.
Dell Unisphere for PowerMax Installation Guide	Provides installation instructions for Unisphere for PowerMax.
Dell Unisphere for PowerMax Online Help	Describes the Unisphere for PowerMax concepts and functions.
Dell Unisphere for PowerMax Performance Viewer Online Help	Describes the Unisphere for PowerMax Performance Viewer concepts and functions.
Dell Unisphere for PowerMax Performance Viewer Installation Guide	Provides installation instructions for Unisphere for PowerMax Performance Viewer.
Dell Unisphere for PowerMax REST API Concepts and	Describes the Unisphere for PowerMax REST API concepts and functions.

Programmer's Guide	
Dell Unisphere 360 Release Notes	Describes new features and any known limitations for Unisphere 360.
Dell Unisphere 360 Installation Guide	Provides installation instructions for Unisphere 360.
Dell Unisphere 360 Online Help	Describes the Unisphere 360 concepts and functions.

The following provide additional information:

EMC VMAX3 Family Product Guide for VMAX 100K, VMAX 200K, VMAX 400K with HYPERMAX OS	Provides product information regarding the purchase of a VMAX3 Family 100K, 200K, 400K.
Dell EMC VMAX3 Family Site Planning Guide for VMAX 100K, VMAX 200K, VMAX 400K with HYPERMAX OS	Provides planning information regarding the purchase and installation of a VMAX3 Family 100K, 200K, 400K.
EMC VMAX All Flash and VMAX3 Family Security Configuration Guide	Describes how to securely deploy a VMAX3 Family (100K, 200K, 400K) or VMAX All Flash (250F, 450F, 850F, 950F) array with HYPERMAX OS.
Dell EMC VMAX All Flash Product Guide for VMAX 250F, 450F, 850F, 950F with HYPERMAX OS	Provides product information regarding the purchase of a VMAX 250F, 450F, 850F, 950F with HYPERMAX OS.
Dell EMC VMAX All Flash Site Planning Guide for VMAX 250F, 450F, 850F, 950F with HYPERMAX OS	Provides planning information regarding the purchase and installation of a VMAX 250F, 450F, 850F, 950F with HYPERMAX OS.
EMC VMAX All Flash and VMAX3 Family Security Configuration Guide	Describes how to securely deploy a VMAX3 Family (100K, 200K, 400K) or VMAX All Flash (250F, 450F, 850F, 950F) array with HYPERMAX OS.
E-Lab™ Interoperability Navigator (ELN)	Provides a web-based interoperability and solution search portal. You can find the ELN at E-Lab navigator

Special notice conventions used in this document

Dell Technologies uses the following conventions for special notices:

NOTE: A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Typographical conventions

Dell Technologies uses the following type style conventions in this document:

Table 1. Typographical conventions used in this content

Font	Description
Bold	Used for names of interface elements Examples: Names of windows, dialog boxes, buttons, fields, tab names, key names, and menu paths (what the user selects or clicks)
Italic	Used for full titles of publications referenced in text
`Monospace`	Used for: • System code • System output, such as an error message or script • Pathnames, filenames, prompts, and syntax • Commands and options
Monospace italic	Used for variables
`Monospace bold`	Used for user input
[ ]	Square brackets enclose optional values.
|	A vertical bar indicates alternate selections. The bar means "or".
{ }	Braces enclose content that the user must specify, such as x or y or z.
...	Ellipses indicate nonessential information that is omitted from the example.

Where to get help

Dell support, product, and licensing information can be obtained as follows:

Product information

Dell Technologies technical support, documentation, release notes, software updates, or information about Dell Technologies products can be obtained at Dell Technologies Online Support (https://www.dell.com/support/home) (registration required) or on the PowerMax Info Hub (https://www.dell.com/support/kbdoc/en-us/000189115/powermax-info-hub-product-documentation-videos).

Technical support

Dell Technologies offers various support options.

- Support by Product: Dell Technologies offers consolidated, product-specific information through the Dell Technologies Online Support site.

  The Support by Product web pages: Dell Technologies Online Support (https://www.dell.com/support/home), select **Product Support**. These pages offer quick links to Documentation, White Papers, Advisories (such as frequently used Knowledgebase articles) and Downloads. They also offer dynamic content such as presentations, discussion, relevant Customer Support Forum entries, and a link to Dell Technologies Live Chat.

- Dell Technologies Live Chat: Open a Chat or instant message session with a Dell Technologies Support Engineer.

e-Licensing support

To activate your entitlements and obtain your license files, go to the Service Center on Dell Technologies Online Support (https://www.dell.com/support/home). Follow the directions on your License Authorization Code (LAC) letter that is emailed to you.

- Expected functionality may be unavailable because it is not licensed. For help with missing or incorrect entitlements after activation, contact your Dell Technologies Account Representative or Authorized Reseller.
- For help with any errors applying license files through Solutions Enabler, contact the Dell Technologies Customer Support Center.
- Contact the Dell Technologies worldwide Licensing team if you are missing the LAC letter or require further instructions on activating your licenses through the Online Support site.
  - licensing@dell.com
  - North America, Latin America, APJK, Australia, New Zealand: SVC4EMC (800-782-4362) and follow the voice prompts.
  - EMEA: +353 (0) 21 4879862 and follow the voice prompts.

SolVe Online and SolVe Desktop

SolVe provides links to customer service documentation and procedures for common tasks. Go to SolVe Online (https://solve.dell.com/solve/home), or download the SolVe Desktop tool from Dell Technologies Online Support (https://www.dell.com/support/home) and search for SolVe Desktop. From SolVe Online or SolVe Desktop, load the *PowerMax and VMAX* procedure generator.

NOTE: Authenticate (authorize) the SolVe Desktop tool. After it is installed, familiarize yourself with the information under **Help**.

Your comments

Your suggestions help improve the accuracy, organization, and overall quality of the documentation. Send your comments and feedback to: powermaxcontentfeedback@dell.com

Revision history

Provides a description of document changes.

Table 2. Revision history

Revision	Description and/or change
1	Initial revision of the document.

What is new

Provides a description of what is new in release Solutions Enabler V10.2.

- The following events have been added to report SRDF/A when auto recovery is invoked and after the session gets consistent:
  - 1174 - SYMAPI_AEVENT2_UID_MOD_SRDFA_AUTO_RESTART
  - 1175 - SYMAPI_AEVENT2_UID_MOD_SRDFA_CONSISTENT
- The following events have been added to report array power events such as Input AC failure and Input AC restoration:
  - 1176 - SYMAPI_AEVENT2_UID_MOD_INPUT_AC_FAILURE
  - 1177 - SYMAPI_AEVENT2_UID_MOD_INPUT_AC_RESTORE
- The `symevent` CLI is enhanced to support a new `[-err_num <ErrorNum>]` option to filter the events based on error numbers reported by the array.

1

SYMAPI Server Daemon Messages

This chapter describes the log messages issued by the SYMAPI server daemon (`storsrvd`):

Topics:

- Message format
- storsrvd log files
- Messages

Message format

This section describes messages that are written to the SYMAPI server log and to the system console in z/OS. All messages begin with a message identifier, followed by message text.

The message is in this format:

```
yyyy/mm/dd hh:mm:ss pid thread_name log_category msgid text
```

where:

Table 3. Message format

Element	Description
`yyyy/mm/dd`	The date on which the message was issued.
`hh:mm:ss.xxx`	The time the message was issued in hours, minutes, seconds, and milliseconds.
`pid`	The process ID of the issuing process.
`thread_name`	The thread name of the issuing thread.
`log_category`	The category specified in the `storsrvd:log_filter` statement in the `daemon_options` file, which caused this message to be generated. The valid categories are: SERVER, SESSION, CONTRO, and APIREQ.
`msgid`	It is made up of the following: • `ANR` — Indicates that the server issued the message. • *`nnnn`* — A numeric identifier for the message. • *`X`* — A one-byte severity indicator. Valid values are: ○ `I` indicates an Informational message. ○ `W` indicates a Warning message. ○ `E` indicates an Error message. ○ `S` indicates a severe condition requiring a message.
`text`	The message text.

In this section, each message shows the text of the message with indicators where substitutions are made into the text at runtime. Following the text are four paragraphs giving more information:

- **Set Step Return Code** — In a z/OS environment, some messages cause the SYMAPI server job step return code to be set to a nonzero value. The following table shows the correlation of message severity to job step return code. Some messages are issued by multiple locations in the code. Not all uses of the message causes the step return code to be set.

  Table 4. Message severity to job step return codes

Message identifier	Return codes
I	0
W	4
E	8
S	12

  If multiple messages are issued that cause the step return code to be set, the highest value is remembered by the server, and returned to the system at job termination.
- The **Destination** of the message — `Log` and/or `Console` is shown. Most messages are written to the server log file. Some messages are written to both the log and console, but not always where the message is generated. Some messages are written to the system console only, particularly those related to operator command processing. The Console destination applies only to z/OS.
- The **Description** paragraph explains the circumstances that cause the message to be issued, and explains each substituted value. This section also describes any action that the Solutions Enabler software takes.
- The **Operator Action** paragraph suggests operator intervention actions where needed.

storsrvd log files

The server writes data to its log files provided by the common daemon infrastructure. These log files are named and handled in a manner consistent with other daemon log files. For example, under the default log management behavior, the files `storsrvd.log0` and `storsrvd.log1` are created in `/var/symapi/log`.

The behavior of the log files is subject to the standard daemon options: `logfile_type`, `logfile_size`, `logfile_perms` and `logfile_retention`. Thus, you can configure the logs as dated files with retention controls instead of the common wrapping pair of log0 and log1. The same rules apply to `storsrvd` as to all other daemons.

Numbered messages issued by storsrvd

The SYMAPI server application-level messages are distinguished from messages issued by the Solutions Enabler common daemon support by the use of a messages identifier.

The following `daemon_options` file keywords affect the appearance of the `storsrvd` messages:

- `log_show_category` displays or suppresses the category (also known as the filter) that applies to a message.
- `log_show_msgid` displays or suppresses the message identifier in the message.

Messages

ANR0000I

text

Destination: Log and console.

Description: This message is a general purpose message to be used for any arbitrary *text*.

Operator Action: None.

ANR0001I

SYMAPI Server for z/OS ready to accept *security_level* connections

Destination: Log and console.

Description: This message is issued when initialization is complete and the server is prepared to field connection requests from remote clients. *security_level* indicates the types of sessions the server will accept. Possible values are:

- ONLY NONSECURE — Indicates that client must expect to negotiate non-SSL sessions with the server.
- ONLY SECURE — Indicates that the server will require clients to negotiate a secure session.
- Both SECURE and NONSECURE — Indicates that the server will accept sessions from clients that cannot negotiate secure and will negotiate secure sessions with clients who can.

Operator Action: None.

ANR0002I

shutdown_type Shutdown requested

Destination: Log and console.

Description: This message indicates that a shutdown request was made. See message ANR0003I for the description of *shutdown_type.*

Operator Action: None.

ANR0003I

shutdown_type Shutdown *progress*. Number of sessions remaining = *number*

Destination: Log and console.

Description: This message is issued at the start of the shutdown process. *shutdown_type* indicates NORMAL, IMMEDIATE, or STOPPED-NORMAL.

In open systems environments, shutdown is requested by the `stordaemon` command.

In Microsoft Windows, you can use the Service Control Manager; in this case the shutdown process will always be IMMEDIATE.

In a z/OS environment, the system operator will request a NORMAL shutdown using the z/OS `STOP` command or the `SHUTDOWN` command.

The number of currently active sessions is shown in *number*. If this value is not 0, the following rules apply:

- If the *shutdown_type* is NORMAL, the server will wait for the active sessions to end. In this case, *progress* indicates *starting* or *in progress*. Each time a session ends, the *in progress* status will be reported.
- If the *shutdown_type* is IMMEDIATE, the server terminates without waiting for active sessions to end. See the description of the SHUTDOWN command for more details on when to use IMMEDIATE shutdown.

Operator Action: None.

ANR0004I

SYMAPI Server running as a started task

Destination: Log.

Description: In a z/OS environment, the server detects when it is running as a started task (running in *STC mode*). This message serves as a visual confirmation that STC mode is active.

Operator Action: None, unless this is not what is intended.

ANR0005E

Normal shutdown failed, attempting immediate shutdown

Set Step Return Code

Destination: Log and console.

Description: The server attempted to perform a normal shutdown, waiting for active sessions to complete. The normal shutdown process failed, and no recovery was possible. An immediate shutdown was attempted, because there is no other possible recovery action to take.

Operator Action: Be aware that the list of connections noted in message ANR0013I are terminated before they are able to disconnect.

ANR0006E

Wait returned without connection or console command ready, console ECB contents *value*.

Destination: Log.

Description: The server waits for incoming connection requests and instructions from the operator concurrently. If the wait is somehow satisfied but neither of these events occurred, it is considered an error. The server will continue to wait for new events.

Operator Action: This is an abnormal situation and may indicate some error in TCP communications or management of the operator console. If this happens repeatedly, shut the server down and try restarting the server. If the problem persists, examine your system for evidence of other problems in the TCP or console management components of your system.

ANR0008I

Server socket *socket*:_*event* occurred

Destination: Log.

Description: This message is issued to confirm that connection request has arrived, or that some error condition has been reflected to the TCP socket on which the server is listening. The value of *socket_event* will be *connection request* or *exception condition*.

Operator Action: If the *socket_event* is *connection request* no action is necessary since this is a documentation message, and may aid in problem diagnosis. See the description of message ANR0009E, if the *socket_event* is *exception condition*.

ANR0009E

Exceeded maximum exceptions on server socket, indicating PORT_EXCEPTION

Set Step Return Code

Destination: Log and console.

Description: This is issued after an exception condition has been raised (which may cause the issuing of ANR0008I). Currently, the maximum exception count is 1, meaning that there is no retry strategy when an exception occurs on the socket on which the server is listening. The server will stop listening and start a NORMAL shutdown when it notices this condition.

Operator Action: If *exception condition* in message ANR0008I is indicated, there will be other evidence in your system log showing TCP/IP problems. Refer to documentation from your TCP software provider to resolve the problems you find. When the problems are resolved, you can restart the server.

ANR0010I

SYMAPI Server Shutdown complete

Destination: Log and console.

Description: The server has completed its shutdown process and will return to the operating system.

Operator Action: None. This should serve as a visual confirmation that the server is finished.

ANR0011W

SYMAPI Server not executing from an APF-authorized library, cannot continue

Set Step Return Code

Destination: Log and console.

Description: In a z/OS environment, the SYMAPI server program **`storsrvd`** must execute from a library authorized by the z/OS Authorized Program Facility, if the base daemon is not in use. The server checks to make sure that this condition is met. This message is issued as a warning , but an error condition may not be reflected until a SYMAPI session requests storage discovery services.

Operator Action: The Solutions Enabler load library can be authorized through APF in several ways. You can use the SETPROG APF command to authorize the library temporarily. In order to make the library authorized at subsequent IPLs, you must edit the PROGxx member of SYS1.PARMLIB. Refer to the IBM documentation for your level of z/OS for exact syntax and editing instructions.

ANR0012I

Accepted *seclevel* session *session_number* from *IP_address* on thread *thread_number*

Destination: Log.

Description: The server successfully handled a connection request for a session, and started a thread to process API requests for the session. The session number is shown in *session_number* and it is being processed on a thread with the number *thread_number*. The session is running from a client program executing on the host at address *IP_address*. *seclevel* indicates the negotiated security level of the session. If *seclevel* is SECURE, transmission is protected using SSL; if *seclevel* is NONSECURE, SSL protection is not in use.

Operator Action: None necessary. This message is documenting the start of a session. You should also see ANR0017I at the end of the session.

ANR0013I

Shutdown will wait for client session *session_number* from *IP_address* to terminate itself

Destination: Log and console.

Description: During a normal shutdown, the server will wait for all active sessions to terminate on their own. For each session still active, the server issues this message and will wait for the session(s) to end. The substitution variables are the same as those in message ANR0012I.

Operator Action: None usually. If sessions are taking an excessive amount of time to complete, you can reissue the shutdown command with the IMMEDIATE operand to terminate the session immediately.

ANR0014W

Terminating client session *session_number* to *IP_address* on Tid*thread_identifier* },

Destination: Log and console.

Description: During an immediate shutdown, the server will report on all active sessions at the time the shutdown process begins. For each session still active, the server issues this message as a note to the operator to indicate which sessions will be terminated end. The substitution variables are the same as those in message ANR0012I.

Operator Action: None.

ANR0015E

Session broken by dispatcher return value *return_value*, '*message*'.

Destination: Log.

Description: This message is issued when a session is prematurely ended due to an unrecoverable error detected by the server API dispatching layer. When such an error is raised, the SYMAPI client will experience an 'connection aborted' error. The *return_value* and *message* are intended for Dell Customer Service to diagnose the cause of the error.

Operator Action: Collect diagnostic data as directed by Dell Customer Service.

ANR0016I

SYMAPI listener thread is running on thread *thread_number*

Destination: Log.

Description: This message is issued during startup simply to report the thread number (*thread_number*) of the SYMAPI listener thread (the server thread which listens for new connection requests).

Operator Action: None.

ANR0017I

Ending session *session_number,* total requests executed *total_requests*

Destination: Log.

Description: See also message ANR0012I. This message documents the end of a session. The total number of API requests executed on the session is shown by *total_requests*.

Operator Action: None.

ANR0018E

Rejecting session *session_number* for *user_name@node: reason*

Destination: Log.

Description: A remote client attempted to connect to the running server, but is refused the session for one of the following reasons:

- `The trusted host file disallowed a client server connection` — the nethost file is allocated to the server, and the combination of the node (either host address or IP address) and the optional user identification (user_name) are not specified in the nethost file. The remote client `SymInit` call returns `SYMAPI_C_HOST_FILE_REJECTION`.
- `The trusted host file could not be read` or `The trusted host file has a syntax error` — the nethost file exists, but could not be read or has a syntax error. The client application will receive either `SYMAPI_C_HOST_FILE_READ_ERROR` or `SYMAPI_C_HOST_FILE_SYNTAX`.
- `The maximum number of network connections has been reached on the server` — the global limit expressed by the `max_sessions` option in the `daemon_options` file is exceeded. The application will receive `SYMAPI_C_MAX_SRVR_CONNECTS_EXCEEDED ()`.

Operator Action: In the case of disallowed connections, the remote client user must ask the server administrator for authorization to use the SYMAPI server. The administrator must add the host (and the optional *user_name*) information to the nethost file to authorize the client application. In the case of host file read or syntax error, make sure that the trusted host file is readable or correct the syntax error in the file. Refer to the *Dell PowerMax Family Security Configuration Guide* for the syntax of the nethost file. In the case of max connection error, the server administrator may wish to set `max_sessions` to a higher value, or the client application may have to be scheduled when the server is less busy.

ANR0019E

SYMAPI client directed debugging is disabled

Destination: Log and console.

Description: The SYMAPI server initialization process attempts to prepare for client supplied debugging settings when client sessions specify them. Invocation of an internal service failed which prevents the future use of debugging settings from client applications.

This message is preceded by ANR0200E which documents the reason for the failure to setup for client debugging.

Operation Action: The output of the preceding message ANR0200E gives an indication of the type of failure that is the cause of this situation. Collect and provide documentation as directed by Dell Customer Support.

ANR0020I

SYMAPI server listening on port *port_number* over *protocols*

Destination: Log and console.

Description: This message is issued in conjunction with message ANR0001I to inform the system operator about the port (*port_number*) and internet protocols over which the server is communicating. Possible values for *protocols* are:

- IPv4 ONLY — Indicates that the server is listening for connections only using IPv4. Clients that expect an IPv6 connection will fail connecting to the server.
- IPv6 and IPv4 — Indicates that the server is listening explicitly for connections using IPv6 and IPv4.
- IPv6 with IPv4 mapping — Indicates that the IPv6 protocol supports connections from clients who are running either IPv4 or IPv6.

Operator Action: None.

ANR0021I

The current working directory is *directory*

Destination: Log.

Description: This message is issued early in server initialization after the server process attempts to make the SYMAPI database directory the current working directory.

Operator Action: None. This is an informational message.

ANR0022I

SYMAPI server is running on a VMAX Service Processor, forcing port *port*

Destination: Log.

Description: This message is written when the server detects it is running on a VMAX service processor. In this case, the server forces the use of the default port.

Operator Action: None. This is an informational message.

ANR0023I

SYMAPI server Symmwin Pipe Server is initialized

Destination: Log.

Description: This message is written when the special server thread to field requests from the SymmWin component has been started successfully. This will only happen if the server is running on a VMAX service processor.

Operator Action: None. This is an informational message.

ANR0024I

SYMAPI server Enhanced Authentication is ENABLED | DISABLED

Destination: Log and console.

Description: This message is issued during server initialization to indicate Enhanced User Authentication is enabled or disabled.

- ENABLED indicates that if a client sends an authentication message it will be verified.
- DISABLED indicates that if a client sends an authentication message it will not be verified.

Operator Action: On non-Windows hosts, if the authentication mode indicated in the message is not the mode desired, verify that the `/etc/krb5.keytab` file exists, that its permissions indicate that `storsrvd` can access it, and verify that the `klist`

`-k` value in the file shows the correct entry for the host. If the conditions are all correct, turn on high levels of diagnostic logging to look for additional information.

ANR0025E

Rejecting session *session_number* for Host *hostname*: *max_sessions_per_host (limit)* has been reached

Destination: Log.

Description: A remote client attempts to connect to the server, and the server is tracking concurrent sessions per host using the `max_sessions_per_host` configuration option. The current session exceeds the number of concurrent sessions permitted from a specific host. Therefore the session is rejected. `limit` indicates what the current value of `max_sessions_per_host` is and `session_number` is the number of the current session. `hostname` names the host from which the session originates. It may be a simple nodename, a Fully-Qualified Domain Name, or an IP address.

Operator Action: The user of the client application must wait until the number of concurrent sessions from the specific host falls below the limit set by `max_sessions_per_host`, or the server administrator can raise the `max_sessions_per_host` value or disable concurrent user tracking using the stordaemon `setvar storsrvd -name max_sessions_per_host` command. See the *Dell PowerMax Family Security Configuration Guide* for details on session limits.

ANR0026E

Rejecting session *session_number* for User *user*: *max_sessions_per_user (limit)* has been reached

Destination: Log.

Description: A remote client attempted to connect to the server, and the server is tracking concurrent sessions per user using the `max_sessions_per_user` configuration option. The current session exceeds the number of concurrent sessions permitted from a specific user. Therefore the session is rejected. `limit` indicates the current value of `max_sessions_per_user` and `session_number` is the number of the current session. `user` is the fully-qualified user name as documented in the *Dell PowerMax Family Security Configuration Guide*.

Operator Action: The user of the client application must wait until the number of concurrent sessions from the specific user falls below the limit set by `max_sessions_per_user`, or the server administrator can raise the `max_sessions_per_user` value or disable concurrent user tracking using the stordaemon `setvar storsrvd -name max_sessions_per_user` command. See the *Dell PowerMax Family Security Configuration Guide* for details on session limits.

ANR0027E

Rejecting session *session_number* for Host *hostname*: *max_sessions_per_user* is zero.

Destination: Log.

Description: A remote client attempted to connect to the server, and the server is tracking concurrent sessions. Even though max_sessions_per_host may not prevent this session from being initialized, the server detected that `max_sessions_per_user` is set to zero, in which case the session will be refused when the server checks the concurrent sessions allowed per user. Therefore the server rejects the session based on this early detection. *session_number* is the number of the current session, and *hostname* names the host from which the session originates. It may be a simple nodename, a Fully-Qualified Domain Name, or an IP address.

If `max_sessions_per_user` is not set to zero, the concurrent user check is made later in the process, and the session will either be accepted if the session does not exceed the limit set by `max_sessions_per_user`, or refused if it does, in which case the server returns message ANR0026E.

Operator Action: When any of the session limit options `max_sessions`, `max_sessions_per_host`, or `max_sessions_per_user` is set to 0, all new sessions attempting to connect to the host are refused. The server administrator can alter any of the options or disable concurrent host and user session tracking using the stordaemon `setvar storsrvd -name max_sessions_XXXX` command. See the *Dell PowerMax Family Security Configuration Guide* for details on session limits.

ANR0030E

Failed to load configuration for *name*

Set Step Return Code

Destination: Log and console.

Description: This message is issued when an error is detected in the loading of the configuration settings for the SYMAPI server daemon. The instance name is the name of the daemon for which configuration was attempted.

Operator Action: Examine the messages that precede this message. A syntax error in the configuration file section for the daemon instance *name* is the most likely cause. For example, the port definition may have specified an invalid number for the port, or an invalid security level may have been specified for the `symapi_security_level` option in the SYMAPI `options` file.

ANR0031E

The security_level (or -seclevel) keyword requires a security level to be specified

Set Step Return Code

Destination: Log.

Description: This `-seclevel` operand was specified without a value on the `stordaemon setvar` command line.

Operator Action: If you specify a security level, you must specify a valid value for the security level through the `stordaemon setvar` command. The valid values are NONSECURE, ANY, and SECURE. No abbreviations are accepted.

ANR0032E

The -log_filter keyword requires list of log filter types to be specified

Set Step Return Code

Destination: Log.

Description: This `-log_filter` operand was specified without a value on the `storsrvd` command line.

Operator Action: If you specify `-log_filter`, you must specify the desired list of filter types. Use the `stordaemon getvar storsrvd -name log_categories` for the list of appropriate filter types.

ANR0033E

The '-port' or 'storsrvd:port' keyword requires a non-zero decimal number less than 65535

Set Step Return Code

Destination: Log.

Description: An invalid value was specified for the SYMAPI server port. If the `storsrvd` command operand **`-port`** or the `storsrvd:port` statement is used, the value specified for the port must be a non-zero decimal number less 65535. Many port numbers in the lower ranges must also be avoided since they are used by well known processes (for example, the `inetd` and `ftpd` daemons).

Operator Action: Correct the command line or `daemon_options` file specification, and restart the server.

ANR0034I

The port is not reloaded while the server is running, bypassing any new port definition

Destination: Log.

Description: During execution of the `reload` command, a change to the port specification was detected. This message is issued to alert the administrator to the fact that the port definition cannot be changed during the reload operation.

Operator Action: In order to change the port, you must shut down the `storsrvd` process, make the port change, and restart `storsrvd`.

ANR0104E

Command syntax error: *explanation*

Destination: Log and console.

Description: The operator entered a command with invalid syntax explained by `explanation`.

Operator Action: Examine the syntax description for the command you want to enter, and re-enter it with the proper operands.

ANR0105E

Ambiguous or invalid command token entered: *token_text*

Destination: Log and console.

Description: The operator entered a command but either the command verb or a keyword name in *token_text* was misspelled or its abbreviation was too short to uniquely identify the intent.

Operator Action: Examine the syntax description for the command you want to enter, and re-enter it with the proper operands.

ANR0106I

Environment variable *name* has been set to *value*

Destination: Console.

Description: The operator entered the `SETENV` command, and the environment variable was successfully set.

Operator Action: None. This message provides confirmation that the variable was set as intended.

ANR0107E

option is not a valid runtime option

Destination: Log and console.

Description: The operator entered the `setvar` command, but the name of the runtime option (*option*) was not recognized as a valid option.

Operator Action: Examine the description of the `setvar` command for the supported options. Re-enter the command with the desired option. `setvar` accepts the runtime option names with or without the dash prefix.

ANR0108E

value is not a valid value for runtime option *option*

Destination: Log and console.

Description: The operator entered the `setvar` command with the name of a valid runtime option (*option*), but the value (*value*) specified for *option* was not valid.

Operator Action: Examine the description of the `setvar` command for the proper values corresponding to each supported option. Re-enter the command with the corrected value for the desired option.

ANR0110E

Invalid *option* command option name found following successful parse: decimal value is *code_value*

Destination: Console.

Description: This message indicates a programming or environmental error in command parsing and execution. The parsing of the command was successful, but the secondary scan performed by the execution phase found an invalid token.

Operator Action: Collect and provide documentation as directed by Dell Customer Support.

ANR0111I

option runtime option has been set to *value*

Destination: Log and console.

Description: The operator entered the `setvar` command to change the value of the runtime option *option*. The command text was successfully parsed, and the command was executed successfully. The new value of the variable is *value*.

Operator Action: None.

ANR0112I

command_name command requires additional operands

Destination: Console.

Description: The operator issued command `command_name` without sufficient operands. Default processing could not be established.

Operator Action: Re-enter the command with desired operands, according to the documentation. You can also use the `help` command to determine the required operands.

ANR0113I

option current value: *value*

Destination: Console.

Description: This message is issued by the `DISPLAY` or `SHOW` command for a runtime option. The *option* is the runtime option specified in the `SHOW` command, and its current setting is *value*.

Operator Action: None. The operator may issue this command before changing the value of a runtime option, or may want to confirm its value after setting it (although message ANR0111I can be used for the latter purpose).

ANR0114I

environment_variable is currently not set

Destination: Console.

Description: The operator entered the `SHOW -ENV` command to display the value of an environment variable. The variable has not been set.

Operator Action: None.

ANR0115I

environment_variable is set to an empty value

Destination: Console.

Description: The operator entered the `SHOW -ENV` command to display the value of an environment variable. The variable is set in the environment of the server, but the value is the empty string.

Operator Action: None.

ANR0116I

The *option* runtime option may not be changed while the server is running

Destination: Console.

Description: The operator or stordaemon user issued the `stordaemon setvar -name` command to change an option which cannot be changed while the server is running.

Operator Action: To change the desired option on the next run of `storsrvd`, you can use `stordaemon setoption` or edit the `daemon_options` file in the SYMAPI configuration directory. If you use the `setoption` command and then try to use `reload`, additional log messages may be issued indicating that some changed options will not be reloaded.

ANR0120I

SYMAPI Active Session List:

Destination: Console.

Description: The operator issued the `LIST SESSIONS` command and there are active sessions to list. This message is the heading for the list of sessions which follows.

Operator Action: None.

ANR0121I

No active sessions found.

Destination: Console.

Description: The operator issued the `LIST SESSIONS` command or the `SHOW SESSION` command and there are no active sessions to list/show.

Operator Action: None.

ANR0122I

Session *number* is not active

Destination: Console.

Description: The operator issued the `SHOW SESSION` command with the `-NUM` option to display a specific session, and the specified session was not active.

Operator Action: None.

ANR0123I

Show *server* Details:

Destination: Console.

Description: The operator issued the `SHOW -SERVER` command to display the details for the server. This line is written to mark the beginning of the server details output.

Operator Action: None.

ANR0124I

Show Session details for Session *session_number* on Thread *thread_number*:

Destination: Console.

Description: The operator issued the `SHOW SESSION` command to display details of one or more currently active sessions. This line is written at the beginning of the details for each session to be displayed.

Operator Action: None.

ANR0140E

Secure sessions are not supported on this platform. The security level specified is *security_level*

Set Step Return Code

Destination: Log and console.

Description: This message is issued when either the SYMAPI `options` file or `daemon_options` file specified a security level of ANY or SECURE on a platform where secure sessions are not supported. In the case of the `options` file, the `SYMAPI_SERVER_SECURITY_LEVEL=` or the `SYMAPI_SECURITY_LEVEL=` statement specified this value. In the case of the `daemon_options` file, the `storsrvd:security_level` specified ANY or SECURE. The value may have been specified for the `-seclevel` operand of the `storsrvd` command.

Operator Action: If security level is specified through any configuration statement or `storsrvd` command operand, it must specify NONSECURE on platforms where secure sessions are not supported. It is safer to omit the specification altogether, or to specify the dash character '-'. Refer to the *Dell eLab Navigator* for a list of platforms where secure sessions are supported.

ANR0141E

Could not extract server *file* filename, rc=*returncode*

Destination: Log.

Description: During initialization, the SYMAPI server was not able to determine the name of the file to be used in SSL initialization. The string *file* refers to the SSL type file that the server was about to reference. The failing return code is displayed in *returncode*.

Operator Action: In an Open Systems environment, the server certificate and private key files should have been installed by the normal installation procedure. In z/OS and Microsoft Windows, the location of the Solutions Enabler configuration directory can be adjusted to your configuration needs. Follow the platform specific installation instructions to install the default server certificate files.

ANR0142E

function establishment failed with rc= *returncode (error_message)*

Destination: Log.

Description: During SSL initialization, the component referred to by *function* failed to be established. If *function* is CERTIFICATE or PRIVATE KEY, then the `symapisrv_cert.pem` file may be damaged or it may not have been successfully copied to the SYMAPI configuration directory.

Operator Action: If server certificate and key files are not installed by default on the platform where the server is running, additional installation steps are necessary. Refer to the platform specific installation instructions to install the files. You can specify NONSECURE for the security level if desired; in which case, the server will not attempt to load the certificate and key files.

ANR0143E

Rejected session *address*: security level mismatch reason: *error_message*

Destination: Log.

Description: A mismatch of security levels occurred when an initiating client session requested a security mode that the server was not able to honor.

address is the IP address of the client and *error_message* contains the error message indicating the actual problem.

Operator Action: If possible, modify the security level of the client to match the security mode that the server is using. If that is not possible, then (unless other clients will be impacted), modify the security level of the server to match the security level the client is requesting.

ANR0144E

Secure Library Init error: rc=*return_code (error_message)*

Destination: Log.

Description: Some component failed during SSL initialization. The *return_code* value corresponds to the message explained in the string *error_message*.

Operator Action: If you are unable to resolve the problem indicated in string *error_message*, contact Dell technical support for assistance with this error.

ANR0145E

The value *value* specified for security level is invalid

Set Step Return Code

Destination: Log.

Description: This message is issued when an attempt is made to set the security level for the SYMAPI server daemon using one of the supported methods, and the value specified is invalid. The methods to set the security level are: the `storsrvd -seclevel` command line option, the `storsrvd:security_level` statement in the `daemon_options` file, or the `stordaemon setvar` command. The valid values are NONSECURE, ANY, or SECURE. Note that a separate message (ANR0148E) is issued if an invalid value is specified in the SYMAPI options file.

Operator Action: Correct the value specified on the command line or in the `daemon_options` file, and restart the server or re-execute the `stordaemon` command.

ANR0146I

Security level has changed from *old_security_level*. New sessions will use *new_security_level*

Destination: Log.

Description: The security level to be used by the server was changed successfully using the `setvar` or `reload` command through the `stordaemon` CLI on the z/OS console. The level was changed from *old_security_level* to *new_security_level*. New sessions will negotiate based on the new security level set, but existing sessions are unaffected by the new level, and will continue to use the security level negotiated when they started.

Operator Action: Confirm that the *new_security_level* is the intended security level. If so, no further action is required. If not, you may want to refer to the server logs or other logs to determine why the security level was changed.

ANR0147I

The SYMAPI options file specified an empty value for `option_name`, changing to platform internal default *security_level*

Destination: Log.

Description: A configuration file statement `option_name` specified an empty value for the server security level. Such a specification is an error, but the server will substitute the default security level value with *security_level* for the platform on which the server is running. The default value is SECURE for platforms that support secure mode and NONSECURE for those platforms that do not support secure mode.

Operator Action: The omission of the security level on an explicit configuration is most likely a mistake. Refer to the SYMAPI `options` file or the `daemon_options` file to correct the omission, if you want to suppress the appearance of ANR0147I.

ANR0148E

The SYMAPI option SYMAPI_SERVER_SERCURITY_LEVEL specified an invalid value

Set Step Return Code

Destination: Log and console.

Description: This message is issued during server initialization when an invalid value is specified in the SYMAPI `options` file statement `SYMAPI_SERVER_SECURITY_LEVEL` or `SYMAPI_SECURITY_LEVEL`. The value for security level can be defined in several places. Here is a list of them and their priorities:

1. Security level defined by the command `stordaemon start storsrvd -args -security_level <security level>`. This takes precedence over everything else.
2. `SYMAPI_SECURITY_LEVEL` defined in the SYMAPI **`options`** file.
3. `SECURITY_LEVEL` defined in the `daemon_options` file.
4. `SYMAPI_SERVER_SECURITY_LEVEL` defined in the SYMAPI `options` file.

NOTE:

`SECURITY_LEVEL` from the `daemon_options` file and `SYMAPI_SERVER_SECURITY_LEVEL` from the SYMAPI `options` file are deprecated.

Note that a separate message (ANR0145E) is issued if an invalid value is specified in any of the other methods: `storsrvd` command line, `daemon_options` file, or the `stordaemon setvar` command.

Operator Action: Correct the value specified in the SYMAPI `options` file statement `SYMAPI_SERVER_SECURITY_LEVEL` or `SYMAPI_SECURITY_LEVEL`. The valid values are NONSECURE, ANY, or SECURE. The `SYMAPI_SERVER_SECURITY_LEVEL` statement is now deprecated and replaced by `SYMAPI_SECURITY_LEVEL`. The former statement is still accepted for compatibility reasons.

ANR0149D

Security level has been taken from the SYMAPI option *value*

Destination: Log.

Description: This message is issued when the value for the server security level is defined in the SYMAPI `options` file and has not been specified on the `storsrvd` command line. This message is informational only.

value is either `SYMAPI_SECURITY_LEVEL` or `SYMAPI_SERVER_SECURITY_LEVEL`.

ANR0150E

The value *value* specified for client certificate verification is invalid

Destination: Log.

Description: This message is issued during server initialization when the value for the client certificate verification option, as defined in the `daemon_options` file, is invalid. It can also be issued when attempting to change this option with the `stordaemon` command to an invalid value.

Operator Action: Correct the value specified in the `daemon_options` file statement `security_clt_secure_lvl` or as specified on the command line. The valid values are NOVERIFY, VERIFY or MUSTVERIFY.

ANR0151E

Common Name in client certificate not valid: expected *name*, received *common name*

Destination: Log.

Description: This message is issued during setup of secure mode between client/server. The common name in the client certificate does not match the name the server is expecting.

Operator Action: Check the client certificate to verify that the names contained in the certificate are known hostnames to the server. Either generate a client certificate with the hostname that the server is expecting or add the common name in the client certificate to the applicable `/etc/hosts` file on the server.

ANR0152E

Issue detected with server certificate file *filename*

Destination: Log.

Description: This message is issued during initialization of the secure library. A problem with the certificate file has been detected.

Operator Action: Check for the existence of the certificate file on the server. If you have set the `security_alt_cert_file` parameter in the `daemon_options` file, verify that it points to a valid file.

ANR0153E

Issue detected with server PrivateKey file *filename*

Destination: Log.

Description: This message is issued during initialization of the secure library. A problem with the PrivateKey file has been detected.

Operator Action: Check for the existence of the `Privatekey` file on the server. If you have set the `security_alt_key_file` parameter in the `daemon_options` file, verify that it points to a valid file.

ANR0154E

Host name pattern in certificate is not valid: *pattern* for the client *Host Name*

Set Step Return Code

Destination: Log.

Description: This message is issued during setup of secure mode between client/server. It indicates an illegal pattern has been put into the client certificate. *Pattern* shows the pattern in the client certificate, and *HostName* shows the name of the client host which was attempting to connect to the server.

Operator Action: Generate a new client certificate without the illegal host name pattern. The only characters allowed for a host name pattern are letters, numbers, periods (.), colons (:), and hyphens (-).

ANR0155E

Subject Alternative Names in the client certificate not valid: expected *name*, received *list*

Set Step Return Code

Destination: Log.

Description: This message is issued during setup of secure mode between client and server. The list of Subject Alternative Names in the client certificate did not contain a match of the name or IP address that the server is expecting. The name the server expected to find is *name*, but it found the list of Subject Alternative Names in the *list*.

Operator Action: Check the client certificate to verify that the names in the certificate are hostnames or IP addresses known to the server. Either generate a client certificate with the hostname that the server is expecting or add the name(s) in the Subject Alternative Name field(s) in the client certificate to the applicable */etc/hosts* file on the server.

ANR0156E

Federal Information Processing Standard (FIPS) mode has failed to be enabled

Set Step Return Code

Destination: Log.

Description: This message is issued during server initialization if the server is configured to run in secure mode on a platform that supports FIPS mode and the server was unable initialize FIPS mode.

Operator Action: The details about error conditions will be recorded in the `storsrvd` log files. Refer to the log file for signs of why FIPS mode initialization failed. The most likely cause of the error is that the cryptography library failed to load.

ANR0200E

service_name error *return_code: explanation;* from *calling_routine,* line *line_number*

Destination: Log.

Description: Server logic called the routine named by *service_name* and received a failure indicated by *return_code,* where *explanation* is text that corresponds to the *return_code.* The failure was detected at line *line_number* in the routine *calling_routine.* The routine *calling_routine* was not able to continue due to the failure of *service_name.*

Operator Action: None, generally. This message may occur in very rare circumstances during handling of an operator command, and may indicate a syntax error that was not handled properly by parsing logic. Examine the command and reissue it if it was specified incorrectly.

ANR0201E

Unable to allocate *count* bytes for *object_name*

Destination: Log.

Description: The server attempted to allocate *count* number of bytes. *object_name* is a description of what the server was trying to allocate. This message may indicate that the server is over-committed with regard to the number of concurrent sessions, or that there may be a memory leak in the server.

Operator Action: Increase the amount of memory available to the server using the appropriate method for the platform the server is running on. If this does not solve the problem, a memory leak may be indicated by other failure messages. Collect and forward error documentation to Dell Customer Support for analysis.

ANR0202E

Unable to *operation_name* port *port*, error *error_number* indicates *explanation*

Set Step Return Code

Destination: Log and console.

Description: An error occurred operating on the socket on which the server listens for new connections. *operation_name* will indicate an error during bind, listen, initialize, accept, or start new thread. The *error_number* is the decimal value of the system error variable *errno* (in Windows, the value returned from the `GetLastError() call`), and the *explanation* is the text that explains the meaning of *error_number.port* is the TCP/IP port which clients use to connect to the SYMAPI server. The server shuts down after issuing this message.

Operator Action: In most cases, other messages will also be issued giving other details about an error situation. Follow your normal procedures for detecting and correcting problems in your TCP/IP network. Correct the TCP/IP problem and restart the server.

ANR0204E

Unable to decode return value *return_value* from *process*

Set Step Return Code

Destination: Log and console.

Description: The *return_value* from a call to a routine or other logic could not be interpreted. *process* may be the name of the function or may be a general description of processing that resulted in a return value which could not be interpreted.

Operator Action: None. This message will be preceded by other error messages that provide more detail. If your normal processing is unaffected, no action is necessary. Otherwise, you may need to collect and provide documentation as directed by Dell Customer Support.

ANR0205E

action is not currently supported

Destination: Log and console.

Description: An action or feature was requested that is either not yet supported or is no longer supported. The name of the action or feature not supported is *action*.

Operator Action: None. The feature you requested is not available for use in this release. If you receive this message in error, examine the job log for other evidence of a failure which may be related to the action or feature you attempted to use.

ANR0207S

Failed to start *name* thread, error = *code (explanation)*

Set Step Return Code

Destination: Log and console.

Description: This message is issued in two cases:

- During server initialization, the attempt to start the dedicated SYMAPI listener thread failed. In this case, *name* is *SYMAPI Listener*. The server will immediately abort initialization and will stop.
- During handling of the arrival of a SYMAPI session, the attempt to start a dedicated thread for the session failed. In this case, *name* is *SYMAPI session*. The server continues to listen for other sessions, although the ability to start new threads can be limited. Other messages may accompany this one with additional diagnostic detail. The return code and explanation from the thread-start service call are displayed in *code* and *explanation*.

Operator Action: Examine other messages in the log files and other system output. You may be able to determine the cause and corrective action from other messages. In the second case, system resources required to start threads may be exhausted due to the current SYMAPI session count. Your system may be configured to allow a maximum number of threads per process, and this limit may have been exceeded. Complete diagnosis may require assistance of Dell technical support.

ANR0208E

Unable to verify SYMAPI Database directory *db_dir*

Set Step Return Code

Destination: Log and console.

Description: The server attempts to make the SYMAPI database directory the current directory during initialization in order to cause non-default database files to be placed in the database directory if the name is not a fully-qualified pathname. This message is issued during server initialization if the SYMAPI database directory does not exist or is inaccessible. The most common reason is that the database directory does not exist. The name of the directory the server attempted to verify is shown in *db_dir*.

Operator Action: The Solutions Enabler installation process creates the database directory normally. If this operation failed during installation, the installation process would have terminated with an error. You can create the directory using the tool appropriate to your platform. Use the directory name shown in *db_dir* in the message text.

ANR0209I

Authentication service name *service_name* exceeds maximum length

Destination: Log and console.

Description: The `storsrvd` process is attempting to copy *service_name* to an internal structure and is unable to because of its length.

Operator Action: If possible, shorten the name of the host shown in *service_name*. Otherwise, you may need to collect and provide documentation as directed by Dell Customer Support. The server will continue to operate in non-authenticated mode.

ANR0210E

EMCSAI version does not meet minimum version requirement of *nn.nn.nn*

Destination: Log and console.

Description: The version of ResourcePak Base running on the host does not meet the minimum version required by Solutions Enabler.

Operator Action: Ensure that Solutions Enabler is configured to work with ResourcePak Base at the indicated version or later.

ANR0211E

Unable to obtain EMCSAI version, RC=%a (%b) EMCRC=%c, EMCRS=%d

Destination: Log and, in some cases, the console.

Description: This message is issued as a result of an interface error when Solutions Enabler checks the ResourcePak Base version.

Where:

%a is the return code from the call to the ResourcePak Base EMCSAI interface

%b is a text description of the message.

%c is the EMCSAI Return Code (emcrc)

%d is the EMCSAI Reason Code (emcrs)

The most common cause of error is that Solutions Enabler is configured to work with a version of ResourcePak Base which is not running or which does nor exist. Either one of these conditions will result in the following message being issued:

ANR0211E Unable to obtain EMCSAI version, RC=28 (Symmetrix Control Facility is not available) EMCRC=0, EMCRS=0

Operator Action: In all other cases of the message, contact Dell for support.

ANR0212E

Unable to determine peer *identifier*, System call: *callname*, RC: *return_code*

Set Step Return Code

Destination: Log and console.

Description: During session negotiation, the server attempts to look up the name of the client host which has initiated the session. If the name of the host cannot be determined, the server then attempts to look up the IP address of the client host. The *identifier* will be either "*nodename*" or "*address"* depending on which failure occurs.

Where:

callname is the name of the system function called to execute the lookup.

return_code is the failure return code from that function.

Operator Action: The session continues to be initiated, if possible. If the session is SECURE, then it's very likely that the validation of the hostname in the certificate will fail, since it is compared to the identifier obtained from the system. If the system cannot return a hostname, DNS and local host TCP/IP configuration can be changed to configure a hostname properly. In the rare case that the system cannot obtain an IP address, it is an indication of a severe IP configuration problem. Your network system administrator should be consulted to determine the nature of the network configuration problem.

ANR0220I

Thread *thread_number* will execute without condition handling protection

Destination: Log.

Description: In a z/OS environment, the session on thread *thread_number* will be executed without the protection of a condition handler. The `setvar -cond_hdlr OFF` command had been previously issued, causing condition handling suppression. This message is a confirmation that the session will be run without protection. An abend on the thread will cause the operating system to terminate the server address space.

You can associate the thread number with a session number by using the `LIST SESSIONs` command. The second column of the list sessions output is the thread number of the session.

Operator Action: None.

ANR0221E

Unable to set condition handling for thread *thread_number*, msgno=*LE_message_num*, sev=*LE_severity*

Destination: Log and console.

Description: In a z/OS environment, the thread (*thread_number*) handling a session attempted to set condition handling by calling the Language Environment routine CEEHDLR but received a non-zero return value from the call. The Language Environment feedback message number is shown in *LE_message_number* and the severity of the return is shown in *LE_severity.*

Operator Action: None.

ANR0222E

ConditionHandler invoked on thread *thread_number*; writing dump to DD *dump_location*

or

ConditionHandler invoked on thread *thread_number*; writing dump to *file_name* in SYMAPI log directory

Destination: Log and console.

Description: In a z/OS environment, an abnormal condition was raised during the session running on *thread_number*. A dump will be written to the DD name *dump_location.* The general format of the DD name is DMP*nnnnn* where *nnnnn* is the *thread_number.*

If you prefer that the dump be written to a file instead of to the spool, you can use DD SYM$ENV in the server's JCL and add this environment variable:

```
SYMAPI_LE_DUMP_LOGDIR = 1
```

After this variable is set, if an abnormal condition were to arise during the session running on *thread_number*, a file *file_name* will be written to the Solutions Enabler log directory. The general format of the file name is DMP*nnnnn* where *nnnnn* is the *thread_number*.

Operator Action: Consult Dell Customer Support for directions on completing documentation to provide for analysis and correction.

ANR0223E

Dump to *dump_location* is complete; thread *thread_number* will be terminated

or

Dump to *file_name* in SYMAPI log directory is complete; thread *thread_number* will be terminated

Destination: Log and console.

Description: This message should immediately follow ANR0222E. It denotes that the dump whose beginning is marked by the previous ANR0222E message is now complete. And the dump is written to either *DD name dump_location* or a file named *file_name* in SYMAPI log directory. Furthermore, thread *thread_number* that caused this dump will be terminated.

Operator Action: None.

ANR0224S

Recursive entry to condition handler on thread *thread_number*

Destination: Log and console.

Description: In a z/OS environment, condition handling processing detected a recursive (second) entry into the condition handling routine. This may indicate an abend while attempting to handle an earlier abend.

Operator Action: None.

ANR0225E

Condition handling is not supported on this platform

Destination: Log.

Description: In a z/OS environment, language environment *condition handling* supports capturing abnormal termination of a thread without affecting other threads in the process (job). This message is issued when an attempt is made to set or display the current condition handling setting in a non-z/OS environment, using the `stordaemon getvar` or `setvar` command.

Operator Action: Correct the `setvar` or `getvar` command to specify an option which is supported in the environment where you are using the `stordaemon` command.

ANR0300E

API Request code *SYMAPI_request_code API_name* rejected; it is restricted and disabled

Destination: Log.

Description: A SYMAPI request code that describes a control operation was received. The server checked the *SYMAPI_request_code* (function named in *API_name*) to determine whether execution has been disabled. The API request was found to be disabled. This message will only be issued in the z/OS environment.

Operator Action: None. In a z/OS environment, control operations may have been disabled by using the installation job **`#12CNTRL`** in the Solutions Enabler RIMLIB dataset.

ANR0301I

API Request code *SYMAPI_request_code API_name* executing

Destination: Log.

Description: The server received a SYMAPI request described by the decimal code *SYMAPI_request_code.* This message is issued when the server begins executing the API request. The name of the SYMAPI function name is *API_name*.

Operator Action: None.

ANR0302I

API Request code *SYMAPI_request_code* complete, processing status *SYMAPI_return_ code* (*explanation*)

Destination: Log.

Description: The API request named in message ANR0301I completed executing. The decimal code of *SYMAPI_request_code* corresponds to the API request code. The return value of the API request was *SYMAPI_return_ code,* and the corresponding text is *explanation.*

Operator Action: None.

ANR0303I

Executing SymExit to clean up (client exited without calling SymExit)

Destination: Log.

Description: The client application exited its process before calling SymExit to end the remote session with the SYMAPI server. The server calls SymExit on behalf of the client to free up resources which are still held.

Operator Action: None.

ANR0304I

Cleanup SymExit return: *return_value* (*explanation*)

Destination: Log.

Description: The cleanup call to SymExit completed, and the return value was *return_value*. The *explanation* is the text associated with *return_value*.

Operator Action: None.

ANR0305E

REMOTE_CACHED mode not supported for client node *Host_name* version *client_version_number* - connection rejected

Destination: Log.

Description: A client running a version of Solutions Enabler earlier than V7.2 attempted to connect to a SYMAPI server running V7.6 or higher, which is not allowed.

Operator Action: None.

ANR0306E

Connection rejected from client node *HostName* -- its version (*version*) is no longer supported in C/S mode

Destination: Log.

Description: Client connections using SYMAPI versions lower than V7.2 are not supported. *Hostname* is the name of the client host where the connection originated, and *version* is the version of the SYMAPI library with which the client program was built.

Operator Action: The developer of the application must upgrade to a newer version of the SYMAPI library. If the client program is the SymCLI, there may be an incorrect version installed on the client host, or the client may intend to connect to a different server.

ANR0307E

Connection rejected from client node hostname -- its version (*HostName*) is newer than our version

Destination: Log.

Description: The SYMAPI version of the client program is newer than the server's version. Such a connection is not supported. *HostName* is the name of the client host where the connection originated, and *version* is the version of the SYMAPI library with which the client program was built.

Operator Action: Insure the client program is directing its connection request to the correct server.

2

Asynchronous Events

This chapter lists the possible asynchronous error and message events trapped by the event daemon.

Topics:

- Unisphere for PowerMax alert monitoring recommendations
- Configuring event logging
- Array event codes
- Unisphere policy name - Alert ID mapping

Unisphere for PowerMax alert monitoring recommendations

This topic outlines the list of recommended alerts for you to monitor or consider monitoring (depending on your environment) when configuring alert policies using Unisphere for PowerMax.

NOTE: These recommendations are for storage systems running HYPERMAX OS 5977, PowerMaxOS 5978, and PowerMaxOS 10 (6079).

Alert notifications should also be enabled for these alerts.

In addition, notifications should be configured for the default System Thresholds Alerts set and Notifications set.

It is recommended that you monitor the following:

- Array Component events
- Array Events
- Array - Deferred Service Threshold Alert
- Array - Director Status
- Array - Disk Status
- Array - Environmental Alert
- Array - Hotspare Invoked
- Array - Port Link status
- Array - Port status
- Array - RVA Spare Coverage
- Array - SP Alerts
- Array - SRDF Alerts
- Array - SRDF Job Flow Control Change
- Array - SRDF Link Status
- Array - SRDF/A No Cycle Switch Alert
- Array - SRDF/A Session
- Array - SRDF/A Session dropped, Transmit Idle state timeout
- Array - SRDF/A Session entering Transmit Idle state
- Array - SRDF/A Session recovered from a Transmit Idle state
- Array - Target Enginuity Warning

Consider monitoring the following depending on the customer environment:

- Array - Device Config Change
- Array - Device Status
- Array - Thin Device Allocation
- Array - Thin Device Usage

Configuring event logging

The `daemon_options` file contains a set of parameters that can be modified to affect event daemon behavior. The file contains editable behavior parameters set to certain optional defaults in the line entries. Commented lines beginning with a pound sign (#) are ignored.

To remove any parameter option, remove the line entry, rename the file, or comment the line by adding a pound sign (#) at the beginning of the line entry.

Configuring event logging involves the following steps:

1. Specify logging targets.
2. Configure an event target.
3. Specify events to log.

The remainder of this section explains `daemon_options` file settings required to complete each of these steps.

NOTE:

Changes made to the `daemon_options` file while the daemon is running will not take effect until you issue a `stordaemon reload` command.

Specify logging targets

To specify a logging mechanism, define the following parameter in the `daemon_options` file:

```
storevntd:log_event_targets = snmp syslog system file
```

NOTE:

You must set this parameter to one or more of the valid values; otherwise, event logging will not occur. When specifying multiple values, separate them with a space.

where:

`snmp` specifies to log events by way of SNMP traps. Solutions Enabler supports SNMP version 3 traps.

NOTE: The z/OS Event Daemon does not support `snmp` as a logging target, only `syslog`, `system`, and `file`.

`syslog` (supported on all platforms) specifies to log events to a Syslog server across the network, bypassing (if on UNIX) the local host's Syslog service and its configuration settings.

`system` does the following depending on the operating system:

- In UNIX, it specifies to log events to local host's Syslog services. The Syslog's configuration settings control where it directs the message.
- In Windows, it specifies to log events to the Windows Event Log.

  `file` specifies to log events to a file on disk.

  For example:

```
storevntd:log_event_targets = snmp system
```

Configure an event target

Configuring SNMP event targets

The event daemon provides the necessary SNMP MIB support and trap generation services required to monitor the status of VMAX storage environments from third-party enterprise management frameworks. It also supports the delivery of SNMP traps using Transport layer security model (TSM).

The event daemon includes a loadable SNMP library which, once enabled and configured in the `daemon_options` file, acts as a self contained SNMP agent. It is responsible for maintaining internal Fibre Alliance MIB (V3.0) tables, responding to SNMP browse requests, and generating traps in response to events.

NOTE: SNMPv3 is supported only on Windows 64-bit and Linux 64-bit systems.

SNMPv3 TSM certificate configuration

Before using SNMPv3 TSM, you have to manually configure certificates.

1. Copy the CA certificate that is used to sign the SNMP target certificates into DEFAULT_CERT_DIR.

   DEFAULT_CERT_DIR locations:
   - Linux Platform - `/var/symapi/config/cert`
   - Windows Platform - `C:\Program Files\EMC\SYMAPI\config\cert`

   NOTE: If multiple targets are to be configured, this step must be repeated for each of the SNMP targets.

2. Copy the `storevntd` certificate and its private key into DEFAULT_CERT_DIR.
3. Go to the DEFAULT_CERT_DIR and run the `manage_server_cert update` command.
4. Set the following daemon options:
   a. `SNMP_TSM_ALT_CERT_FILE` – Set the location of the `storevntd` certificate file.

      Example:

      ```
      storevntd: SNMP_TSM_ALT_CERT_FILE=DEFAULT_CERT_DIR/custom_cert.pem
      ```

   b. `SNMP_TSM_ALT_KEY_FILE` – Set the location of the `storevntd` private key file.

      Example:

      ```
      storevntd: SNMP_TSM_ALT_KEY_FILE=DEFAULT_CERT_DIR/custom_key.pem
      ```

5. Copy the CA public certificate of the client (`storevntd`) into the SNMP truststore of the target.

When setting the TSM daemon option (in either static or dynamic configuration) using the steps in section SNMP and SNMPv3 configuration below, `storevntd` has to be restarted or reloaded. To restart the daemon, use `stordaemon shutdown storevntd` then `stordaemon start storevntd`. To reload, use `stordaemon action storevntd -cmd reload`.

`storevntd` will try to establish the TSM connection to SNMP targets. If the connection is successful, the target is added to the SNMP targets' list. The target list can be retrieved by running the `stordaemon getvar storevntd -name snmp_trap_client_registration` command.

SNMP and SNMPv3 configuration

1. For an application to receive SNMP trap information from the event daemon, you must specify it as a trap target by defining the following parameter in the `daemon_options` file:

   ```
   storevntd:snmp_trap_client_registration = IP,Port,Severity,
   State,Version,security_model
   ```

   where:
   - *IP* is the application's IP address.
   - *Port* is the port on which the application will be listening for the trap. The default port is 162.
   - *Severity* is the trap filtering severity level as defined in the FC-management MIB. The application will only receive traps of the specified severity level (or lesser). The default value is 10 (Mark), which means that all events are delivered.
   - *State* is the start up row state in the `trap_client_registration` table in the FC-management MIB. Possible values are ACTIVE and INACTIVE.
   - *Version* is the trap generation version. This can be *v1* or *v3*. If no version is specified, then *v1* is considered as a default value.

- *security_model* is the trap generation version. This can be *usm* or *tsm*. If the version is specified as V3 and the security model is not specified, then *usm* is considered as the default security model.

Event daemon severity level/SNMP severity level mappings maps the event daemon severity level to the SNMP severity levels, as specified in the FC-management MIB.

Multiple entries can be on the same line, separated by a blank space. In addition, they can be on their own line, delineated with a backslash (\) character on the preceding line.

```
storevntd:SNMP_TRAP_CLIENT_REGISTRATION =  \
                                    11.22.33.44,162,10,ACTIVE,v3,usm \


                                    55.66.77.88,162,10,ACTIVE,v1
```

For example, the following registration file specifies that the daemon will only send SNMP traps to the indicated clients using TSM when it detects an event of a severity level less than or equal to 5 (that is, Error, Critical, Emergency). The daemon will ignore events with a severity level greater than 5:

```
storevntd:snmp_trap_client_registration = 10.2.12.30,162,5,ACTIVE,v3, tsm \
                                            12.250.130.200,162,5,ACTIVE, v1
```

SNMP targets can also be dynamically configured with SNMP versions as shown in the below example:

```
stordaemon setvar storevntd -name
snmp_host='11.22.33.44:162:10:v3,55.66.77.88:162:10:v1'
```

For SNMPv1, this is the end of the configuration procedure. For SNMPv3, continue with the steps below.

2. Create a username with a password (for authentication) and privacy key (for encryption) for the registered SNMPv3 target. IP (or host) and port of the target is the key in this case as shown below:

```
symcfg authorization add -snmp -host 11.22.33.44
           -username testuser -password testpassword

           -port 162 -key testprivkey
```

3. To create user credentials use the `symcfg authorization add` CLI command.

NOTE: If the user configures more than two SNMPv3 targets on the same host but using different ports, then user credentials have to be created separately for each SNMP target. Creation of user credentials for different listeners running on the same host can be created using namespace offered by the CLI.

```
Example 1: IP - 11.22.33.44 and port 162
         symcfg authorization add -snmp -host 11.22.33.44
           -username testuser -password testpassword -namespace
              IP_11_22_33_44_162 -port 162 -key testprivkey

         Example 2: IP - 11.22.33.44 and port 1162
         symcfg authorization add -snmp -host 11.22.33.44
           -username testuser1 -password testpassword1 -namespace
              IP_11_22_33_44_1162 -port 1162 -key testprivkey1
```

4. To delete user credentials use the `symcfg authorization delete` CLI command.

```
symcfg authorization delete -host 11.22.33.44 -snmp
```

To delete user credentials that was created using namespace, namespace name has to be mentioned.

```
symcfg authorization delete -host 11.22.33.44 -snmp
                     -namespace IP_11_22_33_44_162
```

5. Obtain the unique engine ID for the `storevntd` from which events are expected to be received by the SNMPv3 target using the `stordaemon getvar` command. For example:

```
stordaemon getvar storevntd -name snmp_v3_engineid
storevntd                    snmp_v3_engineid=0x8001f888067458b6ba12a815a0000
```

6. Traps received by the SNMP manager are validated with the engine ID, username, password (using SHA authentication), passphrase (for AES encryption). For example, if the SNMP target is a Net-SNMP trap receiver with the following data:

```
Engined ID of the storevntd - 0x8001f888067458b6ba12a815a0000 (Auto generated value)
UserName registered of the storevntd with the above engine ID - "traptest"
Password registered of the storevntd with the above engine ID - "mypassword"
Passphrase registered of the storevntd with the above engine ID - "mynewpassword"
```

   The configuration file of the net-snmp snmptrapd would look as follows:

```
"createUser -e 0x8001f888067458b6ba12a815a0000 traptest SHA mypassword AES mypassword
authuser log traptest"
```

7. During the delivery of SNMPv3 traps to the SNMPv3 target, the event daemon retrieves the user name and other credentials registered for the destination host (IP and port as the key) using the SymPwdDbEntryList2() API and fills in those details into the SNMPv3 packets. When the packet reaches the destination, the trap receiver authenticates and decrypts the packet using the same credentials.

NOTE: If SNMPv3 is specified as target during the SNMP target registration and no user credentials are configured for the SNMP target host, then the SNMP trap will not be sent.

Table 5. Event daemon severity level/SNMP severity level mappings

Event daemon severity	SNMP trap severity
	1 (Unknown)
fatal	2 (Emergency)
	3 (Alert)
critical	4 (Critical)
major	5 (Error)
minor	5 (Error)
warning	6 (Warning)
info	8 (Info)
normal	8 (Info)
	9 (Debug)
--	10 (Mark)

Object IDs

Object Identifiers (OIDs) are entries in the Management Information Base (MIB). OIDs containing the number 1139 are considered vendor extension OIDs.

Table 6. Object details


Object name	Object identifier	Description
connUnitEventId	1.3.6.1.3.94.1.11.1.3	This is the event index, mainly for internal use.

Table 6. Object details (continued)

Object name	Object identifier	Description
connUnitEventSeverity	1.3.6.1.3.94.1.11.1.6	The SNMP trap severity. The values are listed in Event daemon severity level/ SNMP severity level mappings.
connUnitEventType	1.3.6.1.3.94.1.11.1.7	This is the event type. Possible values are: • UNKNOWN: 1 • OTHER: 2 • STATUS: 3 • CONFIGURATION: 4 • TOPOLOGY: 5
connUnitEventObject	1.3.6.1.3.94.1.11.1.8	This field is always NULL.
connUnitEventDescr	1.3.6.1.3.94.1.11.1.9	This is the description of the event. See sections Array Events: Event IDs 1050 - 1199 and Array Events: Event IDs 1200-1999 for detail.
connUnitName	1.3.6.1.3.94.1.6.1.20	This is the array ID.
connUnitType	1.3.6.1.3.94.1.6.1.3	This is the array type. Possible values are: • OTHER: 2 • STORAGE_SUBSYSTEM : 11
emcAsyncEventSource	1.3.6.1.4.1.1139.3.8888.1.0	The source of the events: • Symmetrix: 2
emcAsyncEventCode	1.3.6.1.4.1.1139.3.8888.2.0	This OID has been defined in gateway.mib. This is the event ID. See sections Array Events: Event IDs 1050 - 1199 and Array Events: Event IDs 1200-1999 for detail.
emcAsyncEventComponentType	1.3.6.1.4.1.1139.3.8888.3.0	This is the component type, for example FastSRP.
emcAsyncEventComponentName	1.3.6.1.4.1.1139.3.8888.4.0	The component name, for example SRP on which the event was generated.

Example

The following example shows an SNMP trap to monitor a SRP capacity change event. For detailed explanations of the OIDs, see table 3.

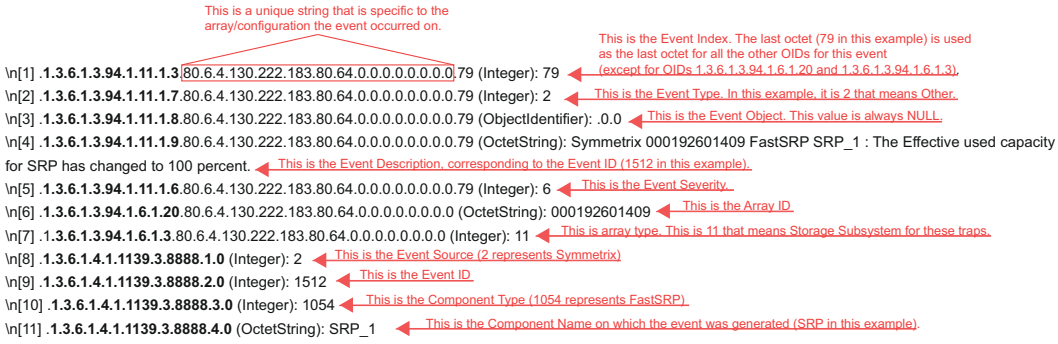

TSM certificate management

Retrieving storevntd CA certificate

Invoke this API by populating the input structure as described:

1. · Set the action parameter to SYMAPI_SNMP_CONFIG_REQ_ACTION_SET
2. Set the action variable in "SYMAPI_SNMP_CONFIG_T snmp_config" to SYMAPI_SNMP_CONFIG_ADD
3. Set snmp_version in the structure to SYMAPI_SNMP_CONFIG_VERSION_V3_TSM
4. Set the action in "cert_config" variable to SYMAPI_CERT_CONFIG_ACTION_GET_CLIENT
5. The certificate buffer will be returned in SYMAPI_SNMP_CONFIG_RSLT_T structure.
   - evt_cert_buff_len -> will contain the size of the file buffer
   - evt_cert_buffer -> will hold the storevntd's CA buffer.
6. The consumer of the API should perform SymFree() on the result structure.

This operation returns the Solutions Enabler self-signed default CA certificate by default. If the file is not found, the API returns a FILE_NOT_FOUND error message.

Transferring SNMP target's CA certificate

Invoke this API by populating the input structure as described:

1. Set the action parameter to SYMAPI_SNMP_CONFIG_REQ_ACTION_SET
2. Set the action variable in "SYMAPI_SNMP_CONFIG_T snmp_config" to SYMAPI_SNMP_CONFIG_ADD
3. Set snmp_version in the structure to SYMAPI_SNMP_CONFIG_VERSION_V3_TSM
4. Set the action in "cert_config" variable to SYMAPI_CERT_CONFIG_ACTION_SET_SERVER.
5. Fill the hostname and port variables with SNMP targets IP/Hostname and listening port values.
6. Fill the CA certificate that's used to sign SNMP target's certificate in "cert_file_buf" and length of the buffer in "cert_buf_len" that are present in "cert_config" variable that is available in SYMAPI_SNMP_CONFIG_T input structure.
7. Host_name and port in the result structure will return the same target host name/ip and port that is passed in request structure.
8. "conn_status" variable in the result structure returns the connection status of the target. If successful it has 0, otherwise appropriate error code.

Configuring a log file

The `daemon_options` file contains parameters (Event log file configuration options) that allow you to configure the log file.

The target log file is not actually opened (or created, if necessary) until the event daemon actually has an event to log. Depending on the events it is monitoring, this may not be until long after it starts.

Table 7. Event log file configuration options

Parameter	= <OptValue | defaultvalue>	Description
storevntd:log_event_file_name	*LogEventFileName* | events	Specifies the base name of the event log files, which can also include the full pathname. This file is created in the standard Solutions Enabler log directory. For UNIX, the directory is: `/var/symapi/log` For Windows, the directory is: `c:\Program Files\EMC\SYMAPI\log`

Table 7. Event log file configuration options (continued)

Parameter	= <OptValue | defaultvalue>	Description
storevntd:log_event_file_type	dated | wrap	Specifies the type of file to use. `dated` specifies that a new event log file should be created each day, with the name *xxxx*-*YYYYMMDD*`.log`. Where *xxxx* is the *LogEventFileName*. `wrap` specifies that event logging will alternate between two files (*xxxx*`.log0` and *xxxx*`.log1`) - switching from one to the other when it reaches its maximum size, as specified in the `log_event_file_size` parameter. By default, a single file will be used.
storevntd:log_event_file_size	> 0 - *nn* | 1	When used with the `log_event_file_type` parameter set to wrap, this parameter specifies the maximum file size (in KB) allowed before wrapping to the alternate file. This value should be a decimal number greater than zero. Note: The maximum value for the `log_event_file_size` is 2097152 KB.
storevntd:log_event_file_retention	> 0 - *nn* | 3	When used with the `log_event_file_type` parameter set to dated, this parameter specifies the number of days to retain the log files. This value should be a decimal number greater than zero.
storevntd:log_event_file_perms	rw, n | r	Specifies the permissions for the event log files. `rw` specifies that anyone can read or write to the files. `r` specifies that anyone can read the files, but only the root/administrator (or whatever identity the event daemon is running as) can write to the files. `n` specifies that only the root/administrator (or whatever

Table 7. Event log file configuration options (continued)

Parameter	= <OptValue | defaultvalue>	Description
		identity the event daemon is running as) can read and write to the files.

The `daemon_options` file contains parameters (Syslog configuration options) that allow you to configure various syslog options.

Table 8. Syslog configuration options

Parameter	= <OptValue | defaultvalue>	Description
storevntd:SYSLOG_PROTOCOL	TCP | UDP	Specifies the protocol to be used to connect to syslog server.
storevntd:SECURE_SYSLOG	Enable | Disable	Specifies the port that the syslog server is listening on is a secure port. This can be enabled only when the syslog protocol specified is TCP, otherwise this parameter is ignored.
storevntd:SYSLOG_RFC	rfc5424, rfc5425 | rfc3164	Specifies the syslog message format that should be used in the event delivery to syslog server. rfc5425 is supported only when SECURE_SYSLOG is enabled and SYSLOG_PROTOCOL is set to TCP. If rfc5425 is set for when SECURE_SYSLOG is disabled then this value defaults to rfc3164.
storevntd:LOG_EVENT_SYSLOG_CLIENT_CERT	**Any valid .pem file name** | symapisrv_cert_v9.0.pem	Specifies the name of an alternate certificate file to be used by the syslog server instead of the certificate generated at installation, and will be paired with the file specified in the LOG_EVENT_SYSLOG_CLIENT_KEY option. If this option is used, the LOG_EVENT_SYSLOG_CLIENT_KEY option must also be used to specify an alternate key file. The certificate file must be located in the */var/symapi/config/cert* directory. Do not specify the directory in the value.

Table 8. Syslog configuration options (continued)

Parameter	= <OptValue | defaultvalue>	Description
		If this parameter is changed, the `storevntd` must be restarted for the new value to take effect. This option is applicable only when SECURE_SYSLOG is enabled and SYSLOG_PROTOCOL is TCP.
storevntd:LOG_EVENT_SYSLOG_CLIENT_KEY	**Any valid .pem file name** | symapisrv_key_v9.0.pem	Specifies the name of an alternate private key file to be used by the syslog server instead of the key generated at installation, and will be paired with the file specified in the LOG_EVENT_SYSLOG_CLIENT_CERT option. If this option is used, the LOG_EVENT_SYSLOG_CLIENT_CERT option must also be used to specify an alternate certificate file. The key file must be located in the */var/symapi/config/cert* directory. Do not specify the directory in the value. If this parameter is changed, the `storevntd` must be restarted for the new value to take effect. This option is applicable only when SECURE_SYSLOG is enabled and SYSLOG_PROTOCOL is TCP.

Configuring a Syslog target

The `daemon_options` file contains parameters (Event log file configuration options) that allow you to configure a Syslog target.

Table 9. Event log file configuration options

Parameter	= <OptValue | defaultvalue>	Description
storevntd:log_event_syslog_host	*SyslogHostName*	Specifies the name of the host on which the Syslog server is running. This value must be supplied.
storevntd:log_event_syslog_port	*nnn* | 514	Specifies the port on which the server is listening.

Syslog target for event daemon

Users can set the syslog target with UDP, TCP and TLS over TCP protocols.

NOTE: Solutions Enabler 10.1 supports only one syslog target configuration.

Before setting the `syslog_host` daemon option, the option `smas_log_event_targets=syslog` needs to be set.

To set the external daemon option "SYSLOG_HOST" using the `stordaemon setvar` command, use the syntax below:

```
stordaemon setvar storevntd -name syslog_host=ip/host name:port:protocol:rfc
```

Where:

protocol

This option supports the following values:

- UDP
- TCP
- STCP (for Secure TCP).

NOTE: When setting Secure TCP, the respective trust stores should have public CA certificates copied. This means, the syslog target's trust store must have the storevntd's CA public certificate and the syslog target's CA certificate must be present in the storevntd's trust store. Copy the CA certificate that is used to sign the syslog target certificates into DEFAULT_CERT_DIR. DEFAULT_CERT_DIR locations:

- Linux Platform - `/var/symapi/config/cert`
- Windows Platform - C:\Program Files\EMC\SYMAPI\config\cert

Go to the DEFAULT_CERT_DIR and run the `manage_server_cert update` command.

In Mutual TLS connections, copy the storevntd's CA (public trust) certification into registered syslog target's trust store and perform the necessary operation as per rules defined for the third party syslog targets.

rfc

This option supports the following values:

- rfc3164
- rfc5424
- rfc5425

Example:

```
stordaemon setvar storevntd -name
syslog_host=dldv1033.drm.example.dell.com:514:udp:rfc3164
```

Specifying events to log

Solutions Enabler provides the ability to capture both array events and non-array events from certain application to log files. This is accomplished by building event lists, which is a mechanism for specifying the types of events for which to generate traps. These event lists are defined in the `daemon_options` file.

Array events

To build an array event list, define the following parameter in the `daemon_options` file:

NOTE:

Many array events are organized into categories. These categories are hierarchical in that a category can contain individual events, as well as other categories.

```
storevntd:log_symmetrix_events = [sid=SymmID,] UID|Category ... [,sev=SEV] [,tgt=TGT]
[,comp=COMP] [,comp_type=CPMP_TYPE] [thresh_critical=Percent, thresh_maj=Percent,
thresh_warn=Percent, thresh_info=Percent, thresh=Percent] [,ignore]
```

where:

sid— Specifies the 12-digit ID of the array to which the record applies. You must specify the full SID (12 digits). If this field is missing, the registration applies to all local and remote arrays.

UID — The numerical event UID value.

Category — One or more of the following event categories, separated with a comma:

For events in the 1150 - 1199 range:

- events (all events in this category)
- array subsystem
- checksum
- diagnostic
- environmental
- device pool
- service processor
- srdf system
- srdf link
- srdf session
- srdf consistency group
- director
- device
- disk

For events in the 1200 - 1999 range:

- status (general component state change)
- optimizer (Optimizer/FAST related)
- groups (Group (DG/CG) related)

NOTE:

Each of the event categories may contain numerous individual events.

sev— Specifies the minimum severity level for which events should be logged. All events with a severity level at or above the specified severity will be logged. Take care when setting this option. Possible values are:

- normal
- info
- warning
- minor
- major
- critical
- fatal

tgt — Specifies the target to which the daemon should log the events. Possible values are: snmp, syslog, system, and file.

The value you specify for *TGT* must match one of the values you specified in the **log_event_targets** parameter; otherwise, the daemon will not log events for this record.

The target you specify here will override the global **log_event_targets** setting described in Specify logging targets.

comp — Specifies the specific sub-component for which you want to log events. For example, a particular device, disk, pool, etc. When you specify a value for this field, the event daemon will only log events for the specified component. You can either specify a single component or a comma separated list of components. If the latter, you must enclose the list with double quotes.

For example:

- **comp=0100** - a single device
- **"comp=0100,0200,030"** - multiple devices

- **"comp=finance,sales"** - multiple pools

cmpnt_type — Specifies a type of component. When present, only events for the specified component type are delivered. If omitted, events for any component type are delivered. This is most useful for events that can be delivered against multiple types of components.

An example is the Pool Status events, which can be generated for DSE, Thin or Snap Pools. Possible values are: `device`, `disk`, `director`, `port`, `dsepool`, `tpdatapool`, `snappool`, `dg`, `cg`, `sg`, `srdf-grp` and `migrsess`.

- `thresh_critical=`*`Percent`*
- `thresh_maj=`*`Percent`*
- `thresh_warn=`*`Percent`*
- `thresh_inf=`*`Percent`*
- `thresh=`*`Percent`*

Specifies the threshold level at which the daemon delivers an event and at what severity it is delivered. This setting overrides the default threshold levels for an event. These parameters are only used when specifying threshold type events.

Only a subset of the full threshold functionality is supported. The MINOR and FATAL severities cannot be specified and a >= comparison is assumed.

The `thresh=`*`nnn`* setting is an alias for `thresh_maj`.

ignore — Indicates that events matched by this record are not to be delivered, even if they are matched by some other record. The order of records doesn't matter. If an event is matched by any record with the ignore parameter, it will be ignored.

Only a single `log_symmetrix_events` option can be present. Since this can become quite long, it can be spread across multiple lines in the file via the use of '\' continuation characters at the end of a line.

NOTE: The comment character (#) has no effect if it follows a line with the continuation character (\).

Non-array events

To build a non-array event list, define the following parameters in the **daemon_options** file:

```
storevntd:log_app_events = [appid=appid,] CAT[category,] [comp=COMP,]
[comp_type=COMP_TYPE,] [,tgt=TGT]
```

where:

appid — Specifies an application id. By default, all application events are monitored.

CAT — Specifies event(s) to be monitored. This can be either the name of an event category or a numerical event ID. This is the only field that is required. One or more values (comma separated) may be present. The Supported categories are: SMC and SPA.

comp — Certain events apply to specific subcomponents within the application. This field specifies that only events for the specified component (or components) should be delivered. If more than one component is present, the entire field must be enclosed in double quotes.

For example:

- **comp=name** = a single component
- **"comp=name1,name2,name3"** = multiple components

comp_type — Specifies events to be monitored. This must be one or more of the predefined types. The supported component types are: `univmax`, `univspa`, `univspv`, `jboss`, and `dbms`.

tgt — Specifies the target to which the daemon should log the events. Possible values are: `snmp`, `syslog`, `system`, and `file`.

The value that you specify for *TGT* must match one of the values you specified in the **log_event_targets** parameter; otherwise, the daemon does not log events for this record.

The target that you specify here overrides the global `log_event_targets` setting that is described in Specify logging targets.

An example with four records or separate registrations is as follows:

```
storevntd:log_event_targets = syslog file
storevntd:log_symmetrix_events = \
  sid=000192600356, 1200,1201,1202 ;\
  sid=000192600357, "comp=0001,0002,0003",1204,1205 ;\
  1212,1213, thresh_major=60, thresh_warning=50, thresh_info=30 ;\
  tgt=file, sid=000194900123, status
```

Array event codes

The descriptions in this chapter are focused on running the event daemon in a logging mode - where events are automatically forwarded to a file on disk, syslog, SNMP, or the Windows Event Service.

Events below are described in the following format:

Table 10. Array event components

<Event-ID>	<Event-Name>
Category	<Event-Category>
Component	<Event-Component>
Severity	<Event-Severity>
Message	<Event-Message>

Where:

Table 11. Array event details

Event details	Description
<Event-ID>	The event ID - from the SYMAPI_AEVENT2_UID_T enumeration in symapi.h
<Event-Name>	The internal name for this event.
<Event-Category>	The category that this event belongs to, if any. Registering against a category has the effect of registering for all events that belong to that category.
<Event-Component>	The component, if it is known, that the event is delivered with. For Event Logging (to file, Syslog, SNMP, Windows Events), the component is only present if a specific component (for example: a specific device, disk, pool) is known.[a]
<Event-Severity>	The severity that the event is delivered with: Fatal, Critical, Major, Minor, Warning, Info or Normal.
<Event-Message>	The message that the event is delivered with.

a. The system ignores leading zero(es) when matching device numbers in event registrations against those in delivered events. That means if you register for events on device 01234 or 001234, events for device 1234 are received.

Unless all events are delivered with an Entity-Name set to the Symmetrix ID that relates to the event.

Classes of Events

There are three general types of events:

- Event daemon events: Event IDs 0-199—Events in this range (there are only a handful) are generated by the event daemon itself - and reflect conditions within it.
- Array Events: Event IDs 1050 - 1199—Events in this range correspond to entries retrieved from the 'Error' log on a storage array. Some are informational in nature; others correspond to actual errors.
- Array Events: Event IDs 1200-1999—Events in this range are manufactured by the event daemon itself based on its regular polling of conditions on a storage array.
- Event daemon events: Event IDs 5000-5200—Events in this range are generated by external producers.

Severity Calculation for status/state events

For a number of the array status events, an event severity is calculated dynamically from the status of the component in question (or overall array). In most cases, the mapping to severity is as follows:

Table 12. Event severity

Severity	Meaning
Normal	The component is now (back) in a normal state of operation.
Info	The component is no longer present (during certain operations).
Warning	• The component is in a degraded sate of operation. • The storage array is no longer present (during certain operations). • The component is in an unknown state. • The component is (where possible) in a write-disabled state.
Major	The component is offline.
Fatal	The component is in a dead or failed state.

Event daemon events: Event IDs 0-199

Events in this range are generated by the event daemon - and reflect its internal state.

They are automatically delivered to any registered applications as needed. There is no need to explicitly register for them.

1

Table 13. SYMAPI_AEVENT2_UID_EVT_RESTARTED

1	SYMAPI_AEVENT2_UID_EVT_RESTARTED
Category	Event
Component	Event daemon
Severity	Warning
Message	event daemon restarted; events may have been lost.

Notes

Generated when the event daemon is restarted after a crash.

2

Table 14. SYMAPI_AEVENT2_UID_EVT_EVENTS_LOST

2	SYMAPI_AEVENT2_UID_EVT_EVENTS_LOST
Category	Event
Component	Event daemon
Severity	Warning
Message	event daemon communications problem; events may have been lost.

Table 15. Unisphere policy

Unisphere policy name	Event Lost Alert
Action type	Alert

Notes

Generated when the event daemon encounters a communication problem attempting to send events back to a client.

3

Table 16. SYMAPI_AEVENT2_UID_EVT_EVENTS_OVERFLOW

3	SYMAPI_AEVENT2_UID_EVT_EVENTS_OVERFLOW
Category	Event
Component	Event daemon
Severity	Warning
Message	Event Queue overflow; events may have been lost.

Table 17. Unisphere policy

Unisphere policy name	Event Overflow Alert
Action type	Alert

Notes

Generated when one of the internal Event Queues (within a client process or event daemon) overflows and events are discarded.

Array Events: Event IDs 1050 - 1199

Events in this range correspond to entries retrieved from the Error log on a storage array. Some of these are informational in nature; others correspond to actual errors.

These correspond to events returned by the `symevent` SYMCLI command.

There are a number of categories that can be used to register for a related subset of these events.

- array subsystem
- db checksum

- diagnostic
- environmental
- device pool
- service processor
- srdf system
- srdf link
- srdf/a session
- srdf consistency group
- director
- device
- disk

1050

Table 18. SYMAPI_AEVENT2_UID_MOD_DIAG_TRACE_TRIG

1050	SYMAPI_AEVENT2_UID_MOD_DIAG_TRACE_TRIG
Category	diagnostic
Component	Diag [not present in logged events]
Severity	Info
Message	Diagnostic event trace triggered.

1051

Table 19. SYMAPI_AEVENT2_UID_MOD_DIAG_TRACE_TRIG_REM

1051	SYMAPI_AEVENT2_UID_MOD_DIAG_TRACE_TRIG_REM
Category	diagnostic
Component	Diagnostic [not present in logged events]
Severity	Info
Message	Remote (SRDF) diagnostic event trace triggered.

1052

Table 20. SYMAPI_AEVENT2_UID_MOD_ADAPT_CPY_WRT_PEND

1052	SYMAPI_AEVENT2_UID_MOD_ADAPT_CPY_WRT_PEND
Category	srdf system
Component	Director (for example, Director=SA-03C)
Severity	Warning
Message	Too many suspend/halt chains encountered, switching to Adaptive Copy Write Pending Mode.

Note

- System, Mainframe
- Set mode of operation

1053

Table 21. SYMAPI_AEVENT2_UID_MOD_DIR_MEM_ERR

1053	SYMAPI_AEVENT2_UID_MOD_DIR_MEM_ERR
Category	array subsystem
Component	Cache [not present in logged events]
Severity	Warning
Message	Memory bank(s) automatically disabled due to cache error.

1054

Table 22. SYMAPI_AEVENT2_UID_MOD_DISKDRV_SPARE_INVK

1054	SYMAPI_AEVENT2_UID_MOD_DISKDRV_SPARE_INVK
Category	disk
Component	Disk [not present in logged events]
Severity	Warning
Message	Spare invoked against a disk.

Table 23. Unisphere policy

Unisphere policy name	Hotspare Invoked
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE

Notes

The following identifies the Symmetrix errors:

- 0x0006 — Spare invoked on a failing device.
- 0x0052 — Spare invoked (mirror mask changed).

1055

Table 24. SYMAPI_AEVENT2_UID_MOD_M2_RESYNC_M1

1055	SYMAPI_AEVENT2_UID_MOD_M2_RESYNC_M1
Category	device
Component	Device (For example, Device=1234)
Severity	Info
Message	M2 mirror resynchronizing with its M1 mirror.

Notes

Drive replacements/BCV activity. There is no action required because the drives are in a synchronized state.

1056

Table 25. SYMAPI_AEVENT2_UID_MOD_M1_RESYNC_M2

1056	SYMAPI_AEVENT2_UID_MOD_M1_RESYNC_M2
Category	device
Component	Device (For example, Device=1234)
Severity	Info
Message	M1 mirror resynchronizing with its M2 mirror.

Notes

Drive replacements/BCV activity. There is no action required because the drives are in a synchronized state.

1057

Table 26. SYMAPI_AEVENT2_UID_MOD_DSKSPS_NOT_RESP

1057	SYMAPI_AEVENT2_UID_MOD_DSKSPS_NOT_RESP
Category	Director
Component	Director ID (For example, Director=SA-03C)
Severity	Fatal
Message	Disk director not responding.

Notes

Disk adapter may have failed; additional action may be required.

1059

Table 27. SYMAPI_AEVENT2_UID_MOD_RESYNC_STARTED

1059	SYMAPI_AEVENT2_UID_MOD_RESYNC_STARTED
Category	device
Component	Device ID (For example, Device=1234)
Severity	Info
Message	Device resynchronization process started.

Notes

Drive replacements/BCV activity.

1060

Table 28. SYMAPI_AEVENT2_UID_MOD_RDF_HOTSPARE_INVK

1060	SYMAPI_AEVENT2_UID_MOD_RDF_HOTSPARE_INVK
Category	disk
Component	Disk [not present in logged events]

Table 28. SYMAPI_AEVENT2_UID_MOD_RDF_HOTSPARE_INVK (continued)

1060	SYMAPI_AEVENT2_UID_MOD_RDF_HOTSPARE_INVK
Severity	Warning
Message	Spare invoked against a remote R2 mirror disk.

Table 29. Unisphere policy

Unisphere policy name	Hotspare Invoked
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE

Notes

Drive replacement required in remote RDF array; additional action may be required.

1061

Table 30. SYMAPI_AEVENT2_UID_MOD_RDF_SIM_MSG

1061	SYMAPI_AEVENT2_UID_MOD_RDF_SIM_MSG
Category	srdf system
Component	SRDF [not present in logged events]
Severity	Info
Message	SIM message initiated to a remote SRDF attached array.

Table 31. Unisphere policy

Unisphere policy name	SRDF Alerts
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDF_SYS. This event category consists of all events with the category "srdf system".

Notes

Error is logged in a remote box and we are unsure what the error is.

1062

Table 32. SYMAPI_AEVENT2_UID_MOD_RDF_ERR

1062	SYMAPI_AEVENT2_UID_MOD_RDF_ERR
Category	srdf system
Component	SRDF [not present in logged events]
Severity	Major
Message	SRDF error occurred.

Table 33. Unisphere policy

Unisphere policy name	SRDF Alerts
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDF_SYS. This event category consists of all events with the category "srdf system".

1063

Table 34. SYMAPI_AEVENT2_UID_MOD_FCPORT_FAIL

1063	SYMAPI_AEVENT2_UID_MOD_FCPORT_FAIL
Category	director
Component	Director (For example, Director=SA-03C)
Severity	Major
Message	Fibre Channel front-end has failed or is inoperable.

Table 35. Unisphere policy

Unisphere policy name	Port Link Status
Action type	Alert

1064

Table 36. SYMAPI_AEVENT2_UID_MOD_RDF_LINKS_DOWN

1064	SYMAPI_AEVENT2_UID_MOD_RDF_LINKS_DOWN
Category	srdf link
Component	SRDFA Gr (For example, SRDF-grp=1)
Severity	Minor
Message	No SRDF links in an RDF group are operational.

Table 37. Unisphere policy

Unisphere policy name	SRDF Link Status
Action type	Alert/Refresh OM
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDF_LINK. This event category consists of all events with the category "srdf link".

Notes

This message indicates that all RDF links for a particular RDF group have become unavailable. Your R1 is up, but replication across the link is not occurring.

1065

Table 38. SYMAPI_AEVENT2_UID_MOD_RDF_LINKS_UP

1065	SYMAPI_AEVENT2_UID_MOD_RDF_LINKS_UP
Category	srdf link
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Info
Message	All SRDF links in an RDF group are operational.

Table 39. Unisphere policy

Unisphere policy name	SRDF Link Status
Action type	Alert/Refresh OM
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDF_LINK. This event category consists of all events with the category "srdf link".

Notes

This message indicates that all RDF links for an RDF group are now operational.

1066

Table 40. SYMAPI_AEVENT2_UID_MOD_BUS_ARBITER_ERR

1066	SYMAPI_AEVENT2_UID_MOD_BUS_ARBITER_ERR
Category	array subsystem
Component	Bus Arbiter
Severity	Info
Message	Bus Arbiter problem.

1067

Table 41. SYMAPI_AEVENT2_UID_MOD_TEMP_OUT_OF_LIMIT

1067	SYMAPI_AEVENT2_UID_MOD_TEMP_OUT_OF_LIMIT
Category	environmental
Component	Env [not present in logged events]
Severity	Major or Critical
Message	Internal temperature too high.

Table 42. Unisphere policy

Unisphere policy name	Environmental Alert
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_ENV. This event category consists of all events with the category "Environmental".

Notes

Environmental errors can vary in severity. Contact Dell immediately.

1068

Table 43. SYMAPI_AEVENT2_UID_MOD_ALARM_SIGNAL_ERR

1068	SYMAPI_AEVENT2_UID_MOD_ALARM_SIGNAL_ERR
Category	environmental
Component	Diag [not present in logged events]
Severity	Warning
Message	Alarm signal was set, but no alarm found.

1069

Table 44. SYMAPI_AEVENT2_UID_MOD_PWR_ALARM_SIGNAL

1069	SYMAPI_AEVENT2_UID_MOD_PWR_ALARM_SIGNAL
Category	environmental
Component	Power [not present in logged events]
Severity	Warning
Message	Power subsystem alarm or fault has occurred.

1070

Table 45. SYMAPI_AEVENT2_UID_MOD_DEV_MIR_NR

1070	SYMAPI_AEVENT2_UID_MOD_DEV_MIR_NR
Category	device
Component	Device (For example, Device=1234)
Severity	Warning
Message	Device mirror not ready.

Notes

This message indicates that one of the mirrored devices is Not Ready. This may be due to BCV or Optimizer activity or a drive failure. A not ready device can indicate a potential problem. Please contact Dell if you are unsure of how to proceed.

1071

Table 46. SYMAPI_AEVENT2_UID_MOD_DEV_MIR_WD

1071	SYMAPI_AEVENT2_UID_MOD_DEV_MIR_WD
Category	device
Component	Device (For example, Device=1234)
Severity	Warning
Message	Device mirror write disabled.

Notes

A write disabled device can indicate a potential problem. Please contact Dell if you are unsure of how to proceed.

1072

Table 47. SYMAPI_AEVENT2_UID_MOD_DEV_RDF_MIR_NR

1072	SYMAPI_AEVENT2_UID_MOD_DEV_RDF_MIR_NR
Category	device
Component	Device (For example, Device=1234)
Severity	Warning
Message	SRDF R2 device not ready.

Notes

This message indicates that an R1 device has gone Not Ready on the RDF link without user intervention. The device is still physically Ready to the local hosts, but it is logically Not Ready to the R2 side. Therefore, remote replication is suspended. This can indicate a potential problem. Please contact Dell if you are unsure of how to proceed.

1073

Table 48. SYMAPI_AEVENT2_UID_MOD_SP_NOT_RESP

1073	SYMAPI_AEVENT2_UID_MOD_SP_NOT_RESP
Category	service processor
Component	Service Processor
Severity	Major
Message	Service Processor down or not communicating with array.

Notes

This error occurs when we cannot communicate with the array to determine if any errors exist. Contact Dell immediately.

1074

Table 49. SYMAPI_AEVENT2_UID_MOD_PHONEHOME_FAIL

1074	SYMAPI_AEVENT2_UID_MOD_PHONEHOME_FAIL
Category	service processor
Component	Comm [not present in logged events
Severity	Warning
Message	Service Processor could not complete a call for service.

Notes

This error occurs when the array fails to dial home. If you have other errors on the array, this can be significant. Contact Dell immediately.

1075

Table 50. SYMAPI_AEVENT2_UID_MOD_SENSOR_12V_ON

1075	SYMAPI_AEVENT2_UID_MOD_SENSOR_12V_ON
Category	environmental
Component	Power [not present in logged events]
Severity	Warning
Message	Abnormal DC voltage (perhaps 12 Volts) situation exists.

1076

Table 51. SYMAPI_AEVENT2_UID_MOD_PWR_CABLE_MISSING

1076	SYMAPI_AEVENT2_UID_MOD_PWR_CABLE_MISSING
Category	environmental
Component	Power [not present in logged events]
Severity	Warning
Message	Power subsystem environmental sense cable missing.

1077

Table 52. SYMAPI_AEVENT2_UID_MOD_COOL_AC_LINE_ERR

1077	SYMAPI_AEVENT2_UID_MOD_COOL_AC_LINE_ERR
Category	environmental
Component	Power [not present in logged events]
Severity	Warning
Message	Power system AC line interruption detected.

1078

Table 53. SYMAPI_AEVENT2_UID_MOD_BATT_STATUS

1078	SYMAPI_AEVENT2_UID_MOD_BATT_STATUS
Category	environmental
Component	Power [not present in logged events]
Severity	Warning
Message	Battery system not fully charged.

1079

Table 54. SYMAPI_AEVENT2_UID_MOD_PWR_LATCHED_ALARM

1079	SYMAPI_AEVENT2_UID_MOD_PWR_LATCHED_ALARM
Category	environmental
Component	Power [not present in logged events]

Table 54. SYMAPI_AEVENT2_UID_MOD_PWR_LATCHED_ALARM (continued)

1079	SYMAPI_AEVENT2_UID_MOD_PWR_LATCHED_ALARM
Severity	Warning
Message	Latched alarms discovered for the power subsystem.

1080

Table 55. SYMAPI_AEVENT2_UID_MOD_RDF_1LINK_DOWN

1080	SYMAPI_AEVENT2_UID_MOD_RDF_1LINK_DOWN
Category	srdf link
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Warning
Message	Single SRDF link in an RDF group is not operational.

Table 56. Unisphere policy

Unisphere policy name	SRDF Link Status
Action type	Alert/Refresh OM
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDF_LINK. This event category consists of all events with the category "srdf link".

Notes

This message indicates that one SRDF link for a particular SRDF group has become unavailable and data is no longer replicating across the link. Please contact Dell if you are unsure about how to proceed.

1081

Table 57. SYMAPI_AEVENT2_UID_MOD_RDF_1LINK_UP

1081	SYMAPI_AEVENT2_UID_MOD_RDF_1LINK_UP
Category	srdf link
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Info
Message	Single SRDF link in an RDF group is now operational.

Table 58. Unisphere policy

Unisphere policy name	SRDF Link Status
Action type	Alert/Refresh OM
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDF_LINK. This event category consists of all events with the category "srdf link".

1082

Table 59. SYMAPI_AEVENT2_UID_MOD_PHONEHOME_SUCCESS

1082	SYMAPI_AEVENT2_UID_MOD_PHONEHOME_SUCCESS
Category	service processor
Component	Comm [not present in logged events]
Severity	Info
Message	Service Processor successfully completed a call for service.

1083

Table 60. SYMAPI_AEVENT2_UID_MOD_SP_SET_REG_ERR

1083	SYMAPI_AEVENT2_UID_MOD_SP_SET_REG_ERR
Category	array subsystem
Component	-
Severity	Warning
Message	Subsystem unable to set a shared register.

1084

Table 61. SYMAPI_AEVENT2_UID_MOD_MEM_DISABLED

1084	SYMAPI_AEVENT2_UID_MOD_MEM_DISABLED
Category	array subsystem
Component	Cache [not present in logged events]
Severity	Warning
Message	Disabled Memory Bank error reported to a host.

1085

Table 62. SYMAPI_AEVENT2_UID_MOD_DIAG_BIT_VLDTY_ERR

1085	SYMAPI_AEVENT2_UID_MOD_DIAG_BIT_VLDTY_ERR
Category	environmental
Component	Diag [not present in logged events]
Severity	Warning
Message	Validity problem detected during environmental test.

1086

Table 63. SYMAPI_AEVENT2_UID_MOD_ENABLE_DIAG_ENV_TEST

1086	SYMAPI_AEVENT2_UID_MOD_ENABLE_DIAG_ENV_TEST
Category	environmental
Component	Diag [not present in logged events]

Table 63. SYMAPI_AEVENT2_UID_MOD_ENABLE_DIAG_ENV_TEST (continued)

1086	SYMAPI_AEVENT2_UID_MOD_ENABLE_DIAG_ENV_TEST
Severity	Info
Message	Environmental testing enabled in diagnostic mode.

1087

Table 64. SYMAPI_AEVENT2_UID_MOD_SP_COMM_BRD_MISMATCH

1087	SYMAPI_AEVENT2_UID_MOD_SP_COMM_BRD_MISMATCH
Category	environmental
Component	Comm [not present in logged events]
Severity	Critical
Message	Communication board data does not match expected value.

1088

Table 65. SYMAPI_AEVENT2_UID_MOD_DIR_BRD_MISMATCH

1088	SYMAPI_AEVENT2_UID_MOD_DIR_BRD_MISMATCH
Category	environmental
Component	Comm [not present in logged events]
Severity	Critical
Message	Communication board information mismatch.

1089

Table 66. SYMAPI_AEVENT2_UID_MOD_THRMLDET_TEST_FAIL

1089	SYMAPI_AEVENT2_UID_MOD_THRMLDET_TEST_FAIL
Category	environmental
Component	Env [not present in logged events]
Severity	Major
Message	Failure detected during thermal test.

1090

Table 67. SYMAPI_AEVENT2_UID_ALRM_PWR_TIME_TEST_FAIL

1090	SYMAPI_AEVENT2_UID_ALRM_PWR_TIME_TEST_FAIL
Category	environmental
Component	-
Severity	Major
Message	Power-on-Time inconsistencies detected.

1091

Table 68. SYMAPI_AEVENT2_UID_MOD_SP_CONNECT_TIME_NOT_FOUND

1091	SYMAPI_AEVENT2_UID_MOD_SP_CONNECT_TIME_NOT_FOUND
Category	service processor
Component	Comm [not present in logged events]
Severity	Major
Message	No records found for the last Service Processor connection time.

1092

Table 69. SYMAPI_AEVENT2_UID_MOD_SP_COMM_VIA_SERIAL

1092	SYMAPI_AEVENT2_UID_MOD_SP_COMM_VIA_SERIAL
Category	service processor
Component	Comm [not present in logged events]
Severity	Info
Message	Service Processor communicating via a serial line.

1093

Table 70. SYMAPI_AEVENT2_UID_MOD_REMMGMT_CONNECT

1093	SYMAPI_AEVENT2_UID_MOD_REMMGMT_CONNECT
Category	service processor
Component	Comm [not present in logged events]
Severity	Info
Message	Remote session to the Service Processor connected.

1094

Table 71. SYMAPI_AEVENT2_UID_MOD_REMMGMT_REJECT

1094	SYMAPI_AEVENT2_UID_MOD_REMMGMT_REJECT
Category	service processor
Component	Comm [not present in logged events]
Severity	Info
Message	Remote session to the Service Processor denied access.

1095

Table 72. SYMAPI_AEVENT2_UID_MOD_REMMGMT_DISCONNECT

1095	SYMAPI_AEVENT2_UID_MOD_REMMGMT_DISCONNECT
Category	service processor
Component	Comm [not present in logged events]

Table 72. SYMAPI_AEVENT2_UID_MOD_REMMGMT_DISCONNECT (continued)

1095	SYMAPI_AEVENT2_UID_MOD_REMMGMT_DISCONNECT
Severity	Info
Message	Remote session to the Service Processor disconnected.

1096

Table 73. SYMAPI_AEVENT2_UID_ALRM_MEMERR_SP_MEM_ABOVE_LIMIT

1096	SYMAPI_AEVENT2_UID_ALRM_MEMERR_SP_MEM_ABOVE_LIMIT
Category	service processor
Component	SP [not present in logged events]
Severity	Warning
Message	Service Processor detected excessive memory usage.

Notes

SymmWin is using excessive memory on the service processor.

1097

Table 74. SYMAPI_AEVENT2_UID_MOD_BATT_TST_FAIL

1097	SYMAPI_AEVENT2_UID_MOD_BATT_TST_FAIL
Category	environmental
Component	Power [not present in logged events]
Severity	Warning
Message	Battery test detected a failure.

1098

Table 75. SYMAPI_AEVENT2_UID_MOD_SP_DIR_COMM_ERR

1098	SYMAPI_AEVENT2_UID_MOD_SP_DIR_COMM_ERR
Category	service processor
Component	SP [not present in logged events]
Severity	Warning
Message	Service Processor could not communicate with a director.

1099

Table 76. SYMAPI_AEVENT2_UID_MOD_SP_DIR_QRY_ERR

1099	SYMAPI_AEVENT2_UID_MOD_SP_DIR_QRY_ERR
Category	service processor
Component	SP [not present in logged events]
Severity	Warning

Table 76. SYMAPI_AEVENT2_UID_MOD_SP_DIR_QRY_ERR (continued)

1099	SYMAPI_AEVENT2_UID_MOD_SP_DIR_QRY_ERR
Message	Service Processor could not query a director.

1100

Table 77. SYMAPI_AEVENT2_UID_MOD_SP_COMM_VIA_DIR

1100	SYMAPI_AEVENT2_UID_MOD_SP_COMM_VIA_DIR
Category	service processor
Component	SP [not present in logged events]
Severity	Info
Message	Service Processor is communicating via local director.

1101

Table 78. SYMAPI_AEVENT2_UID_MOD_SENSOR_READ_ERR

1101	SYMAPI_AEVENT2_UID_MOD_SENSOR_READ_ERR
Category	service processor
Component	Env [not present in logged events]
Severity	Minor
Message	Service Processor unable to read an environmental sensor.

1102

Table 79. SYMAPI_AEVENT2_UID_MOD_SP_CARD_ERR

1102	SYMAPI_AEVENT2_UID_MOD_SP_CARD_ERR
Category	service processor
Component	Comm [not present in logged events]
Severity	Minor
Message	Service Processor detected a failed or unrecognized communications card.

1103

Table 80. SYMAPI_AEVENT2_UID_MOD_ENV_READING_ABOVE_LIMIT

1103	SYMAPI_AEVENT2_UID_MOD_ENV_READING_ABOVE_LIMIT
Category	environmental
Component	Env [not present in logged events]
Severity	Minor
Message	Environmental reading has exceeded the limit.

1104

Table 81. SYMAPI_AEVENT2_UID_MOD_SP_DISK_FULL

1104	SYMAPI_AEVENT2_UID_MOD_SP_DISK_FULL
Category	service processor
Component	SP [not present in logged events]
Severity	Minor
Message	Service Processor disk is full.

1105

Table 82. SYMAPI_AEVENT2_UID_MOD_SMOKE_DET_MALF

1105	SYMAPI_AEVENT2_UID_MOD_SMOKE_DET_MALF
Category	environmental
Component	Env [not present in logged events]
Severity	Minor
Message	Service Processor detected a smoke detector malfunction.

1106

Table 83. SYMAPI_AEVENT2_UID_MOD_ALARM_SMOKE_DETECTED

1106	SYMAPI_AEVENT2_UID_MOD_ALARM_SMOKE_DETECTED
Category	environmental
Component	Env [not present in logged events]
Severity	Minor
Message	Service Processor detected a smoke detector alert.

1107

Table 84. SYMAPI_AEVENT2_UID_MOD_PHONEHOME_TRIG

1107	SYMAPI_AEVENT2_UID_MOD_PHONEHOME_TRIG
Category	service processor
Component	Comm [not present in logged events]
Severity	Info
Message	Service Processor triggered a call home for service.

Notes

Indicates that the service processor has called home for service. Please contact Dell if you are unsure about how to proceed.

1108

Table 85. SYMAPI_AEVENT2_UID_MOD_DEV_CHKSUM

1108	SYMAPI_AEVENT2_UID_MOD_DEV_CHKSUM
Category	checksum
Component	Device (For example: Device=1234)
Severity	Info
Message	Database Double Checksum event triggered.

1109

Table 86. SYMAPI_AEVENT2_UID_MOD_RDF_CG_TRIG

1109	SYMAPI_AEVENT2_UID_MOD_RDF_CG_TRIG
Category	srdf consistency group
Component	SRDF [not present in logged events]
Severity	Info
Message	RDF CG trip event triggered.

1110

Table 87. SYMAPI_AEVENT2_UID_MOD_SP_REBOOTED

1110	SYMAPI_AEVENT2_UID_MOD_SP_REBOOTED
Category	service processor
Component	SP [not present in logged events]
Severity	Info
Message	Service Processor successfully rebooted.

1111

Table 88. SYMAPI_AEVENT2_UID_MOD_SAVEDEVS_FULL

1111	SYMAPI_AEVENT2_UID_MOD_SAVEDEVS_FULL
Category	device pool
Component	SnapPool, DSEPool or TPDataPool [not present in logged events]
Severity	Critical
Message	Save or data device pool is full.

Notes

The following defines what the Symmetrix errors mean:

- 0x0046 — SNAP device pool is full
- 0x0083 — DSE pool full
- 0x0085 — Unknown 6F1C error. Catchall
- 0x0086 — Thin pool is full

1112

Table 89. SYMAPI_AEVENT2_UID_MOD_RDFA_INACTIVE

1112	SYMAPI_AEVENT2_UID_MOD_RDFA_INACTIVE
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Warning
Message	RDF/A session inactive.

Table 90. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

Notes

A full device pool may indicate a problem with replication. Please contact Dell if you are unsure about how to proceed.

1113

Table 91. SYMAPI_AEVENT2_UID_MOD_RDFA_ACTIVE

1113	SYMAPI_AEVENT2_UID_MOD_RDFA_ACTIVE
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Info
Message	SRDF/A session active.

Table 92. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

1114

Table 93. SYMAPI_AEVENT2_UID_MOD_DEV_NR

1114	SYMAPI_AEVENT2_UID_MOD_DEV_NR
Category	device
Component	Device (For example, Device=1234)
Severity	Warning
Message	Volume (device) not ready.

Notes

A Not Ready device may indicate a problem with a specific device. Please contact Dell if you are unsure about how to proceed.

1115

Table 94. SYMAPI_AEVENT2_UID_MOD_SAVEDEVS_NEAR_FULL

1115	SYMAPI_AEVENT2_UID_MOD_SAVEDEVS_NEAR_FULL
Category	device pool
Component	SnapPool, DSEPool or TPDataPool [not present in logged events]
Severity	Warning
Message	Save or data device pool is almost full.

Notes

The following defines what the Symmetrix errors mean:

- 0x0047 — DSE pool is at 90% capacity
- 0x0081 — Spillover pool at 90% capacity
- 0x0082 — Thin pool at 90% capacity
- 0x0084 — Unknown 0471 error (all other errors)

1116

Table 95. SYMAPI_AEVENT2_UID_MOD_DEV_SAVEDEV_NR

1116	SYMAPI_AEVENT2_UID_MOD_DEV_SAVEDEV_NR
Category	device pool
Component	SnapPool, DSEPool or TPDataPool [not present in logged events]
Severity	Major
Message	Active Data device or Save device in a pool is not ready.

Notes

Indicates a device has become Not Ready in one of the device pools. Please contact Dell if you are unsure about how to proceed.

1117

Table 96. SYMAPI_AEVENT2_UID_MOD_DIR_NOT_RESP

1117	SYMAPI_AEVENT2_UID_MOD_DIR_NOT_RESP
Category	director
Component	Director (For example, Director=SA-03C)
Severity	Fatal
Message	Director not responding.

Notes

Indicates a director has stop responding. This may be a serious problem. Please contact Dell if you are unsure about how to proceed.

1118

Table 97. SYMAPI_AEVENT2_UID_MOD_TIMEOUT_R2_WP_LIMIT

1118	SYMAPI_AEVENT2_UID_MOD_TIMEOUT_R2_WP_LIMIT
Category	srdf system
Component	SRDF [not present in logged events]
Severity	Major
Message	Timeout writing to an R2 device; writes pending limit reached.

1119

Table 98. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_WPL_DSBL

1119	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_WPL_DSBL
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session dropped: write pending limit reached. Host throttling is disabled.

1120

Table 99. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_WPL_ENBL

1120	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_WPL_ENBL
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session dropped: write pending limit reached. Host throttling is enabled.

1121

Table 100. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_DEV_NR_OFF

1121	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_DEV_NR_OFF
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session dropped: device not ready. Tolerance mode is off.

1122

Table 101. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_DEV_NR_CG

1122	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_DEV_NR_CG
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session dropped: device not ready through consistency group.

1123

Table 102. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_NO_RDF_LNK

1123	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_NO_RDF_LNK
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session dropped: no SRDF links operational.

Table 103. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

Notes

Indicates that the SRDF links may no longer be operational. Please contact Dell if you are unsure how to proceed.

1124

Table 104. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_MSC

1124	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_MSC
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session dropped: timeout in MSC mode.

1125

Table 105. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_HA

1125	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_HA
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)

Table 105. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_HA (continued)

1125	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_HA
Severity	Major
Message	SRDF/A session dropped: timeout on Host Adapter.

1126

Table 106. SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_RA

1126	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_TIMEOUT_RA
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session dropped: timeout on RA.

1127

Table 107. SYMAPI_AEVENT2_UID_MOD_GEN_CHKSUM

1127	SYMAPI_AEVENT2_UID_MOD_GEN_CHKSUM
Category	checksum
Component	Device (For example, Device=1234)
Severity	Info
Message	Generic Double Checksum event triggered.

1128

Table 108. SYMAPI_AEVENT2_UID_MOD_POW_ZONE_COUNTDOWN_STARTED

1128	SYMAPI_AEVENT2_UID_MOD_POW_ZONE_COUNTDOWN_STARTED
Category	environmental
Component	Power [not present in logged events]
Severity	Minor
Message	One of the Power Zones is down - shutdown will occur in 20 hours.

1129

Table 109. SYMAPI_AEVENT2_UID_MOD_POW_ZONE_5HOURS_TOGO

1129	SYMAPI_AEVENT2_UID_MOD_POW_ZONE_5HOURS_TOGO
Category	environmental
Component	Power [not present in logged events]
Severity	Major
Message	One of the Power Zones is down - shutdown will occur in 5 hours.

1130

Table 110. SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_FROM_HOST

1130	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_FROM_HOST
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session drop requested [host software initiated].

Table 111. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

1131

Table 112. SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND_FROM_HOST

1131	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND_FROM_HOST
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session drop at cycle boundary requested [host software initiated].

Table 113. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

1132

Table 114. SYMAPI_AEVENT2_UID_MOD_SRDFA_DEACTIV_FROM_HOST

1132	SYMAPI_AEVENT2_UID_MOD_SRDFA_DEACTIV_FROM_HOST
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session transition out of Asynchronous mode requested [host software initiated].

Table 115. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert

Table 115. Unisphere policy name (continued)

Unisphere policy name	SRDF/A Session
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

1133

Table 116. SYMAPI_AEVENT2_UID_MOD_SRDFA_CONS_DEACTIV_FROM_HOST

1133	SYMAPI_AEVENT2_UID_MOD_SRDFA_CONS_DEACTIV_FROM_HOST
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session transition from Asynchronous to Synchronous mode requested [host software initiated].

Table 117. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

1134

Table 118. SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP

1134	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session drop requested.

Table 119. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

1135

Table 120. SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND

1135	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)

Table 120. SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND (continued)

1135	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND
Severity	Major
Message	SRDF/A session drop at cycle boundary requested.

Table 121. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

1136

Table 122. SYMAPI_AEVENT2_UID_MOD_SRDFA_DEACTIV

1136	SYMAPI_AEVENT2_UID_MOD_SRDFA_DEACTIV
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session transition out of Asynchronous mode requested.

1137

Table 123. SYMAPI_AEVENT2_UID_MOD_SRDFA_CONS_DEACTIV

1137	SYMAPI_AEVENT2_UID_MOD_SRDFA_CONS_DEACTIV
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A session transition from Asynchronous to Synchronous mode requested.

1138

Table 124. SYMAPI_AEVENT2_UID_MOD_SRDFA_SE_TRANS_IDLE,

1138	SYMAPI_AEVENT2_UID_MOD_SRDFA_SE_TRANS_IDLE,
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Info
Message	SRDF/A Session entering transmit idle state.

Table 125. Unisphere policy name

Unisphere policy name	SRDF/A Session entering transmit idle state
Action type	Alert

1139

Table 126. SYMAPI_AEVENT2_UID_MOD_SRDFA_SR_TRANS_IDLE,

1139	SYMAPI_AEVENT2_UID_MOD_SRDFA_SR_TRANS_IDLE,
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Info
Message	SRDF/A Session recovered from a transmit idle state.

Table 127. Unisphere policy name

Unisphere policy name	SRDF/A Session recovered from a transmit idle state
Action type	Alert

1140

Table 128. SYMAPI_AEVENT2_UID_MOD_SRDFA_TO_TRANS_IDLE

1140	SYMAPI_AEVENT2_UID_MOD_SRDFA_TO_TRANS_IDLE
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A Session dropped, transmit idle state timeout.

Table 129. Unisphere policy name

Unisphere policy name	SRDF/A Session dropped, transit idle state timeout
Action type	Alert

1141

Table 130. SYMAPI_AEVENT2_UID_MOD_SRDFA_SD_NO_ONL_RA

1141	SYMAPI_AEVENT2_UID_MOD_SRDFA_SD_NO_ONL_RA
Category	srdfa session
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A Session dropped, no online RAs.

1142

Table 131. SYMAPI_AEVENT2_UID_MOD_PSA_M_FAN_FAULT

1142	SYMAPI_AEVENT2_UID_MOD_PSA_M_FAN_FAULT
Category	environmental
Component	Fan [not present in logged events]
Severity	Major
Message	Power Supply A multiple Fan fault.

1143

Table 132. SYMAPI_AEVENT2_UID_MOD_PSA_S_FAN_FAULT

1143	SYMAPI_AEVENT2_UID_MOD_PSA_S_FAN_FAULT
Category	environmental
Component	Fan [not present in logged events]
Severity	Major
Message	Power Supply A single Fan fault.

1144

Table 133. SYMAPI_AEVENT2_UID_MOD_PSA_FAULTED

1144	SYMAPI_AEVENT2_UID_MOD_PSA_FAULTED
Category	environmental
Component	Power [not present in logged events]
Severity	Major
Message	Power Supply A faulted.

1145

Table 134. SYMAPI_AEVENT2_UID_MOD_PSA_SHUTDOWN

1145	SYMAPI_AEVENT2_UID_MOD_PSA_SHUTDOWN
Category	environmental
Component	Power [not present in logged events]
Severity	Major
Message	Power Supply A shutdown.

1146

Table 135. SYMAPI_AEVENT2_UID_MOD_PSB_M_FAN_FAULT

1146	SYMAPI_AEVENT2_UID_MOD_PSB_M_FAN_FAULT
Category	environmental
Component	Fan [not present in logged events]
Severity	Major
Message	Power Supply B multiple fan fault.

1147

Table 136. SYMAPI_AEVENT2_UID_MOD_PSB_S_FAN_FAULT

1147	SYMAPI_AEVENT2_UID_MOD_PSB_S_FAN_FAULT
Category	environmental
Component	Fan [not present in logged events]

Table 136. SYMAPI_AEVENT2_UID_MOD_PSB_S_FAN_FAULT (continued)

1147	SYMAPI_AEVENT2_UID_MOD_PSB_S_FAN_FAULT
Severity	Major
Message	Power Supply B single fan fault.

1148

Table 137. SYMAPI_AEVENT2_UID_MOD_PSB_FAULTED

1148	SYMAPI_AEVENT2_UID_MOD_PSB_FAULTED
Category	environmental
Component	Power [not present in logged events]
Severity	Major
Message	Power Supply B single fan fault.

1149

Table 138. SYMAPI_AEVENT2_UID_MOD_PSB_SHUTDOWN

1149	SYMAPI_AEVENT2_UID_MOD_PSB_SHUTDOWN
Category	environmental
Component	Power [not present in logged events]
Severity	Major
Message	Power Supply B shutdown.

1150

Table 139. SYMAPI_AEVENT2_UID_MOD_LCC_A_TEMP_HIGH

1150	SYMAPI_AEVENT2_UID_MOD_LCC_A_TEMP_HIGH
Category	environmental
Component	LCC [not present in logged events]
Severity	Major
Message	Link Card Controller A temperature high.

Table 140. Unisphere policy name

Unisphere policy name	Environmental Alert
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_ENV. This event category consists of all events with the category "Environmental".

1151

Table 141. SYMAPI_AEVENT2_UID_MOD_LCC_B_TEMP_HIGH

1151	SYMAPI_AEVENT2_UID_MOD_LCC_B_TEMP_HIGH
Category	environmental
Component	LCC [not present in logged events]
Severity	Major
Message	Link Card Controller B temperature high.

Table 142. Unisphere policy name

Unisphere policy name	Environmental Alert
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_ENV. This event category consists of all events with the category "Environmental".

1152

Table 143. SYMAPI_AEVENT2_UID_MOD_SPS_INTRN_FAULT

1152	SYMAPI_AEVENT2_UID_MOD_SPS_INTRN_FAULT
Category	environmental
Component	Power [not present in logged events]
Severity	Major
Message	Supplemental Power Supply internal fault.

1153

Table 144. SYMAPI_AEVENT2_UID_MOD_SPS_BAT_ENDLINE

1153	SYMAPI_AEVENT2_UID_MOD_SPS_BAT_ENDLINE
Category	environmental
Component	Power [not present in logged events]
Severity	Major
Message	Supplemental Power Supply battery end of line.

1154

Table 145. SYMAPI_AEVENT2_UID_MOD_SPS_LOW_VOLTAGE

1154	SYMAPI_AEVENT2_UID_MOD_SPS_LOW_VOLTAGE
Category	environmental
Component	Power [not present in logged events]
Severity	Major
Message	Supplemental Power Supply low input AC Voltage.

1155

Table 146. SYMAPI_AEVENT2_UID_MOD_AUDIT_HIGH_ACTIVITY

1155	SYMAPI_AEVENT2_UID_MOD_AUDIT_HIGH_ACTIVITY
Category	array subsystem
Component	-
Severity	Warning
Message	Entries are being written to the audit log at an unusually high rate.

1156

Table 147. SYMAPI_AEVENT2_UID_MOD_AUDIT_SFS_MIRR_OFF

1156	SYMAPI_AEVENT2_UID_MOD_AUDIT_SFS_MIRR_OFF
Category	array subsystem
Component	-
Severity	Major
Message	Audit log has lost its redundancy due to an SFS mirror being offline.

1157

Table 148. SYMAPI_AEVENT2_UID_MOD_AUDIT_LOG_WRAPPED

1157	SYMAPI_AEVENT2_UID_MOD_AUDIT_LOG_WRAPPED
Category	array subsystem
Component	-
Severity	Warning
Message	Audit log entries have been overwritten in an unusually short time period.

1158

Table 149. SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_WPL_CP

1158	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_WPL_CP
Category	srdfa session
Component	SRDF/A Grp (For example, SRDF-grp=1)
Severity	Major
Message	SRDF/A Session dropped, write pending limit reached on a cache partition.

Table 150. Unisphere policy name

Unisphere policy name	SRDF/A Session
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for the event category SYMAPI_AEVENT2_CODE_CAT_SYMM_SRDFA_SESS. This event category consists of all events with the category "srdfa session".

Notes

The following list identifies the meaning of Symmetrix errors:

- 0x0079 — SNOW dropped due to WP limit being reached in cache partition 0
- 0x007A — SNOW dropped due to WP limit being reached in cache partition 1
- 0x007B — SNOW dropped due to WP limit being reached in cache partition 2
- 0x007C — SNOW dropped due to WP limit being reached in cache partition 3
- 0x007D — SNOW dropped due to WP limit being reached in cache partition 4
- 0x007E — SNOW dropped due to WP limit being reached in cache partition 5
- 0x007F — SNOW dropped due to WP limit being reached in cache partition 6
- 0x0080 — SNOW dropped due to WP limit being reached in cache partition 7

1159

Table 151. SYMAPI_AEVENT2_UID_ALERT_SRDFA_NO_CYCLE_SWITCH

1159	SYMAPI_AEVENT2_UID_ALERT_SRDFA_NO_CYCLE_SWITCH
Category	srdf system
Component	SRDF [not present in logged events]
Severity	Warning
Message	There has been no SRDF/A cycle switching within the past hour.

Table 152. Unisphere policy name

Unisphere policy name	SRDF/A No Cycle Switch Alert
Action type	Alert

1160

Table 153. SYMAPI_AEVENT2_UID_ALERT_SRDF_JFC_STATE_CHANGE,

1160	SYMAPI_AEVENT2_UID_ALERT_SRDF_JFC_STATE_CHANGE,
Category	srdf link
Component	SRDFA Grp (For example, SRDF-grp=1)
Severity	Warning
Message	The job flow control setting has changed on RDF group.

Table 154. Unisphere policy name

Unisphere policy name	SRDF Job Flow Control Change
Action type	Alert

1161

Table 155. SYMAPI_AEVENT2_UID_ALERT_SRP_SNAP_CAP_EXCEEDED

1161	SYMAPI_AEVENT2_UID_ALERT_SRP_SNAP_CAP_EXCEEDED
Category	device pool
Component	SnapPool, DSEPool or TPDataPool [not present in logged events]
Severity	WARNING

Table 155. SYMAPI_AEVENT2_UID_ALERT_SRP_SNAP_CAP_EXCEEDED (continued)

1161	SYMAPI_AEVENT2_UID_ALERT_SRP_SNAP_CAP_EXCEEDED
Message	The maximum SRP snapshot/RDFA DSE capacity has been exceeded.

1162

Table 156. SYMAPI_AEVENT2_UID_ALERT_EDISK_FULL

1162	SYMAPI_AEVENT2_UID_ALERT_EDISK_FULL
Category	disk
Component	Disk [not present in logged events]
Severity	Warning
Message	External disk group is fully allocated.

Table 157. Unisphere policy name

Unisphere policy name	External disk group fully allocated
Action type	Alert

1163

Table 158. SYMAPI_AEVENT2_UID_MOD_RDF_1PATH_DOWN

1163	SYMAPI_AEVENT2_UID_MOD_RDF_1PATH_DOWN
Category	srdf link
Component	SRDF
Severity	Warning
Message	Single SRDF Path is not operational.

Table 159. Unisphere policy name

Unisphere policy name	Single SRDF Path is not operational
Action type	Alert

NOTE: This event is only supported from HYPERMAX OS 5977.

1164

Table 160. SYMAPI_AEVENT2_UID_MOD_DIR_PSA_OVER_TEMP

1164	SYMAPI_AEVENT2_UID_MOD_DIR_PSA_OVER_TEMP
Category	environmental
Component	Director
Severity	Warning
Message	Director Power Supply A Over temperature.

NOTE: This event is only supported from PowerMaxOS 5978.

1165

Table 161. SYMAPI_AEVENT2_UID_MOD_DIR_PSB_OVER_TEMP

1165	SYMAPI_AEVENT2_UID_MOD_DIR_PSB_OVER_TEMP
Category	environmental
Component	Directory
Severity	Warning
Message	Director Power Supply B Over temperature.

NOTE: This event is only supported from PowerMaxOS 5978.

1166

Table 162. SYMAPI_AEVENT2_UID_MOD_DIR_OVER_TEMP

1166	SYMAPI_AEVENT2_UID_MOD_DIR_OVER_TEMP
Category	environmental
Component	Director
Severity	Warning
Message	Director Power Supply Over temperature.

NOTE: This event is only supported from PowerMaxOS 5978.

1167

Table 163. SYMAPI_AEVENT2_UID_MOD_RDF_1PATH_UP

1167	SYMAPI_AEVENT2_UID_MOD_RDF_1PATH_UP
Category	srdf link
Component	SRDF
Severity	Warning
Message	Sinlge SRDF Path in an RDF group is now operational.

Table 164. Unisphere policy name

Unisphere policy name	Single SRDF Path is now operational
Action type	Alert

NOTE: This event is only supported from HYPERMAX OS 5977.

1168

Table 165. SYMAPI_AEVENT2_UID_MOD_RDF_METRO_SESS_SUSPEND

1168	SYMAPI_AEVENT2_UID_MOD_RDF_METRO_SESS_SUSPEND
Category	srdf link
Component	SRDF
Severity	Warning

Table 165. SYMAPI_AEVENT2_UID_MOD_RDF_METRO_SESS_SUSPEND (continued)

1168	SYMAPI_AEVENT2_UID_MOD_RDF_METRO_SESS_SUSPEND
Message	SRDF/Metro Session has been automatically suspended.

NOTE: This event is only supported from PowerMaxOS 5978 Q1 2021 SR.

1169

Table 166. SYMAPI_AEVENT2_UID_ALERT_REDUCIBILITY_ANOMALY

1169	SYMAPI_AEVENT2_UID_ALERT_REDUCIBILITY_ANOMALY
Category	Device
Component	-
Severity	Warning
Message	Reducibility Anomaly detected for a device.

NOTE: This event is only supported from PowerMaxOS 10.1 and higher.

1170

Table 167. SYMAPI_AEVENT2_UID_ALERT_WR_AFTER_RD_ANOMALY

1170	SYMAPI_AEVENT2_UID_ALERT_WR_AFTER_RD_ANOMALY
Category	Device
Component	-
Severity	Warning
Message	Write after read anomaly detected for device.

NOTE: This event is only supported from PowerMaxOS 10.1 and higher.

1171

Table 168. SYMAPI_AEVENT2_UID_ALERT_SINGLE_DEV_ANOMALY

1171	SYMAPI_AEVENT2_UID_ALERT_SINGLE_DEV_ANOMALY
Category	Device
Component	-
Severity	Warning
Message	Anomaly has been detected for a device.

NOTE: This event is only supported from PowerMaxOS 10.1 and higher.

1172

Table 169. SYMAPI_AEVENT2_UID_ALERT_MULTI_DEV_ANOMALY

1172	SYMAPI_AEVENT2_UID_ALERT_MULTI_DEV_ANOMALY
Category	Device

Table 169. SYMAPI_AEVENT2_UID_ALERT_MULTI_DEV_ANOMALY (continued)

1172	SYMAPI_AEVENT2_UID_ALERT_MULTI_DEV_ANOMALY
Component	-
Severity	Warning
Message	Anomalies detected on multiple devices.

NOTE: This event is only supported from PowerMaxOS 10.1 and higher.

1173

Table 170. SYMAPI_AEVENT2_UID_MOD_FPIN_NOTIFY

1173	SYMAPI_AEVENT2_UID_MOD_FPIN_NOTIFY
Category	Symmetrix
Component	Director Number
Severity	Warning
Message	FPINs detected [Link integrity congestion/ Delivery/ Peer Congestion/ Congestion]

NOTE: This event is only supported from PowerMaxOS 10.1 and higher.

1174

Table 171. SYMAPI_AEVENT2_UID_MOD_SRDFA_AUTO_RESTART

1174	SYMAPI_AEVENT2_UID_MOD_SRDFA_AUTO_RESTART
Category	Symmetrix
Component	SRDF Group number
Severity	Info
Message	SRDF/A Session Auto recovery invoked.

This event is only supported from PowerMaxOS 10.2 and higher.

1175

Table 172. SYMAPI_AEVENT2_UID_MOD_SRDFA_CONSISTENT

1175	SYMAPI_AEVENT2_UID_MOD_SRDFA_CONSISTENT
Category	Symmetrix
Component	SRDF Group number
Severity	Info
Message	SRDF/A Session is now consistent again after auto recovery.

This event is only supported from PowerMaxOS 10.2 and higher.

1176

Table 173. SYMAPI_AEVENT2_UID_MOD_INPUT_AC_FAILURE

1176	SYMAPI_AEVENT2_UID_MOD_INPUT_AC_FAILURE
Category	Symmetrix
Component	-
Severity	Info
Message	Power system input AC line failure detected.

This event is only supported from PowerMaxOS 10.2 and higher.

1177

Table 174. SYMAPI_AEVENT2_UID_MOD_INPUT_AC_RESTORE

1177	SYMAPI_AEVENT2_UID_MOD_INPUT_AC_RESTORE
Category	Symmetrix
Component	-
Severity	Info
Message	Power system input AC line restored.

This event is only supported from PowerMaxOS 10.2 and higher.

Array Events: Event IDs 1200-1999

Events in this range are manufactured by the event daemon itself based on its regular polling of conditions on a storage array.

There are two categories that can be used to register for a related of these events:

- status
- optimizer

1200

Table 175. SYMAPI_AEVENT2_UID_ALERT_DEV_STATUS

1200	SYMAPI_AEVENT2_UID_ALERT_DEV_STATUS
Category	status
Component	• Device number • Device =1234
Severity	• If Online: Normal • If Online Degraded: Warning • If Offline: Major • If Not Present: Info
Message	Device state has changed to [Not Present | Unknown | Online | Write Disabled | Offline | Failed].

Table 176. Unisphere policy name

Unisphere policy name	Device Status
Action type	Alert

Notes

- 'Not Present' means that the device could not be seen by Solutions Enabler.
- 'Online' means that the device service state is normal.
- 'Failed' means that there was a problem communicating with the array.

1201

Table 177. SYMAPI_AEVENT2_UID_ALERT_ARRAY_STATUS

1201	SYMAPI_AEVENT2_UID_ALERT_ARRAY_STATUS
Category	status
Component	-
Severity	• If Online: Normal • If Online Degraded: Warning • If Offline: Major • If Not Present: Warning or Major (depending on situation) • If Unknown: Warning or Major (depending on situation)
Message	Array state has changed to [Not Present | Unknown | Online | Write Disabled | Offline | Failed].

Notes

- This event reflects the overall state of the array - including its Disks, Directors, Ports.
- 'Not Present' means that the array couldn't be seen by Solutions Enabler.
- 'Online' means that the array is operational.
- 'Unknown' means that:
  - One or more Ports are in an Offline or Write-Disabled state.
  - One or more Directors are in an Offline or Dead state.
  - Device events [1200] events are also enabled and one or more device is in a Not-Ready state.
  - Array subcomponent events [1204] are also enabled and one or more are in a failed (Offline) state (Fans, Power Supplies, LCCs, MIBEs, Enclosures, etc.).
- 'Failed' means that there was a problem communicating with the array.

1202

Table 178. SYMAPI_AEVENT2_UID_ALERT_DIRECTOR_STATUS

1202	SYMAPI_AEVENT2_UID_ALERT_DIRECTOR_STATUS
Category	status
Component	Director identifier, for example: Director=SA-03C
Severity	• If Online: Normal • If Online Degraded: Warning • If Offline: Major • If Failed: Fatal • If Not Present: Info
Message	Director state has changed to [Not Present | Unknown | Online | Write Disabled | Offline | Failed].

Table 179. Unisphere policy name

Unisphere policy name	Director Status
Action type	Alert

Notes

- 'Not Present' means the director was not seen by Solutions Enabler.
- 'Online' means that the director status is Online.
- 'Online [Degraded]' means that one or more of the director's ports were in an Offline or Write-Disabled state.
- 'Offline' means that the director status is Offline.
- 'Failed' means that the director status is Dead.

1203

Table 180. SYMAPI_AEVENT2_UID_ALERT_PORT_STATUS

1203	SYMAPI_AEVENT2_UID_ALERT_PORT_STATUS
Category	status
Component	Port identifier, for example: Port=SA-03C:2 (for Port 2 on Director SA-03C)
Severity	• If Online: Normal • If Offline: Major • If Write Disabled: Warning • If Unknown: Warning • If Not Present: Info
Message	Port state has changed to Not Present | Unknown | Online | Write Disabled | Offline | Failed

Table 181. Unisphere policy name

Unisphere policy name	Port Status
Action type	Alert

Indicates that the status for some Director Port has changed.

Notes

- 'Not Present' means the port was not seen.
- 'Online' means a port status of On.
- 'Offline' means a port status of Off.
- 'Write Disabled' means a port status of Write-Disabled.

1204

Table 182. SYMAPI_AEVENT2_UID_ALERT_DISK_STATUS

1204	SYMAPI_AEVENT2_UID_ALERT_DISK_STATUS
Category	status

Table 182. SYMAPI_AEVENT2_UID_ALERT_DISK_STATUS (continued)

1204	SYMAPI_AEVENT2_UID_ALERT_DISK_STATUS

Component	Spindle ID (Disk identifier is supported for internal disks only) , for example:
	`Disk=123`
	or
	`Disk=16B:C2`
	(for Director 16B, DA Interface C, SCSI ID/Target 2) (internal disks only)

Severity	• If Online: Normal • If Online Spare: Normal • If Online Degraded: Warning • If Offline: Warning • If Offline Spare: Warning • If Not Present: Info
Message	Disk state is now <State> Where State can be: • Online • Offline • Online Spare • Offline Spare • Online Degraded • Not Present

Table 183. Unisphere policy name

Unisphere policy name	Disk status
Action type	Alert

Notes

- 'Not Present' means that the disk could not be seen by Solutions Enabler.
- 'Online' means that one or more of the disk's Hypers are in a Ready state.
- 'Online Spare' means that the disk is a Spare and one or more of the disk's Hypers are in a Ready state.
- 'Online [Degraded]' means that the disk can only be reached via a single array DS controller. This disk state is for external disks only.
- 'Offline' means that all of the disk's Hypers are in a Not-Ready state.
- 'Offline Spare' means that the disk is a Spare and all of the disk's Hypers are in a Not-Ready state

1205

Table 184. SYMAPI_AEVENT2_UID_ALERT_DEV_CONFIG_CHANGE

1205	SYMAPI_AEVENT2_UID_ALERT_DEV_CONFIG_CHANGE
Category	status
Component	Device number, for example: Device=1234
Severity	Info

Table 184. SYMAPI_AEVENT2_UID_ALERT_DEV_CONFIG_CHANGE (continued)

1205	SYMAPI_AEVENT2_UID_ALERT_DEV_CONFIG_CHANGE
Message	Device configuration has changed.

Table 185. Unisphere policy name

Unisphere policy name	Device Config Change
Action type	Alert/Refresh OM

Indicates that the configuration of some device has changed.

Notes

- The following aspects of a device's configuration is considered by this event:
  - The base device configuration.
  - The meta configuration of the device (META_HEAD, META_MEMBER).
  - The bound-vs-bound state of a TDEV (bound vs unbound).
  - Whether a dynamic spare disk is invoked for the device.
  - The RDF mode of the device (of either leg for Concurrent SRDF).
  - The data pool bound to by a TDEV changes. This reflects a device being bound, unbound or re-bound to a different pool, and is also triggered when the name of the pool changes.

1209

Table 186. SYMAPI_AEVENT2_UID_ALERT_SEL_CHANGE

1209	SYMAPI_AEVENT2_UID_ALERT_SEL_CHANGE
Category	status
Component	Symmetrix Lock Number, for example: SEL=15
Severity	Info
Message	• Symmetrix External Lock has been acquired. • Symmetrix External Lock has been released.

Indicates that the state (released vs acquired) of one of the monitored Symmetrix External Locks (SELs) has changed.

Note

At this time, only SEL #15 (used by Config Change) is monitored.

1210

Table 187. SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE

1210	SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE
Category	status

Table 187. SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE (continued)

1210	SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE
Component	Disk identifier of the Spare, for example: `Disk=16B:C2 (for Director 16B, DA Interface C, SCSI ID/Target 2)`
Severity	For 5x74 and newer arrays: • Normal For older arrays: • If invoked: Warning • If no longer invoked: Normal
Message	For 5x74 and newer arrays: • Disk is lo longer a Spare. • Disk is now a Spare. • Disk is now an invoked Spare. For older arrays: • Spare has been invoked against a failed disk. • Spare is no longer invoked against a failed disk.

Table 188. Unisphere policy name

Unisphere policy name	Hotspare Invoked
Action type	Alert
Solutions Enabler mapping	This alert is registered as a result of registering for SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE

Indicates that a disk has started or stopped acting as a spare.

Note

With Permanent Sparing on newer arrays, a failing disk and a spare will exchange roles. The failed disk will end up as a failed spare, and the spare will end up as a normal disk. The “Disk is now an invoked Spare” event will rarely if ever be delivered.

1211

Table 189. SYMAPI_AEVENT2_UID_ALERT_NUM_HOTSPARES_T

1211	SYMAPI_AEVENT2_UID_ALERT_NUM_HOTSPARES_T
Category	status
Component	-
Severity	Determined by Threshold values. See below.
Message	Number of available disk spares is <NN>.

This is a Threshold event that reflects the number of available Spare Disks on the storage array.

Unless threshold values are supplied with the registration, the following defaults are used to derive an event severity:

If value is 0 — Critical

If value is 1 — Major

If value is 2 — Warning

Otherwise — Info

Note

Threshold events are only delivered when the severity, as determined by threshold values, changes.

1212

Table 190. SYMAPI_AEVENT2_UID_THRESH_TDEV_ALLOCATED

1212	SYMAPI_AEVENT2_UID_THRESH_TDEV_ALLOCATED
Category	status
Component	Device number, for example: `Device=1234`
Severity	Determined by Threshold values. See below.
Message	Thin Device is now <NN> percent allocated.

Table 191. Unisphere policy name

Unisphere policy name	Thin Device Allocation
Action type	Alert

This is a Threshold event that reflects the amount (as a percentage) of a Thin Device that is backed by space in a Data Pool.

Unless threshold values are supplied with the registration, the following defaults are used to derive an event severity:

If value is 100% — Fatal

If value is >= 80% — Critical

If value is >= 70% — Major

If value is >= 65% — Minor

If value is >= 60% — Warning

Otherwise — Normal

Notes

- Events are only delivered at multiples of 5% ... for <NN> equal to 5%, 10%, 15%, ... , 75%, 80%, 85%, 90%, 95% and 100%.
- Threshold events are only delivered when the severity, as determined by threshold values, changes.

1213

Table 192. SYMAPI_AEVENT2_UID_THRESH_TDEV_USED

1213	SYMAPI_AEVENT2_UID_THRESH_TDEV_USED
Category	status
Component	Device number, for example: `Device=1234`

Table 192. SYMAPI_AEVENT2_UID_THRESH_TDEV_USED (continued)

1213	SYMAPI_AEVENT2_UID_THRESH_TDEV_USED
Severity	Determined by Threshold values. See below.
Message	Thin Device is now <NN> percent used.

Table 193. Unisphere policy name

Unisphere policy name	Thin Device Usage
Action type	Alert

This is a Threshold event that reflects the amount (as a percentage) of a Thin Device that has been written to.

Unless threshold values are supplied with the registration, the following defaults are used to derive an event severity:

If value is 100% — Fatal

If value is >= 80% — Critical

If value is >= 70% — Major

If value is >= 65% — Minor

If value is >= 60% — Warning

Otherwise — Normal

Notes

- Events are only delivered at multiples of 5% ... for <NN> equal to 5%, 10%, 15%, ... , 75%, 80%, 85%, 90%, 95% and 100%.
- Threshold events are only delivered when the severity, as determined by threshold values, changes.

1214

Table 194. SYMAPI_AEVENT2_UID_ALERT_DIRECTOR_CONFIG_CHANGE

1214	SYMAPI_AEVENT2_UID_ALERT_DIRECTOR_CONFIG_CHANGE
Category	status
Component	Director
Severity	Info
Message	Director configuration has changed.

Indicates that the configuration changed for a Director.

1215

Table 195. SYMAPI_AEVENT2_UID_ALERT_PORT_CONFIG_CHANGE

1215	SYMAPI_AEVENT2_UID_ALERT_PORT_CONFIG_CHANGE
Category	status
Component	Port, for example: `Port=SA-03C:2` (for Port 2 on Director SA-03C)

Table 195. SYMAPI_AEVENT2_UID_ALERT_PORT_CONFIG_CHANGE (continued)

1215	SYMAPI_AEVENT2_UID_ALERT_PORT_CONFIG_CHANGE
Severity	Info
Message	Port configuration has changed.

Indicates that the configuration changed for a Port on a Front End (FE) Director.

Notes

- The only aspects of a port's configuration that are considered the following flags from the FA port flags:
- The _VCM_ENABLED flag.
- The _VOL_SET_ADDR (VSA) flag.

1217

Table 196. SYMAPI_AEVENT2_UID_DFR_SVC_STATE

1217	SYMAPI_AEVENT2_UID_DFR_SVC_STATE
Category	status
Component	-
Severity	If the replacement threshold has been exceeded : Warning, Otherwise: Info
Message	• The deferred services replacement threshold has been exceeded - service is required. • The deferred services replacement threshold is no longer exceeded.

Table 197. Unisphere policy name

Unisphere policy name	Deferred Service Threshold Alert
Action type	Alert

Indicates that the Deferred Service replacement threshold indicator for a storage array has changed. This change can be in either direction - from not-exceeded to exceeded ... or from exceeded to not-exceeded.

Note

- This event will only be generated if Deferred Service is enabled for the storage array.

1218

Table 198. SYMAPI_AEVENT2_UID_DEV_CFG_CHKSUM

1218	SYMAPI_AEVENT2_UID_DEV_CFG_CHKSUM
Category	status
Component	Device number, for example: `Device=1234`
Severity	Info

Table 198. SYMAPI_AEVENT2_UID_DEV_CFG_CHKSUM (continued)

1218	SYMAPI_AEVENT2_UID_DEV_CFG_CHKSUM
Message	The device configuration checksum has changed.

Indicates that the configuration of a device has changed. The implementation makes use of a checksum maintained by the event daemon over a device's core configuration data. An event is generated when this checksum changes.

1221

Table 199. SYMAPI_AEVENT2_UID_ALERT_SPINDLE_STATUS

1221	SYMAPI_AEVENT2_UID_ALERT_SPINDLE_STATUS
Category	status
Component	Device number; for example: Device=1234
Severity	Determined by status.
Message	Disk state is now [Online | Offline | Online Degraded | Online Spare | Offline Spare].

Note

The following values are used to derive an event severity:

- If Online — Normal
- If Offline — Warning
- If Degraded — Warning

1222

Table 200. SYMAPI_AEVENT2_UID_ALERT_LREP_CACHEUSE_PCT_CHG

1222	SYMAPI_AEVENT2_UID_ALERT_LREP_CACHEUSE_PCT_CHG
Category	status
Component	Local Replication cache usage
Severity	Threshold severity
Message	System Snapshot resource usage has changed to <NN> percent.

Table 201. Unisphere policy name

Unisphere policy name	Local Replication Utilization
Action type	Alert

1223

Table 202. SYMAPI_AEVENT2_UID_ALERT_SYS_METADATAUSE_PCT_CHG

1223	SYMAPI_AEVENT2_UID_ALERT_SYS_METADATAUSE_PCT_CHG
Category	status

Table 202. SYMAPI_AEVENT2_UID_ALERT_SYS_METADATAUSE_PCT_CHG (continued)

1223	SYMAPI_AEVENT2_UID_ALERT_SYS_METADATAUSE_PCT_CHG
Component	System Meta Data Utilization
Severity	Threshold severity
Message	System provisioning resource usage has changed to <NN> percent.

Table 203. Unisphere policy name

Unisphere policy name	System Meta Data Utilization
Action type	Alert

1224

Table 204. SYMAPI_AEVENT2_UID_ALERT_FE_METADATAUSE_PCT_CHG

1224	SYMAPI_AEVENT2_UID_ALERT_FE_METADATAUSE_PCT_CHG
Category	status
Component	Front-End Meta Data Utilization
Severity	Threshold severity
Message	Front-End metadata usage has changed to <NN> percent.

Table 205. Unisphere policy name

Unisphere policy name	Front-End Meta Data Utilization
Action type	Alert

Note: This event is only supported from PowerMaxOS 5978.

1225

Table 206. SYMAPI_AEVENT2_UID_ALERT_BE_METADATAUSE_PCT_CHG

1225	SYMAPI_AEVENT2_UID_ALERT_BE_METADATAUSE_PCT_CHG
Category	status
Component	Back-End Meta Data Utilization
Severity	Threshold severity
Message	Back-End metadata usage has changed to <NN> percent.

Table 207. Unisphere policy name

Unisphere policy name	Back-End Meta Data Utilization
Action type	Alert

Note: This event is only supported from PowerMaxOS 5978.

1230

Table 208. SYMAPI_AEVENT2_UID_ALERT_ARRAY_CONFIG_CHANGE

1230	SYMAPI_AEVENT2_UID_ALERT_ARRAY_CONFIG_CHANGE
Category	status
Component	-
Severity	Info
Message	Array configuration has changed.

Indicates that some change has been made to the configuration of the storage array.

Note

This event is derived from one of the QuickConfig indication maintained on the storage array.

1231

Table 209. SYMAPI_AEVENT2_UID_ALERT_MASKING_CHANGE

1231	SYMAPI_AEVENT2_UID_ALERT_MASKING_CHANGE
Category	status
Component	-
Severity	Info
Message	Device Masking database has changed.

Indicates that some change have been made to the device masking database on the storage array.

Note

This event is derived from one of the QuickConfig indication maintained on the storage array.

1232

Table 210. SYMAPI_AEVENT2_UID_ALERT_ACCESS_CONTROL_CHANGE

1232	SYMAPI_AEVENT2_UID_ALERT_ACCESS_CONTROL_CHANGE
Category	status
Component	-
Severity	Info
Message	Access Control definitions have changed.

Indicates that some change has been made to the Access Control [symacl] database on the storage array.

Note

This is derived from one of the QuickConfig indication maintained on the storage array.

1233

Table 211. SYMAPI_AEVENT2_UID_ALERT_DYNAMIC_RDF_CONFIG

1233	SYMAPI_AEVENT2_UID_ALERT_DYNAMIC_RDF_CONFIG
Category	status
Component	-
Severity	Info
Message	Dynamic RDF operation performed on device.

Indicates that a dynamic RDF operation has been performed on some device.

Note

This is derived from one of the QuickConfig indication maintained on the storage array.

1234

Table 212. SYMAPI_AEVENT2_UID_ALERT_SNAP_CLONE_CONFIG

1234	SYMAPI_AEVENT2_UID_ALERT_SNAP_CLONE_CONFIG
Category	status
Component	-
Severity	Info
Message	Snap session created, activated or deleted.

Indicates that a snap / clone session has been created, activated or deleted.

Note

This is derived from one of the QuickConfig indication maintained on the storage array.

1235

Table 213. SYMAPI_AEVENT2_UID_ALERT_BCV_CONTROL_CONFIG

1235	SYMAPI_AEVENT2_UID_ALERT_BCV_CONTROL_CONFIG
Category	status
Component	-
Severity	Info
Message	BCV device pairing has changed.

Indicates that the BCV pairing for some device has changed.

Note

This is derived from one of the QuickConfig indication maintained on the storage array.

1236

Table 214. SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_HP_ID_CONFIG

1236	SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_HP_ID_CONFIG
Category	status
Component	-
Severity	Info
Message	HPUX device identifier has changed.

Indicates that the HPUX device identifier for some device has been changed.

Note

This is derived from one of the QuickConfig indication maintained on the storage array.

1237

Table 215. SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_CONFIG

1237	SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_CONFIG
Category	status
Component	-
Severity	Info
Message	Device Name has changed.

Indicates that the device name for some device has been changed.

Note

This is derived from one of the QuickConfig indication maintained on the storage array.

1238

Table 216. SYMAPI_AEVENT2_UID_ALERT_DEV_NICE_NAME_CONFIG

1238	SYMAPI_AEVENT2_UID_ALERT_DEV_NICE_NAME_CONFIG
Category	status
Component	-
Severity	Info
Message	Device Nice Name has changed.

Indicates that the device nice name for some device has been changed.

Note

This is derived from one of the QuickConfig indication maintained on the storage array.

1239

Table 217. SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_VMS_ID_CONFIG

1239	SYMAPI_AEVENT2_UID_ALERT_DEV_NAME_VMS_ID_CONFIG
Category	status
Component	-
Severity	Info
Message	OpenVMS device identifier has changed.

Indicates that the OpenVMS device identifier for some device has been changed.

Note

This is derived from one of the QuickConfig indication maintained on the storage array.

1241

Table 218. SYMAPI_AEVENT2_UID_SRDFA_CYCLE_TIME_T

1241	SYMAPI_AEVENT2_UID_SRDFA_CYCLE_TIME_T
Category	status
Component	The SRDF Group, for example, SRDF-grp=13
Severity	Determined by Threshold values. See below.
Message	Time since last SRDFA cycle switch exceeds minimum cycle time by <NN> seconds.

This is a Threshold event that indicates the amount (in seconds) by which an SRDFA Group's Cycle Time exceeds the minimum that is configured.

Unless threshold values are supplied with the registration (in the daemon_options file), the following defaults are used to derive an event severity:

If value is >= 5 — Warning

Otherwise — Normal

Notes

This is determined by calling SymReplicationGet() and examining the time_since_last_switch and duration_of_last_cycle quantities for Active, R1, non-MSC sessions.

The event value corresponds to the number of seconds that the larger of these two is beyond the configured min_cycle_time. If the time(s) are less than min_cycle_time (everything normal), the event value is 0. To protect against rounding problems, the test is actually against min_cycle_time+1. If the times are less than min_cycle_time+1, the event value will be 0. Therefore, possible event values are: 0, 2, 3, 4, 5, etc.

For example, assuming a min_cycle_time of 10:

Table 219. Event value example

time_since_last_switch	event value
9	0

Table 219. Event value example (continued)

time_since_last_switch	event value
10	0
11	0
13	3

1242

Table 220. SYMAPI_AEVENT2_UID_SRDFA_WP_CACHEUSE_T

1242	SYMAPI_AEVENT2_UID_SRDFA_WP_CACHEUSE_T
Category	status
Component	-
Severity	Determined by Threshold values. See below.
Message	SRDF/A cycles now using <NN> percent of the cache available for it.

This is a Threshold event that indicates the percentage of cache that is available for SRDF/A use that is actually holding SRDF/A Write Pending data.

Unless threshold values are supplied with the registration, the following defaults are used to derive an event severity:

If the value is >= 90%—Warning

Otherwise—Info

Notes

- This is determined by calling SymReplicationGet() and summing the active_cycle_size and inactive_cycle_size values for all active R1 or R2 sessions. The maximum available cache is computed in the usual manner:

```
if      ((max_host_throttle == 0) and
       (rdfa_max_cache_usage > 0) and
       (rdfa_max_cache_usage < 100))
     max_avail = (max_wr_pend_slots * rdfa_max_cache_usage) / 100
else
     max_avail = max_wr_pend_slots
```

The event value is the sum of the active and inactive cycle sizes that are expressed as a percentage of this max available cache size.

- Warning! Exercise caution when assigning significance to this event. The fact that an amount of cache is available for SRDF/A to use (max_avail above) does not mean that it is guaranteed to be available for its use. There are other sources of Write Pending data that can use up this space as well - leaving it unavailable for SRDF/A's use.

1243

Table 221. SYMAPI_AEVENT2_UID_WP_CACHEUSE_T

1243	SYMAPI_AEVENT2_UID_WP_CACHEUSE_T
Category	status
Component	-
Severity	Determined by Threshold values. See below.

Table 221. SYMAPI_AEVENT2_UID_WP_CACHEUSE_T (continued)

1243	SYMAPI_AEVENT2_UID_WP_CACHEUSE_T
Message	Write Pending data is now using <NN> percent of the cache.

Notes

This is a Threshold event that indicates the percentage of Symmetrix Cache that is holding Write Pending data.

Unless threshold values are supplied with the registration, the following defaults are used to derive an event severity:

If value is >= 90% — Warning

Otherwise — Info

1244

Table 222. SYMAPI_AEVENT2_UID_ALERT_ARR_COMP_STATUS

1244	SYMAPI_AEVENT2_UID_ALERT_ARR_COMP_STATUS
Category	status
Component	• Power=xxx • Fan=xxx • LCC=xxx • Enclosure=xxx • MM=xxx • IOMC=xxx • Dir=xxx
Severity	• If Online: Normal • If Online Degraded: Warning • If Offline: Major • If Unknown: Warning
Message	Component state has changed to [Not Present | Unknown | Online | Write Disabled | Offline | Failed]

Table 223. Unisphere policy name

Unisphere policy name	Array Component Events
Action type	Alert

- Online — means that the component is a Normal or Degraded state.
- Online [Degraded] — means that the component is in a degraded state.
- Offline — means that the component is in a Failed state.

The format of the specific component name (*xxx* above) may differ depending on the VMAX model. Some examples you might encounter are:

Table 224. Components

Component	Description
SB-1/Fan-A	Fan in System Bay
SB-1/ENC-1	Enclosure within System Bay
SB-1/ENC-1/Fan-A	Fan in Enclosure-Slot within System Bay

Table 224. Components (continued)

Component	Description
SB-1/MIBE-L-2A	MIBE within System Bay
SB-1/MIBE-L-2A/PS-A	Power Supply in MIBE within System Bay

Notes

Indicates a change in environmental status for one of the following types of sub-components within the VMAX array:

Table 225. Types of subcomponents

Sub-component	Type
Fans:	[Fan]
Power Supplies:	[Power]
Link Control Cards:	[LCC]
Management Modules	[MM]
IO Module Carriers	[IOMC]
Directors (for environmental alerts):	[Dir]
Enclosures or Matrix Interface Board Enclosures	[Enclosure]

1245

Table 226. SYMAPI_AEVENT2_UID_DSE_SPILL_TIME_T

1245	SYMAPI_AEVENT2_UID_DSE_SPILL_TIME_T
Category	status
Component	The SRDF Group, for example: SRDF-grp=13
Severity	Determined by Threshold values. See below.
Message	DSE Spillover has been occurring on the SRDF group for <N> minutes.

This is a Threshold event that indicates the amount of time (in minutes) that SRDF DSE Spillover has been occurring for.

Unless threshold values are supplied with the registration, the following defaults are used to derive an event severity:

If value is >= 30 (minutes) — Warning

Otherwise — Normal

Note

Threshold events are only delivered when the severity, as determined by threshold values, changes.

1246

Table 227. SYMAPI_AEVENT2_UID_ALERT_DISK_GRP_CHG

1246	SYMAPI_AEVENT2_UID_ALERT_DISK_GRP_CHG
Category	status
Component	The Symmetrix Disk group number (decimal), for example: `DiskGrp=2`
Severity	INFO
Message	One of the following: • Disk Group has changed. • Disk Group has been deleted. • Disk Group has been created.

Note

This event is only supported on VMAX arrays running HYPERMAX OS 5977.

1247

Table 228. SYMAPI_AEVENT2_UID_ALERT_DISK_SPARE_CVG

1247	SYMAPI_AEVENT2_UID_ALERT_DISK_SPARE_CVG
Category	status
Component	Disk identifier, for example: `Disk=16B:C2` (for Director 16B, DA InterfaceC, SCSI ID/Target 2)
Severity	INFO
Message	One of the following: • Disk has spare coverage. • Disk no longer has spare coverage.

Table 229. Unisphere policy name

Unisphere policy name	RVA Spare Coverage
Action type	Alert

Note

This event is only supported on VMAX arrays running HYPERMAX OS 5977.

1248

Table 230. SYMAPI_AEVENT2_UID_ALERT_DISK_SPARE_PCT_CHNG

1248	SYMAPI_AEVENT2_UID_ALERT_DISK_SPARE_PCT_CHNG
Category	status
Component	The Symmetrix Disk group number (decimal), for example: `DiskGrp=2`
Severity	INFO
Message	The spare capacity for disk group on engine [0..9]+ has changed to [0..100] percent.

Note

This event is only supported on VMAX arrays running HYPERMAX OS 5977.

1249

Table 231. SYMAPI_AEVENT2_UID_ALERT_SPINDLE_SPARE_CVG

1249	SYMAPI_AEVENT2_UID_ALERT_SPINDLE_SPARE_CVG
Category	status
Component	Disk identifier, for example: `Disk=16B:C2` (for Director 16B, DA InterfaceC, SCSI ID/Target 2)
Severity	Info
Message	One of the following: • Disk has spare coverage. • Disk no longer has spare coverage.

1252

Table 232. SYMAPI_AEVENT2_UID_BASED_THRESH_GK_UTIL_AVG

1252	SYMAPI_AEVENT2_UID_BASED_THRESH_GK_UTIL_AVG
Category	-
Component	-
Severity	User specified threshold severity.
Message	Gatekeeper utilization has now reached [0..100] percent.

Table 233. Unisphere policy name

Unisphere policy name	GK Utilization
Action type	Alert

Note

If there is no threshold specified, the event will not be posted. If there is a threshold specified for the event, the event severity is set accordingly. After the first event, every subsequent event with the same severity as the first event is ignored.

1253

Table 234. SYMAPI_AEVENT2_UID_BASED_GK_TIMEOUT

1253	SYMAPI_AEVENT2_UID_BASED_GK_TIMEOUT
Category	-
Component	-
Severity	Warning
Message	Number of gatekeeper timeouts that have occurred within the past minute is [0-9]+.

Table 235. Unisphere policy name

Unisphere policy name	GK Timeout
Action type	Alert

1260

Table 236. SYMAPI_AEVENT2_UID_ALERT_VASA_RDF_CHANGE

1260	SYMAPI_AEVENT2_UID_ALERT_VASA_RDF_CHANGE
Category	status
Component	-
Severity	Info
Message	VASA Replication group has changed.

This event indicates that a vRG has been changed.

NOTE: This event is only supported with 5978 PowerMaxOS Q1 2020 and later.

1261

Table 237. SYMAPI_AEVENT2_UID_ALERT_VASA_DEVNAME_CHANGE

1261	SYMAPI_AEVENT2_UID_ALERT_VASA_DEVNAME_CHANGE
Category	status
Component	-
Severity	Info

Table 237. SYMAPI_AEVENT2_UID_ALERT_VASA_DEVNAME_CHANGE (continued)

1261	SYMAPI_AEVENT2_UID_ALERT_VASA_DEVNAME_CHANGE
Message	VASA vVol device name has changed.

This event indicates that a vVol device name has been changed.

NOTE: This event is only supported with 5978 PowerMaxOS Q1 2020 and later.

1262

Table 238. SYMAPI_AEVENT2_UID_ALERT_VASA_SC_CHANGE

1262	SYMAPI_AEVENT2_UID_ALERT_VASA_SC_CHANGE
Category	status
Component	-
Severity	Info
Message	VASA storage container configuration has changed.

This event indicates that a vVol has been added or removed from vSC.

NOTE: This event is only supported with 5978 PowerMaxOS Q1 2020 and later.

1263

Table 239. SYMAPI_AEVENT2_UID_ALERT_VASA_MV_CHANGE

1262	SYMAPI_AEVENT2_UID_ALERT_VASA_MV_CHANGE
Category	status
Component	VASA
Severity	Info
Message	VASA Masking view has changed.

Indicates that a VASA Masking view has been created, deleted, or updated.

NOTE: This event is only supported from PowerMaxOS 6079 and higher.

1280

Table 240. SYMAPI_AEVENT2_UID_ALERT_CACHE_PART_CHANGE

1280	SYMAPI_AEVENT2_UID_ALERT_CACHE_PART_CHANGE
Category	status
Component	-
Severity	Info
Message	Cache Partitioning configuration has changed.

Indicates that the Cache Partitioning data on the array has been changed.

Note

This is derived from one of the QuickConfig indication maintained on the VMAX array.

1281

Table 241. SYMAPI_AEVENT2_UID_ALERT_DYNAMIC_MAPPING_CHANGE

1281	SYMAPI_AEVENT2_UID_ALERT_DYNAMIC_MAPPING_CHANGE
Category	status
Component	-
Severity	Info
Message	Dynamic Mapping configuration for a device has changed.

Indicates that the Dynamic Mapping info for some device has been changed on the VMAX array.

Note

This is derived from one of the QuickConfig indications maintained on the VMAX array.

1283

Table 242. SYMAPI_AEVENT2_UID_ALERT_INITIATOR_GRP_CHANGE

1283	SYMAPI_AEVENT2_UID_ALERT_INITIATOR_GRP_CHANGE
Category	status
Component	-
Severity	Info
Message	Initiator Group has changed.

Indicates that some Initiator Group on the array has been changed.

Note

This is derived from one of the QuickConfig indication maintained on the VMAX array.

1284

Table 243. SYMAPI_AEVENT2_UID_ALERT_STORAGE_GRP_CHANGE

1284	SYMAPI_AEVENT2_UID_ALERT_STORAGE_GRP_CHANGE
Category	status
Component	-
Severity	Info
Message	Storage Group has changed.

Indicates that some Storage Group on the array has been changed.

Note

This is derived from one of the QuickConfig indication maintained on the VMAX array.

1285

Table 244. SYMAPI_AEVENT2_UID_ALERT_DIR_PORT_GRP_CHANGE

1285	SYMAPI_AEVENT2_UID_ALERT_DIR_PORT_GRP_CHANGE
Category	status
Component	-
Severity	Info
Message	Director Port Group has changed.

Indicates that some Director Port Group on the array has been changed.

Note

This is derived from one of the QuickConfig indication maintained on the VMAX array.

1286

Table 245. SYMAPI_AEVENT2_UID_ALERT_MASKING_VIEW_CHANGE

1286	SYMAPI_AEVENT2_UID_ALERT_MASKING_VIEW_CHANGE
Category	status
Component	-
Severity	Info
Message	Masking View has changed.

Indicates that some Masking View on the array has been changed.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

1287

Table 246. SYMAPI_AEVENT2_UID_ALERT_FEAT_REG_CHANGE

1287	SYMAPI_AEVENT2_UID_ALERT_FEAT_REG_CHANGE
Category	status
Component	-
Severity	Info
Message	Feature Registration DB has changed.

Indicates that a change has been made to the Feature Registration DataBase on the VMAX array.

Note

This is derived from one of the QuickConfig indication maintained on the VMAX array.

1288

Table 247. SYMAPI_AEVENT2_UID_ALERT_APP_REG_CHANGE

1288	SYMAPI_AEVENT2_UID_ALERT_APP_REG_CHANGE
Category	status
Component	-
Severity	Info
Message	Application Registration DB has changed.

Indicates that a change has been made to the Application Registration DataBase on the VMAX array.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

1294

Table 248. SYMAPI_AEVENT2_UID_ALERT_SG_CONFIG_CHANGE

1294	SYMAPI_AEVENT2_UID_ALERT_SG_CONFIG_CHANGE
Category	status
Component	-
Severity	Info
Message	Storage group configuration has changed

Indicates that a change has been made to a storage group on the VMAX array.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

This event is only supported with HYPERMAX OS 5977.

1295

Table 249. SYMAPI_AEVENT2_UID_ALERT_IG_CONFIG_CHANGE

1295	SYMAPI_AEVENT2_UID_ALERT_IG_CONFIG_CHANGE
Category	status
Component	-
Severity	Info
Message	Initiator group configuration has changed.

Indicates that a change has been made to an initiator group on the VMAX array.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

This event is only supported with HYPERMAX OS 5977.

1296

Table 250. SYMAPI_AEVENT2_UID_ALERT_PG_CONFIG_CHANGE

1296	SYMAPI_AEVENT2_UID_ALERT_PG_CONFIG_CHANGE
Category	status
Component	-
Severity	Info
Message	Port group configuration has changed.

Indicates that a change has been made to a port group on the VMAX array.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

This event is only supported with HYPERMAX OS 5977.

1297

Table 251. SYMAPI_AEVENT2_UID_ALERT_MV_CONFIG_CHANGE

1297	SYMAPI_AEVENT2_UID_ALERT_MV_CONFIG_CHANGE
Category	status
Component	-
Severity	Info
Message	Masking view configuration has changed.

Indicates that a change has been made to a masking view configuration on the VMAX array.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

This event is only supported with HYPERMAX OS 5977.

1298

Table 252. SYMAPI_AEVENT2_UID_ALERT_SG_SCOPE_CHANGE

1298	SYMAPI_AEVENT2_UID_ALERT_SG_SCOPE_CHANGE
Category	status
Component	-

Table 252. SYMAPI_AEVENT2_UID_ALERT_SG_SCOPE_CHANGE (continued)

1298	SYMAPI_AEVENT2_UID_ALERT_SG_SCOPE_CHANGE
Severity	Info
Message	Storage group scope has changed.

Indicates that a change has been made to a storage group scope on the VMAX array.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

This event is only supported with HYPERMAX OS 5977.

1299

Table 253. SYMAPI_AEVENT2_UID_ALERT_IG_SCOPE_CHANGE

1299	SYMAPI_AEVENT2_UID_ALERT_IG_SCOPE_CHANGE
Category	status
Component	-
Severity	Info
Message	Initiator group scope has changed.

Indicates that a change has been made to an initiator group scope on the VMAX array.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

This event is only supported with HYPERMAX OS 5977.

1300

Table 254. SYMAPI_AEVENT2_UID_ALERT_MV_SCOPE_CHANGE

1300	SYMAPI_AEVENT2_UID_ALERT_MV_SCOPE_CHANGE
Category	status
Component	-
Severity	Info
Message	Masking view scope has changed.

Indicates that a change has been made to a masking view scope on the VMAX array.

Note

This is derived from one of the QuickConfig indication that is maintained on the VMAX array.

This event is only supported with HYPERMAX OS 5977.

1301

Table 255. SYMAPI_AEVENT2_UID_ALERT_DEV_CAPACITY_CHANGE

1301	SYMAPI_AEVENT2_UID_ALERT_DEV_CAPACITY_CHANGE
Category	status
Component	-
Severity	-
Message	Device capacity has changed.

Note

This event is only supported from PowerMaxOS 10 (6079).

1302

Table 256. SYMAPI_AEVENT2_UID_ALERT_SNAPSL_CONFIG_CHANGE

1302	SYMAPI_AEVENT2_UID_ALERT_SNAPSL_CONFIG_CHANGE
Category	status
Component	Snapshot Service
Severity	Info
Message	"Snapshot policy has been created|deleted|renamed." "Snapshot policy has been suspended|resumed." "Snapshot policy has been modified."

Indicates that a Snapshot policy change has been detected.

NOTE: This event is only supported from PowerMaxOS 5978.669.669 and higher.

1310

Table 257. SYMAPI_AEVENT2_UID_ALERT_LICENSE_CHANGE

1310	SYMAPI_AEVENT2_UID_ALERT_LICENSE_CHANGE
Category	status
Component	-
Severity	Info
Message	EMCLM License has changed.

1320

Table 258. SYMAPI_AEVENT2_UID_ALERT_MF_SPLIT_CHANGE

1320	SYMAPI_AEVENT2_UID_ALERT_MF_SPLIT_CHANGE
Category	status
Component	-
Severity	Info
Message	A Mainframe Split has been [created | changed | deleted].

Indicates that a change to the list of Mainframe Splits has been detected on a VMAX3 array.

Note

This event is only supported with HYPERMAX OS 5977 Q1 16.

1321

Table 259. SYMAPI_AEVENT2_UID_ALERT_CU_IMAGE_CHANGE

1321	SYMAPI_AEVENT2_UID_ALERT_CU_IMAGE_CHANGE
Category	status
Component	CU
Severity	Info
Message	A Control Unit Image has been [created | changed | deleted].

Indicates that a change to the list of Mainframe Splits has been detected on a VMAX3 array.

Note

This event is only supported with HYPERMAX OS 5977 Q1 16.

1330

Table 260. SYMAPI_AEVENT2_UID_ALERT_RDF_STATUS_CHANGE

1330	SYMAPI_AEVENT2_UID_ALERT_RDF_STATUS_CHANGE
Category	status
Component	SRDF [not present in logged events]
Severity	Info
Message	RDF status has changed to [online | offline | transmit idle] state.

1335

Table 261. SYMAPI_AEVENT2_UID_ALERT_VWITNESS_STATUS_CHANGE

1335	SYMAPI_AEVENT2_UID_ALERT_VWITNESS_STATUS_CHANGE
Category	status
Component	SRDF [not present in logged events]
Severity	Info
Message	Virtual Witness has changed state.

1336

Table 262. SYMAPI_AEVENT2_UID_ALERT_SNAPSL_SG_STATUS_CHANGE

1336	SYMAPI_AEVENT2_UID_ALERT_SNAPSL_SG_STATUS_CHANGE
Category	status
Component	SG
Severity	Info
Message	Snapshot policy has been attached to the SG. Snapshot policy has been detached from the SG. SG has been Suspended| Resumed for snapshot policy.

Indicates that an SG snapshot policy status change event has been detected.

NOTE: This event is only supported with PowerMaxOS 5978.669.669 or higher.

1338

Table 263. SYMAPI_AEVENT2_UID_ALERT_SNAPSL_EE_PROCESS_STATUS

1338	SYMAPI_AEVENT2_UID_ALERT_SNAPSL_EE_PROCESS_STATUS
Category	status
Component	Snapshot Service
Severity	Info
Message	Snapshot Execution Engine start processing Snapshot policy. Snapshot Execution Engine finished processing Snapshot policy. Snapshot Execution Engine is unable to process Snapshot policy. [ERROR:%s]", <error message> Snapshot Execution Engine failed taking snap for SG. [SG:SG_NAME] [ERROR:%s]",<error message>

Table 263. SYMAPI_AEVENT2_UID_ALERT_SNAPSL_EE_PROCESS_STATUS (continued)

1338	SYMAPI_AEVENT2_UID_ALERT_SNAPSL_EE_PROCESS_STATUS
	Snapshot Execution Engine skipped a snapshot for SG as Snapshot Policy is suspended on SG. [SG:SG_NAME]

This event indicates that a change in the Snapshot policy processing status has been detected.

NOTE: This event is only supported with PowerMaxOS 5978.669.669 or higher.

1400

Table 264. SYMAPI_AEVENT2_UID_AUTHZ_RULES_CHANGED

1400	SYMAPI_AEVENT2_UID_AUTHZ_RULES_CHANGED
Category	-
Component	-
Severity	Info
Message	User Authorization rules have changed.

Indicates that a change has been made to the User Authorization [symauth] database on the VMAX array.

Note

This is determined by checking for modifications to the User Authorization file stored in SFS.

1401

Table 265. SYMAPI_AEVENT2_UID_AUDIT_LOG_SIZE_T

1401	SYMAPI_AEVENT2_UID_AUDIT_LOG_SIZE_T
Category	-
Component	-
Severity	Determined by Threshold values. See below.
Message	Audit log is at <NN> percent of capacity (before wrapping).

This is a threshold event that tracks as a percentage the amount of data in an array Audit Log - how close the log is to its *wrapping* point where existing entries begin to be over-written.

Unless threshold values are supplied with the registration, the following defaults are used to derive an event severity:

If value is >= 80% — Warning

Otherwise — Normal

Notes

- What is actually reported is the position of the write pointer within the Audit Log as a percentage: 0% for the beginning, 100% for the end.
- This event is intended to be used as an indication that a backup of the Audit Log is needed - if appropriate.

1402

Table 266. SYMAPI_AEVENT2_UID_ALERT_SEC_AUDIT

1402	SYMAPI_AEVENT2_UID_ALERT_SEC_AUDIT
Category	-
Component	-
Severity	Info
Message	<< The actual message from the Audit Record >>

Indicates that a security-related record was written to the array Audit Log.

Notes

- This event is delivered when audit records with an Audit Class of SECURITY are detected in the Audit Log.
- The audit message is a free-form string that may span multiple lines (containing multiple new line characters).

1403

Table 267. SYMAPI_AEVENT2_UID_ALERT_SEC_FAIL_AUDIT

1403	SYMAPI_AEVENT2_UID_ALERT_SEC_FAIL_AUDIT
Category	-
Component	-
Severity	Info
Message	<< The actual message from the Audit Record >>

Indicates that a Security alert was written to the array Audit Log.

Notes

- This event is delivered when audit records corresponding to one of the following are detected in the Audit Log:
- Access Control failures (host-based access control, symacl).
- User Authorization failures (user-based access control, symauth).
- SymmWin/SSC Logon failures.
- SymmWin Logins
- iSCSI authorization failures
- The audit message is a free-form string that may span multiple lines (containing multiple new line characters).

1404

Table 268. SYMAPI_AEVENT2_UID_ALERT_ALL_AUDIT

1404	SYMAPI_AEVENT2_UID_ALERT_ALL_AUDIT
Category	-
Component	-
Severity	Info

Table 268. SYMAPI_AEVENT2_UID_ALERT_ALL_AUDIT (continued)

1404	SYMAPI_AEVENT2_UID_ALERT_ALL_AUDIT
Message	<< The actual message from the Audit Record >>.

Indicates some (any) record that is written to the array Audit Log.

Note

The audit message is a free-form string that may span multiple lines (containing multiple new line characters).

1512

Table 269. SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_ALLOC_CHANGE

1512	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_ALLOC_CHANGE
Category	Status
Component	Fast SRP <SRP_Name>
Severity	Threshold severity
Message	The Effective used capacity for SRP has changed to <NN> percent.

Table 270. Unisphere policy name

Unisphere policy name	Storage Resource Pool Free Space
Action type	Alert

Unless threshold values are supplied with the registration, the following defaults are used to derive an event severity:

If value is >= 95% — Fatal

If value is >= 80% — Critical

If value is >= 70% — Major

If value is >= 65% — Minor

If value is >= 60% — Warning

Otherwise — Normal

NOTE:

- Events are only delivered at multiples of 5% … for <NN> equal to 5%, 10%, 15%, … , 75%, 80%, 85%, 90%, 95% and 100%.
- Threshold events are only delivered when the severity, as determined by threshold values, changes.
- This event is only supported with HYPERMAX OS 5977 and higher.

1513

Table 271. SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FREE_CAP_CHANGE

1513	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FREE_CAP_CHANGE
Category	status

Table 271. SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FREE_CAP_CHANGE (continued)

1513	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FREE_CAP_CHANGE
Component	Fast SRP <SRP_Name>
Severity	Threshold severity
Message	The Snapshot capacity for SRP has changed to <NN> percent.

1514

Table 272. SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_CONFIG_CHANGE

1514	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_CONFIG_CHANGE
Category	status
Component	Fast SRP <SRP_Name>
Severity	Info
Message	The SRP configuration has changed.

1515

Table 273. SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_MAX_CAP_CHANGE

1515	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_MAX_CAP_CHANGE
Category	status
Component	Fast SRP <SRP_Name>
Severity	Info
Message	The SRP maximum capacity has changed to [0..9]+ GB.

1516

Table 274. SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FBA_ALLOC_CHANGE

1516	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FBA_ALLOC_CHANGE
Category	status
Component	Fast SRP <SRP_Name>
Severity	info
Message	The FBA Effective used capacity for SRP has changed to <NN> percent.

Table 275. Unisphere policy

Unisphere policy name	SRP Effective Used Capacity
Action type	Alert

1517

Table 276. SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_CKD_ALLOC_CHANGE

1517	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_CKD_ALLOC_CHANGE
Category	status
Component	Fast SRP <SRP_Name>
Severity	info
Message	The CKD Effective used capacity for SRP has changed to <NN> percent.

Table 277. Unisphere policy

Unisphere policy name	SRP Effective Used Capacity
Action type	Alert

1520

Table 278. SYMAPI_AEVENT2_UID_ALERT_FAST_SLO_NAME_CHANGE

1520	SYMAPI_AEVENT2_UID_ALERT_FAST_SLO_NAME_CHANGE
Category	status
Component	Fast SLO
Severity	Info
Message	Service Level name has changed to <SL name>.

1525

Table 279. SYMAPI_AEVENT2_UID_ALERT_SG_SNAP_CAP_CHANGE

1525	SYMAPI_AEVENT2_UID_ALERT_SG_SNAP_CAP_CHANGE
Category	status
Component	Storage Group
Severity	Info
Message	The Snapshot capacity used in an SG has changed to %u percent.

This event monitors the amount of snapshot RDP space that is used as a percentage of the overall size of the volumes within that SG.

When registering for this event, an application can express interest in a specific SG level or multiple SGs by filling out the `cmpnt_type` and `cmpnt_name` fields of the supplied SYMAPI_AEVENT2_REGISTER_REQ_T structure as follows:

- event.cmpnt_type = SYMAPI_AEVENT2_CMPNT_SYMM_SG;
- event.cmpnt_name = *<storage group name>*;

To receive events for any SG, these fields should be left with zero values.

For the component name, SGs can have wildcard characters in their names. For example, to get events for all SGs starting with *Sales_*, you can specify the component name as `Sales_*`.

Wildcard rules for registering as component name for this event are in the following table:

Table 280. Wildcard rules

Character	Description
?	Any single character
*	Any zero-or-more characters
[abcdef]	Any of these characters
[a-zA-z0-9]	Any of these characters
[!a-z]	Any character other than these characters
+	Zero-or-more occurrence of previous match

When registering for this event, note that threshold levels can go over 100%.

This example shows how to register for event 1525 for array 678 for every SG with the name prefix `SG_` with a Fatal threshold of 120% and a critical threshold of 100%.

```
storevntd:log_symmetrix_events=sid=678, 1525, comp=SG_*,thresh_fatal=120,
thresh_critical=100%;
```

NOTE: This event is only supported with PowerMaxOS 5978.669.669 and higher.

1540

Table 281. SYMAPI_AEVENT2_UID_ALERT_STOR_CONT_CONFIG_CHANGE

1540	SYMAPI_AEVENT2_UID_ALERT_STOR_CONT_CONFIG_CHANGE
Category	status
Component	Storage Container
Severity	Info
Message	Storage container has been [added | modified | deleted].

1541

Table 282. SYMAPI_AEVENT2_UID_ALERT_STOR_CONT_SUBSCR_CAP_CHANGE

1541	SYMAPI_AEVENT2_UID_ALERT_STOR_CONT_SUBSCR_CAP_CHANGE
Category	status
Component	Storage Container
Severity	Threshold Severity
Message	Storage container subscribed capacity has changed to [0..100] percent.

1550

Table 283. SYMAPI_AEVENT2_UID_ALERT_ISCSI_IP_IF_CHANGE

1550	SYMAPI_AEVENT2_UID_ALERT_ISCSI_IP_IF_CHANGE
Category	status
Component	iSCSI IP Interface <IpInterface_value>
Severity	Info
Message	iSCSI IP interface configuration has been [added | deleted | modified].

1551

Table 284. SYMAPI_AEVENT2_UID_ALERT_ISCSI_IP_ROUTE_CHANGE

1551	SYMAPI_AEVENT2_UID_ALERT_ISCSI_IP_ROUTE_CHANGE
Category	status
Component	iSCSI Route <IpRoute_value>
Severity	Info
Message	iSCSI IP route has been [added | removed].

1552

Table 285. SYMAPI_AEVENT2_UID_ALERT_ISCSI_TGT_CHANGE

1552	SYMAPI_AEVENT2_UID_ALERT_ISCSI_TGT_CHANGE
Category	status
Component	iSCSI Target <iSCSITarget_Name>
Severity	Info
Message	iSCSI Target has been [added | deleted | modified].

NOTE: This event is only supported on arrays running PowerMaxOS 5978 or lower.

1553

Table 286. SYMAPI_AEVENT2_UID_ALERT_ENDPOINT_CHANGE

1553	SYMAPI_AEVENT2_UID_ALERT_ENDPOINT_CHANGE
Category	status
Component	Symmetrix endpoint
Severity	Info
Message	Endpoint has been [added | deleted | modified].

NOTE: This event is only supported from PowerMaxOS 6079.

1555

Table 287. SYMAPI_AEVENT2_UID_ALERT_SYS_PROF_CHANGE

1555	SYMAPI_AEVENT2_UID_ALERT_SYS_PROF_CHANGE
Category	status
Component	System profile
Severity	Info
Message	The System profile has been [created | modified |deleted].

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1556

Table 288. SYMAPI_AEVENT2_UID_ALERT_CCW_CONFIG_CHANGE

1556	SYMAPI_AEVENT2_UID_ALERT_CCW_CONFIG_CHANGE
Category	status
Component	Control window
Severity	Info
Message	The Config change control windows has been [created | deleted | updated].

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1565

Table 289. SYMAPI_AEVENT2_UID_ALERT_SRP_RELIABILITY_STATE_CHANGE

1556	SYMAPI_AEVENT2_UID_ALERT_SRP_RELIABILITY_STATE_CHANGE
Category	status
Component	Control window
Severity	Info
Message	Reliability state of an SRP has changed to %s (was: %s)". `[Optimal|Failed|Degraded-NoSpare| Degraded-Rebuilding| Degraded-NoRebuild]`

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1566

Table 290. SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_OP_USAGE_PCT_CHG

1566	SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_OP_USAGE_PCT_CHG
Category	status
Component	Control window
Severity	Info
Message	FBA Over Provisioned effective capacity of the SRP has changed to <NN>% percent.

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1567

Table 291. SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_OP_USAGE_PCT_CHG

1567	SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_OP_USAGE_PCT_CHG
Category	status
Component	Control window
Severity	Info
Message	CKD Over Provisioned effective capacity of the SRP has changed to <NN>% percent.

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1568

Table 292. SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_PHYSICAL_CAP_CHG

1568	SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_PHYSICAL_CAP_CHG
Category	status
Component	Control window
Severity	Info
Message	The FBA physical capacity of an SRP has changed to <NN> GB.

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1569

Table 293. SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_PHYSICAL_CAP_CHG

1569	SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_PHYSICAL_CAP_CHG
Category	status

Table 293. SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_PHYSICAL_CAP_CHG (continued)

1569	SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_PHYSICAL_CAP_CHG
Component	Control window
Severity	Info
Message	The CKD physical capacity of an SRP has changed to <NN> GB.

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1570

Table 294. SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_EFF_RES_PCT_CHG

1570	SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_EFF_RES_PCT_CHG
Category	status
Component	Control window
Severity	Info
Message	FBA Effective Capacity resource usage in an SRP has changed to <NN>% percent .

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1571

Table 295. SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_EFF_RES_PCT_CHG

1571	SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_EFF_RES_PCT_CHG
Category	status
Component	Control window
Severity	Info
Message	CKD Effective Capacity resource usage in an SRP has changed to <NN>% percent .

NOTE: This event is only supported on arrays running PowerMaxOS 6079 or higher.

1600

Table 296. SYMAPI_AEVENT2_UID_GROUP_CONFIG

1600	SYMAPI_AEVENT2_UID_GROUP_CONFIG
Category	-
Entity	Not set -- set to NULL.
Component	DG or CG group, for example, DG=prod17 or CG=prod18

Table 296. SYMAPI_AEVENT2_UID_GROUP_CONFIG (continued)

1600	SYMAPI_AEVENT2_UID_GROUP_CONFIG
Severity	Info
Message	Group has changed.

Indicates that the composition of a device group (DG) or composite group (CG) has changed.

Notes

- The Entity name and type (normally a Symmetrix ID) are not provided for this event. When registering to receive the event, there is no need to supply an ID (symid=000194900123) - if one is supplied, it is ignored.
- If GNS is not enabled, this event indicates that a group definition in the Solutions Enabler database file on this host has changed.
- If GNS is enabled, this event indicates that a global group definition stored within GNS (on storage arrays) has changed.

1601

Table 297. SYMAPI_AEVENT2_UID_THRESH_GNS_SPACE

1601	SYMAPI_AEVENT2_UID_THRESH_GNS_SPACE
Category	GNS
Component	-
Severity	Threshold severity
Message	GNS is now using [0..100] percent of the available group space.

1602

Table 298. SYMAPI_AEVENT2_UID_THRESH_GNS_RECS

1602	SYMAPI_AEVENT2_UID_THRESH_GNS_RECS
Category	GNS
Component	-
Severity	Threshold severity
Message	GNS is now using [0..100] percent of the available group directory entries.

1650

Table 299. SYMAPI_AEVENT2_UID_POLL_CYCLE_COMPLETE

1650	SYMAPI_AEVENT2_UID_POLL_CYCLE_COMPLETE
Category	-
Component	-
Severity	Info
Message	The polling cycle is complete.

Event daemon events: Event IDs 5000-5200

Events in this range are generated by an external producer.

5000

Table 300. SMC event

5000	SMC event
Category	Event
Component	SMC
Severity	-
Message	-

Events generated by the SMC have the appropriate OID information to a given event (such as a "device configuration change"), but the Event Code (OID 1.3.6.1.4.1.1139.3.8888.2.0) displays a value of 5000 instead of the corresponding Event Code generated by the Event Daemon (for example 1205 in the case of a "device configuration change").

5200

Table 301. SPA event

5200	SPA event
Category	Event
Component	SPA
Severity	-
Message	-

Events generated by the SPA have the appropriate OID information to a given event (such as a "device configuration change"), but the Event Code (OID 1.3.6.1.4.1.1139.3.8888.2.0) displays a value of 5200 instead of the corresponding Event Code generated by the Event Daemon (for example 1205 in the case of a "device configuration change").

Unisphere policy name - Alert ID mapping

The following table presents an overview of Unisphere policy names and their corresponding Solutions Enabler Alert or Event IDs. For details on the events, use the hyperlinks.

NOTE: **Hotspare Invoked** events and **RVA Spare Coverage** events are not supported for arrays running PowerMaxOS 10 (6079) and higher.

Table 302. Unisphere policy name - Alert ID mapping

Unisphere policy name	Alert/Event ID	Solutions Enabler event definition
Hotspare Invoked	1054	SYMAPI_AEVENT2_UID_MOD_DISKDRV_SPARE_INVK
	1060	SYMAPI_AEVENT2_UID_MOD_RDF_HOTSPARE_INVK
	1210	SYMAPI_AEVENT2_UID_ALERT_HOTSPARE_CHANGE
CG Tripped	1109	SYMAPI_AEVENT2_UID_MOD_RDF_CG_TRIG
DB Checksum Triggered	1108	SYMAPI_AEVENT2_UID_MOD_DEV_CHKSUM
Port Link Status	1063	SYMAPI_AEVENT2_UID_MOD_FCPORT_FAIL
Environmental Alert	1067	SYMAPI_AEVENT2_UID_MOD_TEMP_OUT_OF_LIMIT

Table 302. Unisphere policy name - Alert ID mapping (continued)

Unisphere policy name	Alert/Event ID	Solutions Enabler event definition
	1150	SYMAPI_AEVENT2_UID_MOD_LCC_A_TEMP_HIGH
	1151	SYMAPI_AEVENT2_UID_MOD_LCC_B_TEMP_HIGH
SRDF/A Session entering Transmit Idle state	1138	SYMAPI_AEVENT2_UID_MOD_SRDFA_SE_TRANS_IDLE
SRDF/A Session recovered from a Transmit Idle state	1139	SYMAPI_AEVENT2_UID_MOD_SRDFA_SR_TRANS_IDLE
SRDF/A Session dropped, transit idle state timeout	1140	SYMAPI_AEVENT2_UID_MOD_SRDFA_TO_TRANS_IDLE
SRDF/A No Cycle Switch Alert	1159	SYMAPI_AEVENT2_UID_ALERT_SRDFA_NO_CYCLE_SWITCH
SRDF Job Flow Control Change	1160	SYMAPI_AEVENT2_UID_ALERT_SRDF_JFC_STATE_CHANGE
External disk group fully allocated	1162	SYMAPI_AEVENT2_UID_ALERT_EDISK_FULL
Device Status	1200	SYMAPI_AEVENT2_UID_ALERT_DEV_STATUS
Director Status	1202	SYMAPI_AEVENT2_UID_ALERT_DIRECTOR_STATUS
Port Status	1203	SYMAPI_AEVENT2_UID_ALERT_PORT_STATUS
Disk status	1204	SYMAPI_AEVENT2_UID_ALERT_DISK_STATUS
Target Enginuity Warning	N/A	N/A. Unisphere for PowerMax generates this alert for each storage system that is not running the minimum suggested Enginuity version.
Thin Device Allocation	1212	SYMAPI_AEVENT2_UID_THRESH_TDEV_ALLOCATED
Thin Device Usage	1213	SYMAPI_AEVENT2_UID_THRESH_TDEV_USED
Deferred Service Threshold Alert	1217	SYMAPI_AEVENT2_UID_ALERT_DFR_SVC_STATE
Array Component Events	1244	SYMAPI_AEVENT2_UID_ALERT_ARR_COMP_STATUS
RVA Spare Coverage	1247	SYMAPI_AEVENT2_UID_ALERT_DISK_SPARE_CVG
GK Utilization	1252	SYMAPI_AEVENT2_UID_BASED_THRESH_GK_UTIL_AVG
GK Timeout	1253	SYMAPI_AEVENT2_UID_BASED_GK_TIMEOUT
Storage Resource Pool Free Space	1512	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_ALLOC_CHANGE
Fabric Performance Impact Notification	1173	SYMAPI_AEVENT2_UID_MOD_FPIN_NOTIFY
SP Alerts	1073	SYMAPI_AEVENT2_UID_MOD_SP_NOT_RESP
	1074	SYMAPI_AEVENT2_UID_MOD_PHONEHOME_FAIL
	1082	SYMAPI_AEVENT2_UID_MOD_PHONEHOME_SUCCESS
	1091	SYMAPI_AEVENT2_UID_MOD_SP_CONNECT_TIME_NOT_FOUND
	1092	SYMAPI_AEVENT2_UID_MOD_SP_COMM_VIA_SERIAL
	1093	SYMAPI_AEVENT2_UID_MOD_REMMGMT_CONNECT
	1094	SYMAPI_AEVENT2_UID_MOD_REMMGMT_REJECT
	1095	SYMAPI_AEVENT2_UID_MOD_REMMGMT_DISCONNECT
	1096	SYMAPI_AEVENT2_UID_ALRM_MEMERR_SP_MEM_ABOVE_LIMIT
	1098	SYMAPI_AEVENT2_UID_MOD_SP_DIR_COMM_ERR
	1099	SYMAPI_AEVENT2_UID_MOD_SP_DIR_QRY_ERR

Table 302. Unisphere policy name - Alert ID mapping (continued)

Unisphere policy name	Alert/Event ID	Solutions Enabler event definition
	1100	SYMAPI_AEVENT2_UID_MOD_SP_COMM_VIA_DIR
	1101	SYMAPI_AEVENT2_UID_MOD_SENSOR_READ_ERR
	1102	SYMAPI_AEVENT2_UID_MOD_SP_CARD_ERR
	1104	SYMAPI_AEVENT2_UID_MOD_SP_DISK_FULL
	1107	SYMAPI_AEVENT2_UID_MOD_PHONEHOME_TRIG
	1110	SYMAPI_AEVENT2_UID_MOD_SP_REBOOTED
SRDF/Metro Automatically Suspended	1168	SYMAPI_AEVENT2_UID_MOD_RDF_METRO_SESS_SUSPEND
SRP Reliability State	1556	SYMAPI_AEVENT2_UID_ALERT_SRP_RELIABILITY_STATE_CHANGE
Device Config Change	1205	SYMAPI_AEVENT2_UID_ALERT_DEV_CONFIG_CHANGE
Event Lost Alert	2	SYMAPI_AEVENT2_UID_EVT_EVENTS_LOST
Event Overflow Alert	3	SYMAPI_AEVENT2_UID_EVT_EVENTS_OVERFLOW
SRDF Alerts	1061	SYMAPI_AEVENT2_UID_MOD_RDF_SIM_MSG
	1062	SYMAPI_AEVENT2_UID_MOD_RDF_ERR
SRDF/A Session	1112	SYMAPI_AEVENT2_UID_MOD_RDFA_INACTIVE
	1113	SYMAPI_AEVENT2_UID_MOD_RDFA_ACTIVE
	1123	SYMAPI_AEVENT2_UID_MOD_SESS_DROP_NO_RDF_LNK
	1130	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_FROM_HOST
	1131	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND_FROM_HOST
	1132	SYMAPI_AEVENT2_UID_MOD_SRDFA_DEACTIV_FROM_HOST
	1133	SYMAPI_AEVENT2_UID_MOD_SRDFA_CONS_DEACTIV_FROM_HOST
	1134	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP
	1135	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_PEND
	1158	SYMAPI_AEVENT2_UID_MOD_SRDFA_DROP_WPL_CP
SRDF/A Auto Recovery Active	1174	SYMAPI_AEVENT2_UID_MOD_SRDFA_AUTO_RESTART
SRDF/A Auto Recovery Inactive	1175	SYMAPI_AEVENT2_UID_MOD_SRDFA_CONSISTENT
SRDF Link Status	1064	SYMAPI_AEVENT2_UID_MOD_RDF_LINKS_DOWN
	1065	SYMAPI_AEVENT2_UID_MOD_RDF_LINKS_UP
	1080	SYMAPI_AEVENT2_UID_MOD_RDF_1LINK_DOWN
	1081	SYMAPI_AEVENT2_UID_MOD_RDF_1LINK_UP
Snapshot Policy Created Snapshot Policy Deleted Snapshot Policy Modified	1302	SYMAPI_AEVENT2_UID_ALERT_SNAPSL_CONFIG_CHANGE
Snapshot Policy Added to Storage Group	1336	SYMAPI_AEVENT2_UID_ALERT_SNAPSL_SG_STATUS_CHANGE

Table 302. Unisphere policy name - Alert ID mapping (continued)

Unisphere policy name	Alert/Event ID	Solutions Enabler event definition
Snapshot Policy Removed from Storage Group		
Snapshot Compliance for Storage Group Degraded Snapshot Compliance for Storage Group Improved	N/A	N/A. Unisphere for PowerMax generates this alert.
SRP Effective Used Capacity	1512 1516 1517	SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_ALLOC_CHANGE SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_FBA_ALLOC_CHANGE SYMAPI_AEVENT2_UID_ALERT_FAST_SRP_CKD_ALLOC_CHANGE
SRP Effective Capacity Resource Usage	1570 1571	SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_EFF_RES_PCT_CHG SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_EFF_RES_PCT_CHG
SRP Over Provisioned Capacity	1566 1567	SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_OP_USAGE_PCT_CHG SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_OP_USAGE_PCT_CHG
SRP Physical Capacity	1568 1569	SYMAPI_AEVENT2_UID_ALERT_SRP_FBA_PHYSICAL_CAP_CHG SYMAPI_AEVENT2_UID_ALERT_SRP_CKD_PHYSICAL_CAP_CHG
Storage Container Utilization	1541	SYMAPI_AEVENT2_UID_ALERT_STOR_CONT_SUBSCR_CAP_CHANGE
Backend Meta Data Usage	1225	SYMAPI_AEVENT2_UID_ALERT_BE_METADATAUSE_PCT_CHG
System Meta Data Utilization	1223	SYMAPI_AEVENT2_UID_ALERT_SYS_METADATAUSE_PCT_CHG
Local Replication Utilization	1222	SYMAPI_AEVENT2_UID_ALERT_LREP_CACHEUSE_PCT_CHG
Frontend Meta Data Usage	1224	SYMAPI_AEVENT2_UID_ALERT_FE_METADATAUSE_PCT_CHG
Snapshot SRP Utilization	1525	SYMAPI_AEVENT2_UID_ALERT_SG_SNAP_CAP_CHANGE

3

SYMCLI Return Codes

This chapter describes the SYMCLI Return Codes for Open VMS, Windows, and Unix.

Topics:

- SYMCLI Return Codes for OpenVMS
- SYMCLI Return Codes for Windows and Unix

SYMCLI Return Codes for OpenVMS

Return code handling for OpenVMS

A set of return codes for the various conditions possible with each SYMCLI command are provided for UNIX and Windows platforms. However, for the OpenVMS platforms, discernible return codes are not yet available and, therefore, require interpolation or special processing of the returned hexadecimal value (resulting from a $STATUS query). This is because the format of the OpenVMS return value also includes a severity level field in the three least significant bits (00-02). The return code is described in the next field (03-15). The table belows describes the set of possible return hex values and their associated meaning with SYMCLI on OpenVMS.

For OpenVMS, use write sys$output $status to view a return code. The following special DCL program can automatically convert these OpenVMS values to the proper SYMCLI return codes:

```
[SAMPLE-DCL]
    $ ! Example: Convert SYMCLI return codes.
    $ !
    $ a = ( %x0000ffff .and. 'p1)   ! Mask off bits 16-31.
    $ a = ( a/8 ) ! Shift 3-15 right.
    $ write sys$output 'a;          ! Print return code
    $                               ! without severity
    $                               ! level.    $ !
```

The following table lists the status or error codes that can be returned by the various SYMCLI commands on OpenVMS platforms.

Table 303. Return code handling for OpenVMS

Returned hex value	SYMCLI code	OpenVMS severity level	SYMCLI name
%X1FFF0001	00	1 (S)	SUCCESS
%X1FFF000C	01	4 (F)	FAIL
%X1FFF0012	02	2 (E)	DB_FILE_IS LOCKED
%X1FFF001A	03	2 (E)	SYM_IS_LOCKED
%X1FFF0023	04	3 (I)	NOT_ALL_SYNCHRONIZED
%X1FFF002B	05	3 (I)	NONE_SYNCHRONIZED
%X1FFF0033	06	3 (I)	NOT_ALL_UPDATED
%X1FFF003B	07	3 (I)	NONE_UPDATED
%X1FFF0043	08	3 (I)	NOT_ALL_PINGED
%X1FFF004B	09	3 (I)	NONE_PINGED
%X1FFF0053	10	3 (I)	NOT_ALL_SYNCHED

Table 303. Return code handling for OpenVMS (continued)

Returned hex value	SYMCLI code	OpenVMS severity level	SYMCLI name
%X1FFF005B	11	3 (I)	NONE_SYNCHED
%X1FFF0063	12	3 (I)	NOT_ALL_RESTORED
%X1FFF006B	13	3 (I)	NONE_RESTORED
%X1FFF0073	14	3 (I)	NOT_ALL_VALID
%X1FFF007B	15	3 (I)	NONE_VALID
%X1FFF0083	16	3 (I)	SYM_NOT_ALL_LOCKED
%X1FFF008B	17	3 (I)	SYM_NONE_LOCKED
%X1FFF0093	18	3 (I)	ALREADY_IN_STATE
%X1FFF009A	19	2 (E)	GK_IS_LOCKED
%X1FFF00A2	20	2 (E)	WP_TRACKS_IN_CACHE
%X1FFF00AA	21	2 (E)	NEED_MERGE_TO_RESUME
%X1FFF00B2	22	2 (E)	NEED_FORCE_TO_PROCEED
%X1FFF00BA	23	2 (E)	NEED_SYMFORCE_TO_PROCEED
%X1FFF00C3	24	3 (I)	NOT_IN_SYNC
%X1FFF00CB	25	3 (I)	NOT_ALL_SPLIT
%X1FFF00D3	26	3 (I)	NONE_SPLIT
%X1FFF00DB	27	3 (I)	NOT_ALL_SYNCINPROG
%X1FFF00E3	28	3 (I)	NONE_SYNCINPROG
%X1FFF00EB	29	3 (I)	NOT_ALL_RESTINPROG
%X1FFF00F3	30	3 (I)	NONE_RESTINPROG
%X1FFF00FB	31	3 (I)	NOT_ALL_SUSPENDED
%X1FFF0103	32	3 (I)	NONE_SUSPENDED
%X1FFF010B	33	3 (I)	NOT_ALL_FAILED_OVER
%X1FFF0113	34	3 (I)	NONE_FAILED_OVER
%X1FFF011B	35	3 (I)	NOT_ALL_UPDATEINPROG
%X1FFF0123	36	3 (I)	NONE_UPDATEINPROG
%X1FFF012B	37	3 (I)	NOT_ALL_PARTITIONED
%X1FFF0133	38	3 (I)	NONE_PARTITIONED
%X1FFF013B	39	3 (I)	NOT_ALL_ENABLED
%X1FFF0143	40	3 (I)	NONE_ENABLED
%X1FFF014B	41	3 (I)	NOT_ALL_SYNCHRONIZED_AND_ENABLED
%X1FFF0153	42	3 (I)	NONE_SYNCHRONIZED_AND_ENABLED
%X1FFF015B	43	3 (I)	NOT_ALL_SUSP_AND_ENABLED
%X1FFF0163	44	3 (I)	NONE_SUSP_AND_ENABLED

Table 303. Return code handling for OpenVMS (continued)

Returned hex value	SYMCLI code	OpenVMS severity level	SYMCLI name
%X1FFF016B	45	3 (I)	NOT_ALL_SUSP_AND_OFFLINE
%X1FFF0173	46	3 (I)	NONE_SUSP_AND_OFFLINE
%X1FFF017A	47	2 (E)	WONT_REVERSE_SPLIT
%X1FFF0182	48	2 (E)	CONFIG_LOCKED
%X1FFF018A	49	2 (E)	DEVS_ARE_LOCKED
%X1FFF0192	50	2 (E)	MUST_SPLIT_PROTECT
%X1FFF019A	51	2 (E)	PAIRED_WITH_A_DRV
%X1FFF01A2	52	2 (E)	PAIRED_WITH_A_SPARE
%X1FFF01AB	53	3 (I)	NOT_ALL_COPYINPROG
%X1FFF01B3	54	3 (I)	NONE_COPYINPROG
%X1FFF01BB	55	3 (I)	NOT_ALL_COPIED
%X1FFF01C3	56	3 (I)	NONE_COPIED
%X1FFF01CB	57	3 (I)	NOT_ALL_COPYONACCESS
%X1FFF01D3	58	3 (I)	NONE_COPYONACCESS
%X1FFF01DA	59	2 (E)	CANT_RESTORE_PROTECT
%X1FFF01E3	60	3 (I)	NOT_ALL_CREATED
%X1FFF01EB	61	3 (I)	NONE_CREATED
%X1FFF01F3	62	3 (I)	NOT_ALL_READY
%X1FFF01FB	63	3 (I)	NONE_READY
%X1FFF0202	64	2 (E)	SYM_IS_LOCKED
%X1FFF020A	65	2 (E)	SPLIT_IN_PROG
%X1FFF0213	66	3 (I)	NOT_ALL_COPYONWRITE
%X1FFF021B	67	3 (I)	NONE_COPYONWRITE
%X1FFF0223	68	3 (I)	Reserved for future use.
%X1FFF022B	69	3 (I)	Reserved for future use.
%X1FFF0233	70	3 (I)	NOT_ALL_CONSISTENT
%X1FFF023B	71	3 (I)	NONE_CONSISTENT
%X1FFF0242	72	2 (E)	MAX_SESSIONS_EXCEEDED
%X1FFF024B	73	3(I)	NOT_ALL_PRECOPY
%X1FFF0253	74	3(I)	NONE_PRECOPY
%X1FFF025B	75	3(I)	NOT_ALL_PRECOPY_CYCLED
%X1FFF0263	76	3(I)	NONE_PRECOPY_CYCLED
%X1FFF026A	77	2(E)	CONSISTENCY_TIMEOUT
%X1FFF0273	78	3(I)	NOT_ALL_FAILED
%X1FFF027B	79	3(I)	NONE_FAILED
%X1FFF0283	80	3(I)	CG_NOT_CONSISTENT

Table 303. Return code handling for OpenVMS (continued)

Returned hex value	SYMCLI code	OpenVMS severity level	SYMCLI name
%X1FFF028B	81	3(I)	NOT_ALL_CREATEINPROG
%X1FFF0293	82	3(I)	NONE_CREATEINPROG
%X1FFF029B	83	3(I)	NOT_ALL_RECREATEINPROG
%X1FFF02A3	84	3(I)	NONE_RECREATEINPROG
%X1FFF02AB	85	3(I)	NOT_ALL_TERMINPROG
%X1FFF02B3	86	3(I)	NONE_TERMINPROG
%X1FFF02BB	87	3(I)	NOT_ALL_VERIFYINPROG
%X1FFF02C3	88	3(I)	NONE_VERIFYINPROG
%X1FFF02CB	89	3(I)	NOT_ALL_VERIFIED
%X1FFF02D3	90	3(I)	NONE_VERIFIED
%X1FFF02DA	91	2(E)	RDFG_TRANSMIT_IDLE
%X1FFF02E2	92	2(E)	NOT_ALL_MIGRATED
%X1FFF02EA	93	2(E)	NONE_MIGRATED
%X1FFF02F2	94	2(E)	NOT_ALL_MIGRATEINPROG
%X1FFF02FA	95	2(E)	NONE_MIGRATEINPROG
%X1FFF0302	96	2(E)	NOT_ALL_INVALID
%X1FFF030A	97	2(E)	NONE_INVALID
%X1FFF04C2	98	2(E)	EMPTY_BACKUP
%X1FFF04CA	99	2(E)	NOT_ALL_BOUND
%X1FFF0802	100	2(E)	NONE_BOUND
%X1FFF080A	101	2(E)	NOT_ALL_BINDING
%X1FFF0812	102	2(E)	NONE_BINDING
%X1FFF081A	103	2(E)	NOT_ALL_ALLOCATING
%X1FFF0822	104	2(E)	NONE_ALLOCATING
%X1FFF082A	105	2(E)	NOT_ALL_DEALLOCATING
%X1FFF0832	106	2(E)	NONE_DEALLOCATING
%X1FFF083A	107	2(E)	NOT_ALL_DRAINING
%X1FFF0842	108	2(E)	NONE_DRAINING
%X1FFF084A	109	2(E)	NOT_ALL_UNBOUND
%X1FFF0882	110	2(E)	NONE_UNBOUND
%X1FFF088A	111	2(E)	NOT_ALL_NONPOOLED
%X1FFF0892	112	2(E)	NONE_NONPOOLED
%X1FFF0892	113	2(E)	NOT_ALL_DRAINWAIT
%X1FFF089A	114	2(E)	NONE_DRAINWAIT
%X1FFF08AA	115	2(E)	NOT_ALL_DISABLED
%X1FFF08B2	116	2(E)	NONE_DISABLED
%X1FFF08BA	117	2(E)	NOT_ALL_DEACTIVATED

Table 303. Return code handling for OpenVMS (continued)

Returned hex value	SYMCLI code	OpenVMS severity level	SYMCLI name
%X1FFF08C2	118	2(E)	NONE_DEACTIVATED
%X1FFF08CA	119	2(E)	NOT_ALL_UNBINDING
%X1FFF902	120	2(E)	NONE_UNBINDING
%X1FFF090A	121	2(E)	NOT_ALL_RECLAIMING
%X1FFF0912	122	2(E)	NONE_RECLAIMING
%X1FFF091A	123	2(E)	NOT_ALL_BALANCING
%X1FFF0922	124	2(E)	NONE_BALANCING
%X1FFF092A	125	2(E)	DEVMASK_VALDTE_FAILED
%X1FFF0932	126	2(E)	DEVMASK_FREQNT_CHANGES
%X11FF093A	127	2(E)	STAR_INV_STATE
%X11FFF0942	128	2(E)	STAR_ALLOWED_FROM_WKLD
%X1FFF094A	129	2(E)	STAR_INV_DEF_FILE_FMT
%X1FFF0982	130	2(E)	STAR_ACTN_FILE_ERROR
%X1FFF098A	131	2(E)	STAR_DEF_FILE_ERROR
%X1FFF0992	132	2(E)	STAR_SETUP_REQD
%X1FFF0992	133	2(E)	STAR_SETUP_INV_OPMODE
%X1FFF09A2	134	2(E)	STAR_OPMODE_REQD
%X1FFF09AA	135	2(E)	STAR_CTL_SITE_REQD
%X1FFF09B2	136	2(E)	STAR_WKLD_SITE_REQD
%X1FFF09BA	137	2(E)	STAR_WKLD_OP_REQD
%X1FFF09C2	138	2(E)	STAR_CREATE_GROUP_FAIL
%X1FFF09CA	139	2(E)	STAR_FULL_COPY_REQD
%X1FFF0A02	140	2(E)	STAR_INV_ACTION_WOF
%X1FFF0A0A	141	2(E)	STAR_BUILDCG_REQD
%X1FFF0A13	142	3(I)	NOT_ALL_FAILEDBACK
%X1FFF0A1B	143	3(I)	NONE_FAILEDBACK
%X1FFF0A23	144	3(I)	NOT_ALL_STOPPED
%X1FFF0A2B	145	3(I)	NONE_STOPPED
%X1FFF0A33	146	3(I)	NOT_ALL_CONSISTENT_NOINVALIDS
%X1FFF0A3B	147	3(I)	NONE_CONSISTENT_NOINVALIDS
%X1FFF0A43	148	3(I)	NOT_ALL_SYNCHRONOUS
%X1FFF0A4B	149	3(I)	NONE_SYNCHRONOUS
%X1FFF0A83	150	3(I)	NOT_ALL_SEMISYNCHRONOUS
%X1FFF0A8B	151	3(I)	NONE_SEMISYNCHRONOUS

Table 303. Return code handling for OpenVMS (continued)

Returned hex value	SYMCLI code	OpenVMS severity level	SYMCLI name
%X1FFF0A93	152	3(I)	NOT_ALL_ASYNCHRONOUS
%X1FFF0A9B	153	3(I)	NONE_ASYNCHRONOUS
%X1FFF0AA3	154	3(I)	NOT_ALL_ACP_WP
%X1FFF0AAB	155	3(I)	NONE_ACP_WP
%X1FFF0AB4	156	3(I)	NOT_ALL_ACP_DISK
%X1FFF0ABB	157	3(I)	NONE_ACP_DISK
%X1FFF0AC3	158	3(I)	NOT_ALL_COMPRESSING
%X1FFF0ACB	159	3(I)	NONE_COMPRESSING
%X1FFF0AC3	160	3(I)	NOT_ALL_UNCOMPRESSIN G
%X1FFF0B0B	161	3(I)	NONE_UNCOMPRESSING
%X1FFF0B13	162	3(I)	NOT_ALL_ESTABLISHED
%X1FFF0B1B	163	3(I)	NONE_ESTABLISHED
%X1FFF0B23	164	3(I)	NOT_ALL_ESTINPROG
%X1FFF0B2B	165	3(I)	NONE_ESTINPROG
%X1FFF0B33	166	3(I)	NOT_ALL_LINKED
%X1FFF0B3B	167	3(I)	NONE_LINKED
%X1FFF0B43	168	3(I)	NOT_ALL_DEFINED
%X1FFF0B4B	169	3(I)	NONE_DEFINED
%X1FFF0B83	170	3(I)	NOT_ALL_CIPLINKED
%X1FFF0B8B	171	3(I)	NONE_CIPLINKED
%X1FFF0B93	172	3(I)	NOT_ALL_COPIEDLINKED
%X1FFF0B9B	173	3(I)	NONE_COPIEDLINKED
%X1FFF0BA3	174	3(I)	NOT_ALL_DESTAGED
%X1FFF0BAB	175	3(I)	NONE_DESTAGED
%X1FFF0BB3	176	3(I)	NOT_ALL_FREEING_ALL
%X1FFF0BBB	177	3(I)	NONE_FREEING_ALL
%X1FFF0BC3	178	3(I)	NOT_ALL_ACTIVE
%X1FFF0BCB	179	3(I)	NONE_ACTIVE
%X1FFF0C03	180	3(I)	NOT_ALL_DRAINED
%X1FFF0C0B	181	3(I)	NONE_DRAINED
%X1FFF0C13	182	3(I)	NOT_ALL_ACTIVEACTIVE
%X1FFF0C1B	183	3(I)	NONE_ACTIVEACTIVE
%X1FFF0C23	184	3(I)	NOT_ALL_ACTIVEBIAS
%X1FFF0C2B	185	3(I)	NONE_ACTIVEBIAS

SYMCLI Return Codes for Windows and Unix

The following table lists the status or error codes that can be returned by the various SYMCLI commands on a Windows and UNIX (for example, in a UNIX C shell, returned using echo $status).

Table 304. Return code handling for Windows and UNIX

Code	Code symbol	Description
0	SUCCESS	CLI call completed successfully.
1	FAIL	CLI call failed.
2	DB_FILE_IS_LOCKED	Another process has an exclusive lock on the Host database file.
3	SYM_IS_LOCKED	Another process has an exclusive lock on the Symmetrix.
4	NOT_ALL_SYNCHRONIZED	NOT all of the mirrored pairs are in the 'Synchronized' state.
5	NONE_SYNCHRONIZED	NONE of the mirrored pairs are in the 'Synchronized' state.
6	NOT_ALL_UPDATED	NOT all of the mirrored pairs are in the 'Updated' state.
7	NONE_UPDATED	NONE of the mirrored pairs are in the 'Updated' state.
8	NOT_ALL_PINGED	NOT all of the remote Symmetrix units can be pinged.
9	NONE_PINGED	NONE of the remote Symmetrix units can be pinged.
10	NOT_ALL_SYNCHED	NOT all of the mirrored pairs are in the 'Synchronized' state.
11	NONE_SYNCHED	NONE of the mirrored pairs are in the 'Synchronized' state.
12	NOT_ALL_RESTORED	NOT all of the pairs are in the 'Restored' state.
13	NONE_RESTORED	NONE of the pairs are in the 'Restored' state.
14	NOT_ALL_VALID	NOT all of the mirrored pairs are in a valid state.
15	NONE_VALID	NONE of the mirrored pairs are in a valid state.
16	SYM_NOT_ALL_LOCKED	NOT all of the specified Symmetrix units have an exclusive Symmetrix lock.
17	SYM_NONE_LOCKED	NONE of the specified Symmetrix units have an exclusive Symmetrix lock.
18	ALREADY_IN_STATE	The Device(s) is (are) already in the desired state or mode.
19	GK_IS_LOCKED	All GateKeeper devices to the Symmetrix unit are currently locked.
20	WP_TRACKS_IN_CACHE	Operation cannot proceed because the target device has Write Pending I/O in the cache.

Table 304. Return code handling for Windows and UNIX (continued)

Code	Code symbol	Description
21	NEED_MERGE_TO_RESUME	Operation cannot proceed without first performing a merge of the RDF Track Tables.
22	NEED_FORCE_TO_PROCEED	Operation cannot proceed in the current state except if you specify a force flag.
23	NEED_SYMFORCE_TO_PROCEED	Operation cannot proceed in the current state except if you specify a symforce flag.
24	NOT_IN_SYNC	The Symmetrix configuration and the database file are NOT in sync.
25	NOT_ALL_SPLIT	NOT all of the mirrored pairs are in the 'Split' state.
26	NONE_SPLIT	NONE of the mirrored pairs are in the 'Split' state.
27	NOT_ALL_SYNCINPROG	NOT all of the mirrored pairs are in the 'SyncInProg' state.
28	NONE_SYNCINPROG	NONE of the mirrored pairs are in the 'SyncInProg' state.
29	NOT_ALL_RESTINPROG	NOT all of the pairs are in the 'RestInProg' state.
30	NONE_RESTINPROG	NONE of the pairs are in the 'RestInProg' state.
31	NOT_ALL_SUSPENDED	NOT all of the mirrored pairs are in the 'Suspended' state.
32	NONE_SUSPENDED	NONE of the mirrored pairs are in the 'Suspended' state.
33	NOT_ALL_FAILED_OVER	NOT all of the mirrored pairs are in the 'Failed Over' state.
34	NONE_FAILED_OVER	NONE of the mirrored pairs are in the 'Failed Over' state.
35	NOT_ALL_UPDATEINPROG	NOT all of the mirrored pairs are in the 'R1 UpdInProg' state.
36	NONE_UPDATEINPROG	NONE of the mirrored pairs are in the 'R1 UpdInProg' state.
37	NOT_ALL_PARTITIONED	NOT all of the mirrored pairs are in the 'Partitioned' state.
38	NONE_PARTITIONED	NONE of the mirrored pairs are in the 'Partitioned' state.
39	NOT_ALL_ENABLED	NOT all of the mirrored pairs are in the 'Enabled' consistency state.
40	NONE_ENABLED	NONE of the mirrored pairs are in the 'Enabled' consistency state.
41	NOT_ALL_SYNCHRONIZED_AND_ENABLED	NOT all of the mirrored pairs are in the 'Synchronized' rdf state and the 'Enabled' consistency state.

Table 304. Return code handling for Windows and UNIX (continued)

Code	Code symbol	Description
42	NONE_SYNCHRONIZED_AND_ENABLED	NONE of the mirrored pairs are in the 'Synchronized' rdf state and in the 'Enabled' consistency state.
43	NOT_ALL_SUSP_AND_ENABLED	NOT all of the mirrored pairs are in the 'Suspended' rdf state and 'Enabled' consistency state.
44	NONE_SUSP_AND_ENABLED	NONE of the mirrored pairs are in the 'Suspended' rdf state and the 'Enabled' consistency state.
45	NOT_ALL_SUSP_AND_OFFLINE	NOT all of the mirrored pairs are in the 'Suspended' rdf state and 'Offline' link suspend state.
46	NONE_SUSP_AND_OFFLINE	NONE of the mirrored pairs are in the 'Suspended' rdf state and the 'Offline' link suspend state.
47	WONT_REVERSE_SPLIT	Performing this operation at this time will not allow you to perform the next BCV split as a reverse split.
48	CONFIG_LOCKED	Access to the configuration server is locked.
49	DEVS_ARE_LOCKED	One or more devices are locked.
50	MUST_SPLIT_PROTECT	If a device was restored with the protect option, it must be split with the protect option.
51	PAIRED_WITH_A_DRV	The function can not be performed since the STD device is already paired with a DRV device.
52	PAIRED_WITH_A_SPARE	NOT all of the Snap pairs are in the 'Copy in progress' state.
53	NOT_ALL_COPYINPROG	NOT all of the pairs are in the 'CopyInProgress' state.
54	NONE_COPYINPROG	NONE of the pairs are in the 'CopyInProgress' state.
55	NOT_ALL_COPIED	NOT all of the pairs are in the 'Copied' state.
56	NONE_COPIED	NONE of the pairs are in the 'Copied' state.
57	NOT_ALL_COPYONACCESS	NOT all of the pairs are in the 'CopyonAccess' state.
58	NONE_COPYONACCESS	NONE of the pairs are in the 'CopyonAccess' state.
59	CANT_RESTORE_PROTECT	The protected restore operation can not be completed because there are write pendings or the BCV mirrors are not synchronized.
60	NOT_ALL_CREATED	NOT all of the pairs are in the 'Created' state.

Table 304. Return code handling for Windows and UNIX (continued)

Code	Code symbol	Description
61	NONE_CREATED	NONE of the pairs are in the 'Created' state.
62	NOT_ALL_READY	NOT all of the BCVs local mirrors are in the 'Ready' state.
63	NONE_READY	NONE of the BCVs local mirrors are in the 'Ready' state.
64	STD_BKGRND_SPLIT_IN_PROG	The operation cannot proceed because the STD Device is splitting in the Background.
65	SPLIT_IN_PROG	The operation cannot proceed because the pair is splitting.
66	NOT_ALL_COPYONWRITE	NOT all of the pairs are in the 'CopyOnWrite' state.
67	NONE_COPYONWRITE	NONE of the pairs are in the 'CopyOnWrite' state.
68	NOT_ALL_RECREATED	Not all devices are in the 'Recreated' state.
69	NONE_RECREATED	No devices are in the 'Recreated' state.
70	NOT_ALL_CONSISTENT	NOT all of the mirrored pairs are in the 'Consistent' state.
71	NONE_CONSISTENT	NONE of the mirrored pairs are in the 'Consistent' state.
72	MAX_SESSIONS_EXCEEDED	The maximum number of sessions has been exceeded for the specified device.
73	NOT_ALL_PRECOPY	Not all source devices are in the 'Precopy' state.
74	NONE_PRECOPY	No source devices are in the 'Precopy' state.
75	NOT_ALL_PRECOPY_CYCLED	Not all source devices have completed one precopy cycle.
76	NONE_PRECOPY_CYCLED	No source devices have completed one precopy cycle.
77	CONSISTENCY_TIMEOUT	The operation failed because of a Consistency window timeout.
78	NOT_ALL_FAILED	NOT all of the pairs are in the 'Failed' state.
79	NONE_FAILED	NONE of the pairs are in the 'Failed' state.
80	CG_NOT_CONSISTENT	CG is NOT RDF-consistent.
81	NOT_ALL_CREATEINPROG	NOT all of the pairs are in the 'CreateInProg' state.
82	NONE_CREATEINPROG	None of the pairs are in the 'CreateInProg' state.
83	NOT_ALL_RECREATEINPROG	NOT all of the pairs are in the 'RecreateInProg' state.

Table 304. Return code handling for Windows and UNIX (continued)

Code	Code symbol	Description
84	NONE_RECREATEINPROG	None of the pairs are in the 'RecreateInProg' state.
85	NOT_ALL_TERMINPROG	NOT all of the pairs are in the 'TerminateInProg' state.
86	NONE_TERMINPROG	None of the pairs are in the 'TerminateInProg' state.
87	NOT_ALL_VERIFYINPROG	NOT all of the pairs are in the 'VerifyInProg' state.
88	NONE_VERIFYINPROG	None of the pairs are in the 'VerifyInProg' state.
89	NOT_ALL_VERIFIED	NOT all of the pairs are in the requested states.
90	NONE_VERIFIED	NONE of the pairs are in the requested states Note: This message is returned when multiple states are verified at once.
91	RDFG_TRANSMIT_IDLE	RDF group is operating in SRDF/A Transmit Idle.
92	NOT_ALL_MIGRATED	Not all devices are in the ' Migrated' state.
93	NONE_MIGRATED	None of devices are in the 'Migrated' state.
94	NOT_ALL_MIGRATEINPROG	Not all devices are in the 'MigrateInProg' state.
95	NONE_MIGRATEINPROG	None of devices are in the 'MigrateInProg' state.
96	NOT_ALL_INVALID	Not all devices are in the 'Invalid' state.
97	NONE_INVALID	None of devices are in the 'Invalid' state.
98	EMPTY_BACKUP	Cannot create an empty backup file.
99	NOT_ALL_BOUND	Not all devices are in the 'Bound' state.
100	NONE_BOUND	None of the devices are in the 'Bound' state
101	NOT_ALL_BINDING	Not all devices are in the 'Binding' state.
102	NONE_BINDING	None of the devices are in the 'Binding' state.
103	NOT_ALL_ALLOCATING	Not all devices are in the 'Allocating' state.
104	NONE_ALLOCATING	None of the devices are in the 'Allocating' state
105	NOT_ALL_DEALLOCATING	Not all devices are in the 'Deallocating' state.
106	NONE_DEALLOCATING	None of the devices are in the 'Deallocating' state.

Table 304. Return code handling for Windows and UNIX (continued)

Code	Code symbol	Description
107	NOT_ALL_DRAINING	Not all devices are in the 'Draining' state.
108	NONE_DRAINING	None of the devices are in the 'Draining' state.
109	NOT_ALL_UNBOUND	Not all devices are in the 'Unbound' state.
110	NONE_UNBOUND	None of the devices are in the 'Unbound' state.
111	NOT_ALL_NONPOOLED	Not all devices are in the 'Nonpooled' state.
112	NONE_NONPOOLED	None of the devices are in the 'Nonpooled' state.
113	NOT_ALL_DRAINWAIT	Not all devices are in the 'Drainwait' state.
114	NONE_DRAINWAIT	None of the devices are in the 'Drainwait' state.
115	NOT_ALL_DISABLED	Not all devices are in the 'Disabled' state.
116	NONE_DISABLED	None of the devices are in the 'Disabled' state.
117	NOT_ALL_DEACTIVATED	Not all devices are in the 'Deactivated' state.
118	NONE_DEACTIVATED	None of the devices are in the 'Deactivated' state.
119	NOT_ALL_UNBINDING	Not all devices are in the 'Unbinding' state.
120	NONE_UNBINDING	None of the devices are in the 'Unbinding' state.
121	NOT_ALL_RECLAIMING	Not all devices are in the 'Reclaiming' state.
122	NONE_RECLAIMING	None of the devices are in the 'Reclaiming' state.
123	NOT_ALL_BALANCING	Not all devices are in the 'Balancing' state.
124	NONE_BALANCING	None of the devices are in the 'Balancing' state.
125	DEVMASK_VALDTE_FAILED	The device masking data contains inconsistencies.
126	DEVMASK_FREQNT_CHANGES	The device masking data is continuously changing. Please try again.
127	STAR_INV_STATE	The operation is not allowed in the current Star state.
128	STAR_ALLOWED_FROM_WKLD	The operation is allowed from workload site only.
129	STAR_INV_DEF_FILE_FMT	The Star definition file format is not valid.

Table 304. Return code handling for Windows and UNIX (continued)

Code	Code symbol	Description
130	STAR_ACTN_FILE_ERROR	An error occured while accessing the Star action file.
131	STAR_DEF_FILE_ERROR	An error occured while accessing the Star definition file.
132	STAR_SETUP_REQD	The Star Setup action is required.
133	STAR_SETUP_INV_OPMODE	The specified Star mode of operation is not valid.
134	STAR_OPMODE_REQD	The Star mode of operation is required for this operation.
135	STAR_CTL_SITE_REQD	The Star control site name is required for this operation.
136	STAR_WKLD_SITE_REQD	The Star workload site name is required for this operation.
137	STAR_WKLD_OP_REQD	The Star workload site name and Star mode of operation is required for this operation.
138	STAR_CREATE_GROUP_FAIL	An error occured while creating Star group.
139	STAR_FULL_COPY_REQD	Star differential resync is not available. The FULL_COPY flag is required.
140	STAR_INV_ACTION_WOF	Operation can not be performed except if force flag is used.
141	STAR_BUILDCG_REQD	The Star Buildcg action is required.
142	NOT_ALL_FAILEDBACK	Not all devices are in the 'Failedback' state.
143	NONE_FAILEDBACK	None of the devices are in the 'Failedback' state.
144	NOT_ALL_STOPPED	Not all devices are in the 'Stopped' state.
145	NONE_STOPPED	None of the devices are in the 'Stopped' state.
146	NOT_ALL_CONSISTENT_NOINVALIDS	Not all devices are in the 'Consistent with no invalid tracks' state.
147	NONE_CONSISTENT_NOINVALIDS	None of the devices are in the 'Consistent with no invalid tracks' state
148	NOT_ALL_SYNCHRONOUS	Not all devices are in the 'Synchronous RDF' mode.
149	NONE_SYNCHRONOUS	None of the devices are in the 'Synchronous RDF' mode.
150	NOT_ALL_SEMISYNCHRONOUS	Not all devices are in the 'Semi-Synchronous RDF' mode.
151	NONE_SEMISYNCHRONOUS	None of the devices are in the 'Semi-Synchronous RDF' mode.
152	NOT_ALL_ASYNCHRONOUS	Not all devices are in the 'Asynchronous RDF' mode.

Table 304. Return code handling for Windows and UNIX (continued)

Code	Code symbol	Description
153	NONE_ASYNCHRONOUS	None of the devices are in the 'Asynchronous RDF' mode.
154	NOT_ALL_ACP_WP	Not all devices are in the 'Adaptive Copy Write Pending RDF' mode.
155	NONE_ACP_WP	None of the devices are in the 'Adaptive Copy Write Pending RDF' mode.
156	NOT_ALL_ACP_DISK	Not all devices are in the 'Adaptive Copy Disk RDF' mode.
157	NONE_ACP_DISK	None of the devices are in the 'Adaptive Copy Disk RDF' mode.
158	NOT_ALL_COMPRESSING	Not all devices are in the 'Compressing' state.
159	NONE_COMPRESSING	None of the devices are in the 'Compressing' state.
160	NOT_ALL_UNCOMPRESSING	Not all devices are in the 'Uncompressing' state.
161	NONE_UNCOMPRESSING	Not all devices are in the 'Established' state.
162	NOT_ALL_ESTABLISHED	Not all devices are in the 'Established' state.
163	NONE_ESTABLISHED	None of the devices are in the 'Established' state.
164	NOT_ALL_ESTINPROG	Not all devices are in the 'Estinprog' state.
165	NONE_ESTINPROG	None of the devices are in the 'Estinprog' state.
166	NOT_ALL_LINKED	Not all devices are in the 'Linked' state.
167	NONE_LINKED	None of the devices are in the 'Linked' state.
168	NOT_ALL_DEFINED	Not all devices are in the 'Defined' state.
169	NONE_DEFINED	None of the devices are in the 'Defined' state.
170	NOT_ALL_CIPLINKED	Not all linked devices are in the 'Copyinprog' state.
171	NONE_CIPLINKED	None of the linked devices are in the 'Copyinprog' state.
172	NOT_ALL_COPIEDLINKED	Not all linked devices are in the 'Copied' state.
173	NONE_COPIEDLINKED	None of the linked devices are in the 'Copied' state.
174	NOT_ALL_DESTAGED	Not all devices are in the 'Destaged' state.
175	NONE_DESTAGED	None of the devices are in the 'Destaged' state.
176	NOT_ALL_FREEING_ALL	Not all devices are in the 'FreeingAll' state.

Table 304. Return code handling for Windows and UNIX (continued)

Code	Code symbol	Description
177	NONE_FREEING_ALL	None of the devices are in the 'FreeingAll' state.
178	NOT_ALL_ACTIVE	Not all devices are in the 'Active' state.
179	NONE_ACTIVE	"None of the devices are in the 'Active' state.
180	NOT_ALL_DRAINED	Not all devices are in the 'Drained' state.
181	NONE_DRAINED	None of the devices are in the 'Drained' state.
182	NOT_ALL_ACTIVEACTIVE	Not all devices are in the 'ActiveActive' state.
183	NONE_ACTIVEACTIVE	None of the devices are in the 'ActiveActive' state.
184	NOT_ALL_ACTIVEBIAS	Not all devices are in the 'ActiveBias' state.
185	NONE_ACTIVEBIAS	None of the devices are in the 'ActiveBias' state.

Index

A

ANR0000I 20
ANR0001I 21
ANR0002I 21
ANR0003I 21
ANR0004I 21
ANR0005E 21
ANR0006E 22
ANR0008I 22
ANR0009E 22
ANR0010I 22
ANR0011E 23
ANR0012I 23
ANR0013I 23
ANR0015E 23
ANR0016I 24
ANR0017I 24
ANR0018E 24
ANR0020I 25
ANR0021I 25
ANR0022I 25
ANR0023I 25
ANR0024I 25
ANR0030E 26
ANR0031E 27
ANR0032E 27
ANR0033E 27
ANR0034I 27
ANR0104E 28
ANR0105E 28
ANR0106I 28
ANR0107E 28
ANR0108E 28
ANR0110E 28
ANR0111I 29
ANR0112I 29
ANR0113I 29
ANR0114I 29
ANR0115I 29
ANR0116I 29
ANR0120I 30
ANR0121I 30
ANR0122I 30
ANR0123I 30
ANR0140E 31
ANR0141E 31
ANR0142E 31
ANR0143E 31
ANR0144E 32
ANR0145E 32
ANR0146I 32
ANR0147I 32
ANR0148E 32
ANR0149D 33
ANR0150E 33
ANR0151E 33
ANR0152E 33
ANR0153E 34
ANR0154E 34
ANR0200E 35
ANR0201E 35
ANR0202E 35
ANR0204E 35
ANR0205E 35
ANR0207S 36
ANR0208E 36
ANR0209I 36
ANR0210E 36
ANR0211E 37
ANR0212E 37
ANR0220I 37
ANR0221E 38
ANR0222S 38
ANR0223I 38
ANR0224S 38
ANR0225E 39
ANR0300E 39
ANR0301I 39
ANR0302I 39
ANR0303I 39
ANR0304I 39
ANR0305E 40
ANR0306E 40
ANR0307E 40

S

symcli return codes 143
symcli return codes openvms 137