


— THE SOLUTION..

Core Plus CHP-5721L

A BIGGER boost of pure refreshment

Own the best of size, substances and style


The New Core Plus: Designed for Big
Family and Corporate

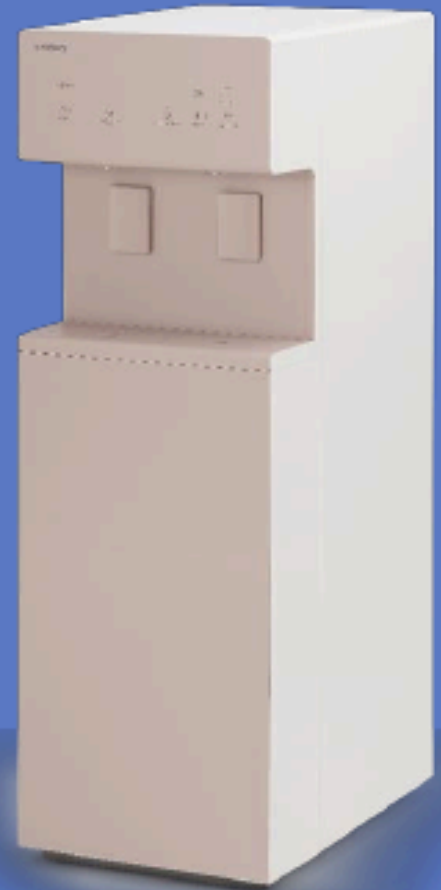

Product Specifications, Features And Functions

Product Strategy

Model Code		Core Plus CHP-572IL
WaterTemperature		Hot, Cold, Ambient
Extraction		Digital Extraction
Tank Size	TOTAL	21.1L
	Ambient	10.4L
	Cold	7.1L
	Hot	3.6L
Filter Type	Pre-Filter	14" Neo Sense / 6 months
	Main Filter	14" RO Membrane / 24 months
	After Filter	14" Plus Inno-Sense / 18 months
Sterilisation	UV Care	Yes
Environmental Response	Internal Pump	Optional
	Refrigerant	R-600a
Design	Color	Oatmeal Beige
	Dimensions W x Dx H mm	490*320*1260 mm, 33 kg
Power Consumption	Heater	530 W - 660 W
	Compressor	0.7A
Product weight (kg)		33kg

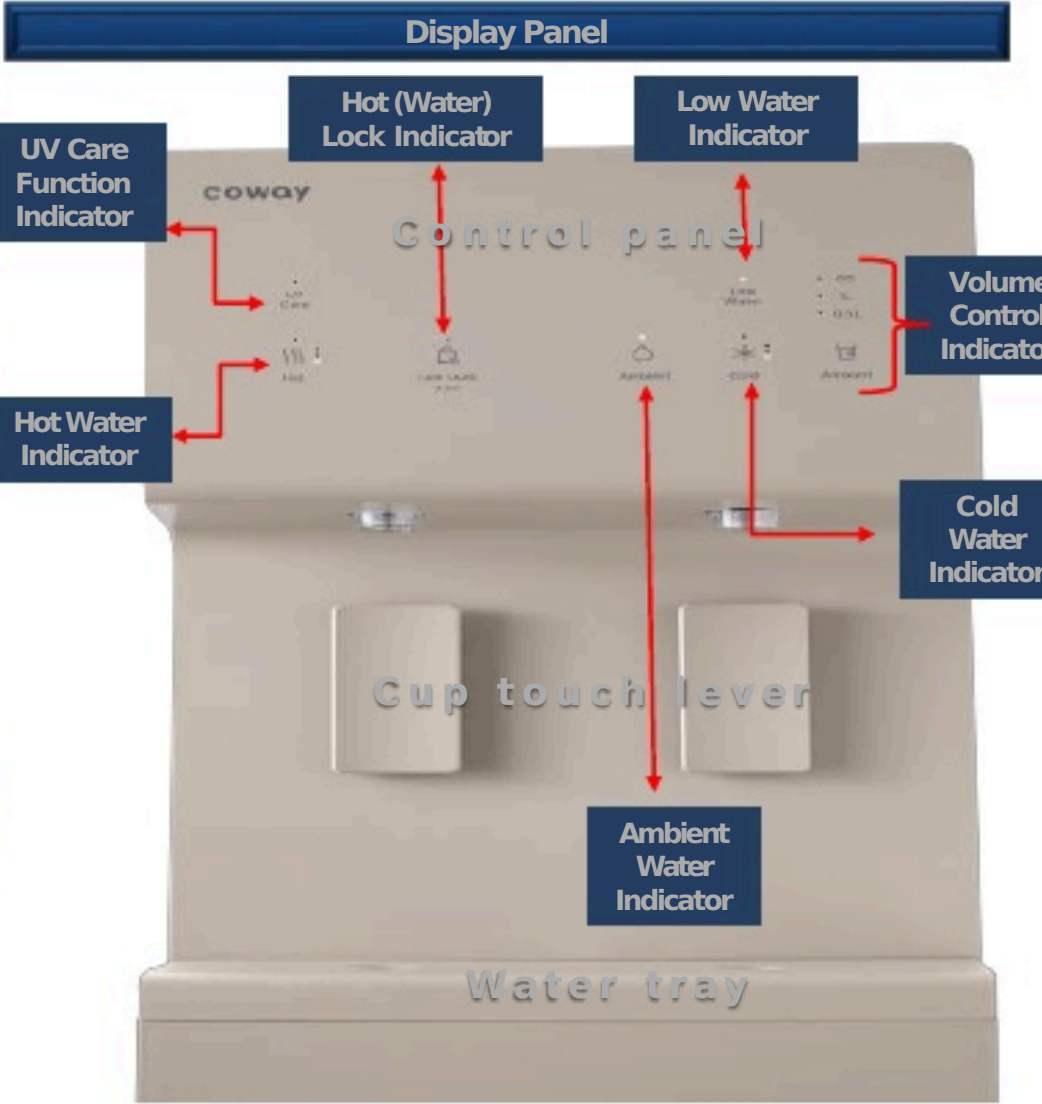

Confidential

coway



**CORE PLUS
CHP-5721 L**



RM 139




RM 6500



**Hot, Cold,
Ambient**



RM 745

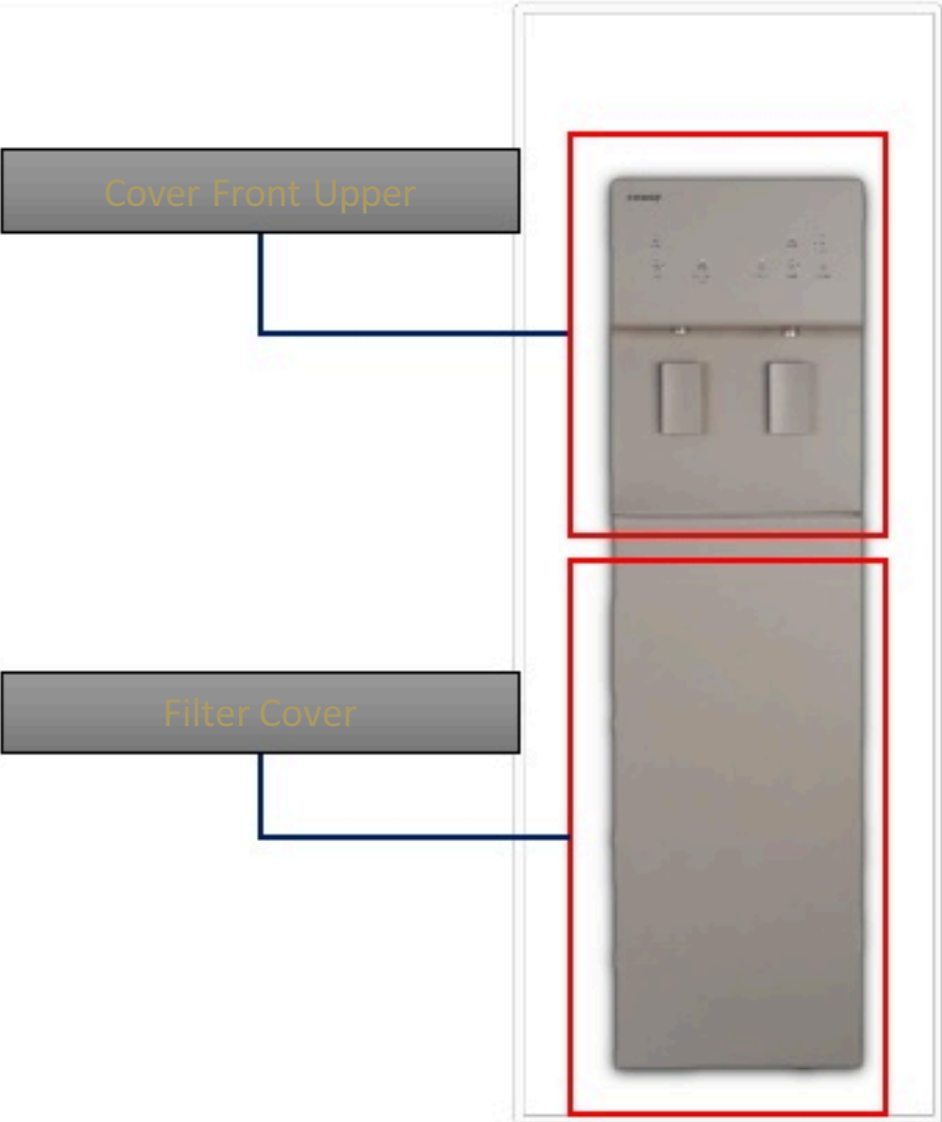

Front View

Condenser


Power Cord





Rear View


Drain Water Outlet-Blue Hose


Water Inlet - Orange Hose

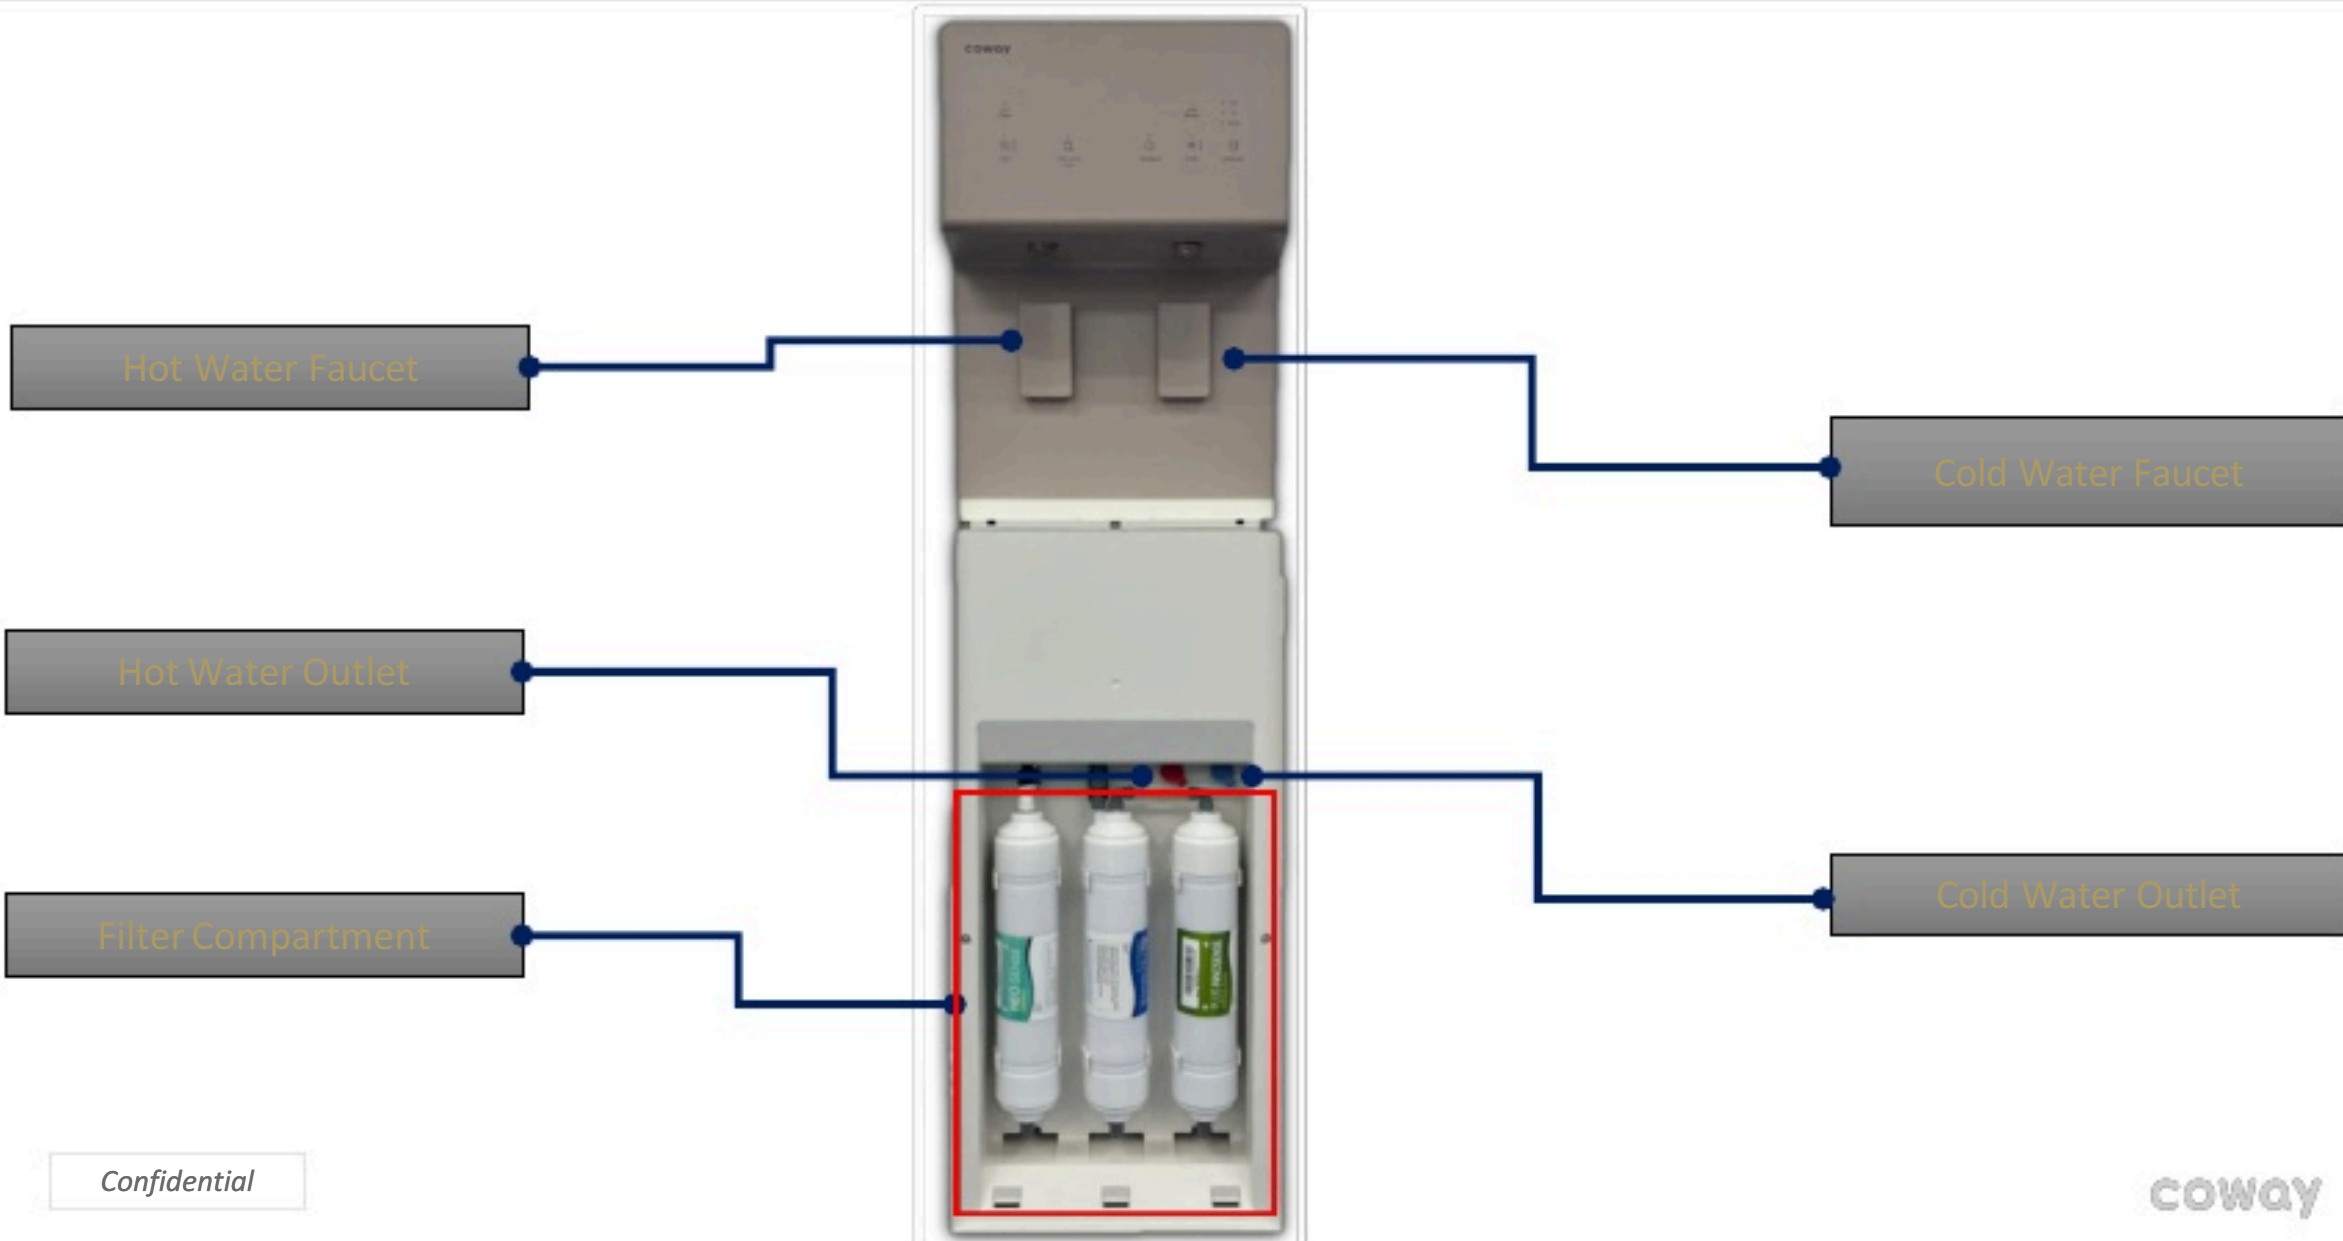

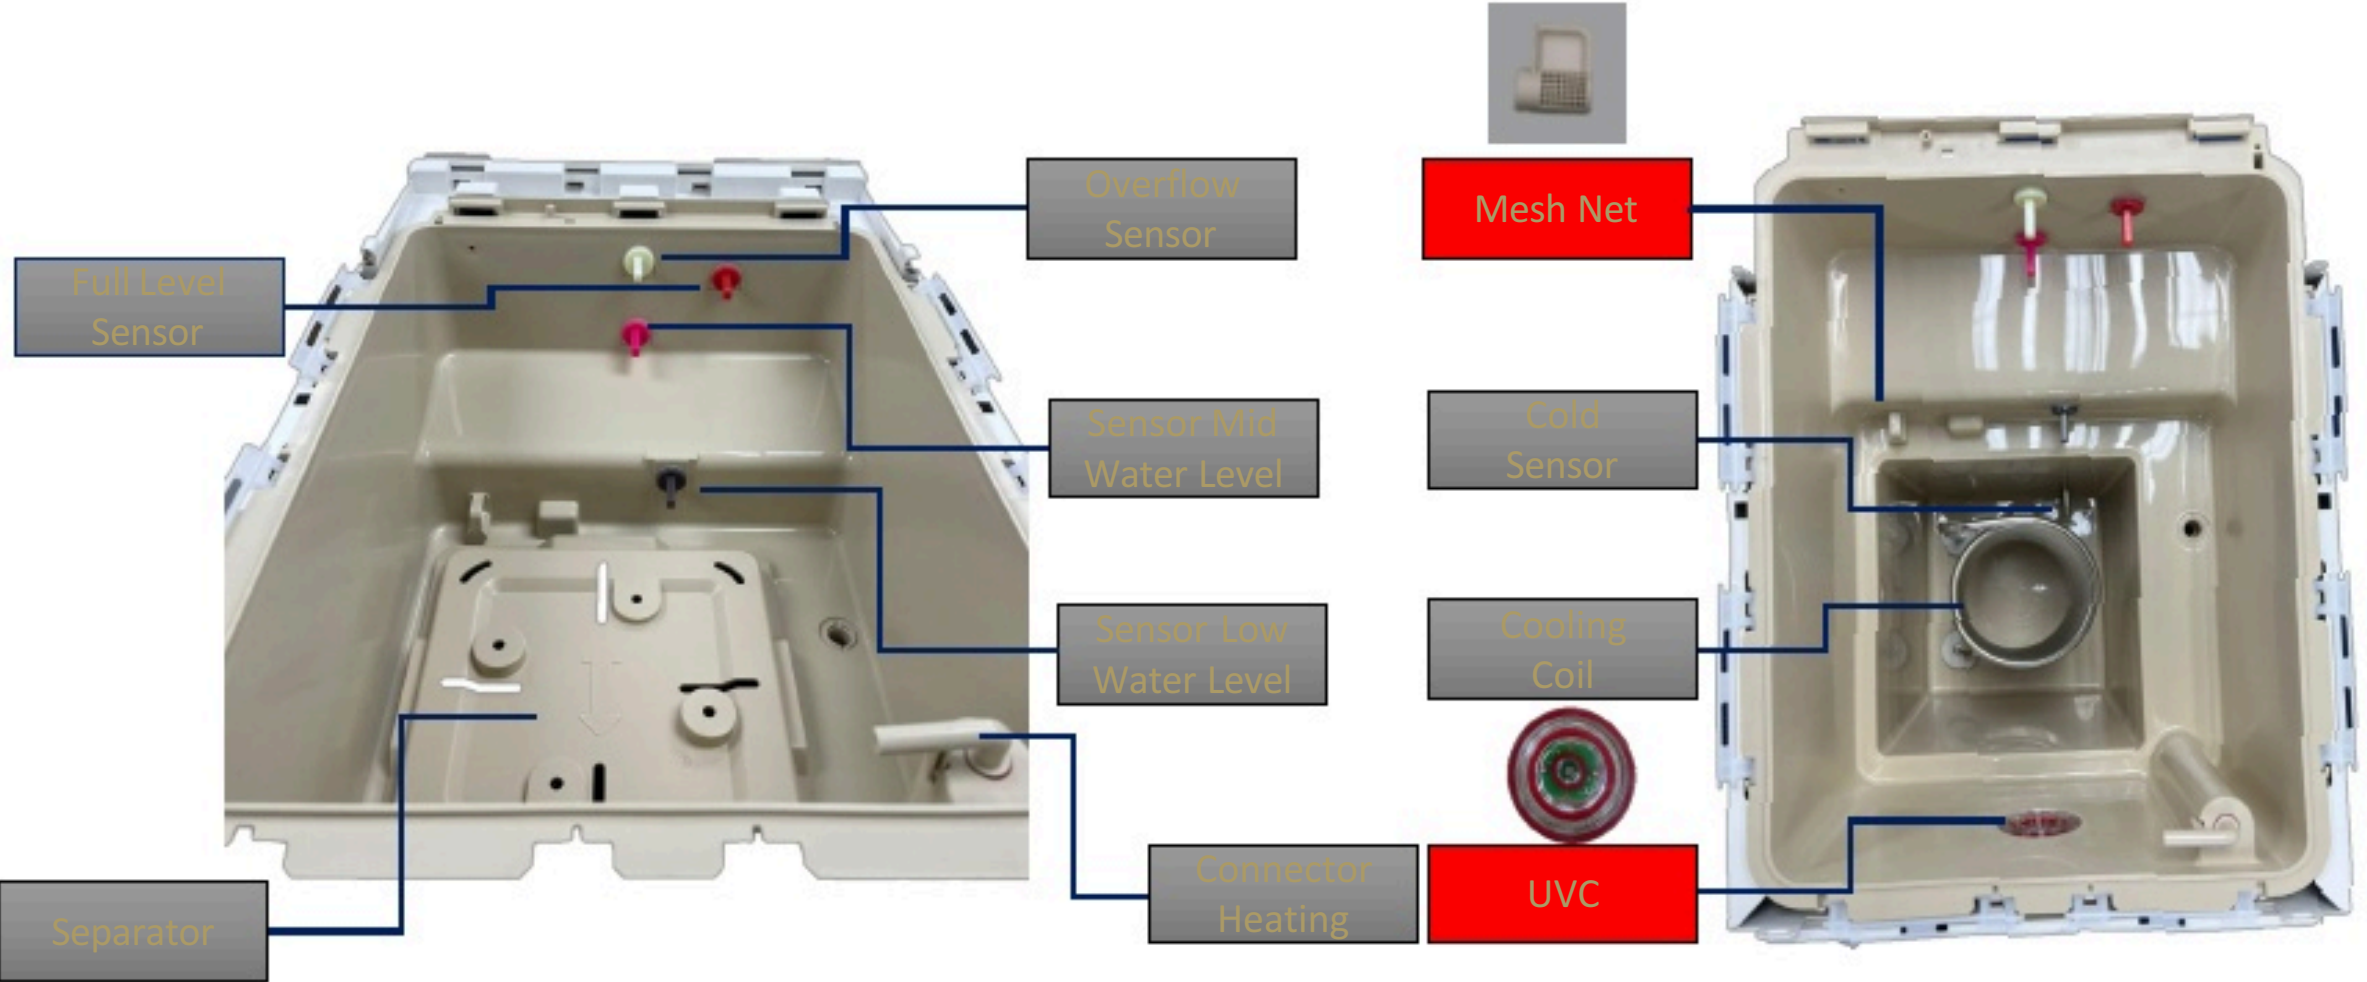

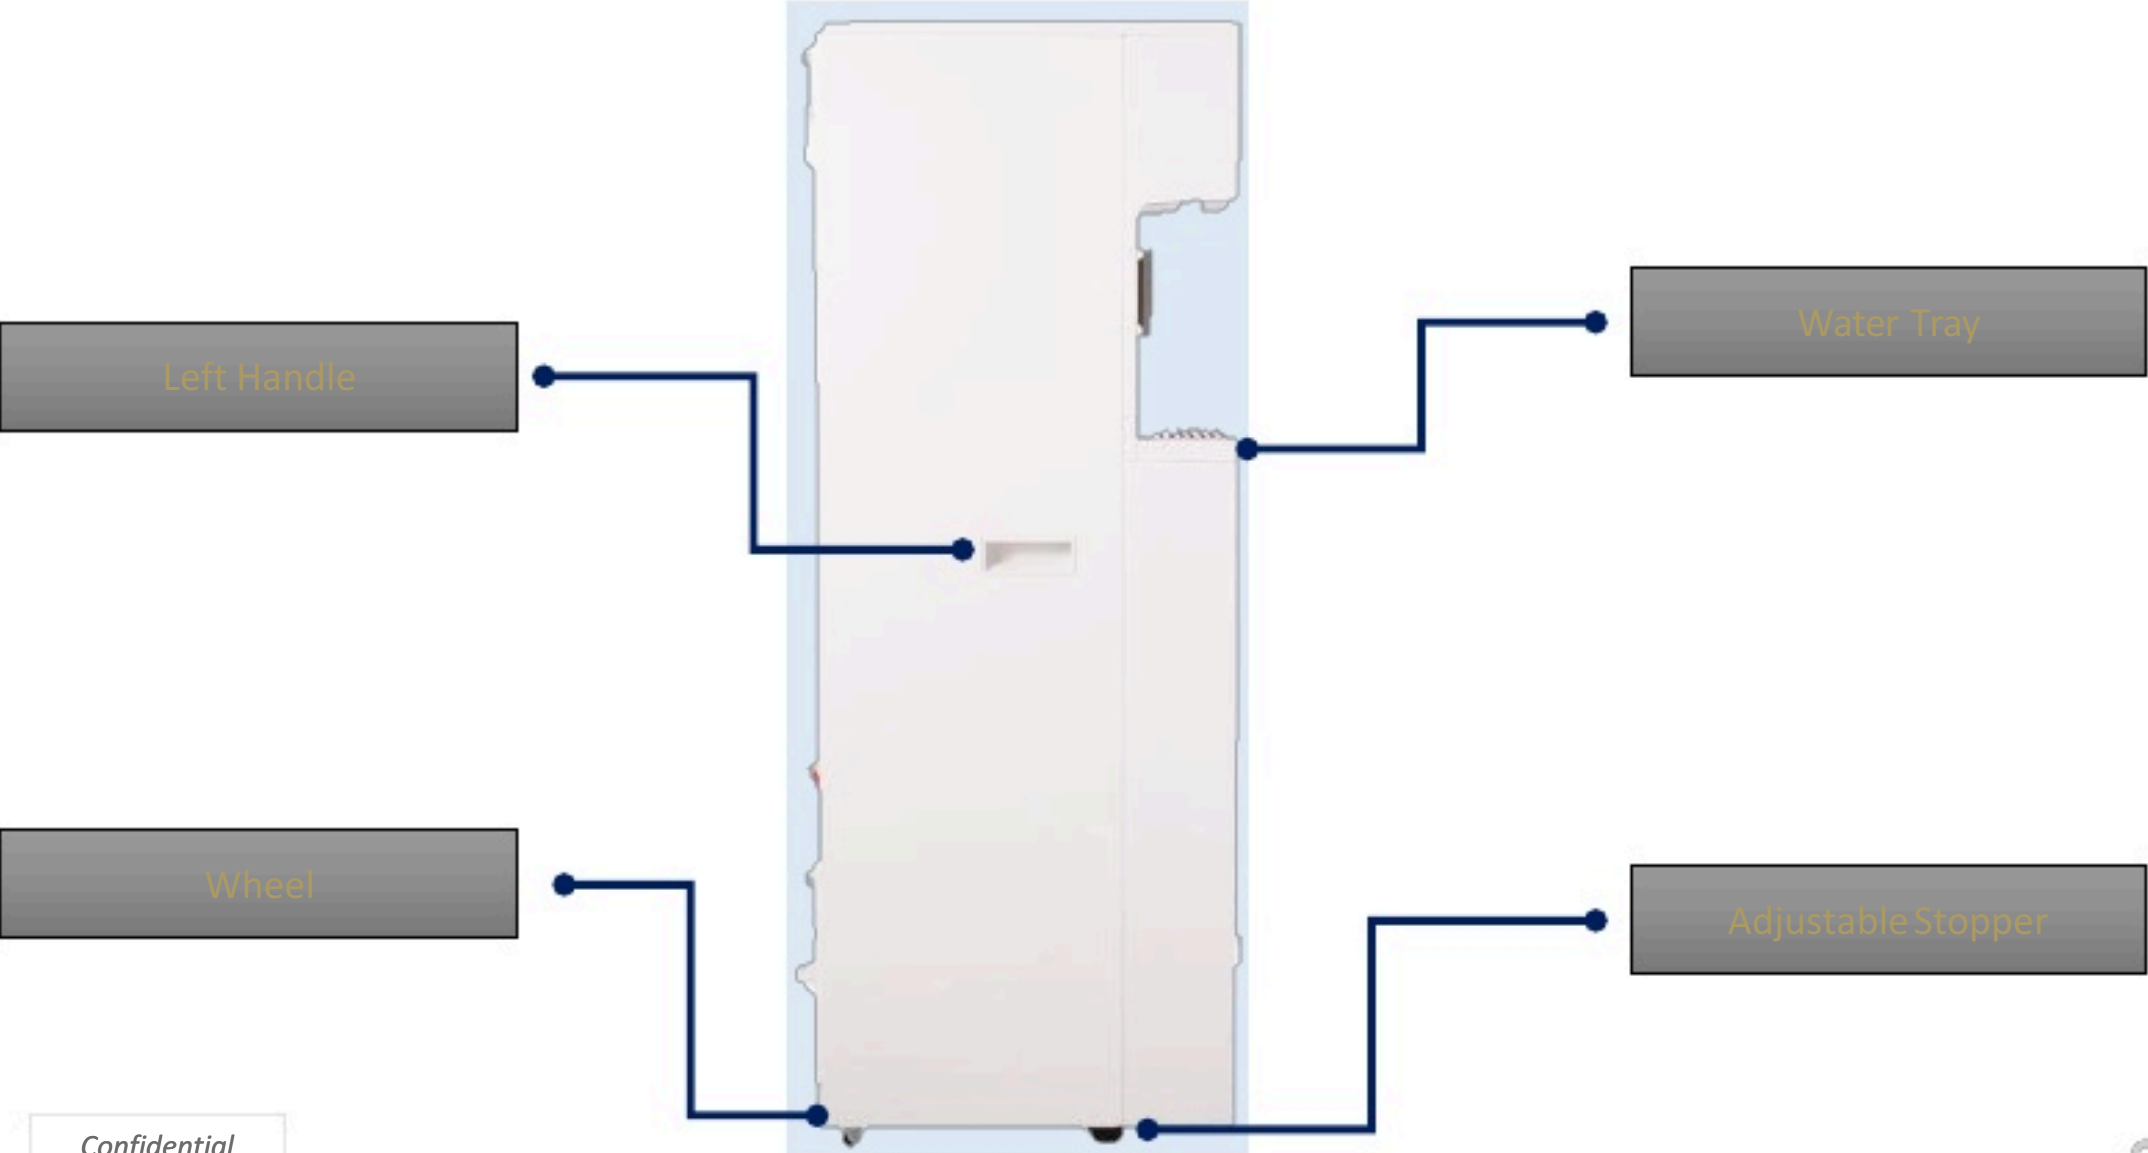


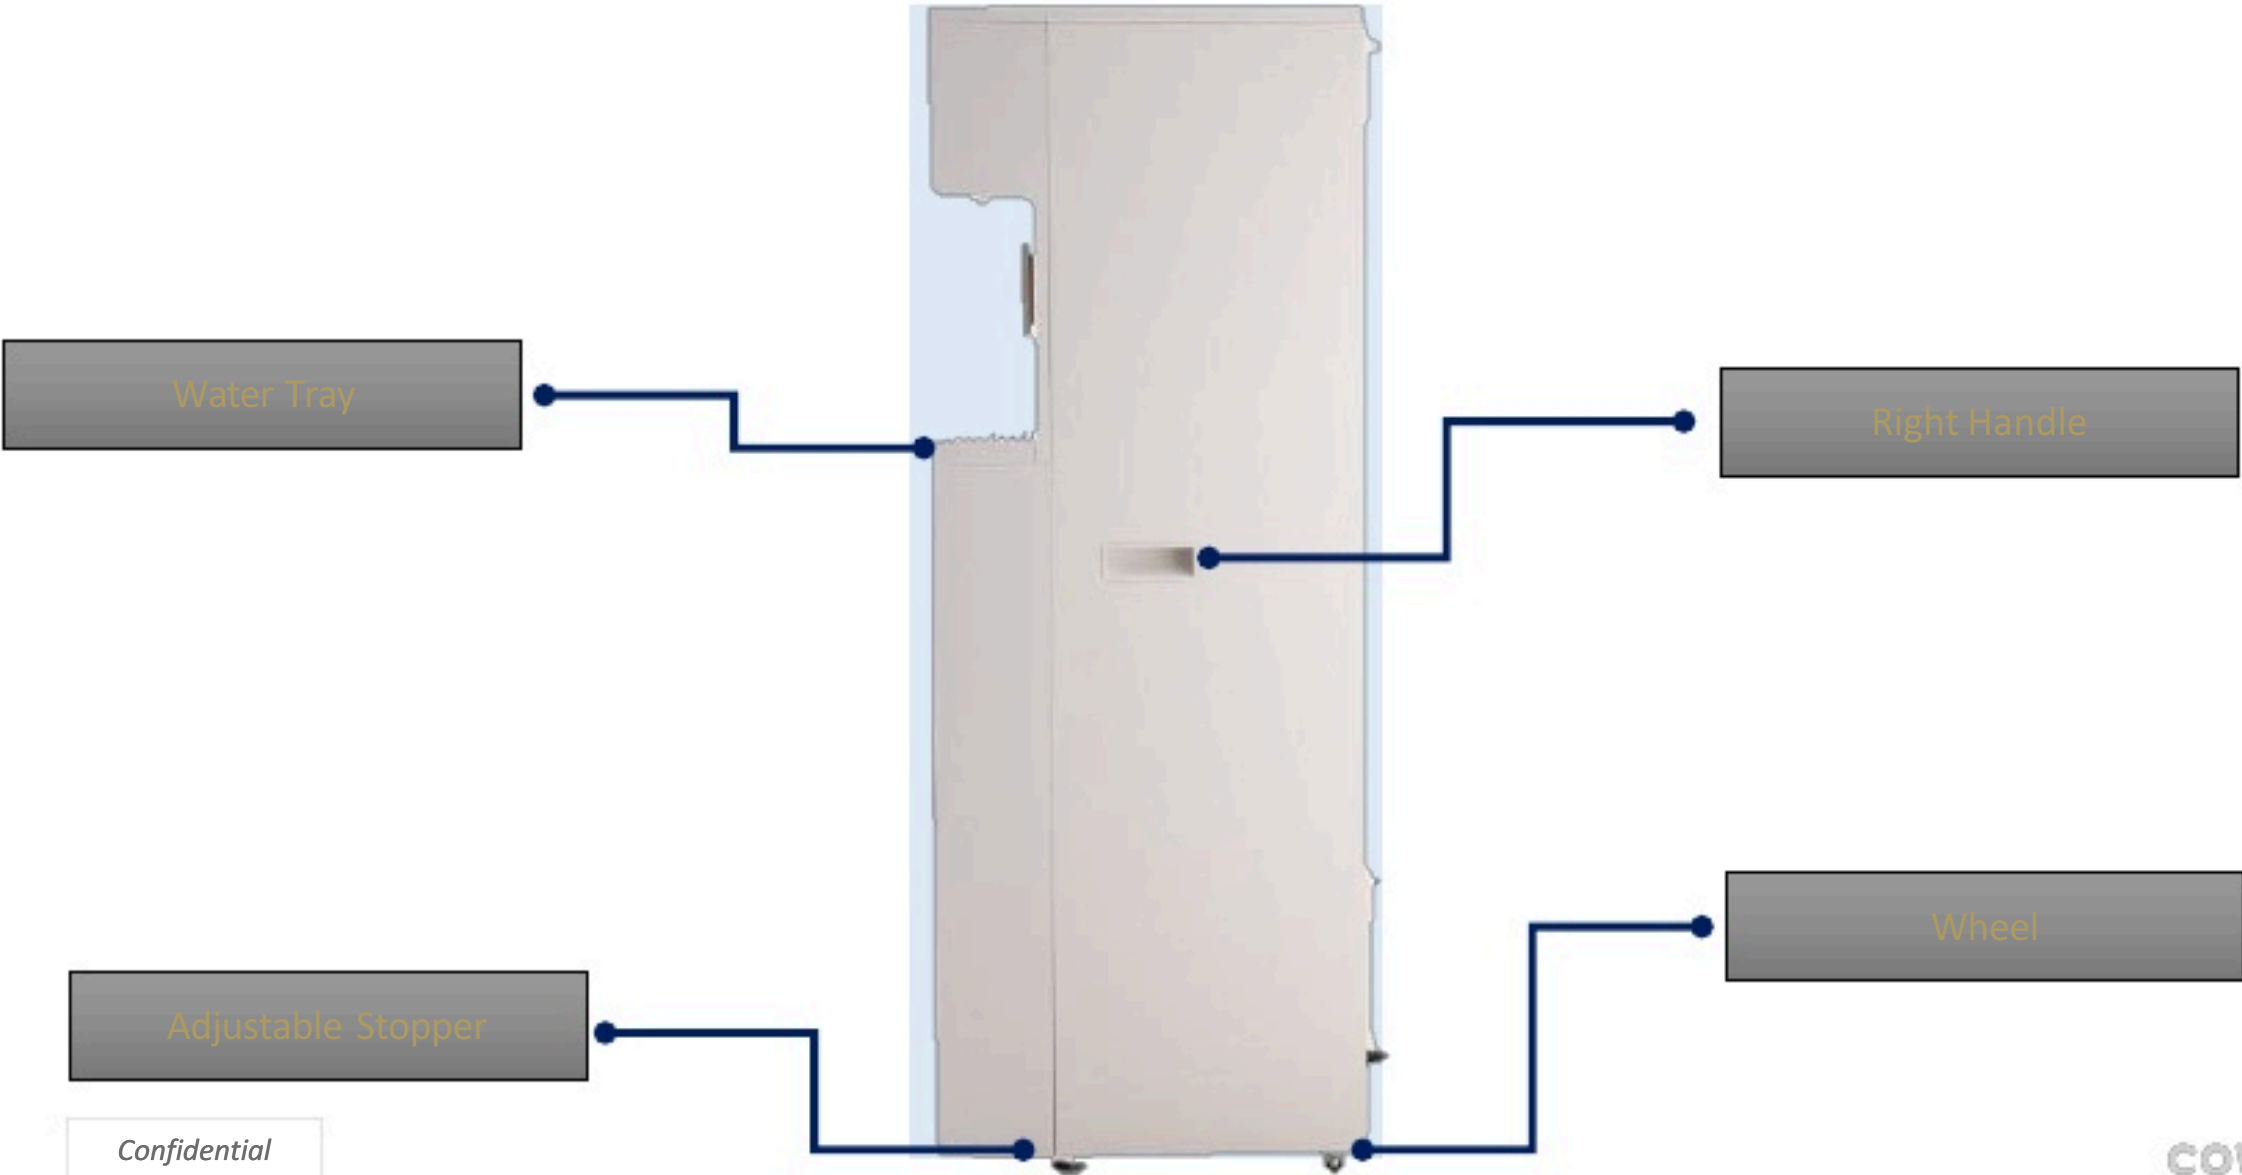

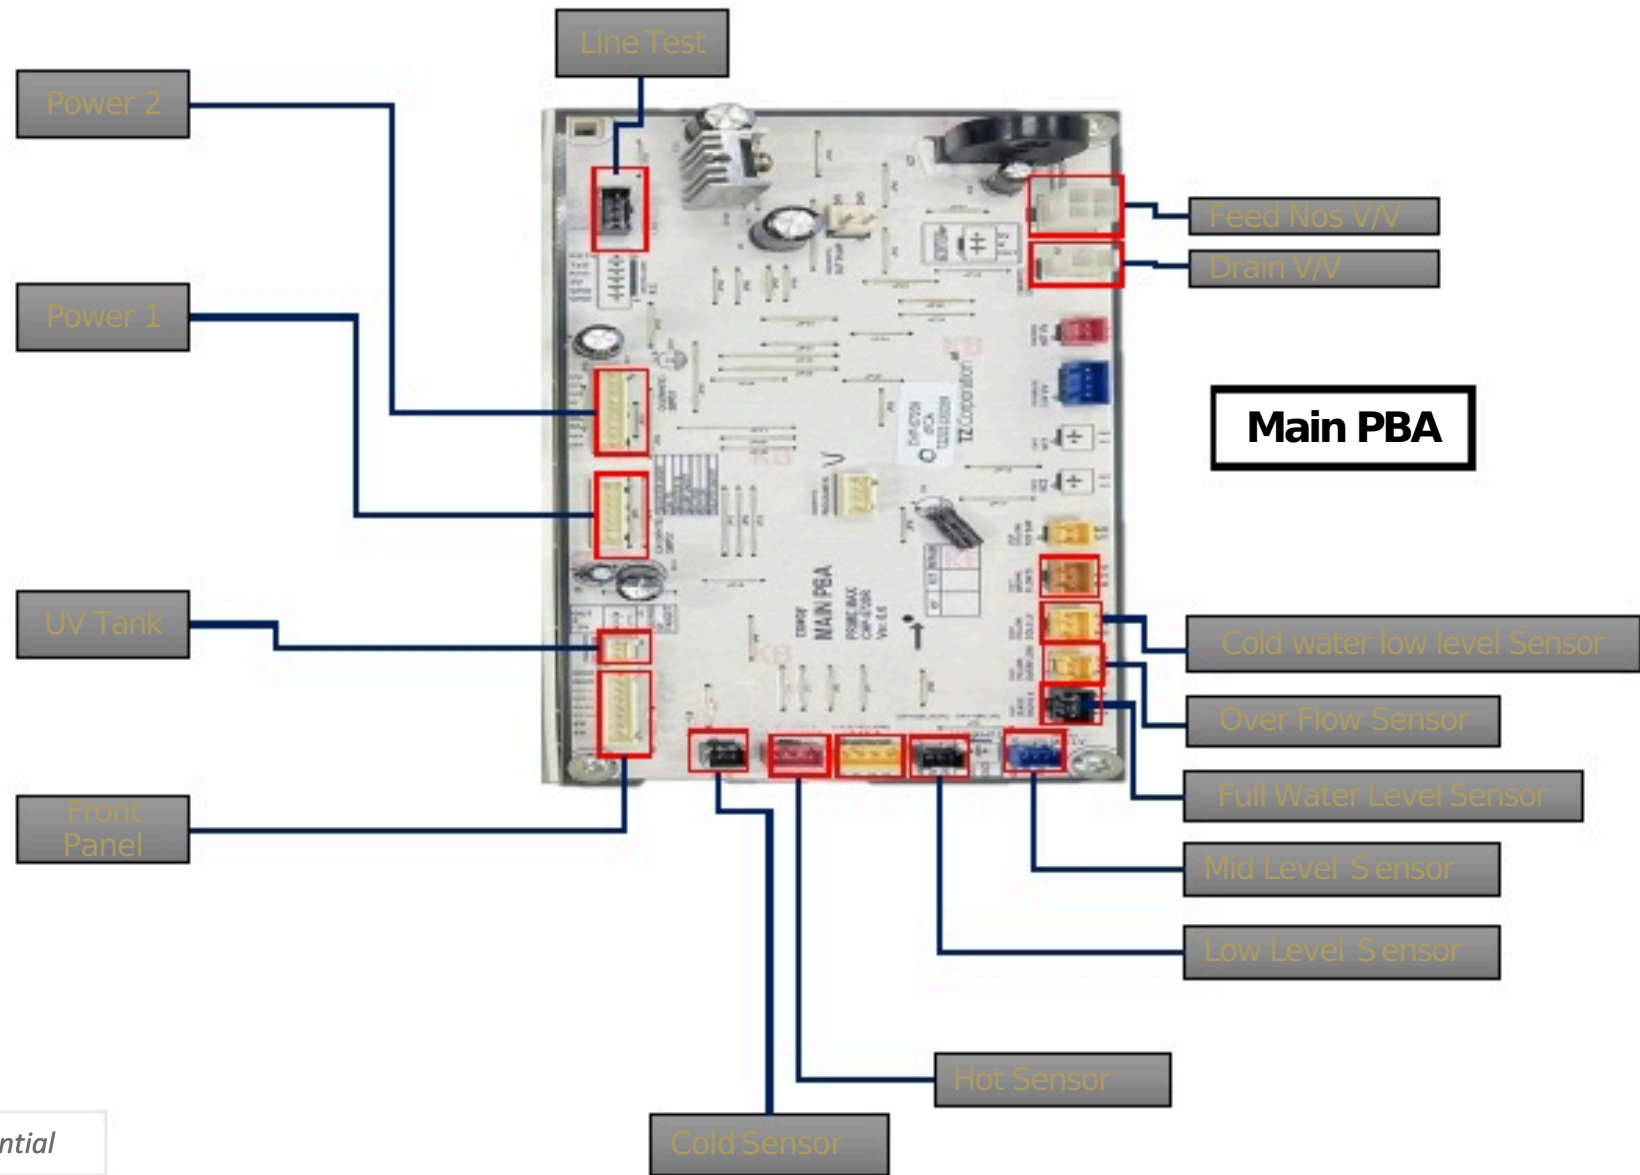


Main PBA

SMPS PBA/MAIN PBA (CHP 5721L)

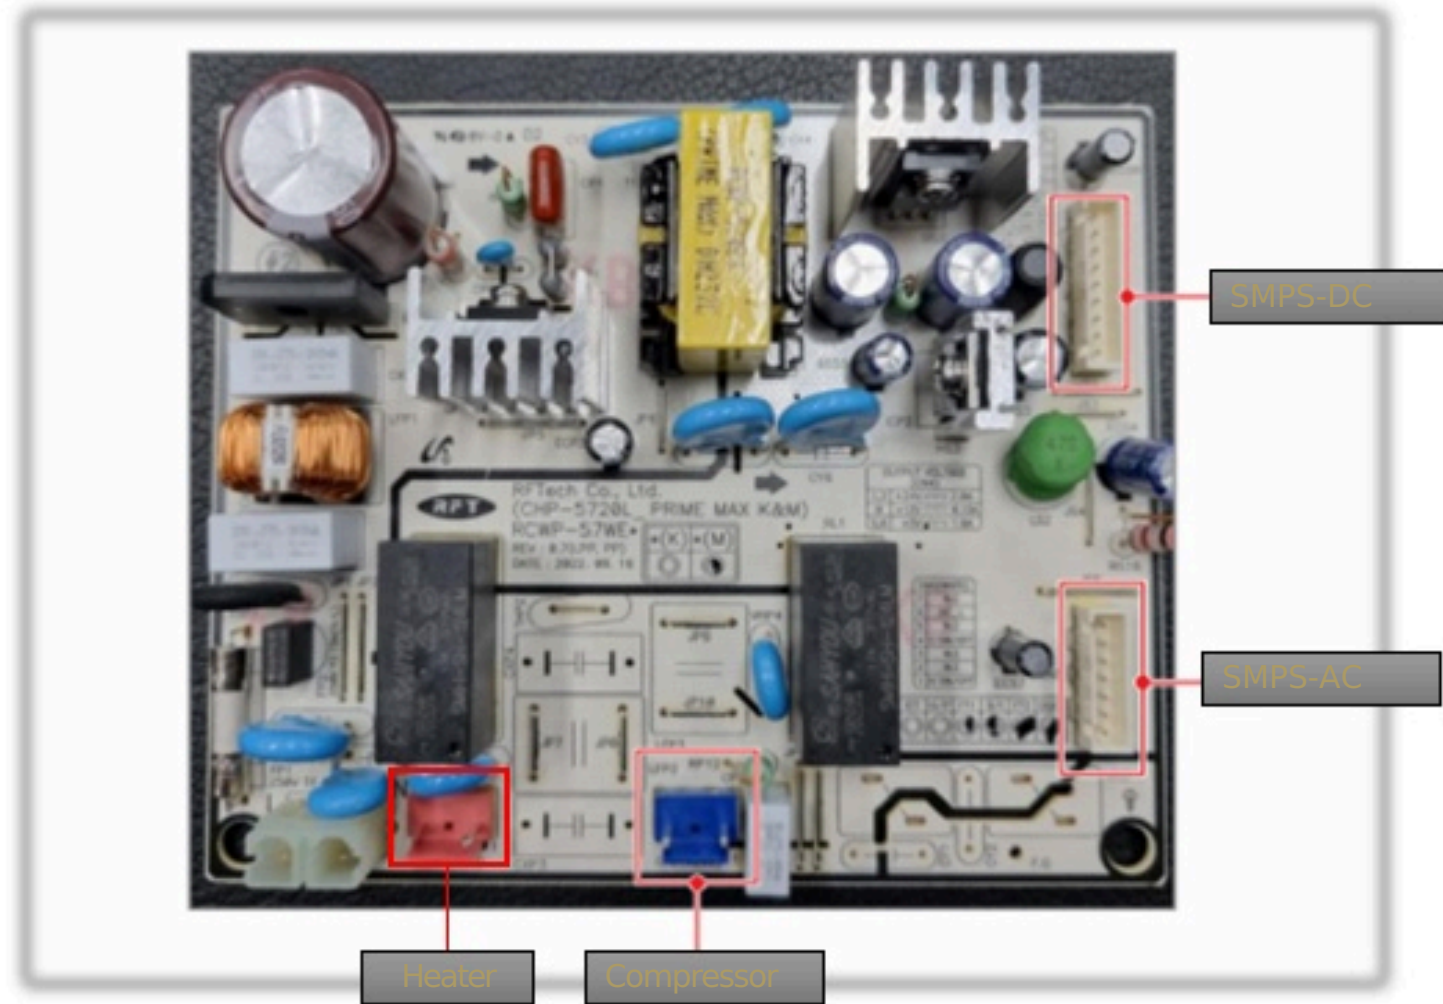

CORE PLUS

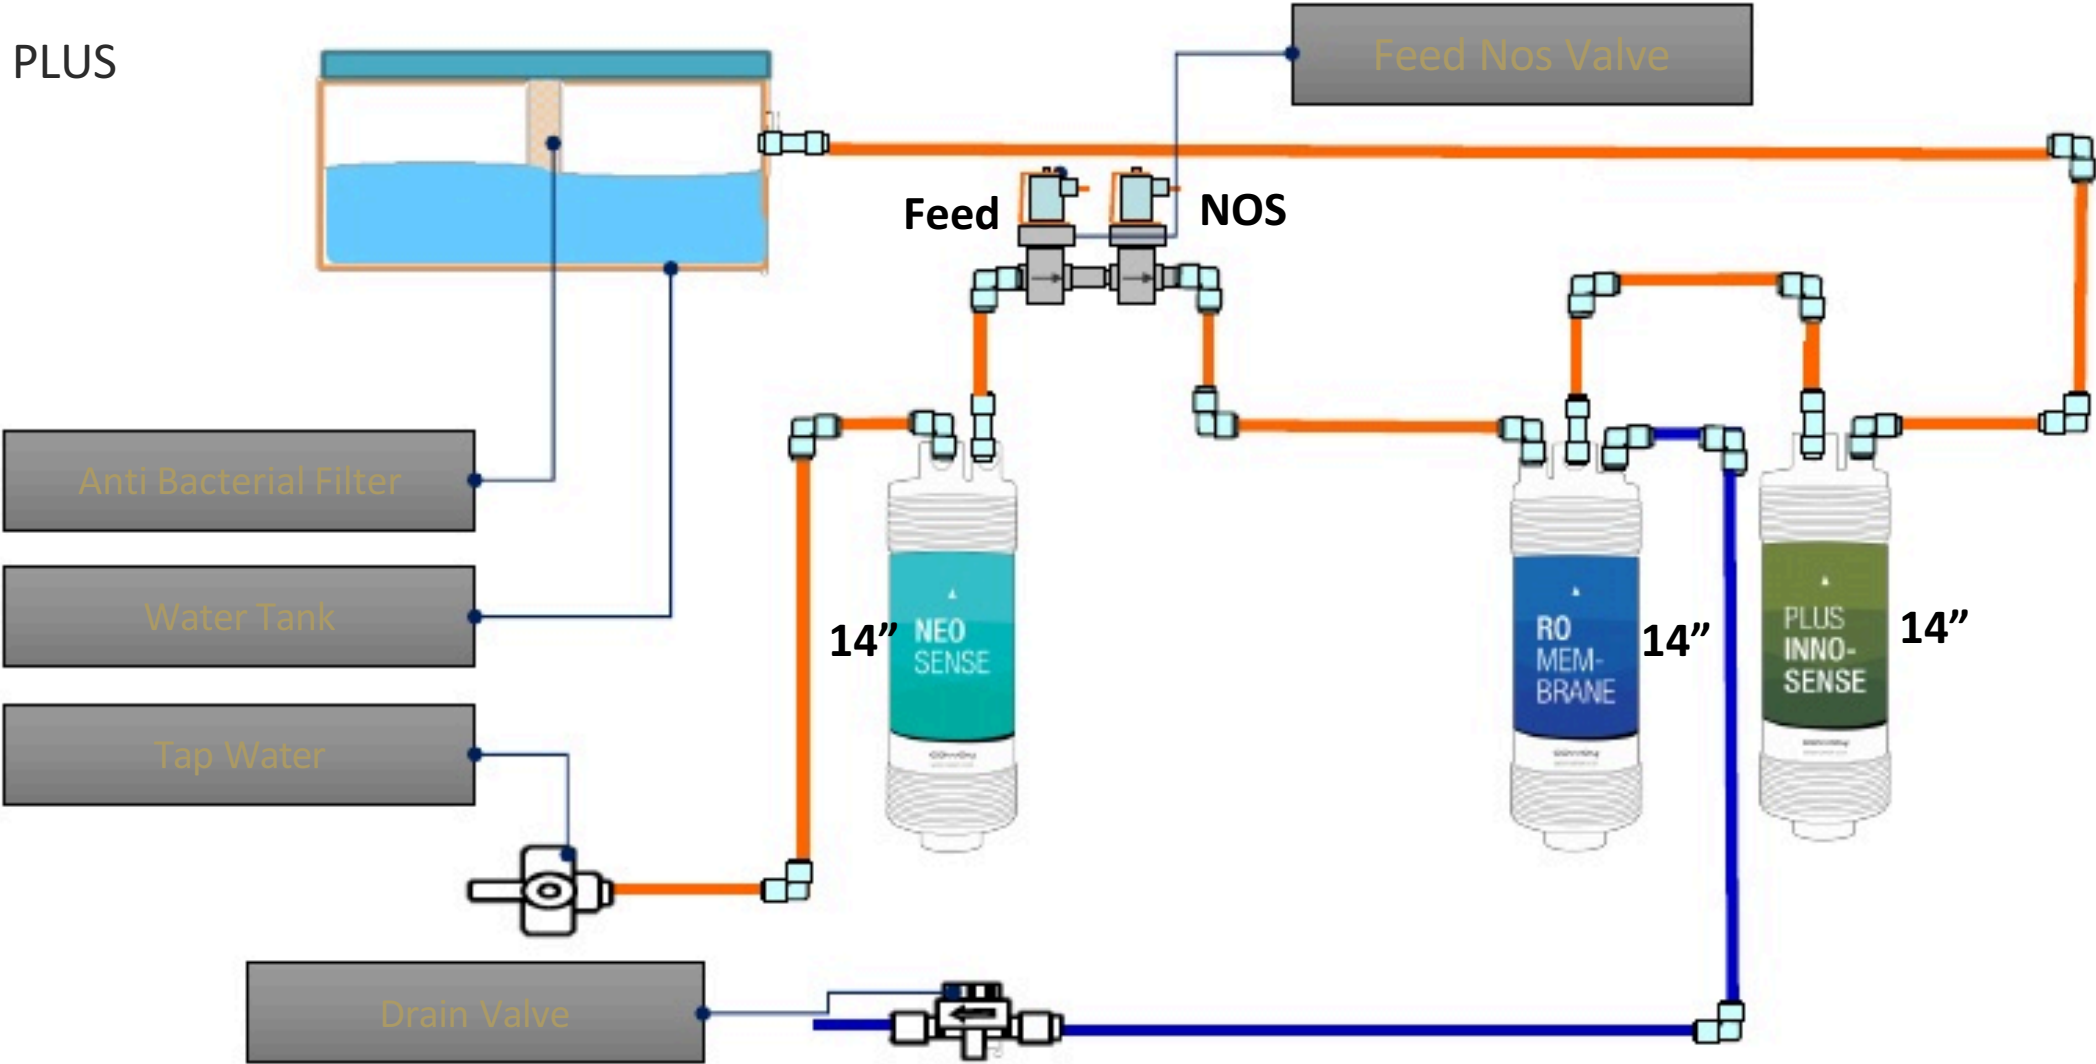



Confidential

coway



1


Ambient

Ambient Water Indicator
The indicator turns on when ambient water function is selected.

2


Cold

Cold Water Indicator
The indicator turns on when cold water function is selected.

3


Hot

Hot Water Indicator
The indicator turns on when water hot function is selected.

4


Hot Lock
3 sec

Hot Water Lock Indicator
The indicator turns on when water hot water lock function is selected.

5


UV
Care

UV Care Indicator
The indicator is on during UV Care in cold/purified water tank.

6


• 0.5L
• 1L
• 0.0

Extraction Amount Indicator
The indicator is on when amount function is selected.

7


Low
Water

Low Water Level Indicator
The indicator is on when the water level in the water tank is low.



Hot Water Function

Press and hold the hot water button for 3 seconds or longer and check if the hot water indicator on the display is on. Press the hot water button for 7 seconds or longer to turn off the hot water function.



Cold Water Function

Press and hold the cold water button for 3 seconds or longer and check that the cold water indicator on the display is on. To turn off the cold water function, press the cold water button for more than 7 seconds.




Ambient Water Function

Press the ambient water button and check that the ambient water indicator on the display is on.



Hot Water Lock Function

Press and hold the hot water lock button for 3 seconds or longer and check if the hot water indicator on the display is on. Press the hot water lock button for 3 seconds or longer to turn off the hot water lock function.

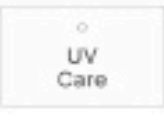

UV Care Function

The UV care indicator lights up when UV care is in progress in the ambient water tank. It performs UV care periodically without the need for user's separate setting.



Extraction Amount Function

Press the extraction amount button and check if the ambient water indicator turns on.

DISASSEMBLING AND TUNING (PU-200Y)



■ Before disassembling the product

- Block main water by closing the main water supply valve.
- Completely drain water from the water tank.
If the water is splashed during the repair, insulation may deteriorate, resulting in danger.
- To prevent electric shocks, remove the power plug.
- If you disassemble or refit the product with it laid down on its back, make sure that you do it on a blanket. Otherwise, it can cause scratches to the rear of the product.

■ Perform a safety check after the service


- Check if the removed screws, parts, or lead wires are in the original conditions.
- Check if the lead wires are damaged.
- After refitting, check that the water purification works.
- Check the tubing for water leakage.
- Check that all switches operate normally.
- After the service, refit the product in its original state.
- When the power is on after the service is completed, it will be automatically flushed for 5 minutes and then water will be purified.




Preparation of Tools


Tools	Tool name
	Cross-head '+' screwdriver
	Flat-bladed '-' screwdriver
	Long nose

Part List

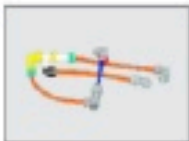No.	Photo	Part name	Quantity	Remarks
1		Bracket-Booster Pump Assy	1	
2		Sensor-Flow	1	
3		Valve-Drain	1	
4		Circulation Tubing	1	


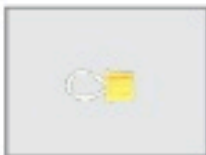
5		Pump Out Tubing	1	
6		Drain Tubing	1	
7		PBA-SMPS	1	CHP-5720R
8		Harness-Short	1	

Part List

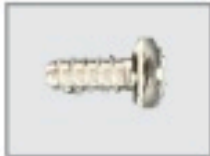
No.	Photo	Part name	Quantity	Remarks
9		Valve-Regulator Assy	1	
10		Sticker-Spec	1	CHP-5720R
11		Screw-Tapping	7	TH2, 4X8, STS430
12		Screw-Tapping	4	TH2, 4X10, SWRCH10A

Step to Install

1

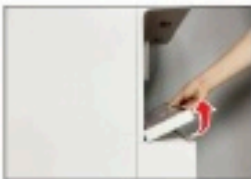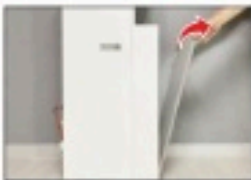Category	Part name	Description	Reference picture
1	Deco-front lower assy	1) Remove the tray in the direction of the arrow. 2) Remove the deco-front lower assy in the direction of arrow.	 

2

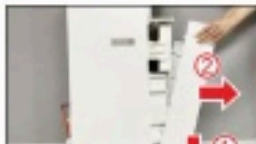Category	Part name	Description	Reference picture
1	Cover-front lower	1) Remove five screws from the cover-front lower. : 5-TH2, 4X12, STS430 2) Remove the cover-front lower in the direction of arrow.	 

3



Category	Part name	Description	Reference picture
1	Filter	1) Separate all the filters by removing the fittings connected to the filter. When removing the fitting of the filter, be careful that the remaining water falls inside the filter.	
2	P3A-SMPS	1) Press the hook to separate the cover-PBA main assy. 2) Remove all the connectors connected to the PBA-SMPS main assy. 3) Remove the three screws to separate the PBA-SMPS main assy. : 3-TH2, 4X8, STS430	  

Step to Install

4


Category	Part name	Description	Reference picture
1	Sensor-Flow	1) Connect the Sensor-Flow to the Valve-Feed-Noz. 2) Screw the Sensor-Flow up with 2 screws. : 3-TH2, 400, STS430	 
2	Valve-Drain	1) Screw the Valve-Drain up with 2 screws. : 3-TH2, 400, STS430	
3	Pump Out Tubing	1) Insert the Pump Out Tubing from the back of the Bracket-Filter towards the RO Membrane Filter Outlet. 2) Connect the Pump Out Tubing to the inlet nipple of RO Membrane Filter.	 

5

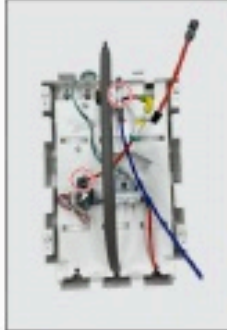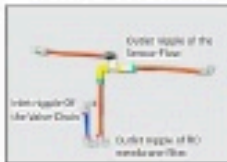Category	Part name	Description	Reference picture
4	Drain Tubing	1) Connect the Drain tubing to the outlet nipple of Valve-Drain.	
5	Circulation tubing	1) Connect the circulating tubing as shown. - Connect to the outlet nipple of RO membrane filter. - Connect to the inlet nipple of the Valve-Drain. - Connect to the outlet nipple of the Sensor-Flow.	  [Tuned water piping] 


Step to Install

6


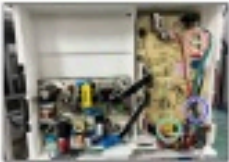
Category	Part name	Description	Reference picture
6	Bracket- booster pump sub assy	1) Insert the bracket-booster sub assy into the product and hang it on hook. 2) Put together the four screws to fix the sensor-low flow. : 4-THT2, 4X10, SWRCH10A, screw tip cutting shape	 
7	PBA-SMPS	1) Put together the three screws to fix the PBA-SMPS of CHP-5720R. : 3-THT2, 4X8, ST5430 2) Connect the harness of Bracket-Booster Pump to PBA-SMPS.	 
8	PBA-MAIN	1) Remove the connector housing. Connect valve-drain connector, sensor-low flow connector, and switch-short to the PBA-MAIN. : valve-drain (C) : sensor-low flow (D) : switch-short (E)	

7


Category	Part name	Description	Reference picture
9	Valve-Regulator assy	1) After refitting the product, Connect valve-regulator assy to the feed water inlet hose (orange)	
10	STICKER-SPEC	1) Remove the existing sticker-spec of CHP-5721L and attach the sticker-spec of CHP-5720R.	
11	Remaining Parts	1) Remaining parts are required when tuning from R type to L type. Pack the remaining parts in a zipper bag and store them separately.	

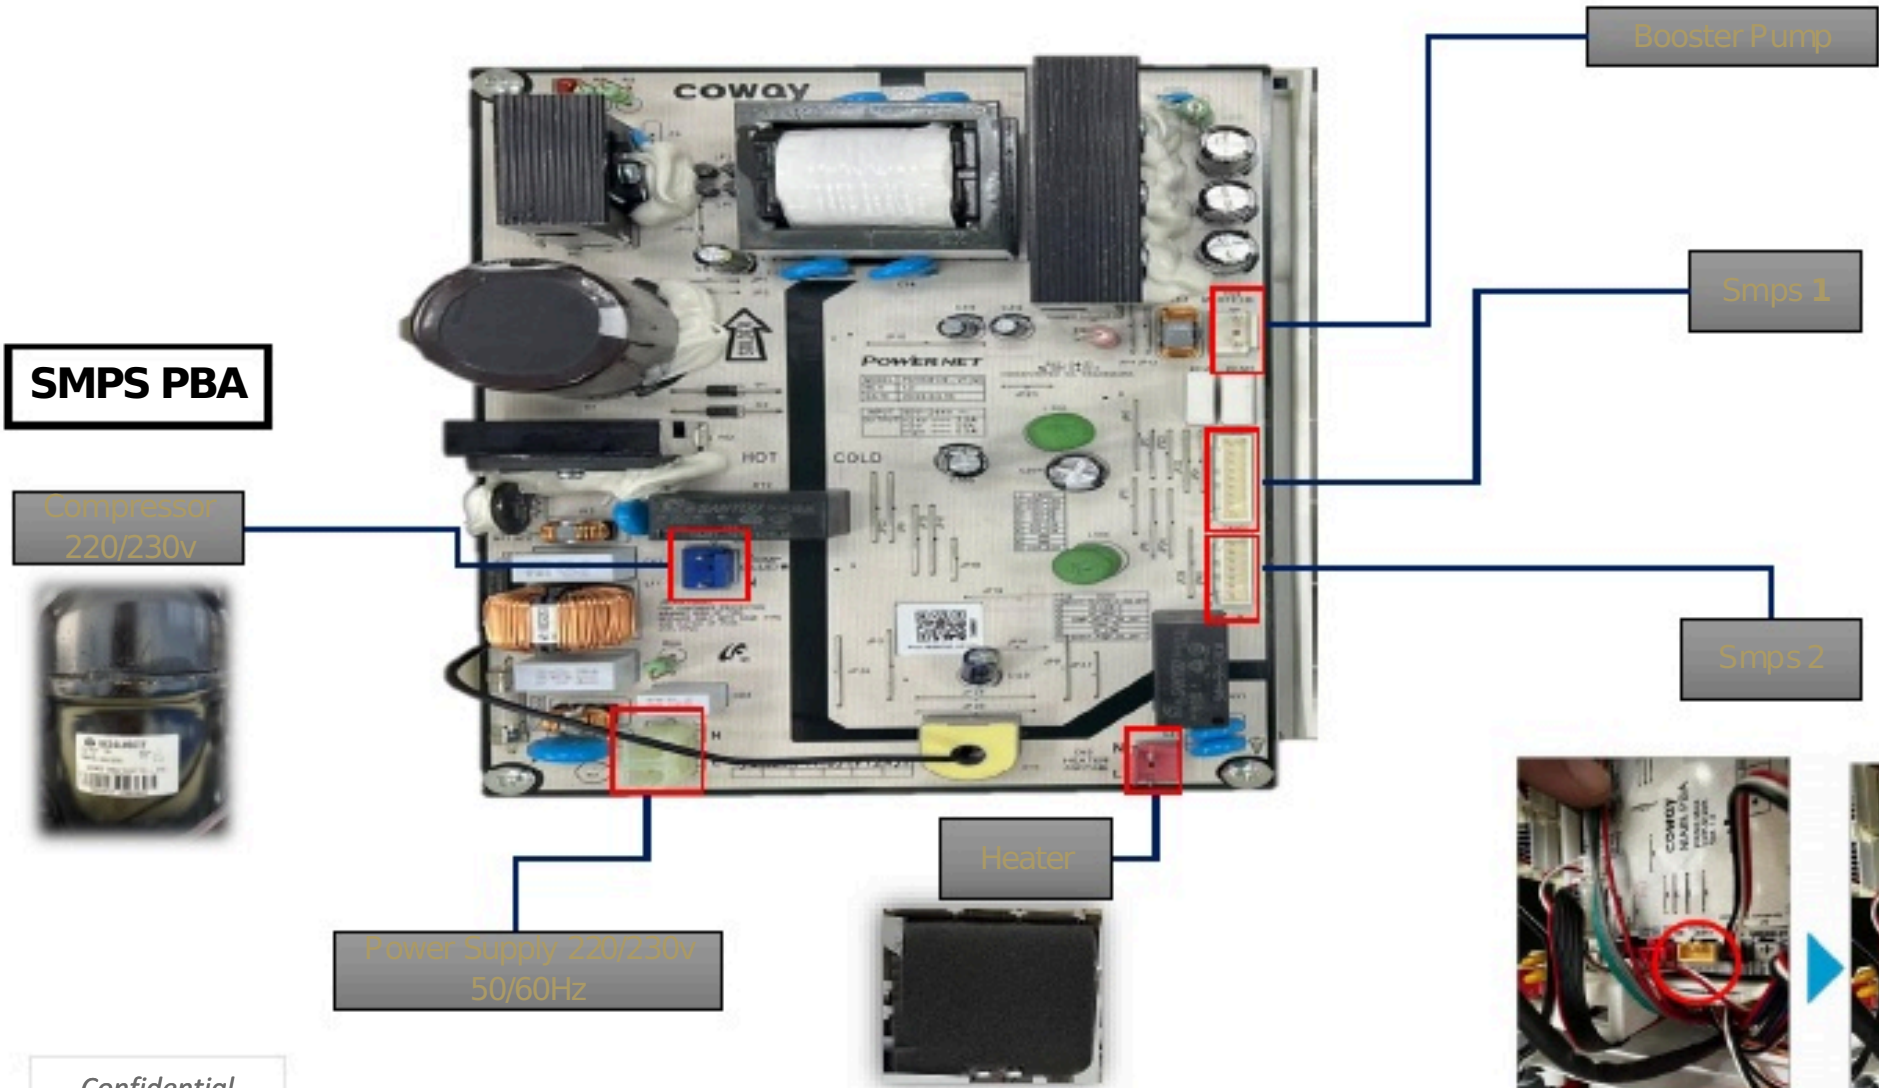

MAIN PBA(BOOSTER PUMP)

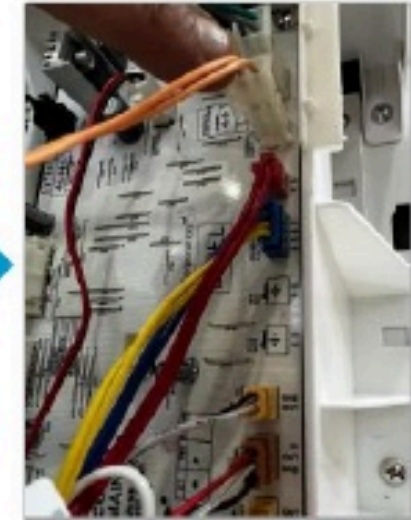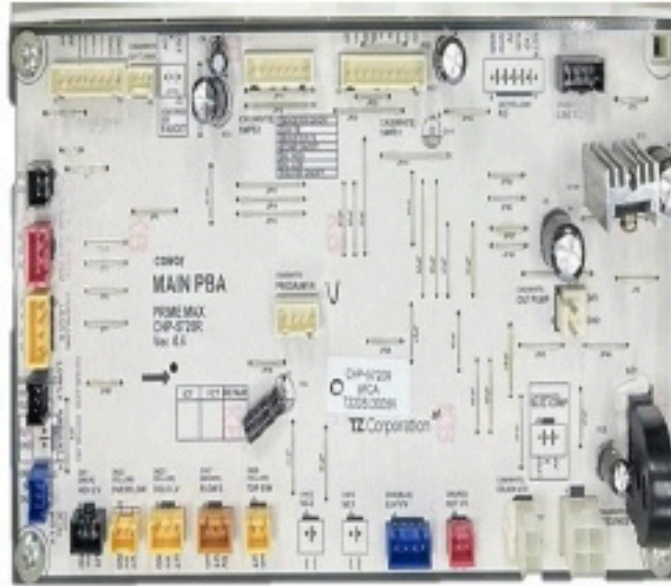

44. Connect Valve Feed cable

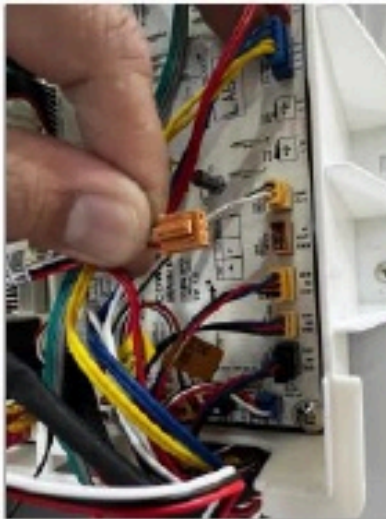

45. Connect Flow Sensor cable



46. Connect Pump cable




47. Remove Leaking Sensor



48. Insert bypass cable

Confidential

CORE PLUS

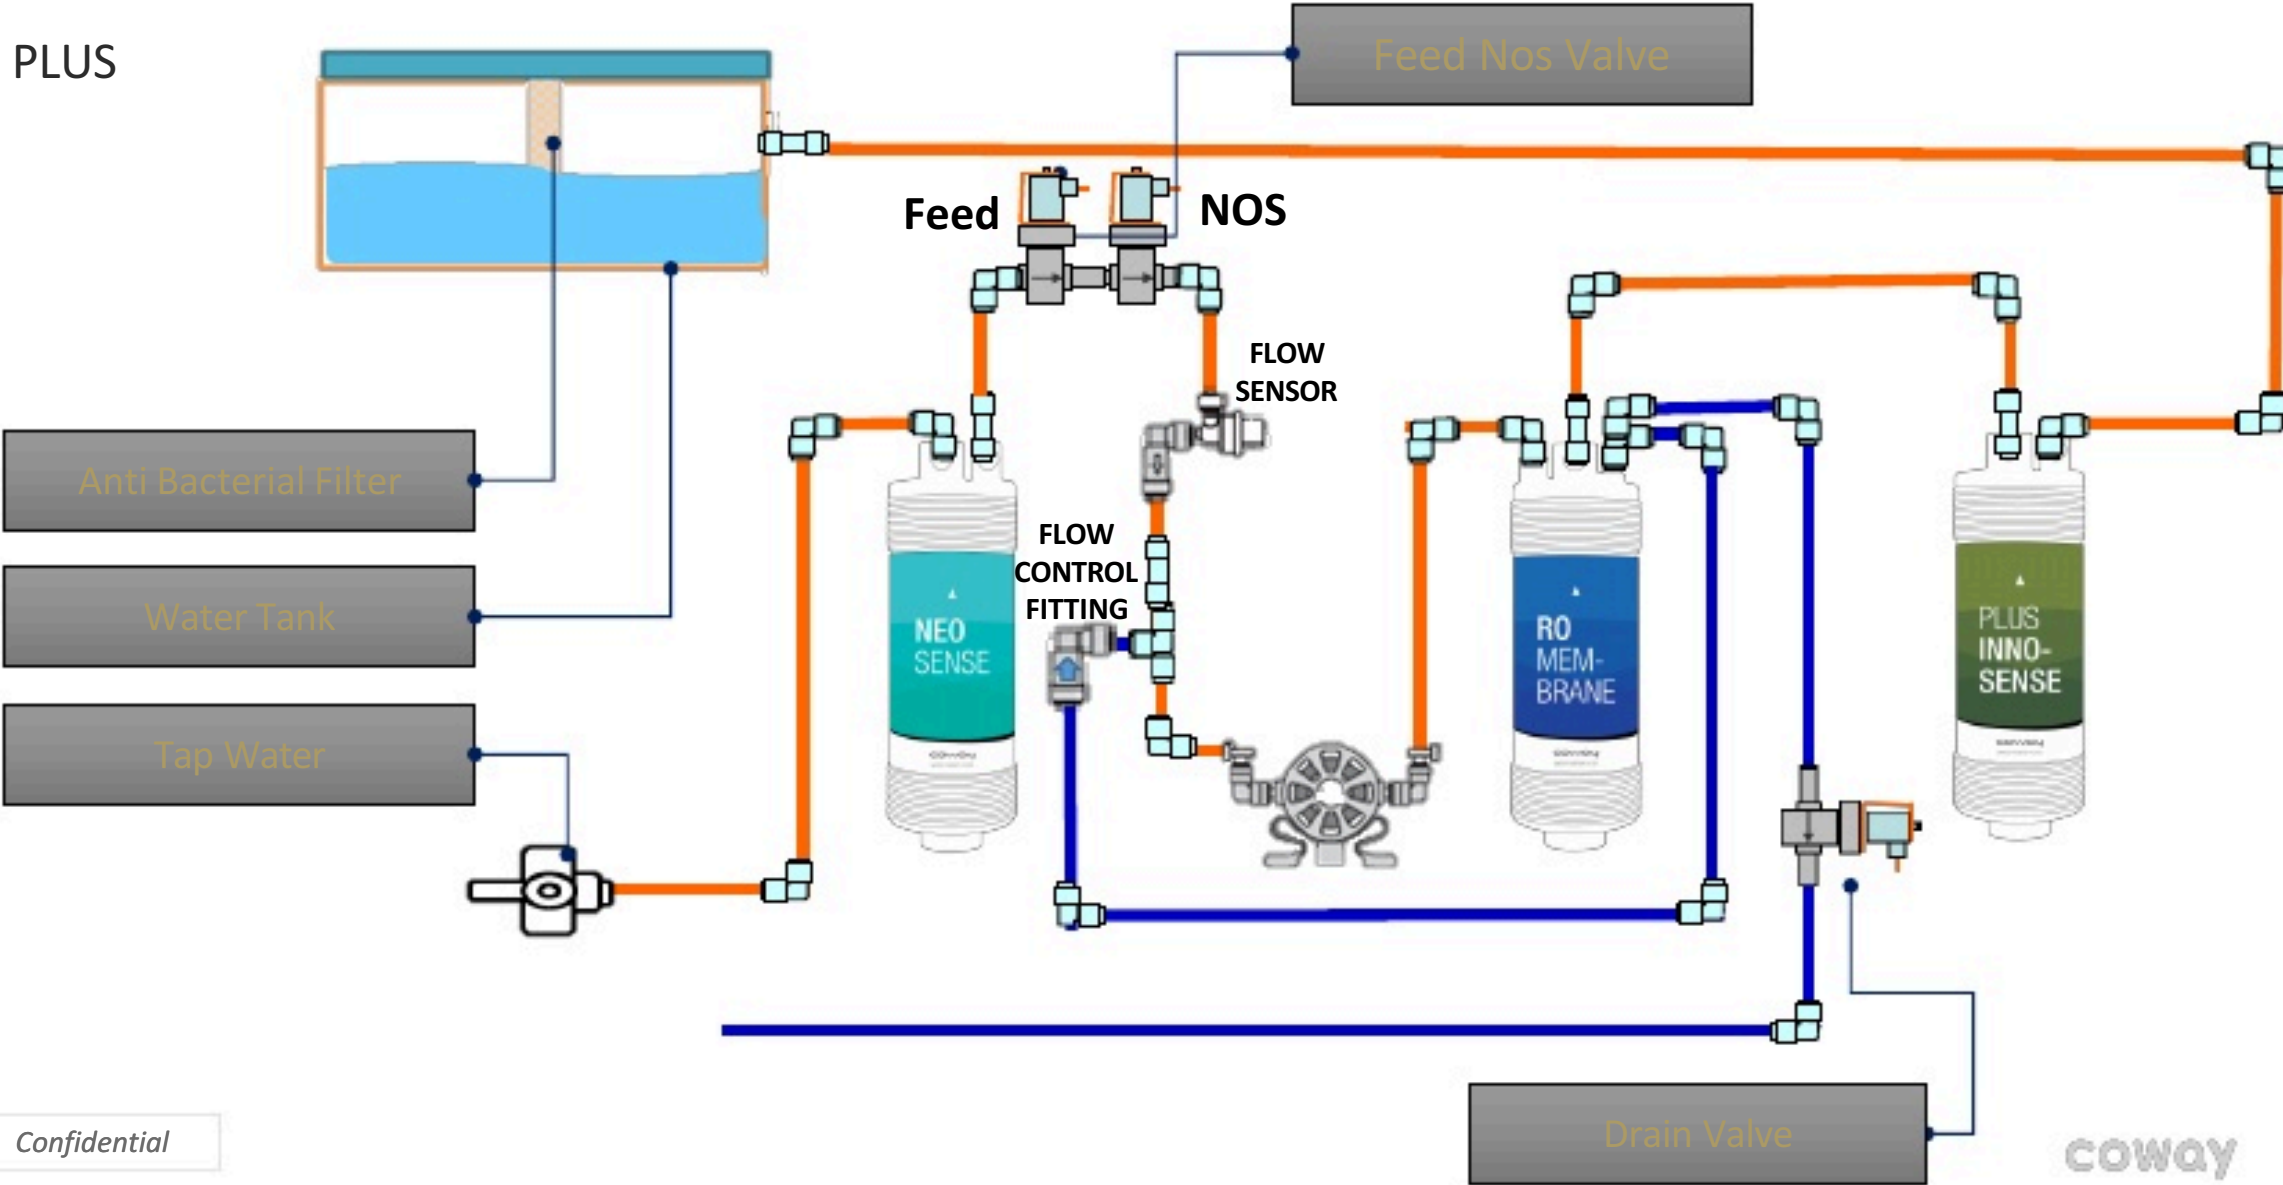

Ice Maker

Category	Display Method	Error displays
Water leakage detection error	• Bottom/top LEDs of the cold water temperature display, bottom/top LEDs of the hot water temperature display blink	
Cold water low level sensor error	• Cold water LED blinks	
Low water level sensor error	• The bottom LEDs of the cold water temperature displays and the hot water temperature displays are blinking.	
Mid water level sensor errors (Unbalanced water level sensor error)	• The mid LEDs of the cold water temperature displays and the hot water temperature displays are blinking.	
Ambient water full level sensor error	• The top LEDs of the cold water temperature displays and the hot water temperature displays are blinking.	
Composite error of low/mid water levels.	• The mid and bottom LEDs of the cold water temperature displays and the mid/bottom LEDs in the hot water temperature displays are blinking.	
Composite error of high/mid water levels.	• The top/mid LEDs of the cold water temperature displays and the top/mid LED of the hot water temperature displays are blinking.	
Feed valve error	• All the cold water temperature indicator LEDs and the hot water temperature indicator LEDs blink.	

Ice Maker

Category	Display Method	Error displays
Overflow sensor error	- Cold water low level LED - All the cold water temperature indicator LEDs and the hot water temperature indicator LEDs blink.	○ Low Water
Hot water temperature sensor error	Hot water LED, bottom LED of temperature displays blink.	• Hot
Cold water temperature sensor error	Cold water LED, bottom LED of temperature displays blink.	• Cold
Boost pump error	Purified water LED blinks	○ Ambient
Overheating error	Hot water LED, all LEDs of the temperature displays LED blink.	• Hot

THANK YOU