

Cooling Equipment HMI Application Interface Specification

Pentamaster 2-15-2024



Table of Contents

1.0 Introduction	2
2.0 General Page	3
3.0 Operator Page	4
4.0 Lot Status Page	5
5.0 Loading Page	7
6.0 Unloading Page	9
7.0 Secs Gem Page	11
8.0 Settings Page	12
9.0 Pick-To-Light Page	13
10.0 Alarm Message Window	15
11.0 Carrier Details Window	16
12.0 Sign In Window	17
13.0 User Account Editor Window	18
14.0 User Group Access Editor Window	21
15.0 Operational	22
15.1 Sign-In into system	22
15.2 Sign Out from system	24
15.3 Loading Process	25
15.4 Unloading Process	30
15.5 Handling alarm and warning	33
15.6 Enable/Disable load port	34
15.7 Purge and Abort Job	35



1.0 Introduction

This is a user manual documenting layout functionality for the Cooling Rack HMI (Human-Machine Interface) system. The functionality of this system is to make the process of loading and unloading carrier more efficient and systematically.

The system consisted of following modules:

- General Page
- Operator Page
- Lot Status Page
- Loading Page
- Unloading Page
- Secs Gem Page
- Setting Page
- Pick-To-Light Page
- Alarm Message Window
- Carrier Details Window
- Sign In Window
- User Account Editor Window
- User Group Access Editor Window

Each module in this system can specifically access by set the user group access. For the Loading and Unloading, system requires for user to login into our HMI before use it.




2.0 General Page

This page can be accessed with or without login. These are the contents of the Main Page. You can refer to the image and the definitions.

Definitions:

- A. Menu Button
 - a. To open the Menu drawer.
- B. Alarm Button
 - a. To open the Alarm window.
- C. Sign In / Sign Out button
 - a. To Sign In / Sign Out in HMI
- D. Lot Status
 - a. To display count of Open Lots (Received from Host thru Secs Gem Command)
 - b. To display count of Running Lots.
- E. Rack Usage (Tray Carrier)
 - a. To display the number of locations used in percent, loaded shelves and empty shelves.
- F. Rack Usage (Tubes Carrier)
 - a. To display the number of locations used in percent, loaded shelves and empty shelves.
- G. Legend
- H. Rack Layout (Tray)
 - a. To show indicator for each load port.
- I. Rack Layout (Tubes)
 - a. To show indicator for each load port.
- J. Reset Button
 - a. To reset the current errors or warnings.

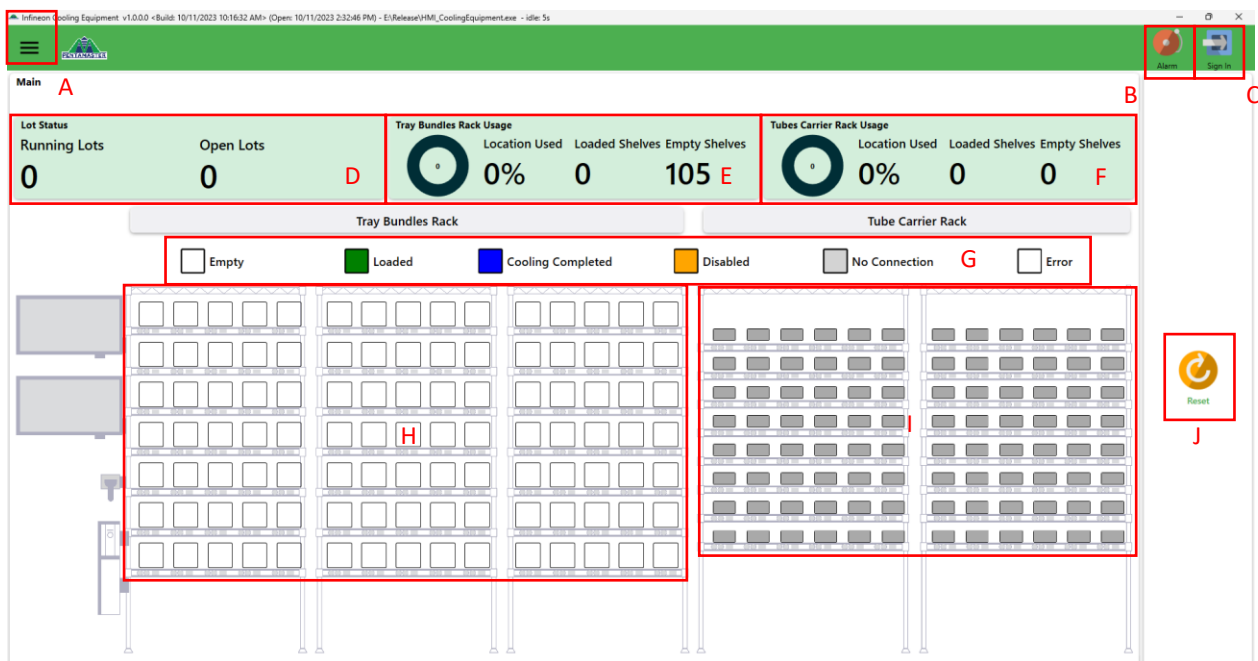


3.0 Operator Page

This page can only be accessed with operator group. These are the contents of the Operator Page. You can refer to the image and the definitions.

Definitions:

- A. Alarm Button
 - a. To open the Alarm window.
- B. Sign Out Button
 - a. To sign out from the HMI.
- C. Load Carrier Button
 - a. To open the Loading Page.
- D. Unload Carrier Button
 - a. To open the Unloading Page.
- E. Lot Status
 - a. To display lot information's for all the open and running lots.
- F. Reset Button
 - a. To reset the current errors or warnings.

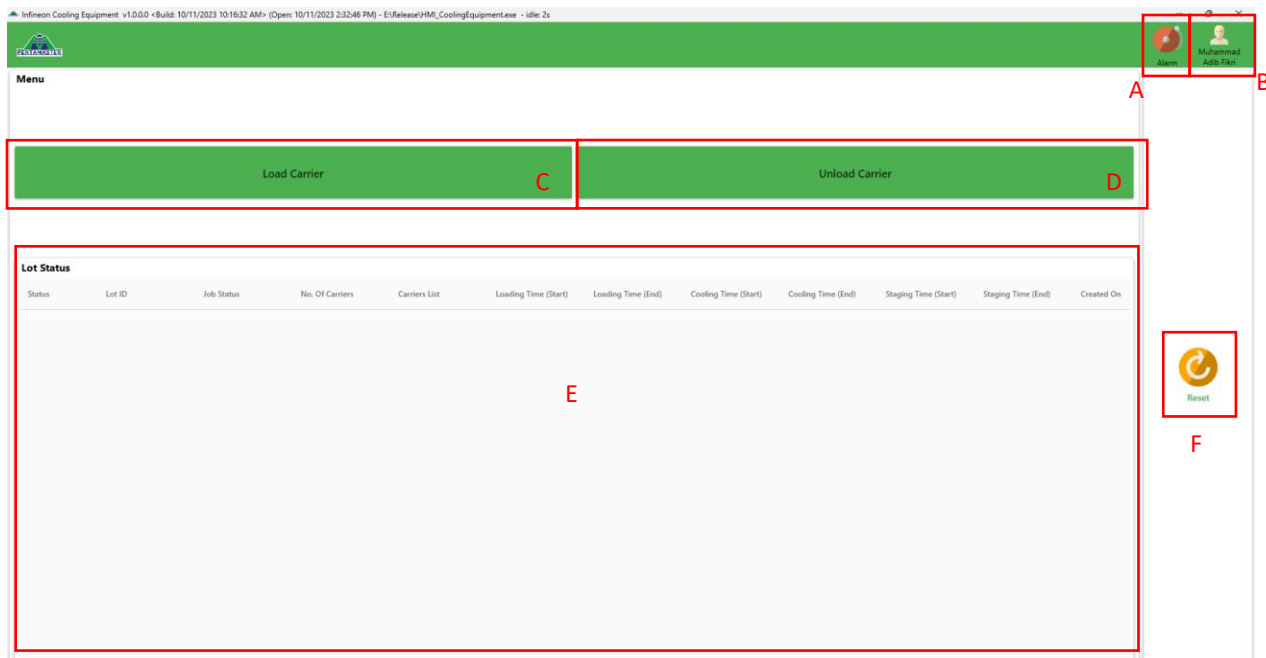

4.0 Lot Status Page

This page can be accessed with or without login and select the Lot Status from Menu drawer. Lot Status Page contains two segments which one is for current lots and another segment is for history lots. These are the contents of the Lot Status Page. You can refer to the image and the definitions.

Definitions:

- A. Menu Button
 - a. To open the Menu drawer.
- B. Alarm Button
 - a. To open the Alarm window.
- C. Sign In / Sign Out button
 - a. To Sign In / Sign Out in HMI
- D. Current/History Tab
 - a. To change between current lots and history lots.
- E. Lot Status
 - a. To display lot information's for current or history lots based on tab.
- F. Reset Button
 - a. To reset the current errors or warnings.
- G. Date Picker (History Tab)
 - a. To set the "date from" and "date to" for display the history lots.
 - b. Search button is to search the lots between on date selected.
 - c. Reset button is to reset the date to current date.
- H. Export Button
 - a. To export the searched lots into csv files.
- I. Carrier Details Button
 - a. To open the carrier details window.



Application Interface Specification

Infineon Cooling Equipment v1.0.0.0 • Build: 10/11/2023 10:16:32 AM • (Open: 10/11/2023 2:32:46 PM) - E:\Release\HMI_CoolingEquipment.exe - idle: 1s

Lot Status

Current History

Status Lot ID Job ID Job Status Carriers List Loading Time (Start) Loading Time (End) Cooling Time (Start) Cooling Time (End) Staging Time (Start) Staging Time (End) Created C

Reset

Infineon Cooling Equipment v1.0.0.0 • Build: 10/11/2023 10:16:32 AM • (Open: 10/11/2023 2:32:46 PM) - E:\Release\HMI_CoolingEquipment.exe - idle: 0s

Lot Status

Current History

Date From: 1/10/2023 Date To: 10/11/2023 Search Reset Export To CSV

Loading Time (Start)	Loading Time (End)	Cooling Time (Start)	Cooling Time (End)	Staging Time (Start)	Staging Time (End)	Created On	Completed On	Details
10/7/2023 7:56:53 PM	10/7/2023 7:57:40 PM	10/7/2023 7:57:40 PM	10/7/2023 7:58:40 PM	10/7/2023 7:58:40 PM	10/7/2023 8:00:32 PM	10/7/2023 7:53:17 PM	10/7/2023 8:00:32 PM	?
10/7/2023 7:58:02 PM	10/7/2023 7:58:39 PM	10/7/2023 7:58:39 PM	10/7/2023 7:59:39 PM	10/7/2023 7:59:39 PM	10/7/2023 8:01:17 PM	10/7/2023 7:53:20 PM	10/7/2023 8:01:17 PM	?
10/7/2023 8:22:07 PM	10/7/2023 8:22:39 PM	10/7/2023 8:22:39 PM	10/9/2023 10:22:39 AM	10/9/2023 10:22:39 AM	10/9/2023 10:47:03 AM	10/7/2023 8:16:09 PM	10/9/2023 10:47:03 AM	?
10/7/2023 8:22:55 PM	10/7/2023 8:23:06 PM	10/7/2023 8:23:06 PM	10/9/2023 10:23:06 AM	10/9/2023 10:23:06 AM	10/9/2023 10:47:44 AM	10/7/2023 8:16:14 PM	10/9/2023 10:47:44 AM	?
10/7/2023 8:23:39 PM	10/7/2023 8:24:10 PM	10/7/2023 8:24:10 PM	10/9/2023 10:24:10 AM	10/9/2023 10:24:10 AM	10/9/2023 10:48:23 AM	10/7/2023 8:16:19 PM	10/9/2023 10:48:23 AM	?
10/7/2023 8:24:28 PM	10/7/2023 8:25:25 PM	10/7/2023 8:25:25 PM	10/9/2023 10:25:25 AM	10/9/2023 10:25:25 AM	10/9/2023 10:49:13 AM	10/7/2023 8:16:24 PM	10/9/2023 10:49:13 AM	?
10/7/2023 8:25:39 PM	10/7/2023 8:26:12 PM	10/7/2023 8:26:12 PM	10/9/2023 10:26:12 AM	10/9/2023 10:26:12 AM	10/9/2023 10:49:58 AM	10/7/2023 8:16:27 PM	10/9/2023 10:49:58 AM	?
10/9/2023 1:58:11 PM	10/9/2023 1:59:01 PM	10/9/2023 1:59:01 PM	10/9/2023 2:00:01 PM	10/9/2023 2:00:01 PM	10/9/2023 2:01:30 PM	10/9/2023 1:56:59 PM	10/9/2023 2:01:30 PM	?
10/9/2023 2:03:06 PM	10/9/2023 2:03:37 PM	10/9/2023 2:03:37 PM	10/9/2023 2:04:37 PM	10/9/2023 2:04:37 PM	10/9/2023 2:06:05 PM	10/9/2023 2:02:09 PM	10/9/2023 2:06:05 PM	?
10/10/2023 5:35:52 PM	10/10/2023 5:40:09 PM	10/10/2023 5:40:09 PM	10/10/2023 5:41:09 PM	10/10/2023 5:41:09 PM	10/10/2023 5:44:47 PM	10/10/2023 5:25:39 PM	10/10/2023 5:44:47 PM	?
10/10/2023 5:40:33 PM	10/10/2023 5:42:35 PM	10/10/2023 5:42:35 PM	10/10/2023 5:43:35 PM	10/10/2023 5:43:35 PM	10/10/2023 5:46:22 PM	10/10/2023 5:25:42 PM	10/10/2023 5:46:22 PM	?
10/10/2023 5:42:43 PM	10/10/2023 5:45:15 PM	10/10/2023 5:45:15 PM	10/10/2023 5:46:15 PM	10/10/2023 5:46:15 PM	10/10/2023 5:48:55 PM	10/10/2023 5:25:45 PM	10/10/2023 5:48:55 PM	?
10/10/2023 7:11:47 PM	10/10/2023 7:15:18 PM	10/10/2023 7:15:18 PM	10/10/2023 7:16:18 PM	10/10/2023 7:16:18 PM	10/10/2023 7:18:17 PM	10/10/2023 7:08:51 PM	10/10/2023 7:18:17 PM	?
10/10/2023 7:10:43 PM	10/10/2023 7:11:24 PM	10/10/2023 7:11:24 PM	10/10/2023 7:12:24 PM	10/10/2023 7:12:24 PM	10/10/2023 7:20:40 PM	10/10/2023 7:08:48 PM	10/10/2023 7:20:40 PM	?
10/10/2023 7:14:48 PM	10/10/2023 7:17:00 PM	10/10/2023 7:17:00 PM	10/10/2023 7:18:00 PM	10/10/2023 7:18:00 PM	10/10/2023 7:25:04 PM	10/10/2023 7:08:53 PM	10/10/2023 7:25:04 PM	?

Reset

5.0 Loading Page


This is the view and the contents of the Loading Page. You can refer to the image and the definitions.

Definitions:

- A. Alarm Button
 - a. To open the Alarm window.
- B. Sign In / Sign Out button
 - a. To Sign In / Sign Out in HMI.
- C. Carrier ID Textbox
 - a. To manually key-in or scan the carrier ID.
- D. Scan Button
 - a. To start the loading process.
 - b. Will be auto triggered if using scanner.
- E. Load Port Location Box
 - a. To display the load port location for scanned carrier.
- F. Activity Log Box
 - a. To display all the activity during the loading process including errors and warnings.
- G. Legend
- H. Rack Layout (Tray)
 - a. To show indicator for each load port.
- I. Rack Layout (Tubes)
 - a. To show indicator for each load port.
- J. Reset Button
 - a. To reset the current errors or warnings.



Application Interface Specification

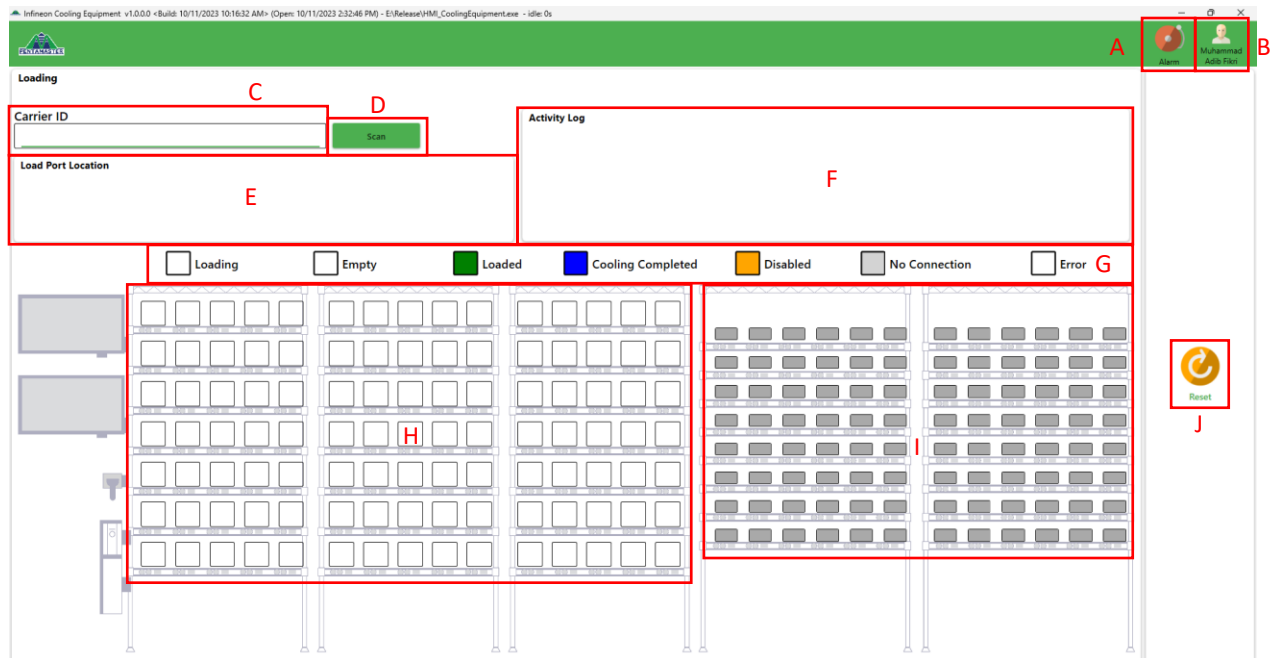

6.0 Unloading Page


This is the view and the contents of the Unloading Page. You can refer to the image and the definitions.

Definitions:

- A. Alarm Button
 - a. To open the Alarm window.
- B. Sign In / Sign Out button
 - a. To Sign In / Sign Out in HMI.
- C. Lot ID Textbox
 - a. To manually key-in or scan the lot ID.
- D. Scan Button
 - a. To start the unloading process.
 - b. Will be auto triggered if using scanner or selected lot from Job List window.
- E. View Job List Button
 - a. To open the Job List window.
- F. Load Port Location Box
 - a. To display the carrier load port location for scanned lot.
- G. Activity Log Box
 - a. To display all the activity during the unloading process including errors and warnings.
- H. Legend
- I. Rack Layout (Tray)
 - a. To show indicator for each load port.
- J. Rack Layout (Tubes)
 - a. To show indicator for each load port.
- K. Reset Button
 - a. To reset the current errors or warnings.



Application Interface Specification

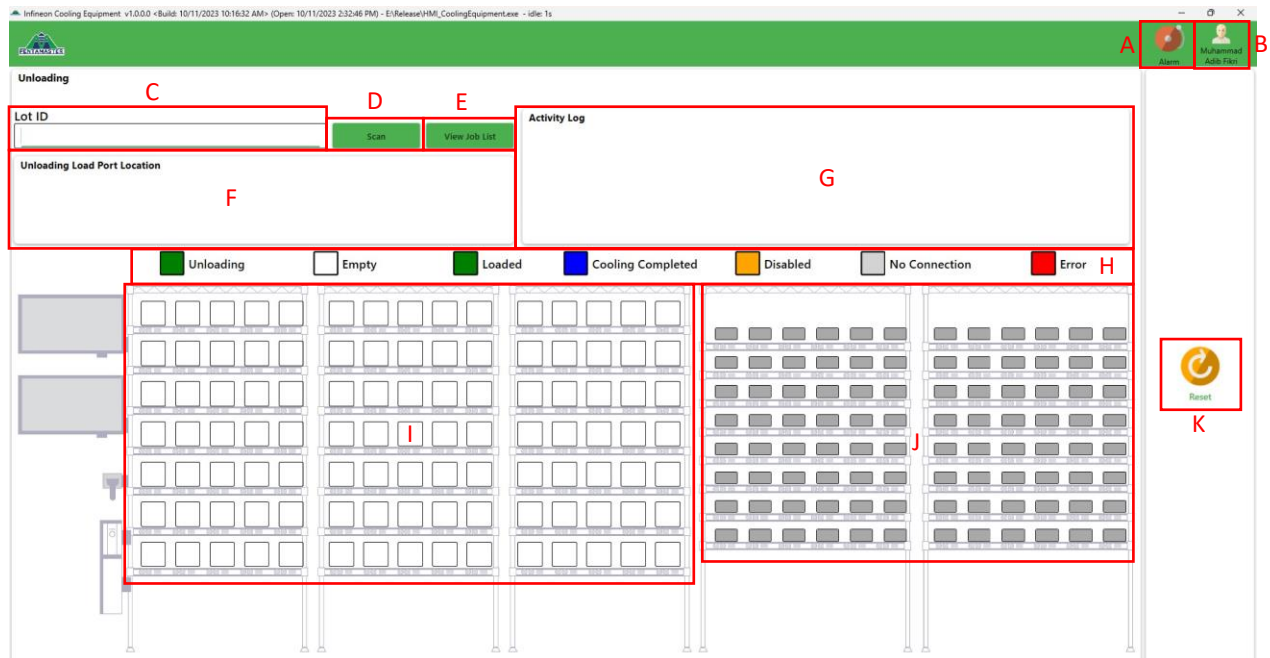


7.0 Secs Gem Page

This is the view and the contents of the Secs Gem Page. You can refer to the image and the definitions.

Definitions:

- A. Menu Button
 - a. To open the Menu drawer.
- B. Alarm Button
 - a. To open the Alarm window.
- C. Sign In / Sign Out button
 - a. To Sign In / Sign Out in HMI.
- D. Activity Log Box
 - a. To display all the Secs Gem activities.
- E. Secs Gem Status Box
 - a. To display the connection status of Secs Gem.
 - b. Button for connect and disconnect for Secs Gem.
- F. Secs Gem Settings Box
 - a. Open button is to open the Secs Gem settings window.
- G. Reset Button
 - a. To reset the current errors or warnings.

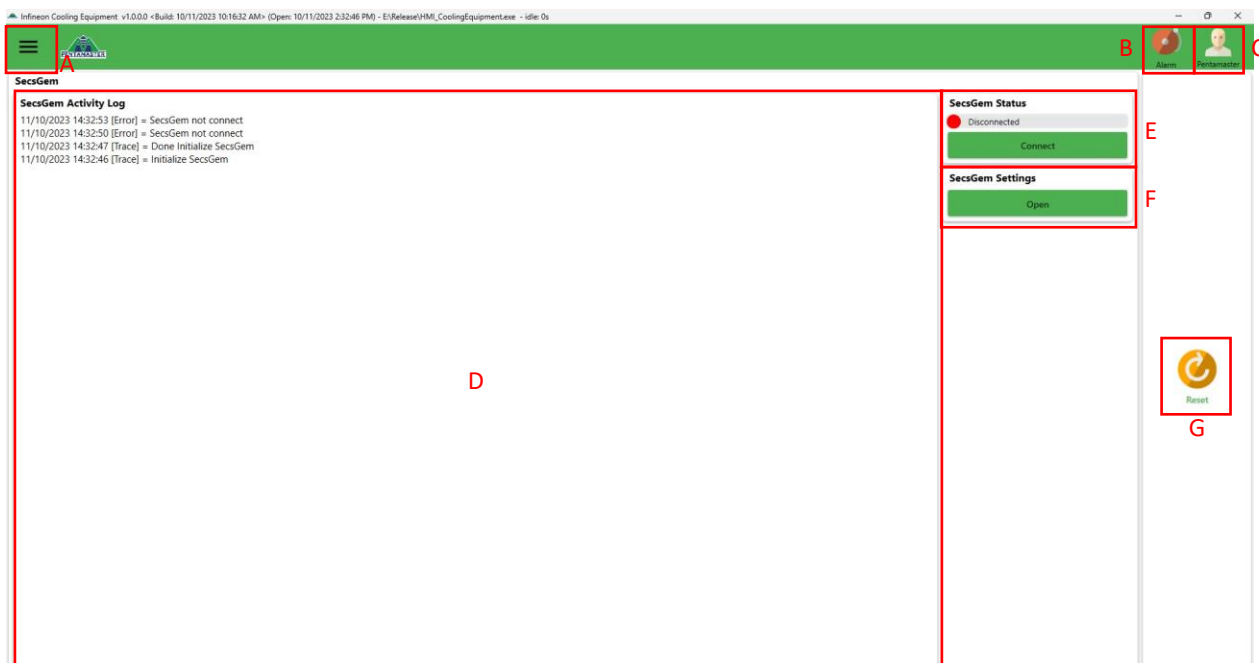


8.0 Settings Page

This is the view and the contents of the Settings Page. You can refer to the image and the definitions.

Definitions:

- A. Alarm Button
 - a. To open the Alarm window.
- B. Sign In / Sign Out button
 - a. To Sign In / Sign Out in HMI.
- C. Alarm Configuration Box
 - a. To import alarm definition.
- D. Load Port Configuration Box
 - a. To import load port configuration.
- E. Auto Sign Out Configuration
 - a. To set the auto sign out idle duration in minutes.
- F. Loading Time Configuration
 - a. To set duration for loading carrier.
- G. Reset Button
 - a. To reset the current errors or warnings.
- H. Save Button
 - a. To save the changes.

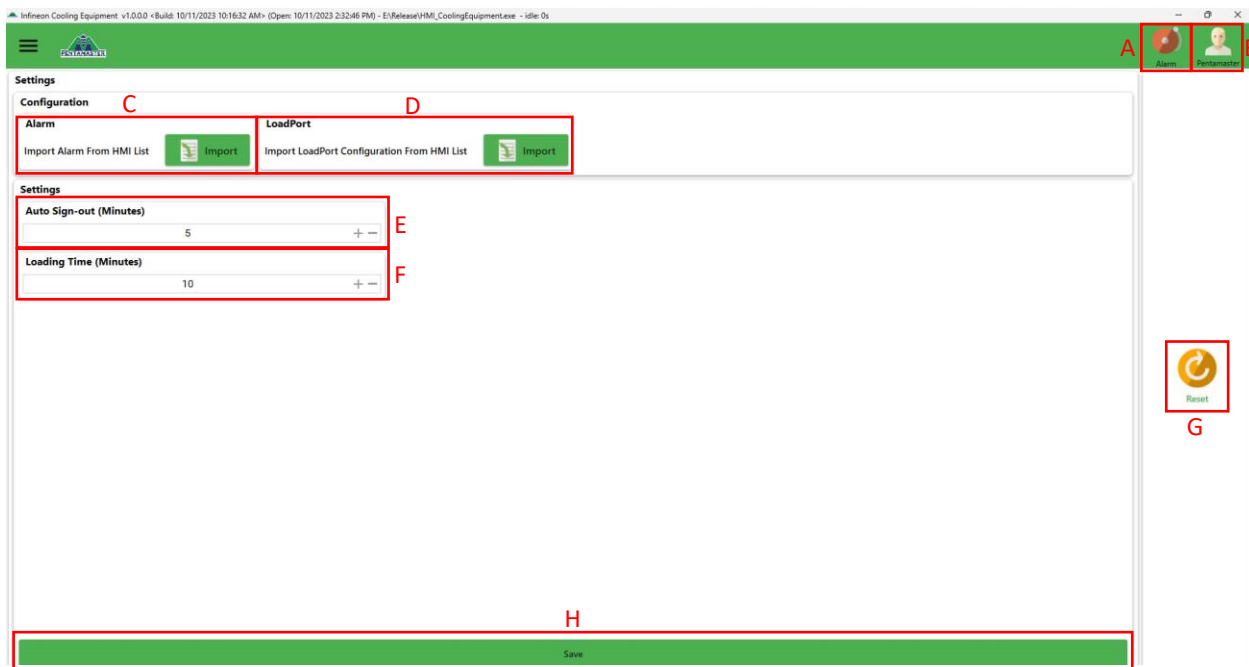

9.0 Pick-To-Light Page

Pick-To-Light Page contains two segments which one is for Status and another segment is for Settings. These are the contents of the Pick-To-Light Page. You can refer to the image and the definitions.

Definitions

- A. Menu Button
 - a. To open the Menu drawer.
- B. Alarm Button
 - a. To open the Alarm window.
- C. Sign In / Sign Out button
 - a. To Sign In / Sign Out in HMI.
- D. Status/Settings Tab
 - a. To change between status and settings Pick-To-Light.
- E. Load Port Status (Tray)
 - a. To display the connection of the load port with the Pick-To-Light address.
 - b. To Enable/Disable load port.
- F. Load Port Status (Tray)
 - a. To display the connection of the load port with the Pick-To-Light address.
 - b. To Enable/Disable load port.
- G. Gateway Status (Pick-To-Light Control box)
 - a. To display the connection of each control box.
 - b. To manually connect/disconnect from control box.
- H. Reset Button
 - a. To reset the current errors or warnings.
- I. Set Best Polling Range Box
 - a. To set the best polling for Pick-To-Light devices.
- J. Show All Address Box
 - a. To display all the Pick-To-Light addresses at each device.
- K. Led Testing Box
 - a. To test all the Pick-To-Light led.
- L. Sensor Testing Box
 - a. To test each Pick-To-Light sensor.
- M. PTL LED Configuration
 - a. To configure the LED Color based on load port status.



Application Interface Specification

Infineon Cooling Equipment - v1.0.0.0 <Build: 10/11/2023 10:16:32 AM> (Open: 10/11/2023 2:32:46 PM) - E:\Release\HMI_CoolingEquipment.exe - idle: 2s

PTL

Status Settings

Tray

● (AA-01-01) - 10.0.50.110 [1]	✓ Enable
● (AA-01-02) - 10.0.50.110 [2]	✓ Enable
● (AA-01-03) - 10.0.50.110 [3]	✓ Enable
● (AA-01-04) - 10.0.50.110 [4]	✓ Enable
● (AA-01-05) - 10.0.50.110 [5]	✓ Enable
● (AA-02-01) - 10.0.50.110 [6]	✓ Enable
● (AA-02-02) - 10.0.50.110 [7]	✓ Enable
● (AA-02-03) - 10.0.50.110 [8]	✓ Enable
● (AA-02-04) - 10.0.50.110 [9]	✓ Enable
● (AA-02-05) - 10.0.50.110 [10]	✓ Enable
● (AA-03-01) - 10.0.50.110 [11]	✓ Enable
● (AA-03-02) - 10.0.50.110 [12]	✓ Enable

Tube

● (BA-01-01) - 10.0.50.120 [1]	✓ Enable
● (BA-01-02) - 10.0.50.120 [2]	✓ Enable
● (BA-01-03) - 10.0.50.120 [3]	✓ Enable
● (BA-01-04) - 10.0.50.120 [4]	✓ Enable
● (BA-01-05) - 10.0.50.120 [5]	✓ Enable
● (BA-01-06) - 10.0.50.120 [6]	✓ Enable
● (BA-02-01) - 10.0.50.120 [7]	✓ Enable
● (BA-02-02) - 10.0.50.120 [8]	✓ Enable
● (BA-02-03) - 10.0.50.120 [9]	✓ Enable
● (BA-02-04) - 10.0.50.120 [10]	✓ Enable
● (BA-02-05) - 10.0.50.120 [11]	✓ Enable
● (BA-02-06) - 10.0.50.120 [12]	✓ Enable

Gateway Status

1. 10.0.50.110 [4660]
● ok
G
Connect
Disconnect

2. 10.0.50.120 [4660]
● Waiting
Connect
Disconnect

Reset

Set Best Polling Range

Set

Show All Address

Shows

Clear

Led Testing

0 + -

Enable

Disable

Sensor Testing

Enable

Disable

PTL LED Configuration

Cooling Completed : BLUE - ☐ Blinking

Disable : AMBER - ☐ Blinking

Empty : NoColour -

Error : RED - ☒ Blinking

Loading/Occupied : GREEN - ☐ Blinking

Unloading Process : GREEN - ☒ Blinking

Warning : RED - ☒ Blinking



Save

10.0 Alarm Message Window

Alarm Message Window contains two segments which one is for current alarms and another segment is for history alarms. These are the contents of the Alarm Message Window. You can refer to the image and the definitions.

Definitions:

- A. Current/History Tab
 - a. To switch between current and history alarms.
- B. Alarm Information Table
 - a. To display all the alarm information.
- C. Date Picker (History Tab)
 - a. To set the “date from” and “date to” for display the history alarms.
 - b. Search button is to search the alarms between on date selected.
 - c. Reset button is to reset the date to current date.
- D. Warning/Error Checkbox
 - a. To filter the alarms.
- E. Export Button
 - a. To export the searched alarms into csv files.

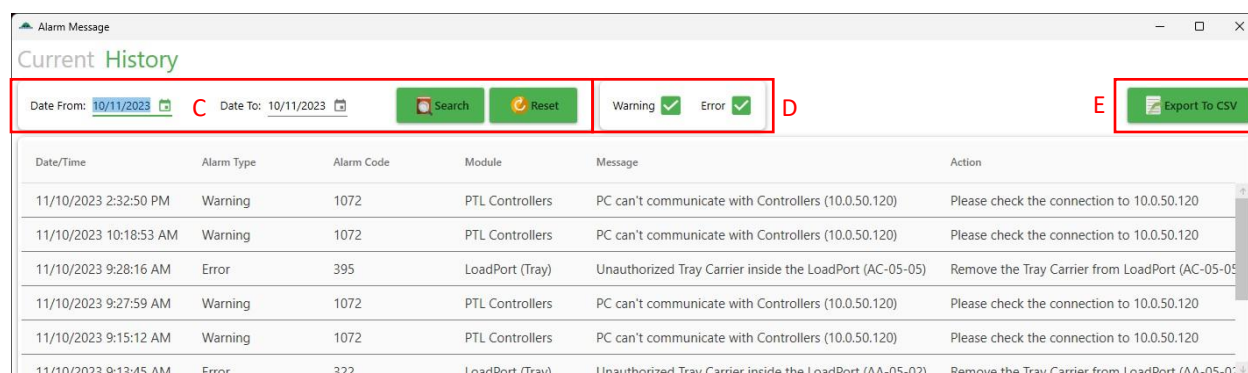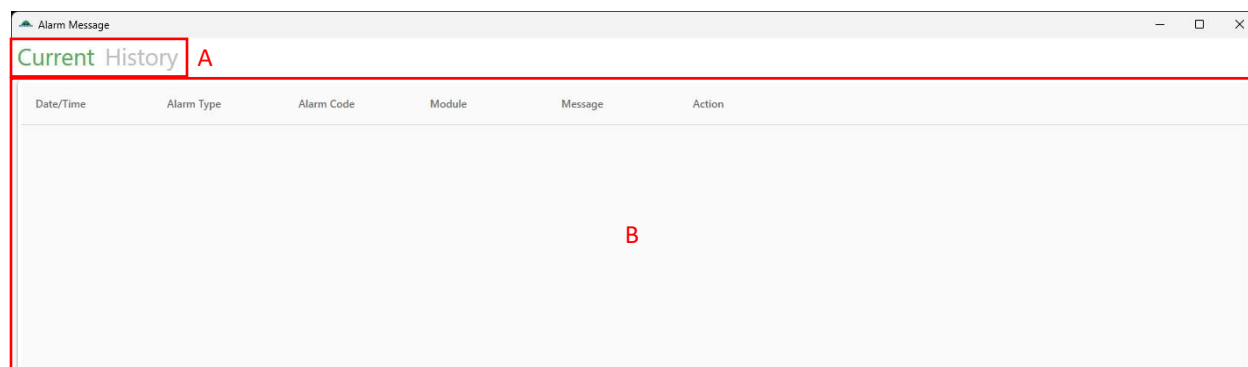




11.0 Carrier Details Window

This is the view and the contents of the Carrier Details Window. You can refer to the image and the definitions.

Definitions:

A. Carrier Information

- a. To display all carrier information based on the selected lot.

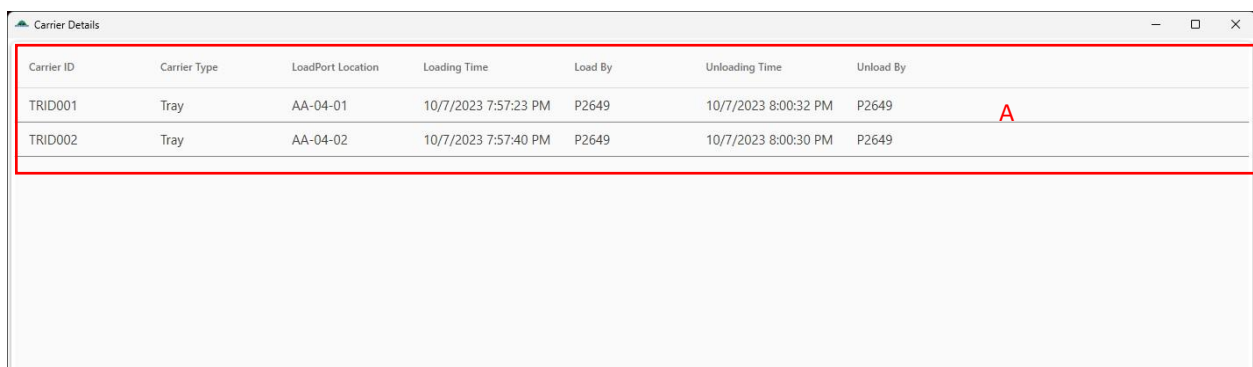

The screenshot shows a window titled "Carrier Details" with a table containing the following data:

Carrier ID	Carrier Type	LoadPort Location	Loading Time	Load By	Unloading Time	Unload By
TRID001	Tray	AA-04-01	10/7/2023 7:57:23 PM	P2649	10/7/2023 8:00:32 PM	P2649
TRID002	Tray	AA-04-02	10/7/2023 7:57:40 PM	P2649	10/7/2023 8:00:30 PM	P2649

A red box highlights the table area, and a red letter 'A' is placed to the right of the first row.

12.0 Sign In Window

This is the view and the contents of the Sign in Window. You can refer to the image and the definitions.

Definitions:

- A. Username Textbox
 - a. To manually enter the username or scan.
- B. Password Textbox
 - a. To manually enter the password or scan.
- C. Sign In Button
 - a. To sign in into the HMI.
 - b. Auto trigger if user scan the password using scanner.



13.0 User Account Editor Window

This is the view and the contents of the User Account Editor Window. You can refer to the image and the definitions.

Definitions:

- A. User Account Box
 - a. To display all registered accounts in HMI.
- B. Edit Box
 - a. To edit or add user account.
- C. Add Button
 - a. To add user account.
- D. Delete Button
 - a. To delete user account.
- E. Update Button
 - a. To update user account details.
- F. Clear Button.
 - a. To clear all the data in Edit Box.
- G. Save Button
 - a. To save the changes.

User Account Editor

UserAccount

Username	First Name	Last Name	User Group
admin	Admin	Infineon	Infineon
P2649	Muhammad Adib Fikri	Khairuzaman	Operator
penta	Pentamaster	Corporation Berhad	Penta

A

Edit

Username

+ Add

First Name

Delete

Last Name

Refresh

Group

Reset

Password

B

Save

User Account Editor

UserAccount

Username	First Name	Last Name	User Group
admin	Admin	Infineon	Infineon
P2649	Muhammad Adib Fikri	Khairuzaman	Operator
penta	Pentamaster	Corporation Berhad	Penta

Edit

Username

admin

C

First Name

Admin

D

Last Name

Infineon

E

Group

Infineon

F

Password

YWRtaW4xMjM=

+ Add

🗑 Delete

🔄 Update

🔄 Clear

G


Save

14.0 User Group Access Editor Window

This is the view and the contents of the User Group Access Editor Window. You can refer to the image and the definitions.

Definitions:

- A. Group DropDown
 - a. To able for add/delete user group
- B. User Group Access Table
 - a. To modify the access given for each group
- C. Save Button
 - a. To save the changes.

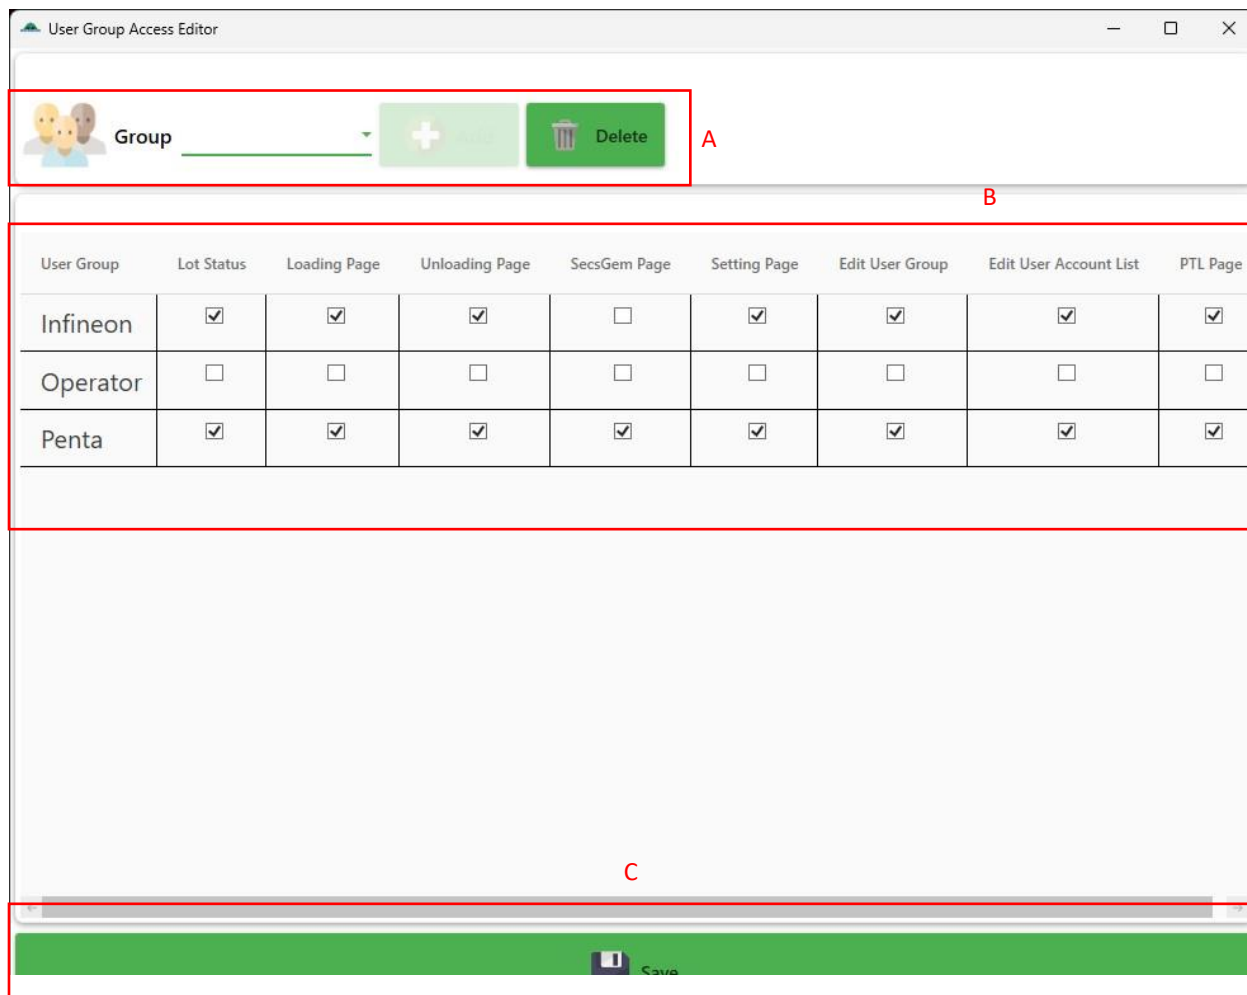

User Group Access Editor

Group


User Group	Lot Status	Loading Page	Unloading Page	SecsGem Page	Setting Page	Edit User Group	Edit User Account List	PTL Page
Infineon	☒	☒	☒	☐	☒	☒	☒	☒
Operator	☐	☐	☐	☐	☐	☐	☐	☐
Penta	☒	☒	☒	☒	☒	☒	☒	☒

Save

15.0 Operational

15.1 Sign-In into system

1. Click on “Sign In” button on top right of the Interface.

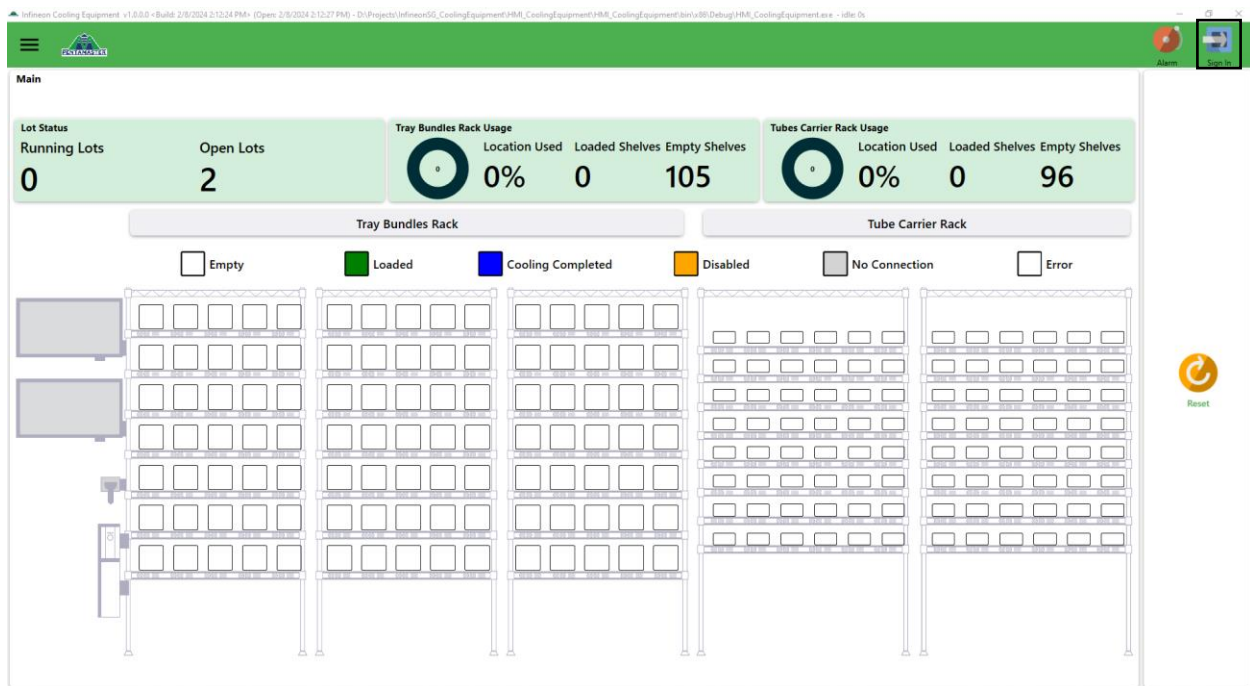


2. Type-in the username and password the click on “Sign In” on the pop-up window.

Notes:


1. If the username inserts by barcode scanner, system will automatically login without user require to type in their password.



Application Interface Specification

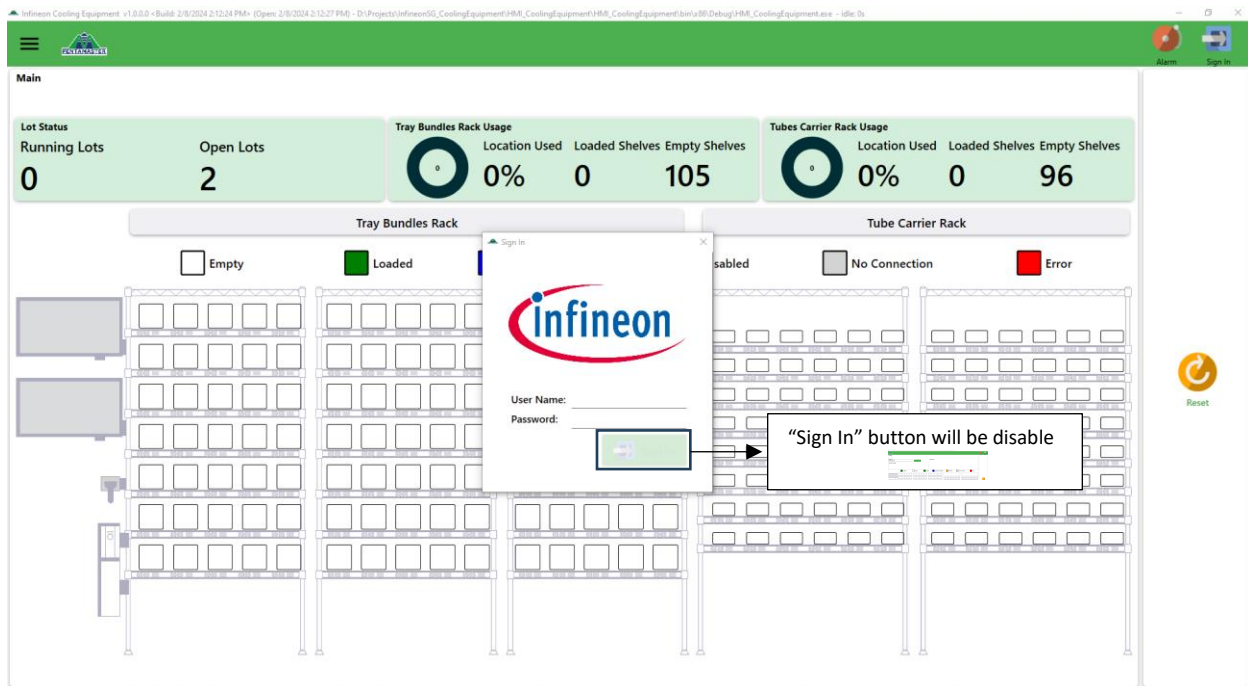

3. Once system successfully sign in, it will redirect to main page. For "Operator" user level, the main page will be different from the others user level. Image below shows the "Operator" user level main page.

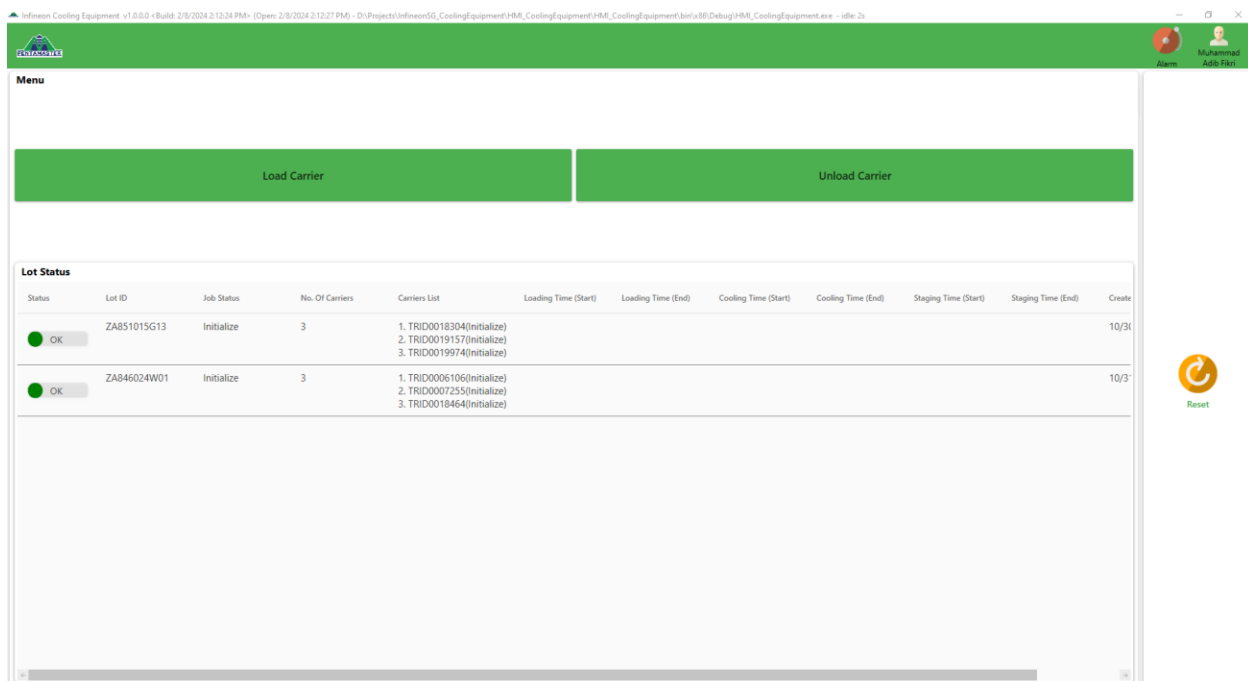





Application Interface Specification

15.2 Sign Out from system


1. Click on "Profile" button on top right of interface.

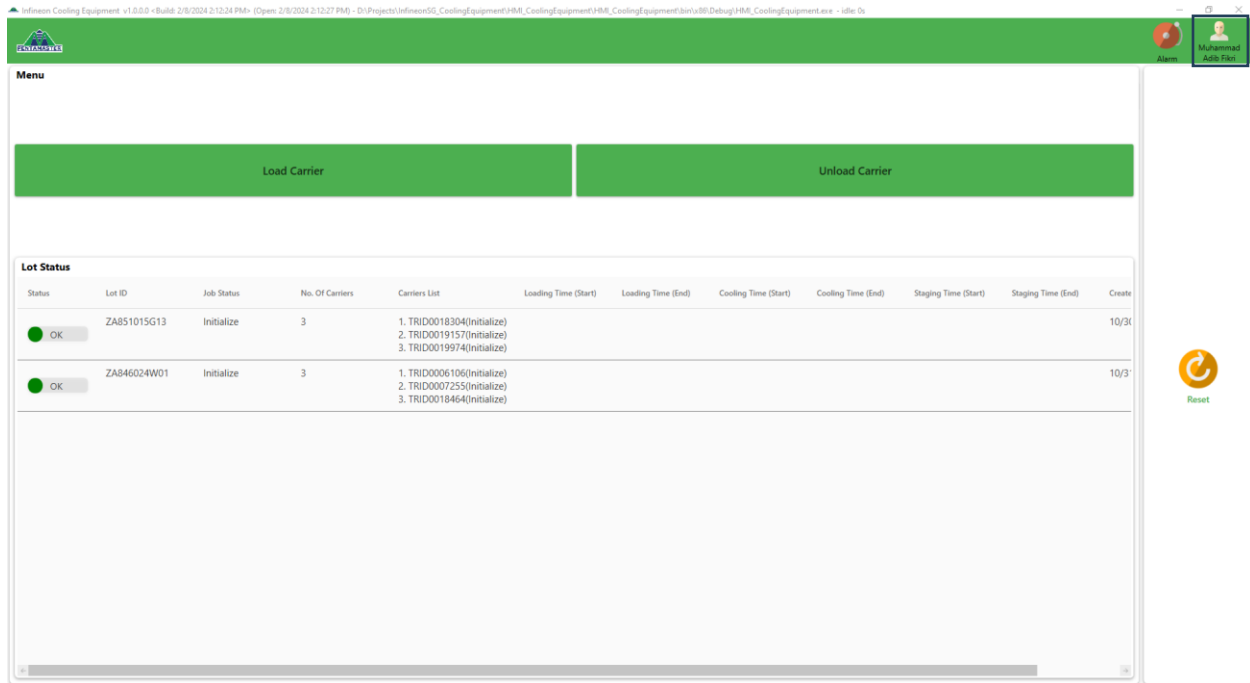

2. Click on "Sign Out" button on bottom of the pop up.

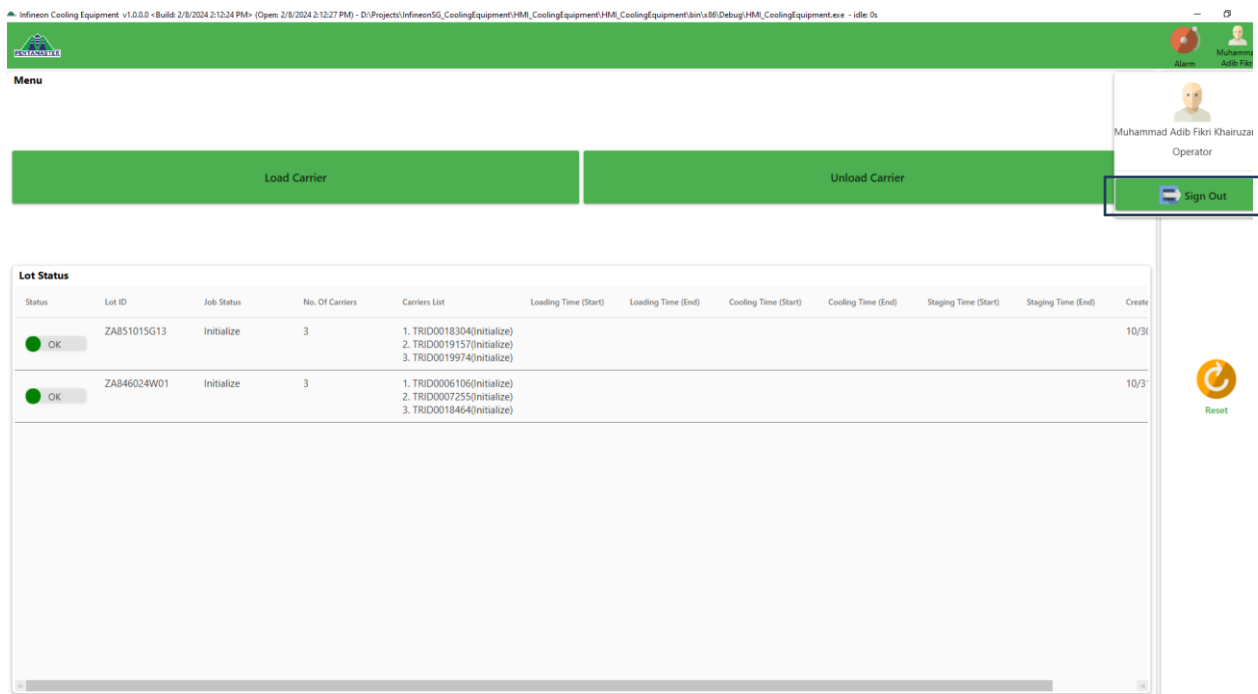

3. System will redirect to main page once user sign out.

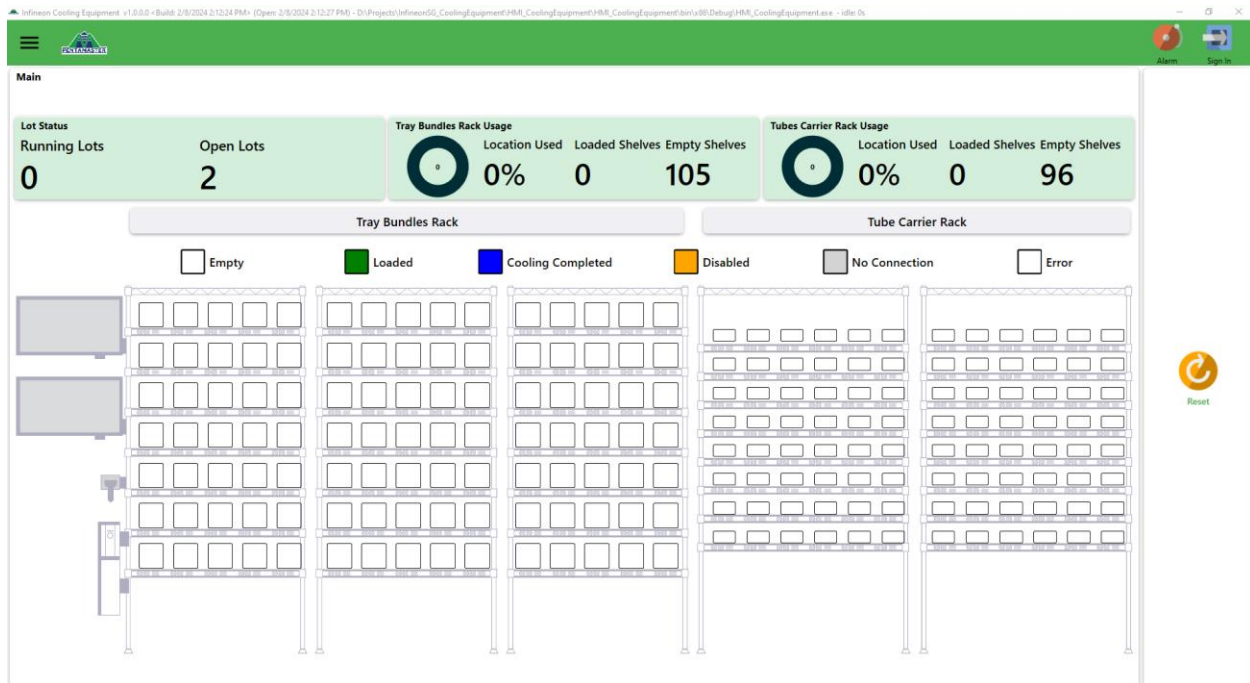


15.3 Loading Process

Notes:


1. Carrier can be load once system received "SetupJob" command from host.
2. Carrier ID must be registered under any Job ID and Lot ID.
3. Number of Lot received from host will be shown as image below



Application Interface Specification

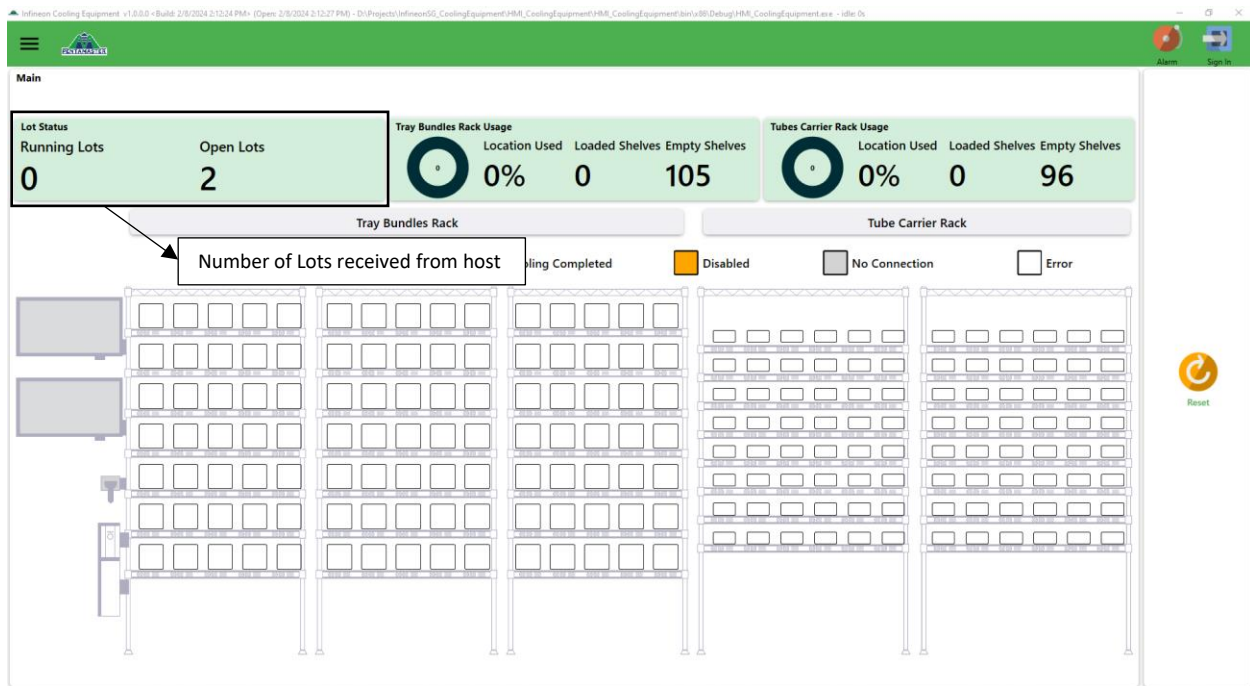



1. This example has been done by using “Operator” user level. Click on “Load Carrier” button.

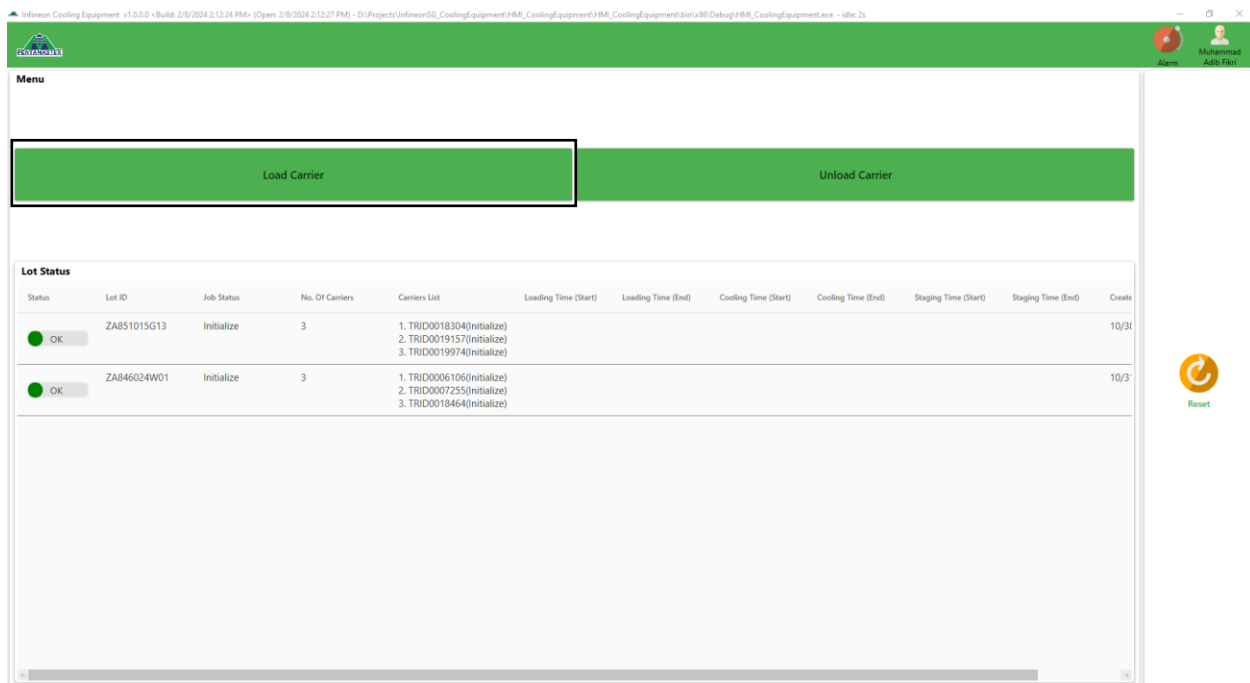

2. System will redirect to Loading Page. User can manually type in carrier ID or scan it using barcode scanner. If user manually type in, user must click “Scan” button.

Notes:

1. After users click “Scan” button, system will wait for Start Job command from Host thru Secs Gem. If system failed to receive the Start Job command, a warning will be issued. Then, user need to start back this step.

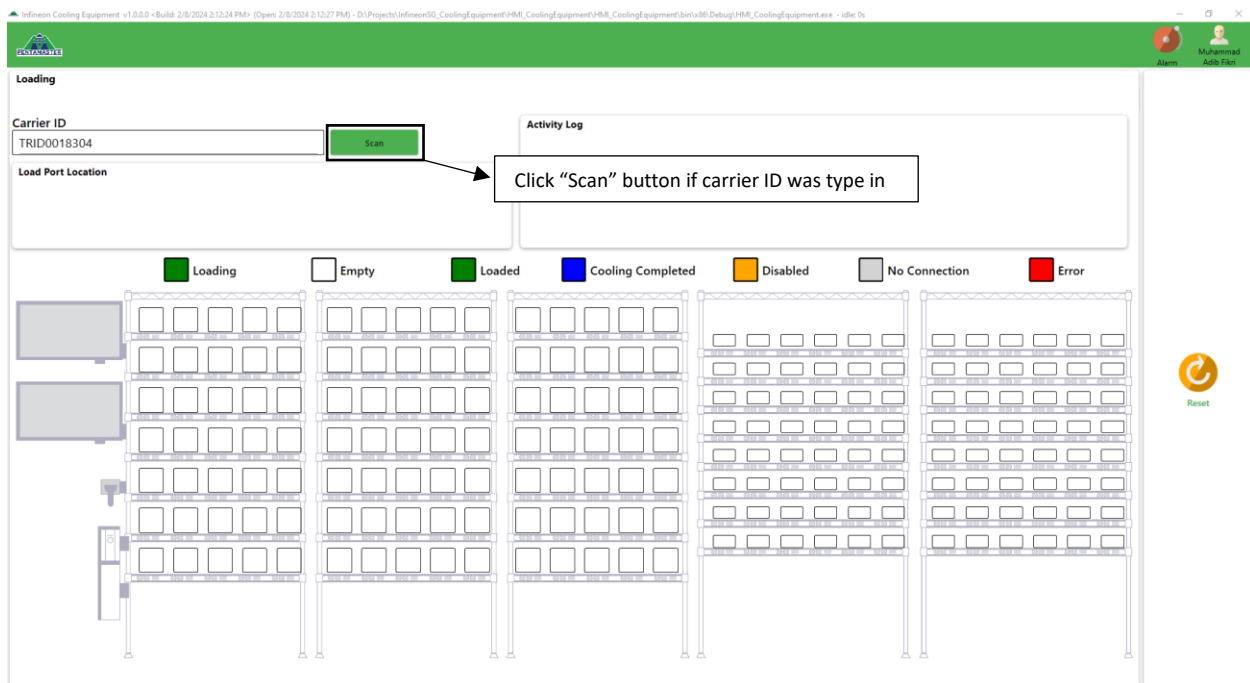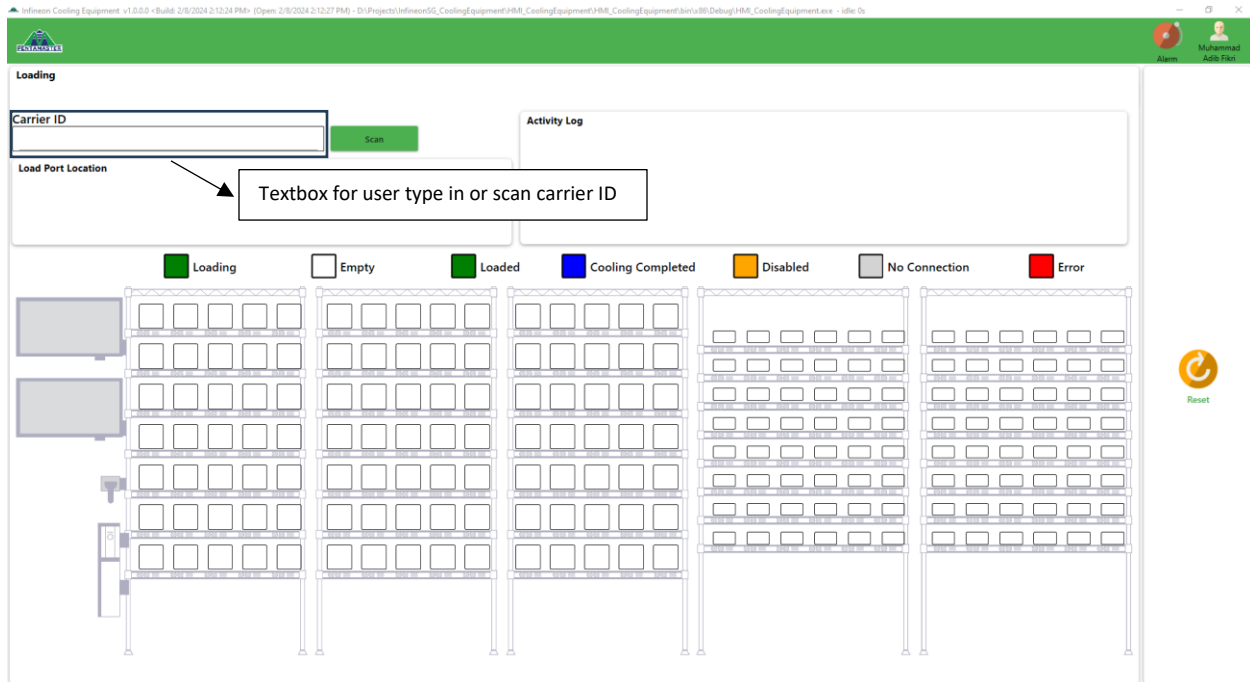


3. Loadport LED to be load will be blinking green on interface and physically. Users need to insert the carrier to assigned loadport.

Notes:



Application Interface Specification


1. User can scan or type in another carrier ID if want to load another carrier. The current loadport LED will be stop blinking and the new loadport assigned will be blinking.
2. Loading time start once the first carrier scanned. Loading time duration can't be modify after first carrier scanned.

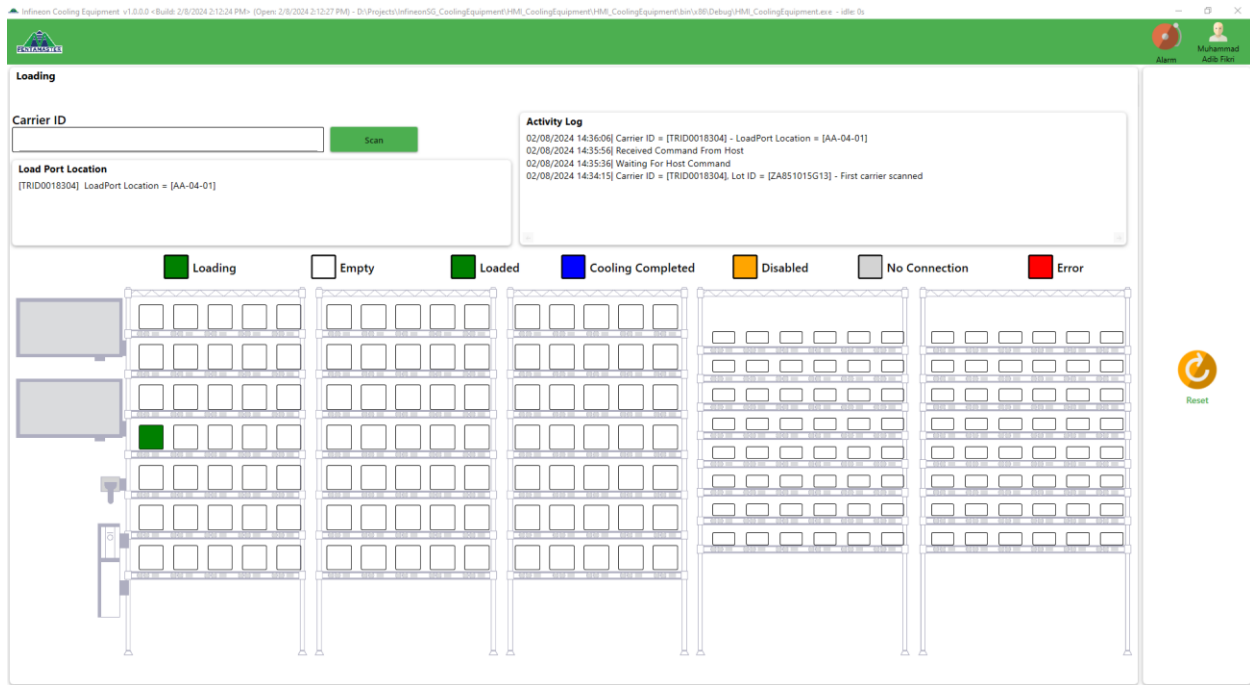


4. Once users load the carrier into loadport, loadport LED will turn solid green on interface and physically.



Application Interface Specification

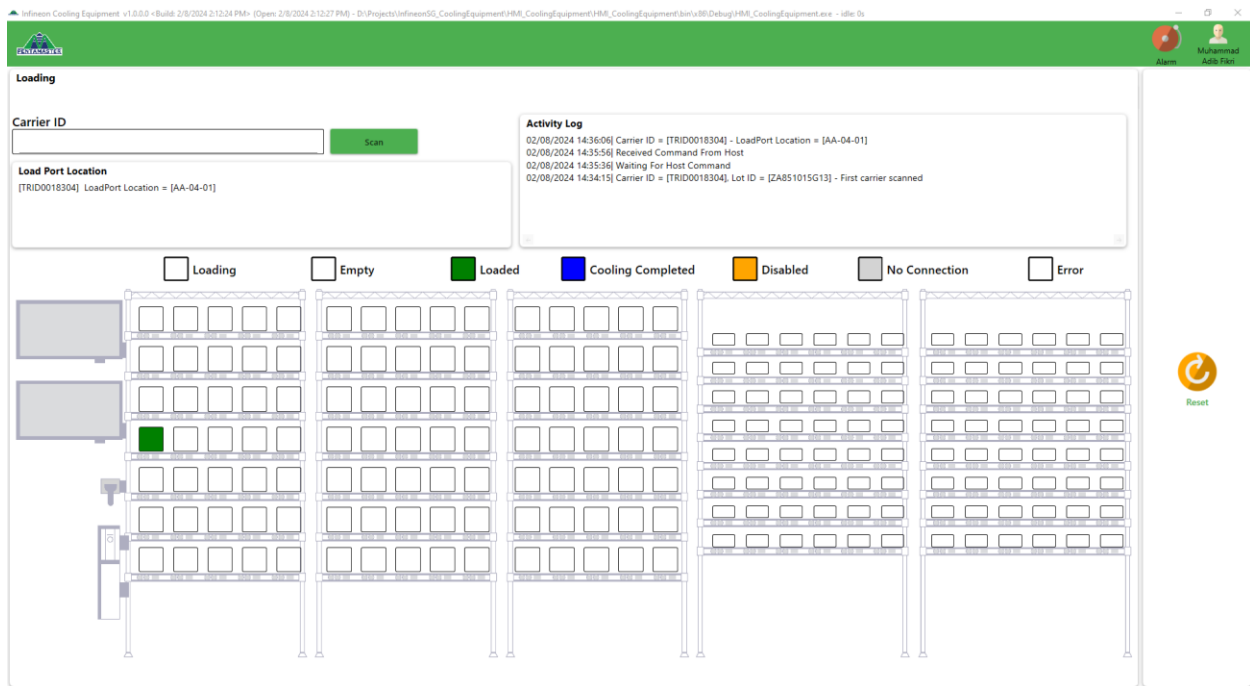

5. Repeat step 2 and 3 until the last carrier

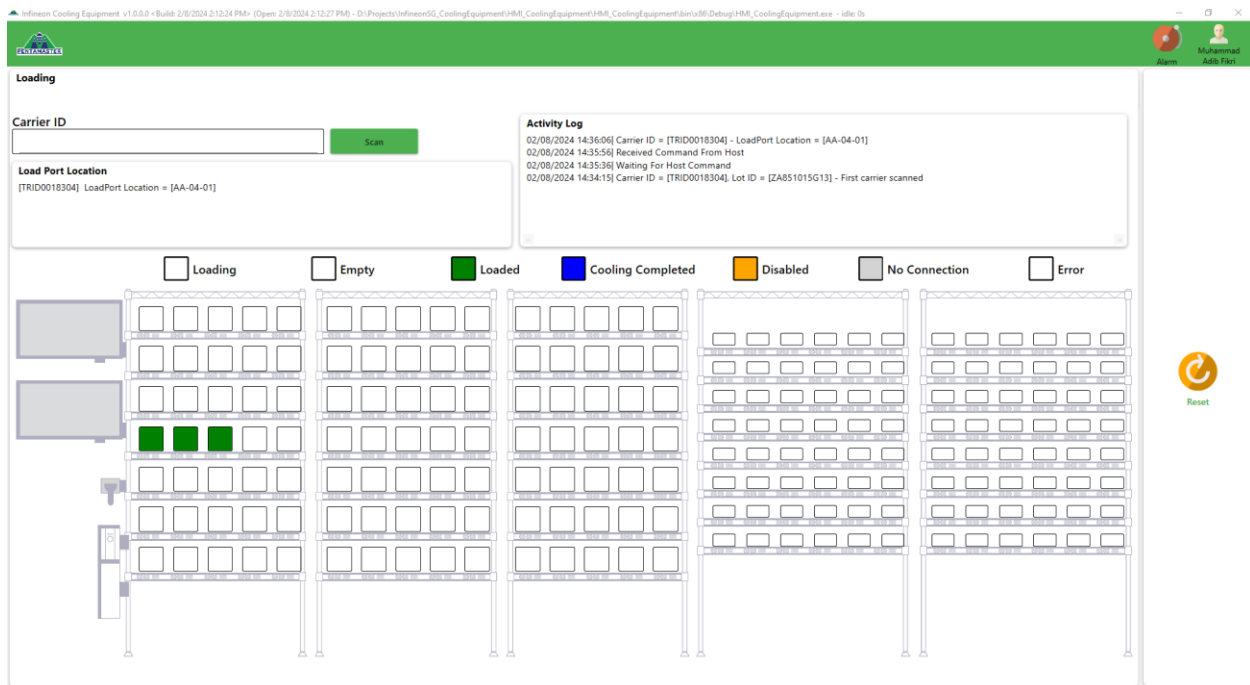


6. Once all the carrier loaded, system will show a message inside the “Activity Log” indicating job have been executed. Also, cooling time will start at this step. Users require to sign out or system will trigger auto sign out if the system idles under certain period.

15.4 Unloading Process

Notes:


1. Unloading process will be available once any lot have been completed the cooling process.
2. Image below shown an example of a lot have been completed cooling process

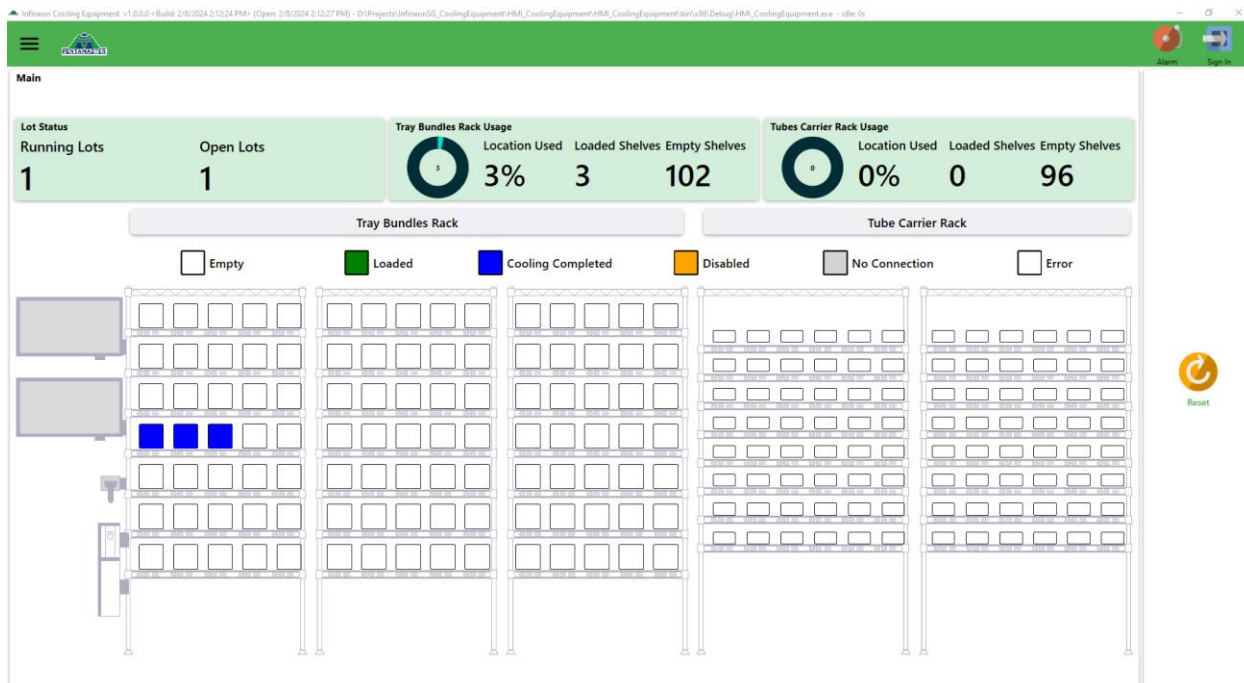


1. This example has been done by using "Operator" user level. Click on "Unload Carrier" button.




Application Interface Specification

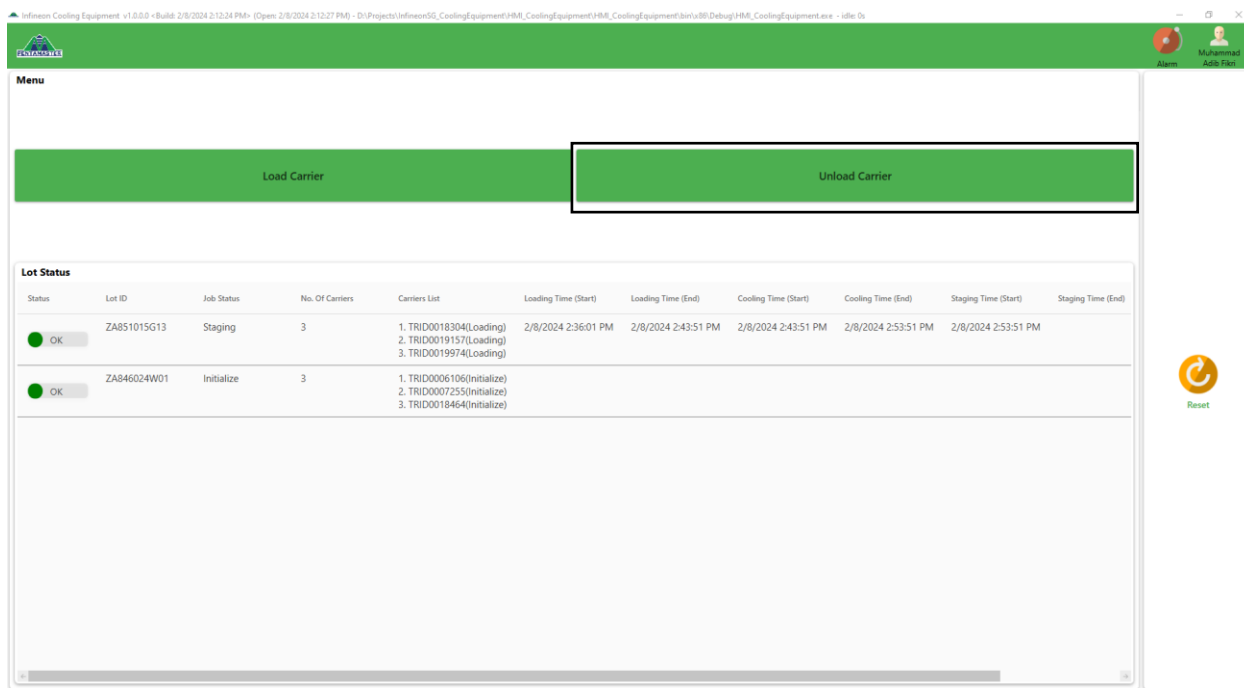

2. System will redirect to Unloading Page. User can manually type in lot ID or scan it using barcode scanner. If user manually type in, user must click “Scan” button. User also can choice which lot to be unload by clicking on “View Job List” button.

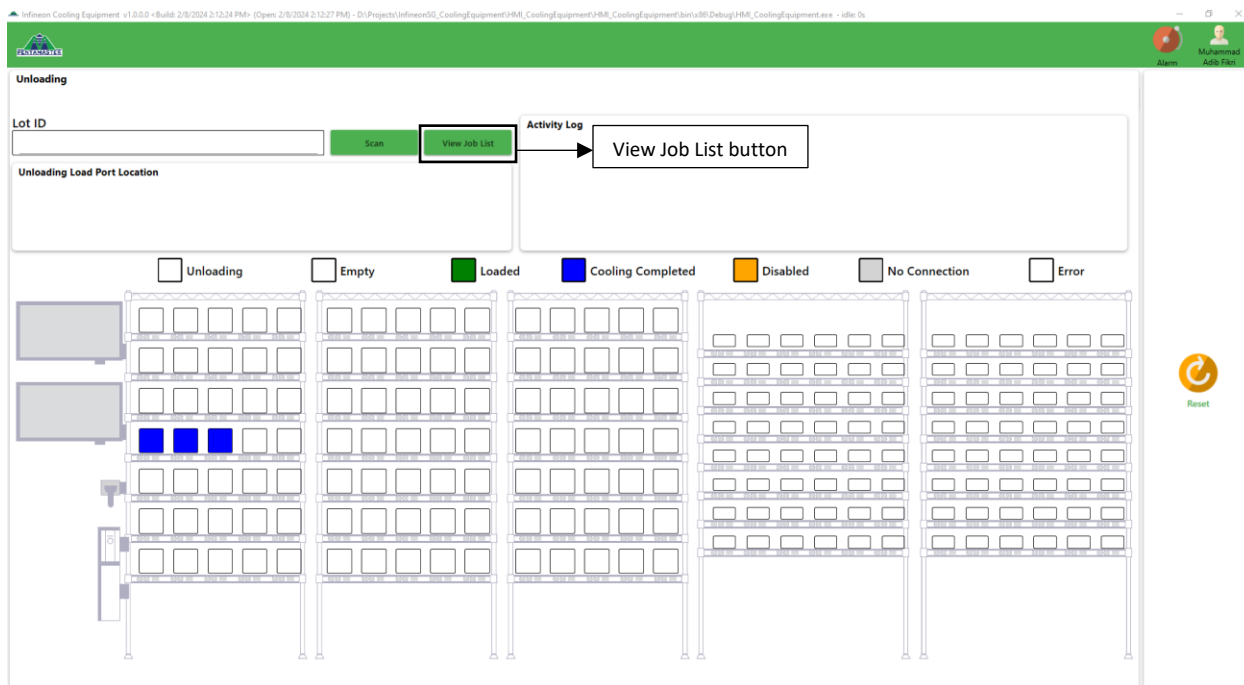


3. If users click on “View Job List” button, system will pop up a window displaying all the lots ready to be unload. Users can click on “Select” button on which lot wants to be unload.

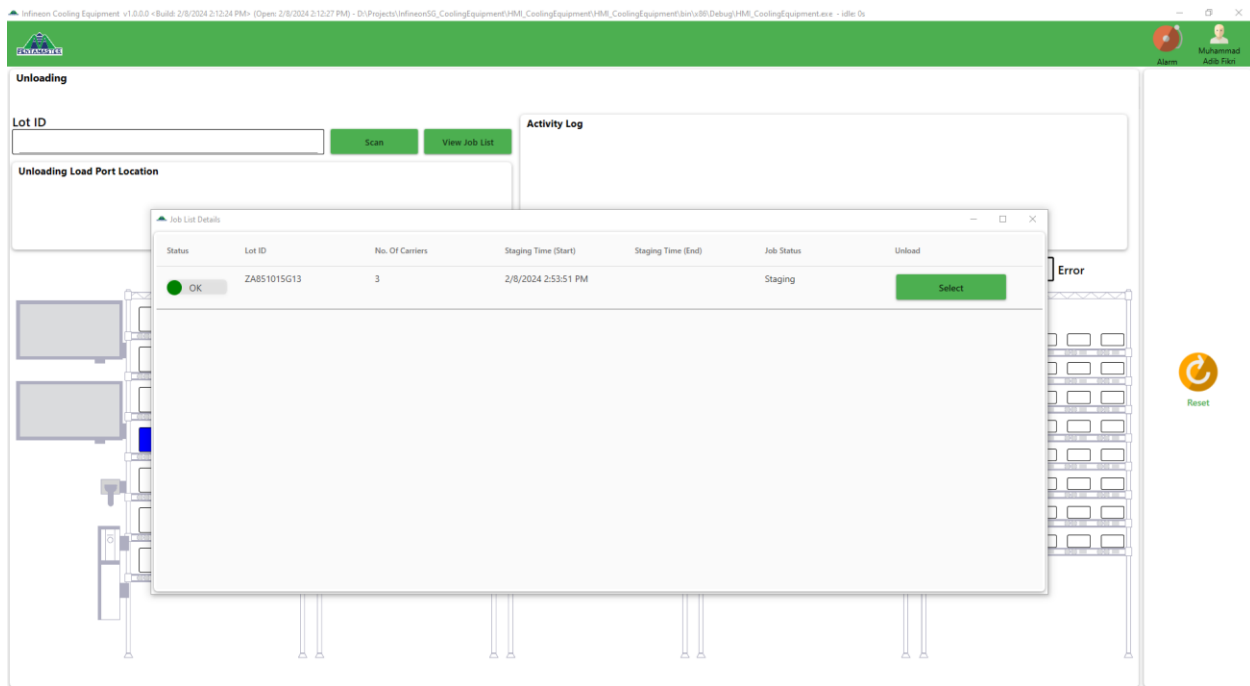

4. Once user have clicked on “Select” button or user manually key-in/scan the lot ID, all related carrier to that lot will be blinking “Green” indicates its ready to be unload.

Notes:

1. User can change the lot to be unload with repeat the step 2 – 3. But the current lot must not be unloaded. If the system detects any of the current lot have been loaded, system will not allow users to change the unloading lot.

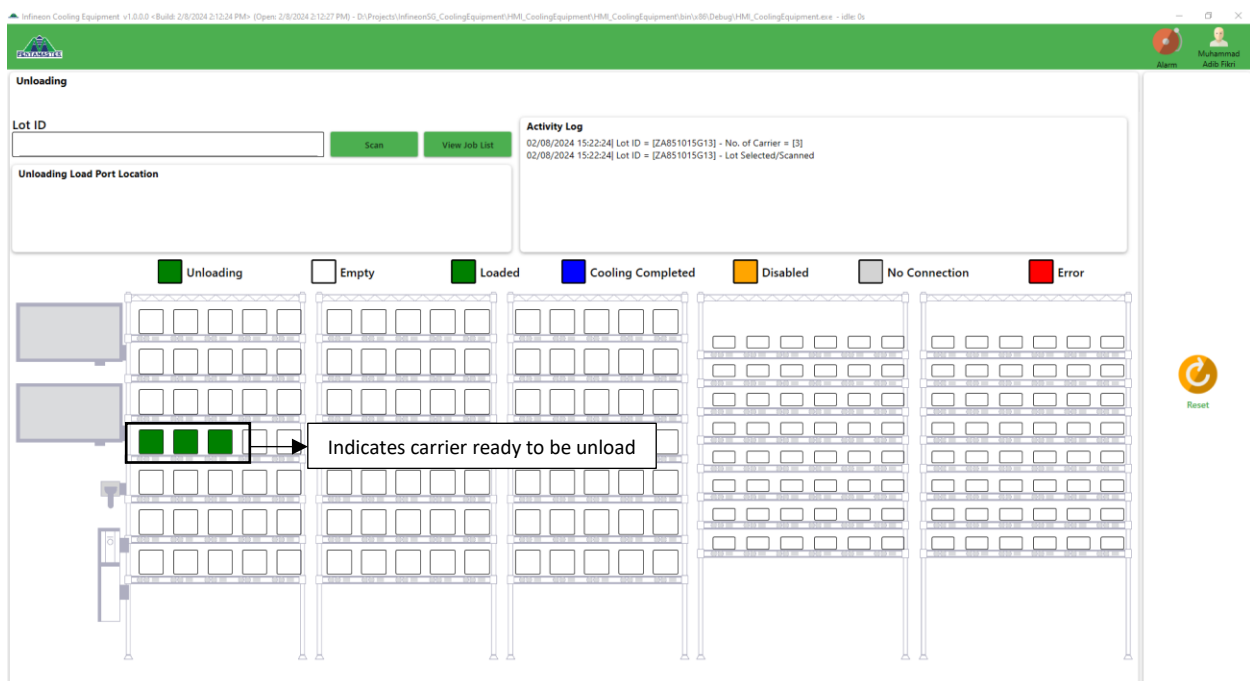


5. Unload all the carrier and the unloading are finished. If users wish to unload another lot, user can repeat step 2-4. System will trigger automatically logout once the system is idle under certain time of period.

15.5 Handling alarm and warning

If there is alarms or warning, user can try to do the suggested action to clear the alarm or warning. Users also can click on reset button to clear the alarm or warning.


Image below shown example of alarm on load port AA-01-01. To know what's the alarm is, click on "Alarm" button on top right side of the interface.

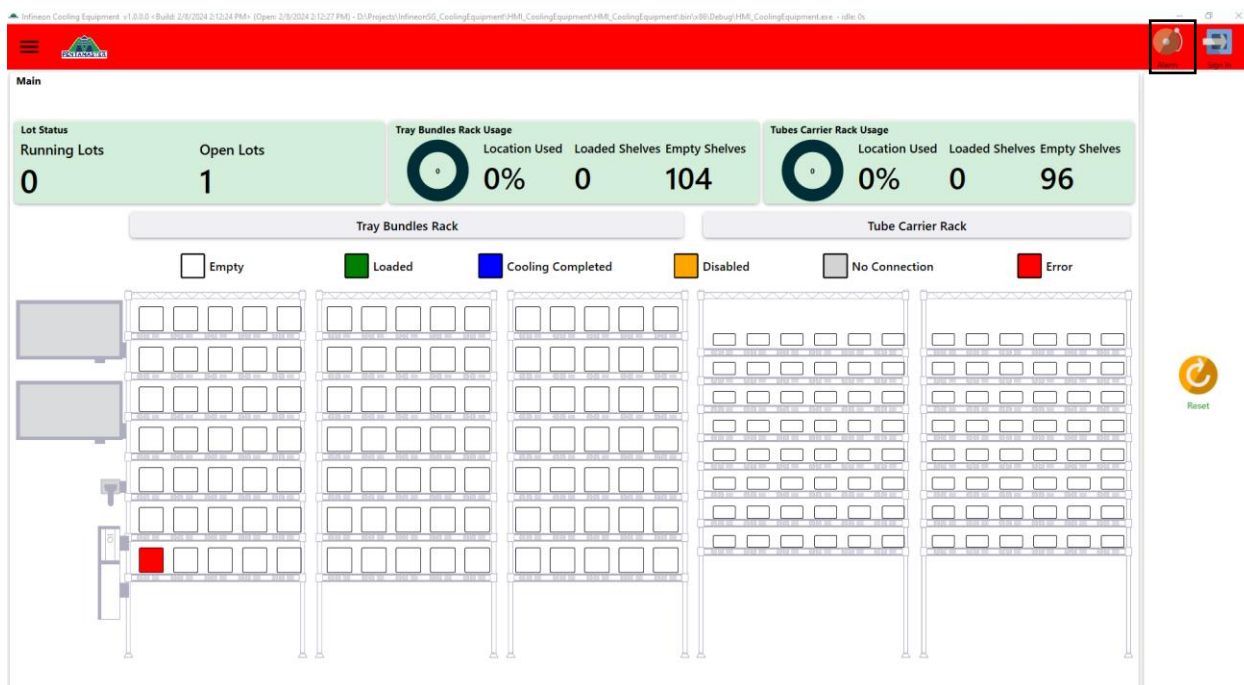

System will open a window displaying all the current alarm and warning.




Application Interface Specification

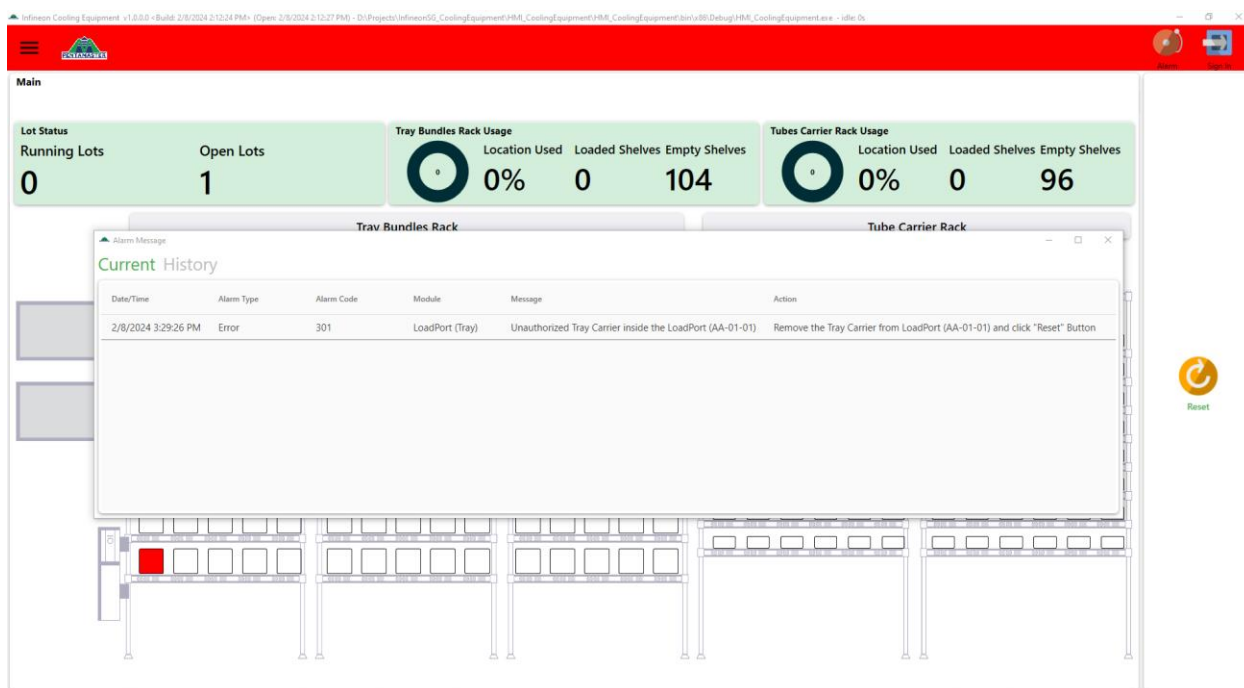

15.6 Enable/Disable load port


1. To enable/disable load port, user must login but not as “Operator” user level. Once login, user can select menu on top left side of interface and select “PTL”.

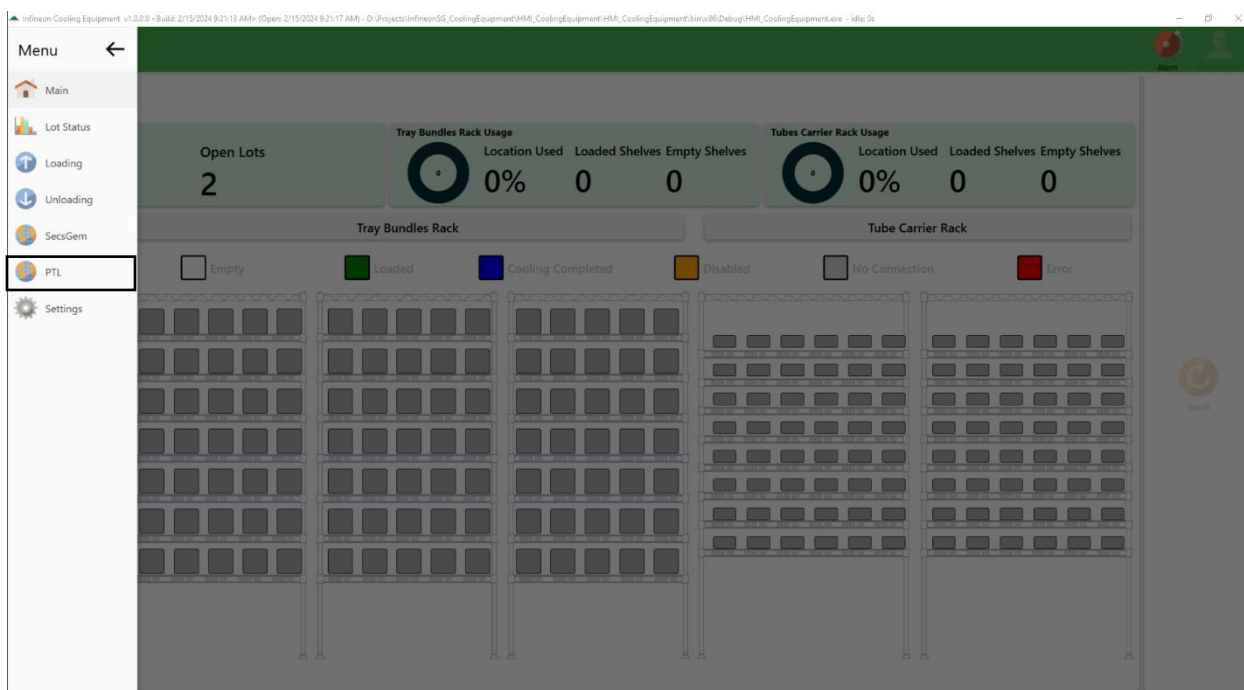

2. System will redirect to PTL Page. User can check on “Enable” checkbox to enable the load port and uncheck it to disable.



Application Interface Specification

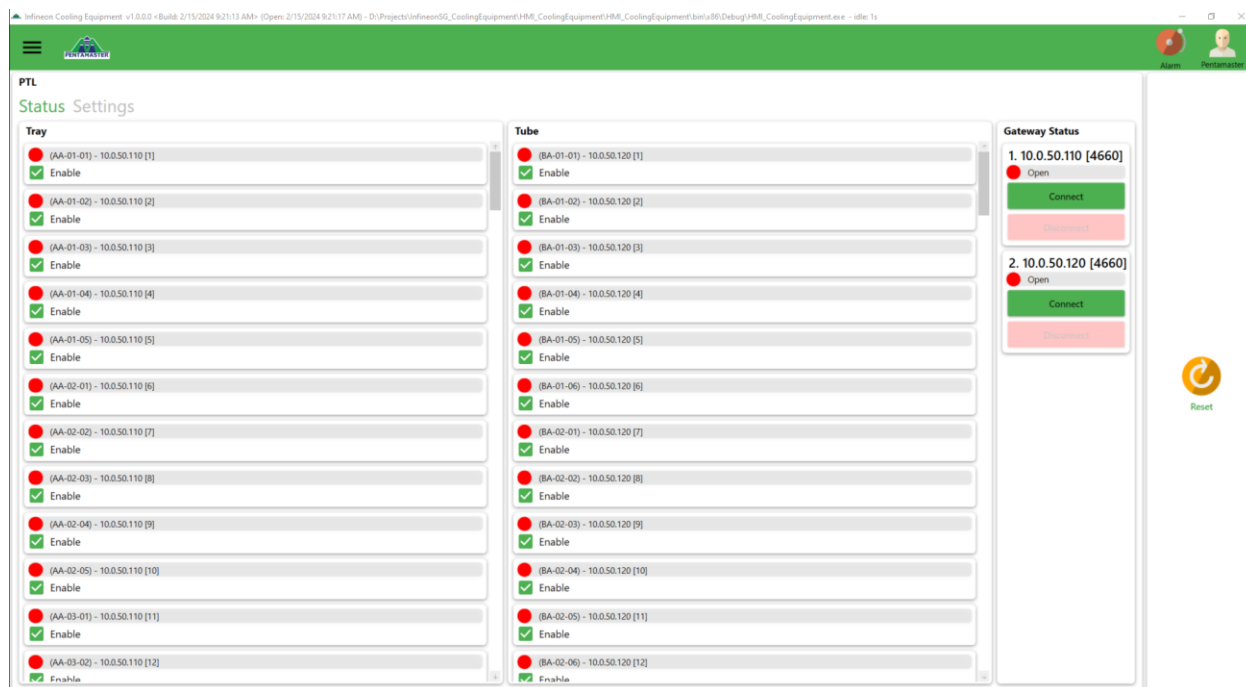


15.7 Purge and Abort Job

The purpose of this purge and abort job is to prevent equipment to be stop for a long period of time during operation. This function can ignore the error while waiting for engineer to troubleshoot the problem.




Application Interface Specification

1. Click on “Purge” button on related job to notify HMI for ignore the Job. Click on “OK” to proceed.

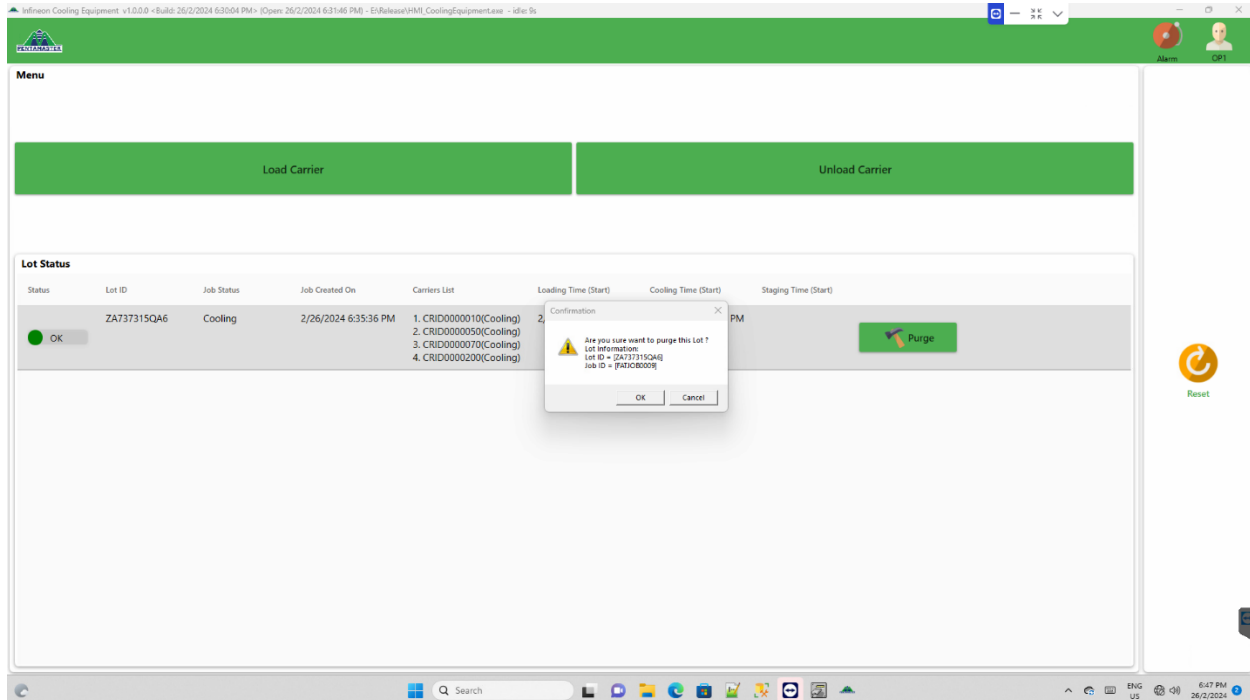

2. If Operator purge the job, operator needs to call for engineer to login and abort the job. If any of the carrier for that job have been load into the rack, those related loadports will be blinking light blue during the abort job trigger by engineer.

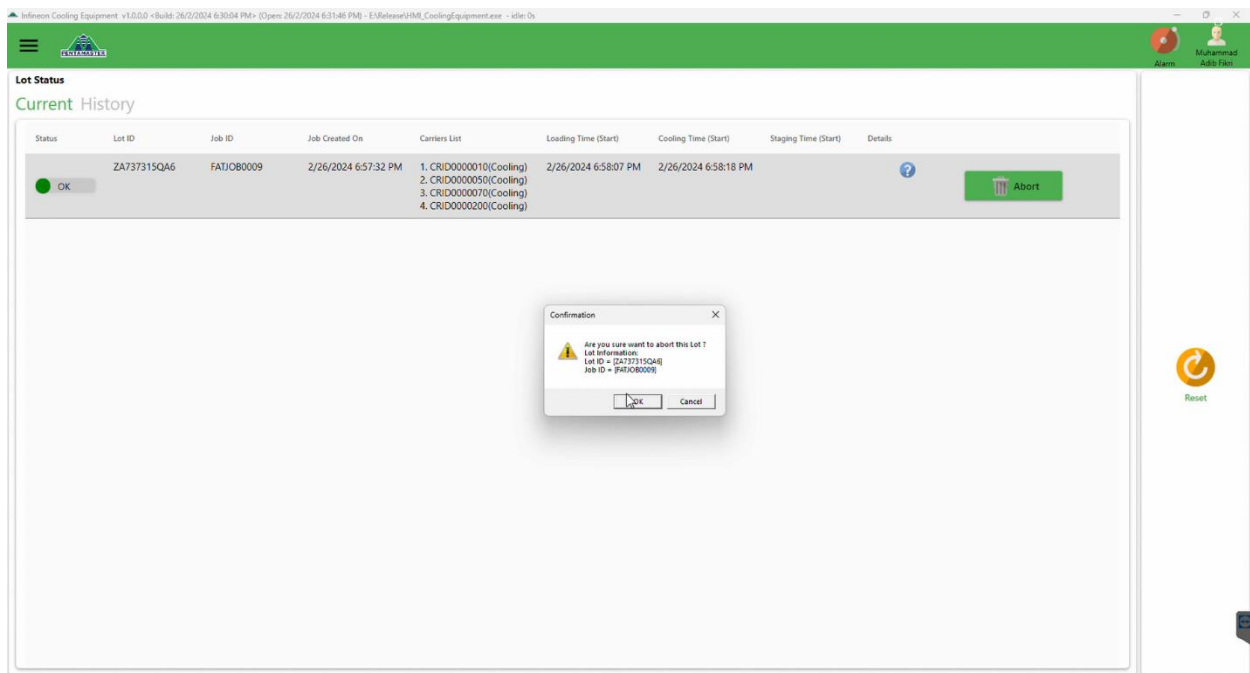



Application Interface Specification

