# **DDJ-1000 MAPPING - QUICKSTART**

# Installation:



Installation guide (50 pages)



FAQ (6 pages)



Step-by-step video (20 min)





Quick Start (8 pages)



Manual (80 slides)



Detailed video (90 min)



Full Reference (5 pages)

Link to Documentation PDFs: <a href="https://bit.ly/2M5ZemX">https://bit.ly/2M5ZemX</a>
Link to Videos: <a href="https://www.youtube.com/user/djestrela2">https://www.youtube.com/user/djestrela2</a>
Link to Survey: <a href="https://forms.gle/cf8kqpr91HHxMJcn8">https://forms.gle/cf8kqpr91HHxMJcn8</a>

### **Advanced features: Enabling**

DECK A

**Very Important:** All automatic features are shipped **DISABLED** by default.

To enable these features, access page "2" of the hotcues of deck A and B. (do not confuse these with normal hotcues:)

To change this permanently, change the bome config file and restart bome

See also the smooth echo config section

#### Mode 1 Mode 1 TurnTable 16x Tempo Auto Search: Search: Break on Sync Aid **Filters** Enlarger Layout Continuous Ignore Loops pause FPS: External **Dual Deck** Frames Per Cue Second

**DECK B** 

### **Basic Features:**

Main Button	How do I	Answer
SHIFT	Do a Quick Search?	Press "Shift"+"jog wheel"
CUE / LOOP IGEI	Zoom In?	Memory + turn the Browse encoder; If you press it goes to a default Zoom
SEARCH	Listen a whole playlist?	Use "Shift"+"Memory"+"Search" to iterate the tracks one-by-one.
3/1	Toggle Classic / Parallel?	Double click "deck select"
SHIFT	Toggle Elapsed / Remain?	Double click "shift"
SHIFT	Preview the tempo range?	"Shift" previews the tempo range. "Memory" for Loop/Move values. "Shift"+"Memory" for total length and base BPM
4 BEAT LOOP / EXIT	Activate a coming Loop?	Long press "4 beat auto loop"
KEY RESET	Adjust the beatgrid?	Hold "key sync" + jogwheel for adjusting the BPM; Hold "Key reset"+jog for the beatmarker
RAY PROBA	Move to Front?	Pres shift+Cue to move to Front
CUE / LOOP DEE	Customize the Settings?	All configurations <b>always</b> use shift + memory + "something". To make this permant, change the BOME file itself
	Improve performance?	Raise the BOME clock using "Shift"+"Memory"+"Browser"


# **Advanced Features #1:**

Button	Name	Inspiration	Explanation
BACK	Preview player	S4 MK3	Fast way to preview and seek the tracks <b>in the browser</b> . No decks consumed, nor hand movement. Disables PFLs.
Mode 4	STEMS / Remix Decks	S4 MK3	Change <b>separately</b> filter / Volume / mute / FX input of the STEM components, or Remix decks slots
SAMPLER	Pattern recorder	S4 MK3	Record a <b>16-step sequence</b> of one-shots, and then play over it. Blink = recording; Solid = playing; Off = not playing
SEARCH	Move by 1-beat	S4 MK3	Corrects loops by <b>1-beat</b> like the S4 move encoder.  If there is no loop active, beatjumps 1 beat instead.
	JogFX chains	DJTT maps	Hear the turntable break effect. Deck A and B only. This effect requires a small delay on pause (ie, a lag).
COLOR	Resonant Filter	DJM-900	Uses the filter in single FX mode with a lot <b>more resonance</b> than the standard MixerFX. Requires the 16x Filters enabled.
PLATITUDE	Turntable Off	CDJ-3000	Familiar Turntable power off sound.
	Loop fine adjust	CDJ-3000	Use the CDJs to very finely adjust the Loops, manually. In = whole loop; out = only out point.
Mode 7	Polyrhythmic loops	CDJ-3000	


# **Advanced Features #2:**

Button	Name	Inspiration	Explanation
*LIGHT FORMAN	Instant doubles	DDJ-1000	Clones the right track to the currently selected left side, and vice-versa. Useful to always use your right hand to cue and scratch.
SUP REVERSE	Echo Out effect	DDJ-SX2	Tap "Slip reverse". If you Hold it, it makes "censor" instead
4 BEAT LOOP/EXIT	Backwards Loops	Virtual DJ	Apply a loop backwards. In this mode you first <b>listen to the loop once</b> , and only then press shift+"auto loop"
	Loop IN point	Virtual DJ	Press shift+Loop IN/OUT to <b>manipulate the IN point</b> , while keeping the OUT point unchanged.
BEAT LOOP	Slicer	Serato	Break the loop into 8 slices. Best used with Slip mode.  3x modes available: full beat roll, front ½ roll, back ½ rool.
HOT CUE	Tone Play	Pitch'n'Play	Change key up to 12 semitones. 3x modes: Cue and Play mode / Cue mode (=gate), play mode.
PAD FX1	Loop Rolls	Serato	Repeat beat with different sizes. 2x modes: quantized and non-quantized
PAD FX2	Pad FX	Rekordbox and DJTT	21x instant gratification style padFX
SAMPLER	Smooth echo	<b>S11</b>	Apply an <u>automatic echo</u> or an <u>vinyl break</u> when you close the fader, cross fader or jogwheel
Mode 1/p2	<b>Dual Deck</b>	S11/SX2	Control 2 decks at the same time. This enables creating mashups on the fly (deck $1 = instrumental$ ; deck $3 = acapella$ ).

### There are 3 different shifts!

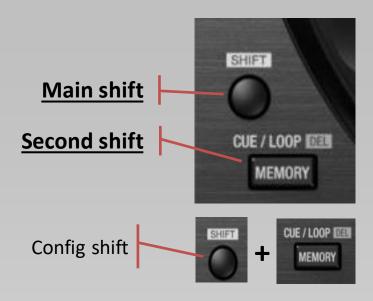

### There are 8x Pad Modes:

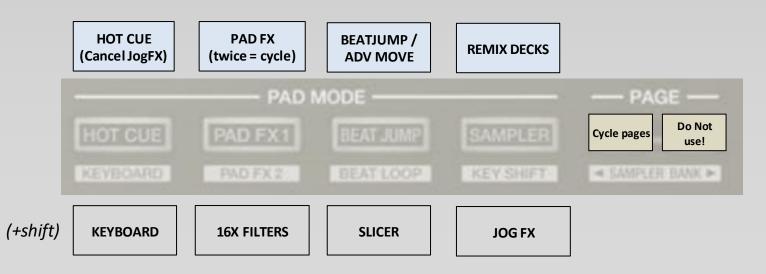

### **GUI LAYOUT: overview**







### 2-decks

### 4-decks

# **Parallel**

Deck A		
Deck B		
Deck A	Deck B	
Brov	wser	

Deck A		
Deck B		
Deck A	Deck B	
Deck C	Deck D	

Browser

(Double tap)



Classic

Deck A Deck B

Browser


Deck A Deck B

Deck C Deck D

Browser

### 4x Filters mode (Deck A/B/C/D)

#### **SELECTION:**

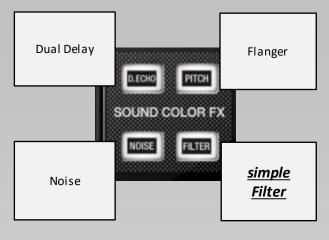




- In <u>normal mode</u>:
  - Each button selects one filter
  - Each knob works the normal way
- As such: 4 (buttons) x 1 (sides) x 1 (knobs) = 4x effects
- FX list: customizable on preferences / mixer / mixerFX

#### **Traktor GUI:**



### 16x Filters mode (Deck A and B only)

#### **SELECTION:**

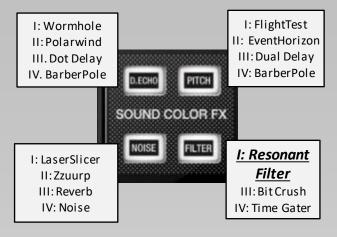



- In <u>16x filters</u> mode:
  - Each button selects four effects
  - Each knob has two sides (RMX-1000 style)
  - Knobs 3&4 controls Deck 1&2 instead
- As such: 4 (buttons) x 2 (sides) x 2 (knobs) = 16x effects
- (Windows-only feature. Keep the preferences open!)

#### **Traktor GUI:**




O EFFE

#### DDJ-1000:



### 7x JogFX: chain a three effects controlled by the Jogwheel


# JOG FX:

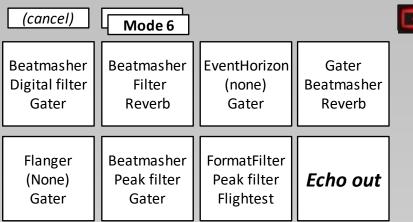





### Smooth Echo: Config

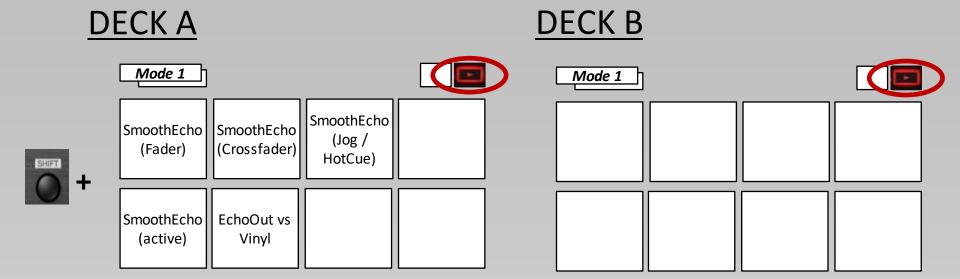

### **Smooth Echo: Activation**



(The If the led doesn't blink, confirm that at least one smooth echo is configured)

### DDJ-1000: Dual Deck

Dual deck enables you to control 2 decks at the same time. For example, put a track in deck 1 and an acapella in deck 3, and control both together.

Demo from the S11: <a href="https://youtu.be/">https://youtu.be/</a> <a href="https://youtu.be/">Sp47QU6pyw?t=450</a>

To toggle this feature ON/OFF, go to the settings pad and enable pad 6:

Color	Duplication
Gray	Disabled
White	Basic Transport
Yellow	Adds Pads
Red	Adds Mixer

#### Notes:

- This mode affects all 4x decks at once. It is not possible to split this per side.
- If you use sync, its recommended to disable "AUTO"
- Some pad modes will have limitations, like padFX. Please try it.
- Vinyl mode: ensure this has the same value in both decks
- If "Toggle"-style buttons are flipped between the decks, use the mouse to fix it
  - Ie, Play-Pause, Sync, Master Tempo, etc

### Pad mode #7: Poly-Rhythmic loops

Use poly-Rhythmic loops to bridge music styles, or in Arpeggios

#### Demos:

- Dj Estrela: <a href="https://youtu.be/SR8Hw\_yiG2A?t=388">https://youtu.be/SR8Hw\_yiG2A?t=388</a>
- James Zabiela: <a href="https://www.youtube.com/watch?v=6Doza4Glzxg">https://www.youtube.com/watch?v=6Doza4Glzxg</a>
- Resident Advisor: <a href="https://www.youtube.com/watch?v=KaFadut93Lg">https://www.youtube.com/watch?v=KaFadut93Lg</a>

