Lab 08 - Coprocessors and exceptions

R. Ferrero, M. Russo

Politecnico di Torino

Dipartimento di Automatica e Informatica (DAUIN)

Torino - Italy

Representation of floating point

- Normalized floating point representation:

$$\pm X * 2^{E} \qquad (1 \leq X < 2)$$

- IEEE-754 SP standard expresses floating point numbers in 32 bits:
  - Sign S: 0 if positive, 1 if negative.
  - Exponent E of 2, +127.
  - Mantissa M: fractional part of X.

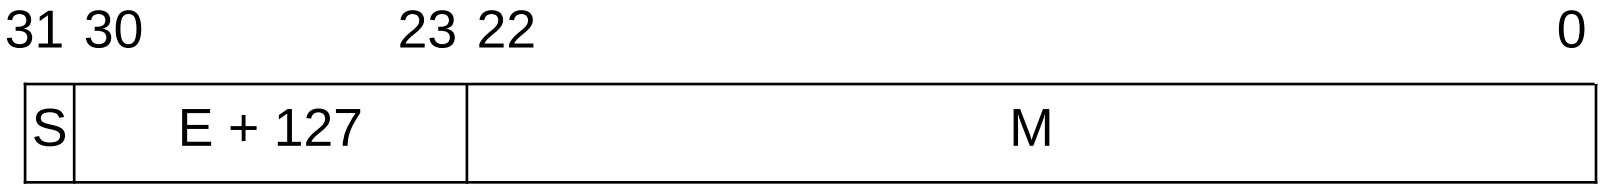

Exercise introduction

- There is not any native implementation of floating point numbers in Cortex-M3: we want to implement it in software.
- With `Rn` = integer part, `Rm` = fractional part, we want to write in `Rd` the floating point number according to IEEE-754 SP standard.

Example

- `Rn` =1998, `Rm` =142578125
- 1998.142578125 expressed in normalized scientific notation is $1.9513111145 * 2^{10}$
- $E + 127 = 137 = 10001001_2$

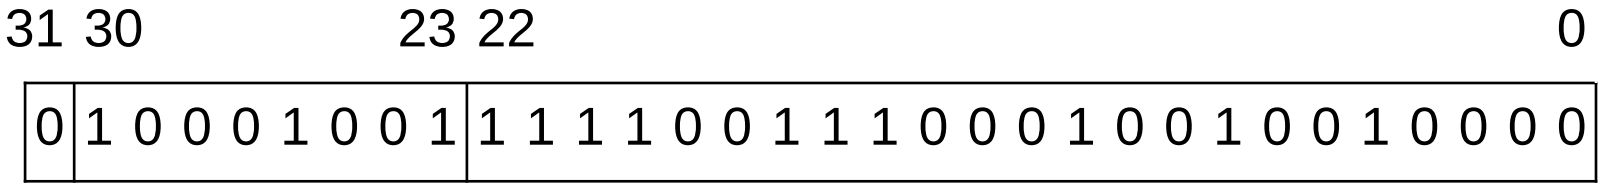

- You can check the result here: https://www.h-schmidt.net/FloatConverter/IEEE754.html

Computation of the exponent

- The exponent is equal to the position of the first bit set to 1 in the binary representation of the **integer** part.
- Example: $1998 = 11111001110_2$

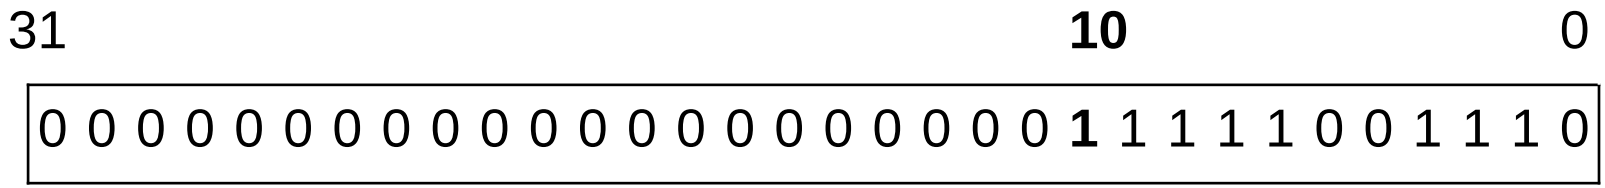

- After adding the bias (127), E = 137

Computation of the mantissa (1)

- The first bits of the mantissa are taken from the binary representation of the **integer** part, after removing the initial '1'.
- Example: 1998 = 11111001110_2
  - Therefore, 1111001110
- The remaining N bits of the mantissa are obtained by converting the **fractional** part.
- The fractional part is interpreted as an integer number.

Computation of the mantissa (2)

- Example: X = 142578125
- Let P be the lowest power of 10 which is higher than X. P = 1000000000
- This loop is repeated N times:
  - X = 2X
  - if X>=P
    - the next bit of the mantissa is 1 and X = X – P
  - else the next bit of the mantissa is 0
  - repeat loop

Computation of the mantissa (3)

iteration	X	2 * X	bit
1	142578125	285156250	0
2	285156250	570312500	0
3	570312500	1140625000	1
4	140625000	281250000	0
5	281250000	562500000	0
6	562500000	1125000000	1
7	125000000	250000000	0
8	250000000	500000000	0
9	500000000	1000000000	1
10	0	0	0
11	0	0	0
12	0	0	0
13	0	0	0

First steps

We call a coprocessor as follows:

`CDP proc, imm, dest, op1, op2, sign`

- `CDP`: instruction to call a coprocessor.
- `proc`: called coprocessor. We call `p0`.
- `imm`: operation executed by coprocessor.
  - `imm` = 1 for conversion to the IEEE-754 SP.
- `dest`, `op1`, `op2`: registers containing result, integer part, fractional part, respectively.
- `sign`: 0 if positive, 1 if negative.

CDP encoding

- Only meaningful bits are shown:

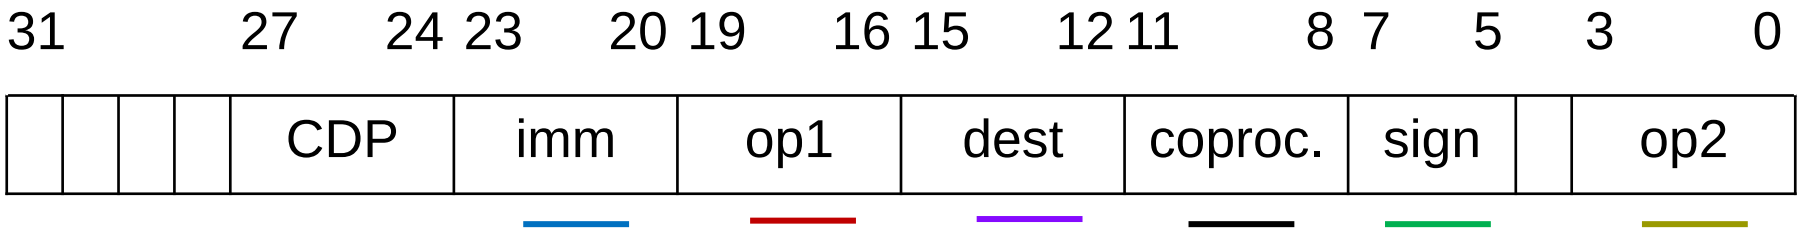

- The registers used by a coprocessor are named `c0`, `c1`, ..., `c15`.
- Example: `CDP p0, #1, c3, c1, c2, #1`

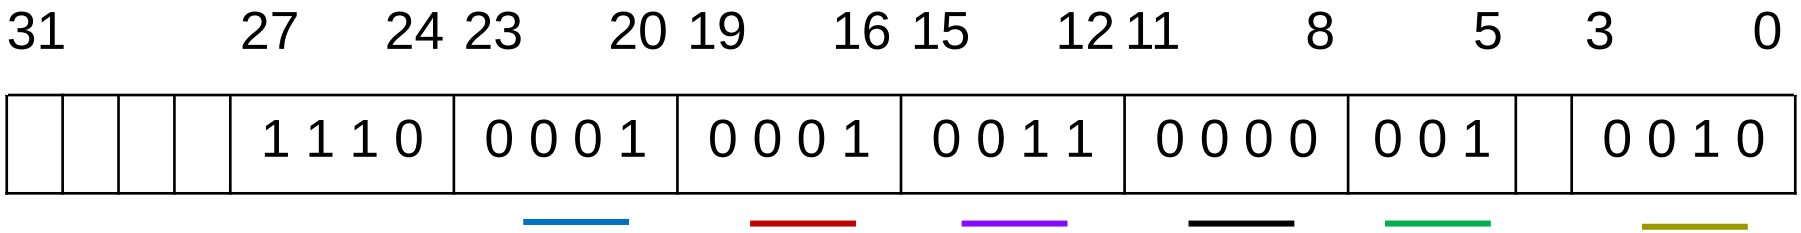

Software implementation

- Cortex-M3 has not any coprocessor.
- `CDP` raises a usage fault.
  - usage fault must be enabled, otherwise a hard fault is raised.
- The conversion to the IEEE-754 SP format is done in the exception handler.
- The following slides list the steps to be implemented in the exception handler.

0) Enabling Usage Faults

- Inside the Reset Handler:
  - set the proper bit of the **System Handler Control and State** register…
  - to enable the handling of usage faults
  - Address = 0xE000ED24
  - Content = word

Reminder # 0:

System Handler Control and State

Bit	Type	Description
18	**R/W**	**Usage fault handler enable**
17	**R/W**	**Bus fault handler enable**
16	**R/W**	**Memory management fault handler enable**
15	R/W	SVC pended (replaced by higher-priority exception)
14	R/W	Bus fault pended
13	R/W	Memory management fault pended
12	R/W	Usage fault pended
11	R/W	Read as 1 if SYSTICK exception is active
10	R/W	Read as 1 if PendSV exception is active
8	R/W	Read as 1 if debug monitor exception is active
7	R/W	Read as 1 if SVC exception is active
3	R/W	Read as 1 if usage fault exception is active
1	R/W	Read as 1 if bus fault exception is active
0	R/W	Read as 1 if memory management fault is active

1) Recognizing coprocessor fault

- Inside the Fault Handler, check the proper bit in the Usage Fault Status Register
  - Address = 0xE000ED2A
  - Content = half word
- If the exception is due to a coprocessor instruction, branch to the corresponding piece of code.
- Otherwise, write a dummy implementation of other usage faults (e.g., `B .`).

Reminder #1:

Usage Fault Status Register

Bit	Possible causes of usage fault
9	**Division by zero and DIV_0_TRP is set.**
8	**Unaligned memory access attempted and UNALIGN_TRP is set**
3	**Attempt to execute a coprocessor instruction**
2	Invalid EXC_RETURN during exception return. Invalid exception active status. Invalid value of stacked IPSR (stack corruption). Invalid ICI/IT bit for current instruction.
1	**Branch target address to PC with LSB equals 0**
0	**Use of not supported (undefined) instruction.**

2) Recognizing offending instruction

- Before entering the exception handler, `PC` is saved automatically in the stack (`MSP` or `PSP`) with offset 24.
  - use of `MSP` or `PSP` is determined by reading `LR*`.
- Load 4 bytes (1 word) from the address of PC
  - due to little endianness, the two halfwords must be switched, by rotating (ROR) 16 positions.
- If the instruction is `CDP p0, #1, ...` execute code for IEEE-754 SP conversion.
  - bits must be 0xX**E1**XX**0**XX

Reminder #2:

- *By reading LR at the beginning of the handler, we can see what stack the caller was using:

EXC_RETURN

- Bit 0: processor state. 0 -> ARM, 1 -> Thumb
- Bit 1: reserved, it must be 0
- Bit 2: return stack. 0 -> MSP, 1 -> PSP
- Bit 3: return mode. 0 -> handler, 1 -> thread
- Bits 4-31: each bit must be 1
- Allowed values of EXC_RETURN are:
  - 0xFFFFFFF1: return to handler mode
  - 0xFFFFFFF9: return to thread mode with MSP
  - 0xFFFFFFFD: return to thread mode with PSP

Reminder #2 (cont.):

- `r0-r3`, `r12`, `LR`, `PC` and `PSR` are saved in the currently used stack (MSP or PSP)
- Then, MSP is always used during exception
- `PC` and `PSR` are stacked first, so instruction fetch and `PSR` update can be started early.

Register	`r0`	`r1`	`r2`	`r3`	`r12`	`LR`	`PC`	`PSR`
Stacking order	3	4	5	6	7	8	1	2
- Offset SP_{old}	32	28	24	20	16	12	8	4
Offset SP_{new}	0	4	8	12	16	20	24	28

3) Changing return address

- Usage faults return to the same instructions that triggered the fault.
- Since we do not want to execute `CDP` again after the handler, the return address must be updated to the next instruction.
- Update the value of `PC` saved in the stack (with offset 24) with the new value `PC` + 4.

4) Accessing source registers

- Index of registers ranges between 0 and 7.
- We assume that `r4` corresponds to `c0`, `r5` = `c1`, `r6` = `c2`, ..., `r11` = `c7`.
- Save registers `r4-r11` in the handler stack (as required by AAPCS); instructions in steps 1, 2, 3 can not modify `r4-r11`.
- After extracting the index of a source register from the encoded instruction, you can extract its content from the stack with offset index * 4 (see following page).

Reminder #3:

- Since it's a FD stack, PUSH {R4-R11} pushes R11 first, then R10, etc…, up to R4
- At the end, SP points to R4
- We said that, for us, c0=r4, c1=r5…
- Assume we read op1=10

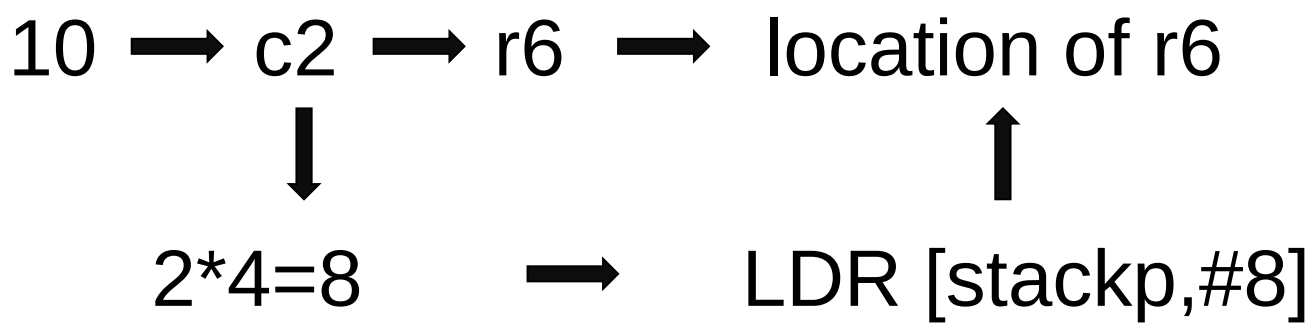

Reminder #3 (cont.):

- The fact that c0=r4, etc. is just used by the caller when calling the coprocessor for indicating which registers are the two sources and the destination:
  - `CDP p0, #1, c3, c1, c2, #1` just means that the destination is R7 and the sources are R5 and R6
- For the handler it doesn't make any difference if you put [op1], [op2], [dest] in R4, R5, …

5) Computing the result

- Bit 5 in the encoded instruction (representing the sign) must be the most significant bit of the result.
- The other bits are set by computing exponent and mantissa.
- Finally, update (STR) the destination register saved in the stack with the new computed value.

6) Concluding the handler

- Restore values of register `r4-r11` with a `POP`.
  - The destination register will contains the IEEE-754 SP representation, since the corresponding entry in the stack was updated in step 5.
- Return to the program with `BX LR`.
  - the next instruction will be the one after `CDP`, since the value of `PC` (automatically retrieved from the stack) has been updated in step 3 and will be automatically popped.