


Modify partition S3

1. Locate the file that needs to be modified.

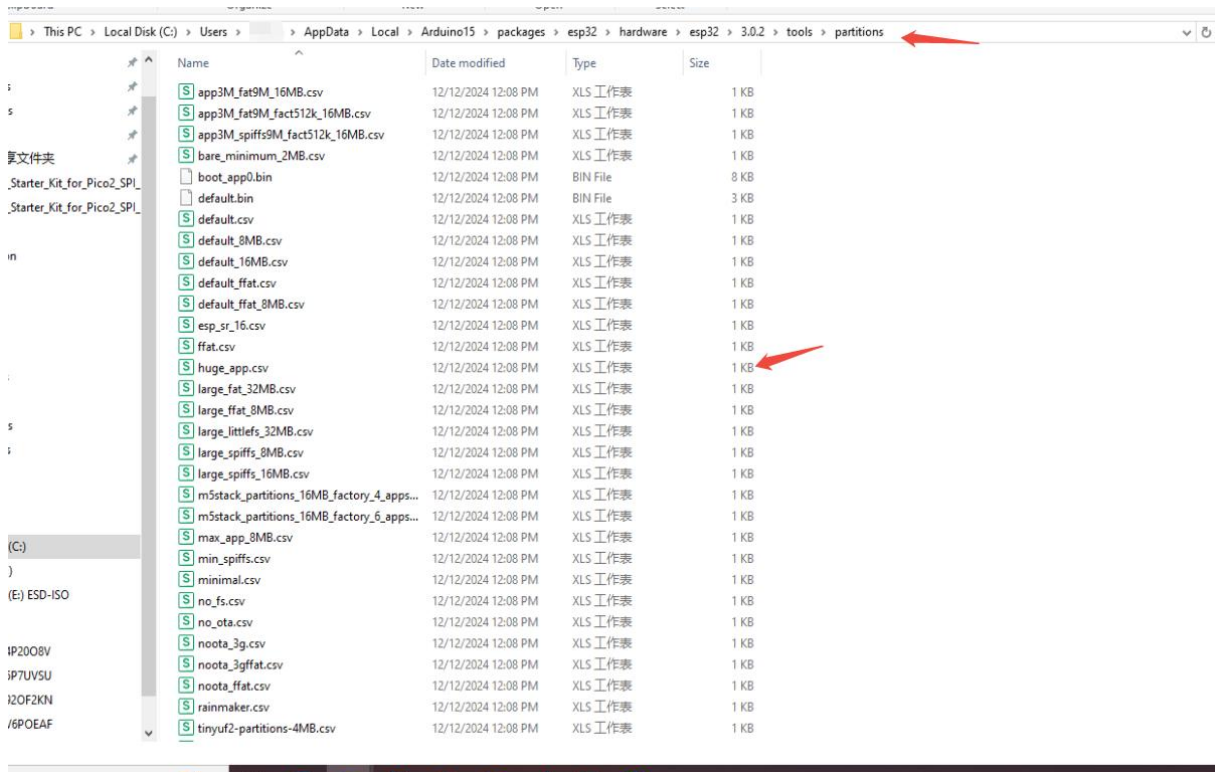

2. Locate the area that needs modification.

	A	B	C	D	E	F	G
1	# Name	Type	SubType	Offset	Size	Flags	
2	nvs	data	nvs	0x9000	0x5000		
3	otadata	data	ota	0xe000	0x2000		
4	app0	app	ota_0	0x10000	0x300000		
5	spiffs	data	spiffs	0x310000	0xE0000		
6	coredump	data	coredump	0x3F0000	0x10000		
7							
8							
9							

“Offset” represents the starting position of memory, and “Size” represents the size of this memory segment.

When the program compiler prompts that there is not enough memory, the size of app0 needs to be increased.

Assuming the size of app0 is changed to 0x350000, the starting address of “spiffs” becomes $0x10000 + 0x350000 = 0x360000$.

Change the size of “spiffs” to 0x90000

#	A	B	C	D	E	F
1	# Name	Type	SubType	Offset	Size	
2	nvs	dat	nvs	0x9000	0x5000	
3	otadata	data	ota	0xe000	0x2000	
4	app0	app	ota_0	0x10000	0x350000	
5	spiffs	data	spiffs	0x360000	0x90000	
6	coredump	data	coredump	0x3F0000	0x10000	

3. Modify the size of app0

	Organize	New	Open	Select	
Disk (C:) > Users > > AppData > Local > Arduino15 > packages > esp32 > hardware > esp32 > 3.0.2 >					
	Name	Date modified	Type	Size	
	cores	12/12/2024 12:08 PM	File folder		
	libraries	12/12/2024 12:08 PM	File folder		
	tools	12/12/2024 12:08 PM	File folder		
	variants	12/12/2024 12:08 PM	File folder		
	boards.txt	12/12/2024 12:18 PM	Text Document	1,756 KB	
	installed.json	12/12/2024 12:08 PM	JSON 源文件	181 KB	
	package.json	12/12/2024 12:08 PM	JSON 源文件	1 KB	
	platform.txt	12/12/2024 12:08 PM	Text Document	22 KB	
	programmers.txt	12/12/2024 12:08 PM	Text Document	1 KB	

Open the board.txt file, locate the corresponding motherboard (e.g., ESP32S3 Dev Module), and modify the app size.

File Edit Format View Help

```
esp32s3.menu.PartitionScheme.noota_3g=No OTA (1MB APP/3MB SPIFFS)
esp32s3.menu.PartitionScheme.noota_3g.build.partitions=noota_3g
esp32s3.menu.PartitionScheme.noota_3g.upload.maximum_size=1048576
esp32s3.menu.PartitionScheme.noota_ffat=No OTA (2MB APP/2MB FATFS)
esp32s3.menu.PartitionScheme.noota_ffat.build.partitions=noota_ffat
esp32s3.menu.PartitionScheme.noota_ffat.upload.maximum_size=2097152
esp32s3.menu.PartitionScheme.noota_3gffat=No OTA (1MB APP/3MB FATFS)
esp32s3.menu.PartitionScheme.noota_3gffat.build.partitions=noota_3gffat
esp32s3.menu.PartitionScheme.noota_3gffat.upload.maximum_size=1048576
esp32s3.menu.PartitionScheme.huge_app=Huge APP (3MB No OTA/1MB SPIFFS)
esp32s3.menu.PartitionScheme.huge_app.build.partitions=huge_app
esp32s3.menu.PartitionScheme.huge_app.upload.maximum_size=3145728
esp32s3.menu.PartitionScheme.min_spiffs=Minimal SPIFFS (1.9MB APP with OTA/190KB SPIFFS)
esp32s3.menu.PartitionScheme.min_spiffs.build.partitions=min_spiffs
esp32s3.menu.PartitionScheme.min_spiffs.upload.maximum_size=1966080
esp32s3.menu.PartitionScheme.fatflash=16M Flash (2MB APP/12.5MB FATFS)
esp32s3.menu.PartitionScheme.fatflash.build.partitions=ffat
esp32s3.menu.PartitionScheme.fatflash.upload.maximum_size=2097152
esp32s3.menu.PartitionScheme.app3M_fat9M_16MB=16M Flash (3MB APP/9.9MB FATFS)
esp32s3.menu.PartitionScheme.app3M_fat9M_16MB.build.partitions=app3M_fat9M_16MB
esp32s3.menu.PartitionScheme.app3M_fat9M_16MB.upload.maximum_size=3145728
esp32s3.menu.PartitionScheme.rainmaker=RainMaker
esp32s3.menu.PartitionScheme.rainmaker.build.partitions=rainmaker
esp32s3.menu.PartitionScheme.rainmaker.upload.maximum_size=3145728
esp32s3.menu.PartitionScheme.app5M_fat24M_32MB=32M Flash (4.8MB APP/22MB FATFS)
```

This value is the previously modified 0x350000; it needs to be changed to decimal 3473408.

File Edit Format View Help

```
esp32s3.menu.PartitionScheme.noota_3g=No OTA (1MB APP/3MB SPIFFS)
esp32s3.menu.PartitionScheme.noota_3g.build.partitions=noota_3g
esp32s3.menu.PartitionScheme.noota_3g.upload.maximum_size=1048576
esp32s3.menu.PartitionScheme.noota_ffat=No OTA (2MB APP/2MB FATFS)
esp32s3.menu.PartitionScheme.noota_ffat.build.partitions=noota_ffat
esp32s3.menu.PartitionScheme.noota_ffat.upload.maximum_size=2097152
esp32s3.menu.PartitionScheme.noota_3gffat=No OTA (1MB APP/3MB FATFS)
esp32s3.menu.PartitionScheme.noota_3gffat.build.partitions=noota_3gffat
esp32s3.menu.PartitionScheme.noota_3gffat.upload.maximum_size=1048576
esp32s3.menu.PartitionScheme.huge_app=Huge APP (3MB No OTA/1MB SPIFFS)
esp32s3.menu.PartitionScheme.huge_app.build.partitions=huge_app
esp32s3.menu.PartitionScheme.huge_app.upload.maximum_size=3473408
esp32s3.menu.PartitionScheme.min_spiffs=Minimal SPIFFS (1.9MB APP with OTA/190KB SPIFFS)
esp32s3.menu.PartitionScheme.min_spiffs.build.partitions=min_spiffs
esp32s3.menu.PartitionScheme.min_spiffs.upload.maximum_size=1966080
esp32s3.menu.PartitionScheme.fatflash=16M Flash (2MB APP/12.5MB FATFS)
esp32s3.menu.PartitionScheme.fatflash.build.partitions=ffat
esp32s3.menu.PartitionScheme.fatflash.upload.maximum_size=2097152
esp32s3.menu.PartitionScheme.app3M_fat9M_16MB=16M Flash (3MB APP/9.9MB FATFS)
esp32s3.menu.PartitionScheme.app3M_fat9M_16MB.build.partitions=app3M_fat9M_16MB
esp32s3.menu.PartitionScheme.app3M_fat9M_16MB.upload.maximum_size=3145728
esp32s3.menu.PartitionScheme.rainmaker=RainMaker
esp32s3.menu.PartitionScheme.rainmaker.build.partitions=rainmaker
esp32s3.menu.PartitionScheme.rainmaker.upload.maximum_size=3145728
esp32s3.menu.PartitionScheme.app5M_fat24M_32MB=32M Flash (4.8MB APP/22MB FATFS)
```

4. After making the changes, save the changes and restart Arduino IDE.

Note: This size modification can be adjusted according to the actual size.